

# RCA

## Television User's Guide

Changing Entertainment. Again.



## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**Caution:** To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



 
This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.



**Caution:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Attention:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

**Caution: Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.**

**Cable TV Installer:** This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## Product Registration

Please fill out the product registration card (packed separately) and return it immediately. Returning the card allows us to contact you if needed.

## Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

## Chapter 1: Connections & Setup

Things to Consider Before You Connect .....	4
Choose Your Connection .....	6
Cables Needed to Connect Components to Your TV .....	7
TV Only .....	7
TV + VCR .....	8
TV + VCR + Satellite Receiver .....	9
Plug in the TV .....	10
Put Batteries in the Remote .....	10
How to Use the Remote Control to Complete the Interactive Setup .....	10
Turn on the TV .....	11
Complete the Interactive Setup .....	11
The Buttons on the Remote Control .....	12

## Chapter 2: Using the TV's Features

Channel Banner .....	14
Parental Controls and V-Chip .....	15
Important Note About Parental Controls .....	15
How V-Chip Works .....	16
V-Chip TV Rating Limit .....	18
Blocking Specific Content Themes .....	22
Viewing Specific Content Themes .....	23
V-Chip Movie Rating Limit .....	24
V-Chip Unrated Program Block .....	26
Channel Block .....	27
Front Panel Block .....	27
Lock/Unlock Parental Controls .....	28
Important Note About Parental Controls .....	28

# Table of Contents

---

## Chapter 3: Using the TV's Menu System

<b>How to Use Your TV's Menu System</b> .....	<b>30</b>
Menus .....	30
Exiting a menu .....	30
<b>Audio Menu</b> .....	<b>31</b>
<b>Picture Quality Menu</b> .....	<b>32</b>
<b>Screen Menu</b> .....	<b>33</b>
Using Closed Captioning .....	33
Closed-Caption Modes .....	34
Turning off Closed-Caption .....	34
<b>Channel Menu</b> .....	<b>35</b>
<b>Time Menu</b> .....	<b>36</b>

## Chapter 4: Other Information

<b>Troubleshooting</b> .....	<b>38</b>
TV Problems .....	38
The Remote Control Doesn't Work .....	40
Problems with V-Chip/Parental Controls .....	40
<b>The Front of Your TV</b> .....	<b>41</b>
Front Panel Jacks .....	41
<b>Care and Cleaning</b> .....	<b>42</b>
<b>Limited Warranty</b> .....	<b>43</b>
<b>Glossary</b> .....	<b>46</b>
<b>Accessory Information</b> .....	<b>47</b>
<b>How To Order</b> .....	<b>47</b>

## Connections & Setup

### Chapter Overview:

- Things to Consider Before You Connect
- Connections
- Put Batteries in the Remote
- How to Use the Remote Control to Complete the Interactive Setup
- Complete the Interactive Setup
- The Buttons on the Remote Control

Changing Entertainment. Again.



## Things to Consider Before You Connect

### Protect Against Power Surges

- Connect all components before you plug any of their power cords into the wall outlet.
- Turn off the TV and/or component before you connect or disconnect any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safeguards sheet packed with your TV.

### Protect Components from Overheating

- Don't block ventilation holes on any of the components. Arrange the components so that air can circulate freely.
- Don't stack components.
- When you place components in a stand, make sure you allow adequate ventilation.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it won't flow around other components.

### Position Cables Properly to Avoid Audio Interference

- Insert each cable firmly into the designated jack.
- If you place components above the TV, route all cables down the side of the back of the TV instead of straight down the middle of the back of the TV.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.

## Important Stand and Base Safety Information

Choose the location for your TV carefully. Place the TV on a stand or base that is of adequate size and strength to prevent the TV from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage the TV. Refer to the Important Safeguards sheet packed with your TV.

## Use Indirect Light







Don't place the TV where sunlight or room lighting will be directed toward the screen. Use soft or indirect lighting.

## Connection Pictures

 
Audio/video cables are usually bundled together. For better visibility, the connection pictures in this book show each cable separately (audio left, audio right, and video).

## Choose Your Connection

There are several ways to connect your TV. Please use the following chart to determine which connection is best for you. Proceed to the appropriate page and connect your TV.

Components Needed	Cables	Connection Title	Go to...
 TV	Coaxial	TV Only	page 7
 TV  VCR	Coaxial Audio/video	TV + VCR	page 8
 TV  VCR  Satellite	Coaxial Audio/video	TV + VCR + Satellite Receiver	pages 9





Audio/Video cables



Coaxial cable

## Cables Needed to Connect Components to Your TV

The pictures on the left show the cables needed for the connections represented in this book.

**Notes:** Audio/Video cables (A/V cables for short) are usually sold as a bundled set, but the connection pictures in this book show each cable separately for better visibility.

### TV (back panel)



1

From Cable,  
Cable Box,  
or Antenna


## TV Only

### 1. Connect the TV to your cable or antenna

Connect the coaxial cable from your cable or antenna to the ANTENNA jack on the back of your TV.

**Go to page 10**

TV (back panel)

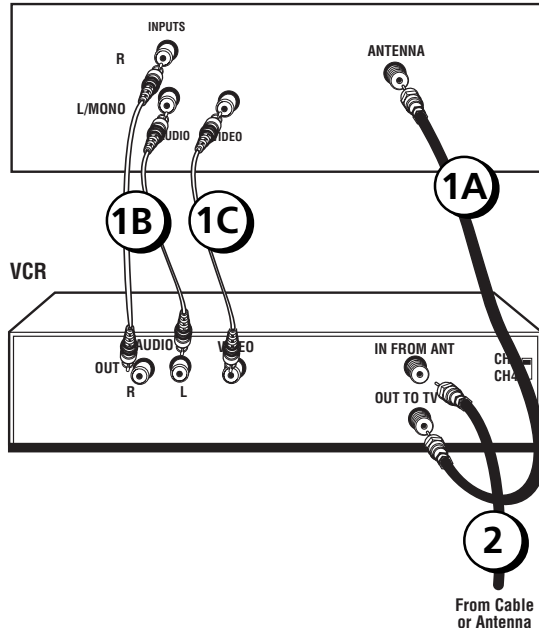

## TV + VCR

### 1. Connect your TV to your VCR


- Connect a coaxial cable to the ANTENNA jack on your TV and to the Output Jack on your VCR (sometimes labeled OUT TO TV).
- Connect the audio/video cables. Connect audio cables (white and red) to the AUDIO input jacks on the back of the TV (R and L/MONO) and to the Audio Output Jacks on the VCR (sometimes labeled OUT R L).
- Connect the video cable (yellow) to the VIDEO input jack on the back of the TV and to the Video Output Jack on the VCR.

### 2. Connect cable or antenna to your VCR

Connect the coaxial cable from your cable outlet, cable box, or antenna to the Input Jack on your VCR (sometimes labeled IN FROM ANTENNA or IN FROM ANT).

**Go to page 10**

## SATELLITE RECEIVER

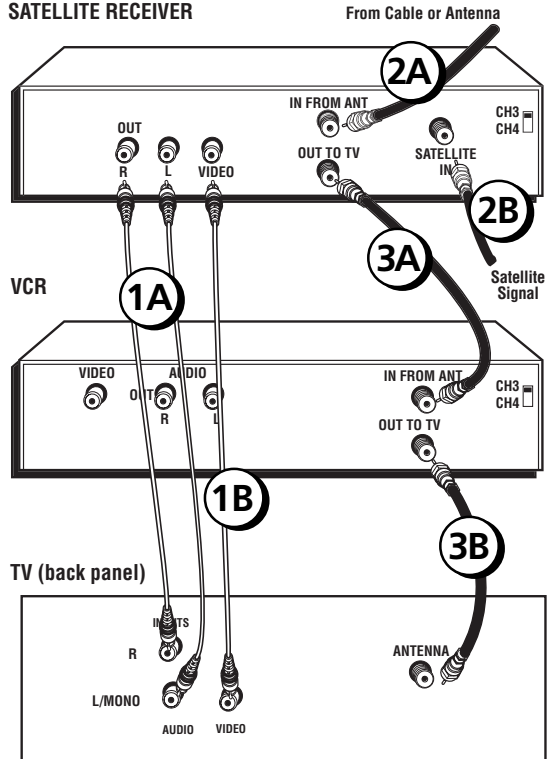

## TV + VCR + Satellite Receiver

### 1. Connect your Satellite Receiver to your TV

- Connect the audio/video cables. Connect the audio cables (white and red) to the AUDIO input jacks on the back of the TV (R and L/MONO) and to the Audio Output Jacks on the Satellite Receiver.
- Connect the video cable (yellow) to the VIDEO input jack on the back of the TV and to the Video Output Jack on the satellite receiver.

### 2. Connect coaxial cables to the Satellite Receiver

- Connect the coaxial cable from your cable outlet, cable box, or antenna to the Input Jack on your satellite receiver (sometimes labeled IN FROM ANT).
- Connect the coaxial cable from your satellite dish antenna to the Input Jack on your satellite receiver (sometimes labeled SATELLITE IN).


### 3. Connect the Satellite Receiver to the VCR and to the TV

- Connect a coaxial cable to the Output Jack (sometimes labeled OUT TO TV) on the satellite receiver and to the Input Jack on the VCR (sometimes labeled IN FROM ANT).
- Connect a coaxial cable to the Output Jack on the VCR (sometimes labeled OUT TO TV) and to the ANTENNA jack on the TV.

**Go to page 10**


## Plug in the TV

Plug the end of the power cord into the wall outlet. Match the wide blade of the plug with the wide slot in the outlet. Insert the plug completely into the outlet.

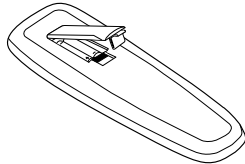

## Put Batteries in the Remote

1. Remove the battery compartment cover on the remote.
2. Insert new batteries. Match the polarities (+ and -) on the batteries with the diagram on the remote.
3. Put the battery compartment cover back on the remote.

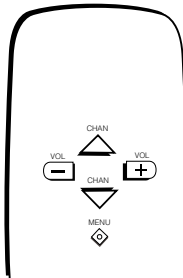

Use the CHAN ^/v and VOL +/- buttons to move through the menu system. Use the MENU button to select items.

## How to Use the Remote Control to Complete the Interactive Setup

The technical term is “Navigation” – how you move through the on-screen menus. The theory is the same throughout the menu screens: highlight your choice and select it.

To highlight a menu item, use the CHAN ^/v buttons to move up or down. Use the VOL +/- buttons to move left or right or to change an item’s setting.

Use the MENU button to select menu items.

You can also use the remote’s number buttons to select menu items directly.



**Note:** Highlighted means that the menu item stands out from other menu items on the list (appears darker, brighter, or a different color).

## Turn on the TV

Press the POWER button on the remote control or the TV (the first screen of the Interactive Setup appears). The menu screens “time out” after a period of time if you don’t make a selection. The tips in this section tell you how to access the Setup menu screens manually.

### Tip

To access the setup menus manually, press **MENU** and choose **Setup**.

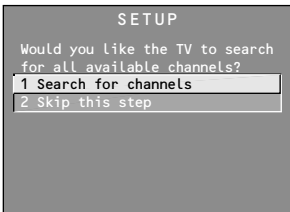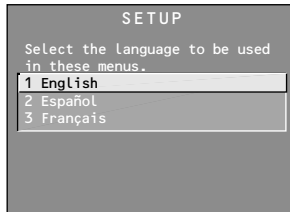

## Complete the Interactive Setup

The menu system in your TV allows the TV’s features to work properly. In this book, we call it the “interactive setup” because the TV asks you questions, you answer, and the TV makes the appropriate adjustments. The first time you turn on your TV, the setup screens appear automatically.

### Set the Menu Language

The first part of the *SETUP* asks you to select your preferred language for the menu system.


1. Highlight your preferred language for the menu system.
2. Press MENU to select that language.

### Complete Auto Channel Search

The next part of the *SETUP* asks you if you want the TV to search for all channels viewable through your antenna or cable TV system. This is sometimes called “auto programming.”

1. Press MENU to tell the TV to begin searching for channels. A progress report appears on the screen.
2. When the screen on the TV tells you the search is complete, press MENU.

**Note:** If you skip Auto Channel Search now, you can access it later through the Channel menu. See *Chapter 3* for more details.

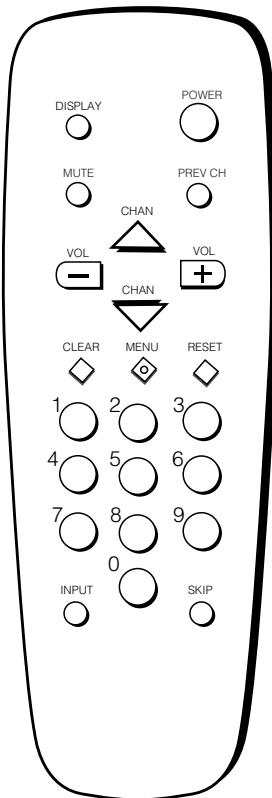

## The Buttons on the Remote Control

**0-9 (Number buttons)** Enter channel numbers and time settings directly through the remote control. This button can also be used to select numbered menu items directly.

To enter a two-digit channel, press the two digits. To enter a three-digit channel, press and hold the first digit for two seconds until two dashes appear to the right of the number, then add the second two. Example: to tune to channel 123, press and hold 1 for two seconds, press 2, then press 3.

**CHAN (up and down) buttons** Scan up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels. Also used as up and down arrows in the menu system.

**CLEAR** Removes any menu or display from the screen and returns you to TV viewing. Also cancels the SKIP timer.

**DISPLAY** Brings up available channel information. This button is also referred to as INFO in the TV's menu system.

**INPUT** Changes your TV to its video input channel. The Video Input Channel is the channel your TV must tune to in order for you to access a component that's connected to your TV's VIDEO IN and AUDIO IN jacks. Example: to view a tape from your camcorder, connect the camcorder to the TV's AUDIO and VIDEO jacks with the audio/video cables.

**MENU** Brings up the Main menu. When in the menu system, selects highlighted items or returns you to the previous menu.

**MUTE** Lowers the volume to its minimum level. Press again to restore volume.

**POWER** Turns the TV on and off.

**PREV CH** Returns you to the previous channel.

**RESET** When viewing video, brings up the *Pictures Presets* menu and sets the picture quality controls to the *Bright* setting. Use the number buttons to choose a different picture preset. In the TV's menu system, this button also returns the settings of the menu you're in back to its factory defaults.

**SKIP (Commercial Skip)** Press once before changing channels. The TV will wait 30 seconds before returning you to the original channel. Press again to add more time. Press CLEAR to cancel the SKIP timer.

**VOL - or VOL +** Decreases or increases the TV's volume. Also used as left and right arrows in the menu system.

## Using the TV's Features

### Chapter Overview:


- Channel Banner
- Parental Controls and V-Chip

Changing Entertainment. Again.



---

*Graphics contained within this publication are for representation only.*

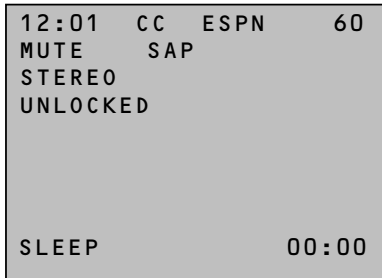

Sample displays on a Channel Banner

## Channel Banner

There are several indicators that might appear when you press the DISPLAY button on the remote. This display is called the Channel Banner. The following list describes the items on the Channel Banner screen (left to right and top to bottom).

**12:01** Displays the current time.

**UNLOCKED** Displayed to indicate when the Parental Controls are locked or unlocked.

**CC** Displayed when Closed Captioning is available on the current channel.

**ESPN** Displays the label assigned to the current channel.

**60** Displays the current channel or input channel (FRNT).

**MUTE** Displayed when you mute the audio.


**STEREO** Displayed when the current channel is broadcasting in Stereo.

**SAP** Displayed when the current channel is broadcasting SAP (Second Audio Program) information.

**SLEEP** Displayed when the Sleep Timer has been set.

**00:00** Displayed to count down time left on the commercial skip (SKIP) timer.



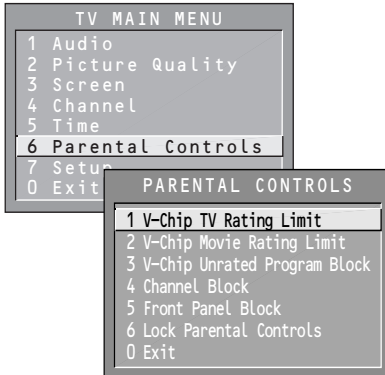

This screen appears when you try to tune to a channel or program that's blocked by Parental Controls. Press DISPLAY on your remote to enter your password.

## Parental Controls and V-Chip

The *Parental Controls* menu allows you to program your TV so that children cannot see certain programs, channels, or use the front panel controls.

The first three choices in the *Parental Controls* menu involve software inside your TV (referred to as V-Chip) which allows you to block TV programs and movies based on violence, sex, or other content you may believe children should not view. In other words, it lets you program your TV so it won't display certain programs.

Once you block programs, you or other adults can unblock programs by entering a password. By default, the software inside your TV is turned "off," so if you don't want to use this feature, you can just ignore it.

## Important Note About Parental Controls

Once you've locked Parental Controls, the TV blocks the picture of all channels and programs that you've set as blocked. The screen to the left appears when you try to tune to a program or channel that's blocked.

### To temporarily unlock Parental Controls when you see the screen to the left:

1. Press DISPLAY on your remote control.  
**Important:** The on-screen display refers to an "INFO" button, which the remote that comes with your TV does not have. Use the DISPLAY button instead.
2. Use the number buttons on your remote to enter your password. If you want to cancel, press CLEAR.
3. Once you've successfully entered your password, press CLEAR to exit.

The Parental Controls function remains unlocked until the next time you turn on your TV.

# Using the TV's Features


---

## How V-Chip Works

When turned “on,” the V-Chip software reads a code that most broadcasters send with programs. That code tells the software the program’s age-based rating (TV-MA, TV-14, etc.) and content themes [(Violence (V), Adult Language (L), etc.)]. If you have blocked the rating and/or content themes that the program contains, you will receive the message, “This channel is not approved for viewing,” when you tune to that particular channel.

Broadcasters are not required to provide content themes, so programs received with no content themes will only be blocked if you block their age-based rating. You can also block out programs that have been given a rating of “Not Rated,” and programs that are considered “unrated” because no code has been sent by the broadcaster. The TV age-based ratings and content themes you can block are listed in the table on the following page.

Age-Based Rating	Description and Content Themes for Age-Based Ratings
TV-MA	<b>Mature Audience Only.</b> Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).
TV-14	<b>Parents Strongly Cautioned.</b> Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).
TV-PG	<b>Parental Guidance Suggested.</b> Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).
TV-G	<b>General Audience.</b> Most parents would find this program suitable for all ages. It contains little or no sexual dialogue (D) or situations (S), no strong language (L), and little or no violence (V).
TV-Y7	<b>Directed to Children 7 years and older.</b> Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence (FV) or comedic violence, or may frighten children under the age of 7.
TV-Y	<b>All Children.</b> Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.

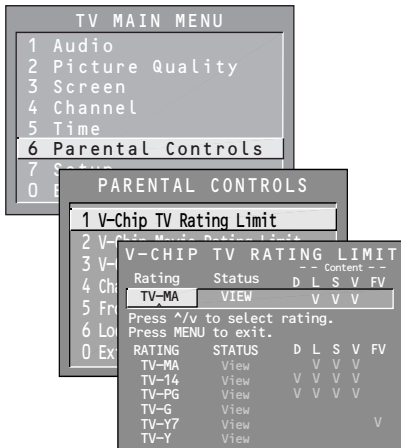

## V-Chip TV Rating Limit

The *V-Chip TV Rating Limit* lets you decide which TV programs can and cannot be viewed.

### To set TV programming limits:

1. Choose *Parental Controls* from the Main menu. If Parental Controls are currently locked, you must enter your password. If they are not locked, you will get a message reminding you that your limits will not be effective until you lock Parental Controls.
2. Press MENU to continue.
3. Highlight and select *V-Chip TV Rating Limit*.
4. Once you get to the *V-Chip TV Rating Limit* screen, use the CHAN and VOL buttons to change the status of a TV program rating or content theme from *View* to *Block*.

The following sections give you more details about how to change the status of TV program limits.

## The V-Chip Rating Limit Screen

The following is an example of where items are located within the Rating Limit screen.

**Rating Status Field**  
Lets you select whether the status of the age-based rating limit to the left is View or Block.

**Rating Field**  
Lets you select from a list of age-based ratings you can block or view.

**Content Themes**  
Lists the content themes you can block or view.

**Content Status Fields**  
Lets you select which content themes to view for the selected rating, and whether the status of the content theme is currently View (V) or Block (B).

**Rating Settings Area**  
Lets you see the current block/view state of age-based ratings and associated content. The View (V) settings are coded in green, and the Block (B) settings are coded in red.

The screenshot shows a menu titled "V-CHIP TV RATING LIMIT". At the top right, it says "-- Content --". Below this is a header row: "Rating Status D L S V FV". The "Rating" field shows "TV-MA" in a box. The "Status" field shows "VIEW" in a box. The "D L S V FV" fields show "V V V" in green. Below the header are instructions: "Press ^/v to select rating." and "Press MENU to exit.". A table follows with columns "RATING", "STATUS", and "D L S V FV". The rows are: "TV-MA View V V V", "TV-14 View V V V V", "TV-PG View V V V V", "TV-G View", "TV-Y7 View V", and "TV-Y View".

RATING	STATUS	D	L	S	V	FV
TV-MA	View		V	V	V	
TV-14	View	V	V	V	V	
TV-PG	View	V	V	V	V	
TV-G	View					
TV-Y7	View					V
TV-Y	View					

# Using the TV's Features

Rating field      Rating status field      Content status fields

V-CHIP	TV RATING	LIMIT				
Rating	Status	Content				
		D	L	S	V	FV
TV-PG	Block	B	B	B	B	
Press ^/v to view programs with this rating. Press MENU to exit.						
RATING	STATUS	D	L	S	V	FV
TV-MA	Block		B	B	B	
TV-14	Block		B	B	B	
TV-PG	Block		B	B	B	
TV-G	View					
TV-Y7	View					V
TV-Y	View					

## Blocking Age-Based Ratings

You can automatically block all program ratings above a specified age-based rating level. For example, if you only want your child to watch programs that have a TV-G rating and lower (in other words, you want the child to watch TV-G, TV-Y7, and TV-Y), then you need to block out other programming with higher ratings.

### To block programs with higher ratings:

1. First, determine the lowest level rating you don't want the child to watch (see chart of age-based ratings on next page).
2. Press the VOL + and – buttons to highlight the *Rating* field.
3. Press the CHAN up and down buttons on the remote to scroll through the age-based rating limits. Keep scrolling until the rating corresponding with the lowest rating you do not want the child to watch appears on the screen.

In the example discussed above, you would scroll through the *Rating* field until TV-PG appears, since the highest rating you want the child to watch is TV-G.

4. Press the VOL + arrow button to move the yellow highlight to the *Status* field.
5. Press the CHAN up or down button to toggle between *View* and *Block*. The status for the rating listed to the left and all higher ratings automatically changes to *Block* (and *B*).
6. Press MENU on the remote to return to the menu or exit the screen when you are finished.
7. Select *Lock Parental Controls* from the *Parental Controls* menu. Enter a password, and if you have not already set your password, you will be prompted to enter it again to confirm.

### Tip

When you change the status of a rating to *Block*, the system will automatically block higher ratings and all corresponding content themes.

## Hierarchy of Age-Based Ratings

TV-MA	<i>Mature Audience Only</i>
TV-14	<i>Parents Strongly Cautioned</i>
TV-PG	<i>Parental Guidance Suggested</i>
TV-G	<i>General Audience</i>
TV-Y7	<i>Directed to Children 7 years and older</i>
TV-Y	<i>All Children</i>

## Viewing Age-Based Ratings


After you block age-based ratings, you have the option of changing some of the ratings back to *View*.

1. Determine which blocked rating you want to view.
2. Use the CHAN up and down buttons to select the rating with a status of *Block*.
3. Press the VOL + button to move the yellow highlight to the rating status field.
4. Press the CHAN up button to select *View*.

**Notes:** The content status fields corresponding to the unblocked rating become *View* as well. They and the age-based rating status are the only fields that automatically change back to *View* when you complete this process.

You must remember to lock Parental Controls for rating limits to take effect.

# Using the TV's Features

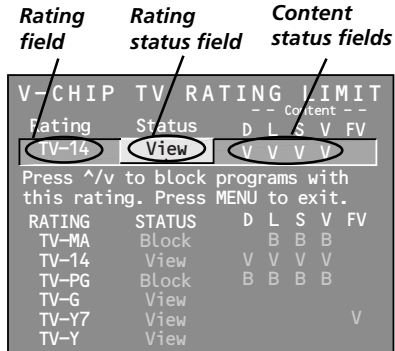

## Blocking Specific Content Themes

You can block programs based on their content. (Content is represented by the D, L, S, V, FV and TV-Y on your screen. See the beginning of this section for details.) When you block a content theme for a particular rating, you automatically block that content theme for higher rated programs as well.

For example, if you do not want your child to watch programs that have adult language (L) rated TV-PG or higher, then you could block out all programming TV-PG and above containing adult language.

### To block program content:

1. Determine the lowest level of content you don't want the child to watch.
2. Use the CHAN up and down buttons on the remote to scroll through the age-based ratings until the rating that corresponds with the lowest content you do not want the child to watch appears. (In the example above, you would scroll through the ratings until the TV-PG rating appeared.)
3. Press the VOL + button to move the highlight to the field corresponding with the content theme you want to block out.
4. Press the CHAN up or down button to change content status from *V* to *B*. All higher ratings' content theme will automatically change to *B*.
5. Press MENU to return to the menu or exit the screen.

**Notes:** Broadcasters are not required to provide content themes or age-based ratings. Programs received with no content themes will only be blocked if you block their age-based rating.

You must remember to lock Parental Controls for rating limits to take effect.

Content Themes	
D	Sexually explicit dialogue
L	Adult language
S	Sexual situations
V	Violence
FV	Fantasy Violence




Rating	Status	D	L	S	V	FV
TV-PG	View	V	B	V	V	
TV-MA	View		B	V	V	
TV-14	View	V	B	V	V	
TV-PG	View		B	V	V	
TV-G	View					
TV-Y7	View					V
TV-Y	View					

## Viewing Specific Content Themes

If you block specific content themes, you have the option of going back and changing some of the content themes back to *(V) View*:

1. Determine the content themes you want to change to *(V) View*.
2. Use the CHAN up and down buttons to scroll through the age-based ratings until the rating whose content theme you want to change to *View* appears.
3. Press the VOL + button to move the yellow highlight to a particular content theme status, such as the *B* under language (L) corresponding with TV-14.
4. Press the CHAN up or down button to change its status back to *V*. Your child would then be able to watch programs with TV-14 adult language content, but not programs with TV-PG or TV-MA language content.

**Note:** Only the content theme status corresponding to TV-14 (L) language changes to *(V) View*. Higher rated content themes, such as that for TV-MA language, do not change.

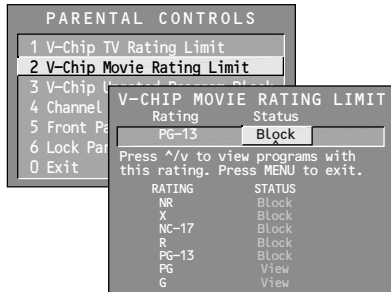


## V-Chip Movie Rating Limit

You set movie rating limits by blocking movies rated above a specified level. How to block movie ratings and view movie ratings is explained in the next two sections.

### To access the *V-CHIP MOVIE RATING LIMIT* menu:

1. Press MENU on the remote control (the *TV MAIN MENU* appears). If Parental Controls are currently locked, you must enter your password. If they are not locked, you will get a message reminding you that your limits will not be effective until you lock Parental Controls.
2. Select *Parental Controls* (press 6).
3. Select *V-Chip Movie Rating Limit* (press 2).

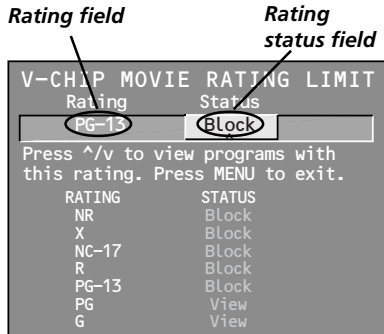

## Blocking Movie Ratings

If you only want your child to watch movies that have a PG rating and lower (in other words, movies rated PG and G), then you could automatically block out all other movies with higher ratings.

### To block movies:


1. Highlight the *Rating* field and press the CHAN up and down buttons to find the rating that is the lowest rating you don't want the child to watch. (In the example above, you would highlight the rating status button corresponding to PG-13, since the highest rating you want the child to watch is PG.)
2. Press the VOL + button to highlight the rating *Status* field. Press the CHAN up and down buttons to change the button from *View* to *Block*. All higher ratings automatically change to *Block*.
3. Press MENU to return to the menu or exit the screen.
4. If Parental Controls are not locked, you must lock them so the movie rating limits will take effect.

**Note:** Some movies may be given a Not Rated (NR) rating. After blocking movie ratings, you must set NR to View separately to view NR movies.

# Using the TV's Features

Rating field

Rating status field

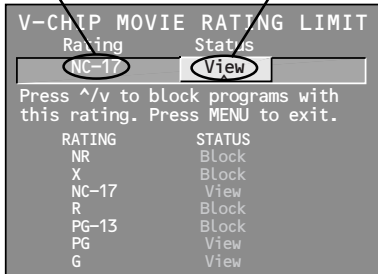


## Viewing Movie Ratings

After you block movie ratings, you have the option of changing some of the rating status buttons back to *View*:

1. Highlight the *Rating* field and press the CHAN up and down buttons to find the rating you want to view.
2. Press the VOL + button to highlight the rating *Status* field. Press the CHAN up and down buttons to change the button from *Block* to *View*.

For example, if movies with a rating of PG-13 and higher are blocked, you can change the rating status corresponding with NC-17. Your child would then be able to watch all movies with a G, PG, and NC-17 Rating.

3. Press MENU to exit the screen, and be sure parental controls are locked.

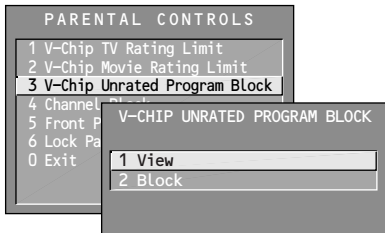


## V-Chip Unrated Program Block

Selecting this option lets you decide if programs that the V-Chip recognizes as “unrated” can be viewed. Note that “unrated” TV programs may include news, sports, political, religious, local and weather programs, emergency bulletins, public announcements, and programs without ratings.

**View** All unrated programs are available.

**Block** All unrated programs are not available.

**Note:** You must remember to lock Parental Controls for rating limits to take effect.

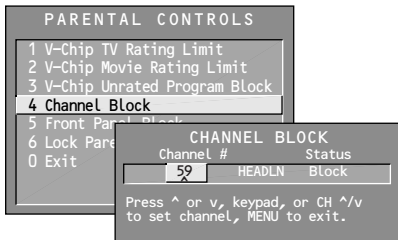

## Channel Block


Selecting this option lets you decide what channels can be viewed.

**View** Makes the selected channel viewable.

**Block** The front panel and remote control CHAN (channel) buttons will tune only to channels that you have marked as *View*. The remote will still tune to the blocked channel if you use the digits to access the channel, but the channel will be blocked.

Don't forget to lock parental controls after you change the status of *Channel Block*. If you do not, the channel block will not take effect.

**Note:** If you have a digital cable box channels 126-999 can be blocked but will not be removable from your scan list.

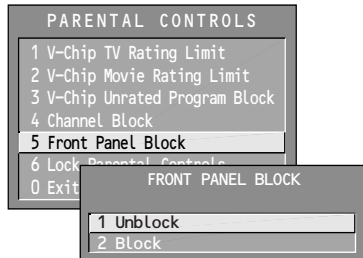


## Front Panel Block

Selecting this option lets you block (disable) or unblock (enable) the TV's front panel. The remote still tunes to any channel. *Front Panel Block* can:

- Keep children from watching TV when the parent is not present.
- Keep young children from playing with the buttons.

(When using this as a Parental Control method, you should remove access to any remote that is capable of operating the television while you have the front panel blocked.)

Don't forget to lock parental controls after you change the status. If you do not, the front panel block will not take effect.

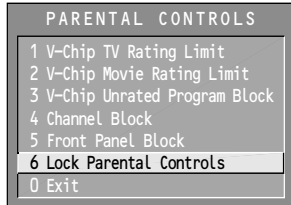

## Lock/Unlock Parental Controls

Selecting this option lets you lock and unlock parental controls settings using a password.

**If you do not lock parental controls, none of the settings for V-Chip, Channel Block, or Front Panel Block will take effect.**

If you forget your password, simultaneously press and hold VOL- on the television and VOL- on the remote for 3 seconds. Nothing appears on the screen, Parental Controls simply unlock and you can re-enter a password via *Lock Parental Controls*.


## Important Note About Parental Controls

Once you've locked Parental Controls, the TV blocks the picture of all channels and programs that you've set as blocked. The screen to the left appears when you try to tune to a program or channel that's blocked.

**To temporarily unlock Parental Controls when you see the screen to the left:**

1. Press DISPLAY on your remote control.  
**Important:** The on-screen display refers to an "INFO" button, which the remote that comes with your TV does not have. Use the DISPLAY button instead.
2. Use the number buttons on your remote to enter your password. If you want to cancel, press CLEAR.
3. Once you've successfully entered your password, press CLEAR to exit.

The Parental Controls function remains unlocked until the next time you turn on your TV.

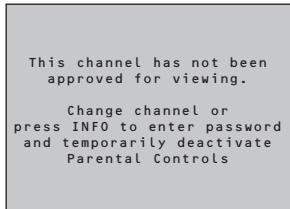

This screen appears when you try to tune to a channel or program that's blocked by Parental Controls. Press DISPLAY on your remote to enter your password.

## Using the TV's Menu System

### Chapter Overview:

- How to Use Your TV's Menu System
- Audio Menu
- Picture Quality Menu
- Screen Menu
- Using Closed Captioning
- Channel Menu
- Time Menu

Changing Entertainment. Again.



---

*Graphics contained within this publication are for representation only.*


# Using the TV's Menu System

---

## How to Use Your TV's Menu System

You use the buttons on the remote or the front of your TV to access the menu system and make changes to the settings.

The following pages explain how to use the different types of menus to adjust the features of your TV.

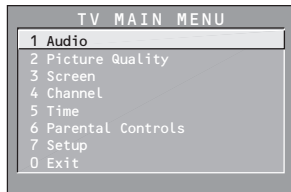

### Menus

The first menu is called the Main menu. Press MENU on the remote or on the front panel to bring up the Main menu.

Menus take you to another menu or a control panel. There are two ways to select a choice in a menu:

- Use your CHAN or VOL buttons on your remote control to highlight your choice, and press MENU.
- Press a number button on the remote. For example, in the Main menu press 3 to go straight to the *Screen* menu.

### Tip

*Feel free to explore the menu system. If you're ever unsure where you are in the menu system, or you're just plain tired of exploring, press CLEAR to remove the menus from the screen and start over again.*


---

### Exiting a menu

There are three ways to exit a menu:

- Highlight *Exit* and press MENU.
- Press 0 on the remote.
- Press CLEAR. The on-screen displays are cleared from the screen and you return to TV viewing.



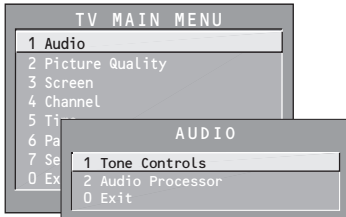

## Audio Menu


**Tone Controls** Displays the slider controls for adjusting the TV's treble, bass and balance.

**Audio Processor** Displays a choice list of available audio modes, which control the way the sound comes through your speakers.

**Mono** Plays the sound in mono only. Use this setting when receiving broadcasts with weak stereo signals.

**Stereo** Most TV programs and recorded materials have stereo audio. The word *STEREO* appears on the TV when you tune to a program that is broadcast in stereo.

**Second Audio Program (SAP)** Plays the program's audio in a second language, if one is available. The word *SAP* appears on the TV when you tune to a program that is broadcast with SAP information. SAP audio is broadcast in mono. SAP is also used to broadcast a program's audio with descriptions of the video for the visually impaired.

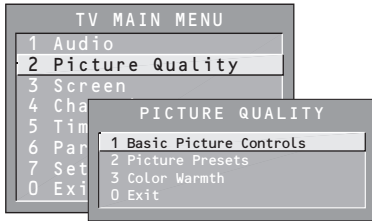

## Picture Quality Menu

**Basic Picture Controls** Displays the five slider controls for adjusting the way the picture looks.

**Contrast** Adjusts the difference between the light and dark areas of the picture.

**Color** Adjusts the richness of the color.

**Tint** Adjusts the balance between the red and green levels.


**Black Level** Adjusts the brightness of the picture.

**Sharpness** Adjusts the crispness of the edges in the picture.

When exiting this menu, the *Save Personal Picture Preset* choice list will appear. You can choose either *Yes* or *No*. If you save the settings as a Personal Picture Preset, the TV will store the settings so you can re-select them quickly if someone changes the settings.

**Picture Presets** Displays a choice list that lets you select one of four preset picture settings: *Bright Lighting*, *Normal Lighting*, *Soft Lighting* or *Personal Picture Preset*. Choose the setting that is best for your viewing environment.

**Color Warmth** Displays a choice list that lets you set one of three automatic color adjustments: *Cool* for a more blue palette of picture colors; *Normal*; and *Warm* for a more red palette of picture colors. The warm setting corresponds to the NTSC standard of 6500 K.

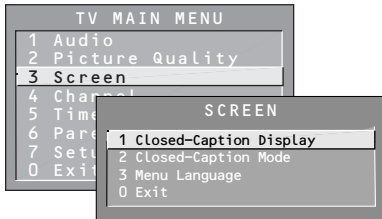

## Screen Menu

**Closed-Caption Display** Displays a choice list that lets you choose the way closed captioning information is shown on the screen.

**Off always** No captioning information is displayed.

**On always** Captioning information is shown always, when available.

**On when sound is muted** Captioning information is shown, when available, whenever the TV's sound is muted. (To mute the sound, press the MUTE button.) The captioning information is not displayed when the sound is not muted.

**Closed-Caption Mode** Displays a choice list that lets you choose which captioning mode is used for displaying captioning information.

**Menu Language** Displays a choice list that lets you select your preferred language for the menus: *English*, *Spanish* or *French*.


## Using Closed Captioning

Many programs are encoded with closed-captioning information, which lets you display the audio portion of a program as text on the TV screen.

Closed captioning is not available on all channels at all times. Only specific programs encoded with closed-captioning information are applicable. When a program is closed captioned, the *CC* icon is displayed in the channel banner. See Chapter 2 for more information about the channel banner.

# Using the TV's Menu System

---

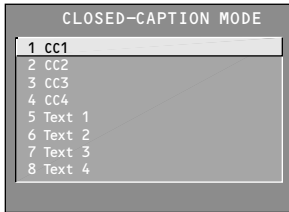

## Tip

If you don't know which Closed-Caption mode to use, select CC1. CC1 is probably the mode that is used in your area. CC2, CC3, and CC4 are reserved for foreign languages, but are rarely used at this time.

---

## Closed-Caption Modes

The TV offers eight closed-captioned modes, including four text modes.


### To set the *Closed-Caption Mode*:

1. Select *Screen* from the Main menu.
2. Highlight *Closed-Caption Mode* and press MENU (the *Closed-Caption Mode* appears).
3. Highlight your choice and press MENU (the *Screen* menu appears again).

**Note:** The *Text* modes cover nearly half of the picture on the screen to display the closed-captioned text. Most broadcasters use the CC mode, which displays a few lines of captions at a time.

## Turning off Closed-Caption

1. Select *Screen* from the Main menu.
2. Press MENU to select *Closed-Caption Display*.
3. Highlight *Off Always* and press MENU. The closed captioning is turned off and you go back to the *Screen* menu.

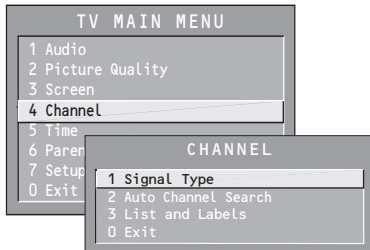

## Tip

To enter a number greater than 99, press and hold "1" to enter the hundreds digit, then press the two remaining numbers.

## Channel Menu

**Signal Type** Displays a choice list that lets you select the current antenna type.

**UHF/VHF Antenna** Choose this if you are currently using an off-air antenna for TV signals.

**Cable TV** Choose this if you are currently using cable or a cable box for TV signals.

**Auto Channel Search** Tells the TV to search automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the Normal channel list; inactive channels (weak stations or channels with no signal at all) will be removed from the channel list.

**List and Labels** Displays a control panel that lets you edit your Normal channel list and choose a six-character label for each channel. Follow the on-screen directions to enter your channels and other information.


**Channel #** Use the CHAN up and down buttons to scroll up and down through the channels available via your antenna. You can enter the channel number directly using the number buttons.

**Normal List** Only the channels included in the Normal list are available when you scan up and down using channel up and down. Use the CHAN up and down buttons to indicate whether the channel number indicated is included (Yes) or is not included (No) in the Normal channel list.

**Channel Label** Use the CHAN up and down buttons to enter a six-character label for each channel. Hold the button down to scroll quickly through the characters. The TV can store up to 27 labels in memory.

# Using the TV's Menu System

---

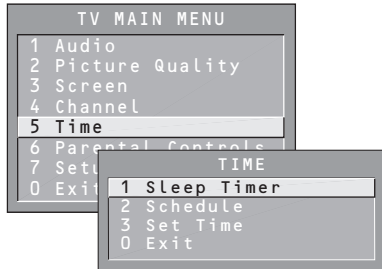

## Time Menu

**Sleep Timer** Displays a control panel that lets you select the amount of time you want to give the TV before it shuts itself off.

**Schedule** Displays a control panel that lets you set up a schedule for turning the TV on and off automatically. Reminder: you must turn the schedule on. The on-screen directions guide you through the steps needed to set the schedule.

**Set Time** Displays a control panel that lets you enter the current time. The on-screen directions guide you through the steps needed to set the time.

## Other Information

### Chapter Overview:

- Troubleshooting
- The Front of Your TV
- Care and Cleaning
- Limited Warranty
- Accessory Order Form
- Index

Changing Entertainment. Again.



---

*Graphics contained within this publication are for representation only.*

## Troubleshooting

Most problems you encounter with your TV you can correct by consulting the Troubleshooting list that follows.

### TV Problems

---

#### TV won't turn on

- Press the POWER button.
- Make sure the TV is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is “live” by plugging in something else.
- Something might be wrong with your remote control. Press the POWER button on the front of the TV. If the TV turns on, check the remote control solutions on page 40.
- The front panel buttons may be locked (disabled). Use the remote control to unlock the front panel controls by selecting the *Front Panel Block* in the *Parental Controls* menu and choosing *Unblock*.

#### Buttons don't work

- The front panel buttons may be locked (disabled). Use the remote control to unlock the front panel controls by selecting the *Front Panel Block* in the *Parental Controls* menu and choosing *Unblock*.
- Unplug the TV for two minutes and then plug it back in. Turn the TV on and try again.

#### TV turns off while playing

- The Schedule Off function may have been activated. Go to page 36 for instructions.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn the TV on again. If this happens frequently, the voltage in your house may be abnormally high or low.

#### Blank screen

- Make sure the component connected to the TV is turned on.
- Try another channel.



## Troubleshooting

### No sound, picture okay

- Maybe sound is muted. Press the volume up button to restore sound.

### Can't select certain channel

- Channel may be blocked or not approved in the *Parental Controls* menu. To deactivate Parental Controls temporarily, press DISPLAY on your remote and enter your password. Press CLEAR on your remote (or MENU on the front panel of your TV) to clear all menus from your screen.
- If using a VCR, make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).

### Noisy stereo reception

- The station might be weak. Check the Audio Processor in the *Audio* menu for sound setup. Go to page 31 for instructions.

### No picture, no sound but TV is on

- The channel might be empty — change channels.
- If you're watching your VCR and it's connected with coaxial cable to the ANTENNA jack, tune the TV to channel 3 or 4 (whichever channel is selected on the 3/4 switch on the back of your VCR). Also check to make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).

### Sound okay, picture poor

- Check antenna connections. Make sure all of the cables are firmly connected to the jacks.
- Try adjusting sharpness function to improve weak signals. Go to page 32 for more instructions.

### Black box appears on the screen

- Closed-captioning might be on. Check the *Closed-Caption Display* control panel in the *Screen* menu. Go to page 33 for more instructions.

(Continues on next page)

## Troubleshooting

### ***The Remote Control Doesn't Work***

---

- Something might be between the remote and the remote sensor on the component. Make sure there is a clear path.
- Maybe the remote isn't aimed directly at the TV.
- Maybe batteries in remote are weak, dead or installed incorrectly. Put new batteries in the remote.

### ***Problems with V-Chip/Parental Controls***

---

#### **The rating limits don't work**

- You must lock the settings. Go to the *TV MAIN MENU* (press MENU on your remote), select *Parental Controls* (press 6 on your remote), select *Lock Parental Controls* (press 6 on your remote).

#### **I don't remember my password and I want to unlock the TV**

- If you forget your password, simultaneously press and hold VOL- on the television and VOL- on the remote for 3 seconds. Nothing appears on the screen, Parental Controls simply unlock and you can re-enter a password via *Lock Parental Controls*.

#### **The V-Chip won't let me watch a program even though it's not rated as violent.**

- Maybe the movie was given an NR (Not Rated) status. After you block movie ratings, you must set *NR* to *View* separately in order to view movies with an NR rating.

## The Front of Your TV

### Front Panel

If you cannot locate your remote you can use the front panel of your TV to operate many of the TV's features.

**MENU** Brings up the Main menu. When in the menu system, it selects highlighted items. Also returns you to the previous menu.

**CH V** Scans down through the current channel list. When you're using the TV's menu system, it acts like the arrow down button on the remote control.

**CH ^** Scans up through the channel list. When you're using the TV's menu system, it acts like the arrow up button on the remote control.

**VOL -** Decreases the volume. When you're using the TV's menu system, it acts like the left arrow button on the remote control.

**VOL +** Increases the volume. When you're using the TV's menu system, it acts like the right arrow button on the remote control.

**POWER** Turns the TV on and off.



### Front Panel Jacks

You can access the component you connected by pressing the INPUT button on your remote until FRNT appears on the screen.

**VIDEO (in)** Allows you to connect a component such as a VCR, camcorder or Internet access device.

**L/MONO (left audio) and R (right audio)** Receives audio signals from another component such as a VCR, camcorder or Internet access device.

### Care and Cleaning

**CAUTION: Turn OFF your TV before cleaning.**

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

**The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water. Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.**

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

**Caution:** Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.

### Limited Warranty

**What your warranty covers:**

- Defects in materials or workmanship.

**For how long after your purchase:**

- 90 days from date of purchase for labor charges.
- One year from date of purchase for parts.
- Two years from date of purchase for the picture tube.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

**What we will do:**

- Pay any Authorized RCA Television Service Center the labor charges to repair your television.
- Pay any Authorized RCA Television Service Center for the new or, at our option, refurbished replacement parts and picture tube required to repair your television.

**How you get service:**

- For screen sizes of 26" and smaller: Take your RCA television to any Authorized RCA Television Service Center and pick up when repairs are complete.
- For screen sizes larger than 26": Request home or pick up, repair, and return service from any Authorized RCA Television Service Center, provided that your television is located within the geographic territory covered by an Authorized RCA Television Service Center. If not, you must take your television to the Service Center location at your own expense, or pay for the cost the Service Center may charge to transport your television to and from your home.
- To identify your nearest Authorized RCA Television Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

**(Continues on next page)**

# Other Information

---

## **What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your television. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Customer replacement fuses.
- Damage from images burnt onto the screen.
- A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A television purchased or serviced outside the U.S.A.
- Acts of nature, such as but not limited to lightning damage.

## **Product Registration:**

- Please complete and mail the Product Registration Card packed with your TV. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

## **Limitation of Warranty:**

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**

- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

**How state law relates to this warranty:**

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your product outside the United States:**

- This warranty does not apply. Contact your dealer for warranty information.

**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

## Glossary

**Antenna** A device used to send or receive electromagnetic waves through the air. In television, an antenna can be alternative to cable service but does not receive cable channels such as CNN.

**Audio Input** Used to connect line-level stereo coming from a VCR, laserdisc player and other components. Audio inputs are also vital parts of audio/video receivers, sound processors, and audio components in general.

**Auto Channel Search** A TV's ability to automatically tune or program stations that are used by broadcasters and skip those left unused.

**Black Level** The level of black in the picture, sometimes referred to brightness. The black level control is adjusted to compensate for ambient room light.

**Channel Block** Allows users to affix security codes to certain channels; typically used by parents to prevent children from viewing "adult" channels. Channels are blocked and unblocked using the TV's set's wireless remote control.

**Closed Captioning** Dialogue or other text appearing on a TV screen. This feature for the hearing-impaired is now legally mandated on all TV sets 13 inches or larger.

**Coaxial Cable** Round antenna wire consisting of a central inner conductor and a cylindrical outer conductor. Used for most video connections, especially by cable companies. Carries both picture and sound for all available channels.

**Contrast** The range in brightness between the darkest and brightest areas in a picture.

**FCC** Federal Communications Commission

**On-Screen Display** Method of showing TV control status (Channel, Time, Parental Controls, etc.) within the picture area.

**Parental Controls** Allows you to program the TV so that children cannot see certain programs, channels or use the front panel controls.

**Video Input** Used to connect the incoming picture portion from an audio/video source. Provides higher picture quality than RF connection because video and audio are separated.



## Accessory Information

There are various accessories available to complement your TV. Prices are subject to change without notice. All accessories are subject to availability.

A shipping and handling fee will be charged upon ordering, and we are required by law to collect the appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent.

## How To Order

 
To place an order by phone, have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below.

Use this number only to place an order for accessory items.

**1-800-338-0376**


You can buy some accessories on-line at

**[www.rca.com](http://www.rca.com)**.




**3-ft (part number VH81);  
price \$3.95**

 **6-ft (part number VH82);  
price \$4.95**



**6-ft (part number VH89);  
price \$5.95**

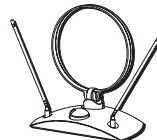

**(part number ANT200);  
price \$49.95**

**Screw-on Cable** attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. The ends screw onto the connectors for a secure connection.

**Push-on Cable** attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. Ends push on for a quick connection.


### **Amplified Antenna**

 Allows you to quickly switch from the antenna signal to the cable or satellite signal without disconnecting the antenna.

**(Continues on next page)**


# Other Information

---




Gold-Tipped cable, 6-ft  
(part number VH83);  
price \$5.95

**Monaural VCR Dubbing Cable** Double cable that lets you connect the video and audio jacks of two VHS VCRs to duplicate tapes. Can also be used to connect a VCR to your TV. Cable is color-coded and shielded. Has RCA-type phono plugs on each end.

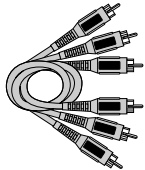

Gold-Tipped cable, 6-ft  
(part number VH84);  
price \$9.95

 
**Stereo VCR Dubbing Cable** Triple cable that lets you connect the VIDEO and AUDIO jacks of stereo components.



Splitter  
(part number VH47);  
price \$3.95

### **2-way Signal Splitter**

 Helps you connect a second TV or VCR.



CRK10A1;  
(part number 240959)  
price \$19.25

### **Remote Control**

This is the remote control that came packed with your TV. Replacements or spares can be ordered as needed.

## A

- Accessories 47
- Advanced connections 9
- Age-Based Ratings 17, 18
- ANTENNA jack 7, 8, 9
- Audio
  - menu 31
  - jacks 8, 9
- Audio/Video cable 7
- Auto Channel Search 11, 35

## B

- Basic connections 8
- Batteries for the remote 10
- Black Level 32
- Block
  - Age-Based Ratings 20
  - Front Panel 27
  - Movie Ratings 25
  - Specific Content Themes 22
  - V-Chip Unrated Program 26
- Buttons, remote control 12

## C

- Cables 7
- CC (Closed Captioning) 33
- CHAN buttons 12

## Channel

- Banner 14
- Block 27
- Labels 35
- Menu 35
- Search 11
- CLEAR button 12
- Coaxial cable 7
- Color warmth 32
- Connections
  - TV + VCR 8
  - TV + VCR + Satellite Receiver 9
  - TV Only 7
- Content Themes 17
- Contrast 32

## F

- Front panel
  - block 28
  - buttons 41
  - jacks 41

## I

- INPUT button 12
- Interactive setup 11

## L

- Labels 35
- Language 33
- Languages, selecting 11
- Lock, Parental Controls 28

## M

- Main Menu 12
- Menu
  - Audio 31
  - Channel 35
  - Language 33
  - Picture Quality 32
  - Screen 33
  - Time 36
- MENU button 12
- MUTE button 12

## N

- Number buttons 12

## P

- Parental Controls
  - locking, unlocking 28
  - menu 15
- Picture 32
- POWER button 12
- Previous channel 12

## R

- R and L/MONO jacks 8, 9
- Rating Limits
  - movies 24
  - TV 18
- Remote
  - batteries 10
  - buttons 12

## S

- SAP (Second Audio Program) 31
- Satellite Receiver 9
- Schedule 36
- Screen Menu 33
- Set Time 36
- Sharpness 32
- Signal Type 35
- Sleep Timer 14, 36
- Stereo 31

## T

- Time Menu 36
- Tint 32
- Tone controls 31
- Troubleshooting 38

## U

- UHF/VHF antenna 35
- Unlock, Parental Controls 28

## V

- V-Chip 15
- VCR 8
- VIDEO jack 8, 9
- VOL buttons 12

## W

- Warranty 43

**Visit the RCA web site at [www.rca.com](http://www.rca.com)**

---

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

**Thomson multimedia Inc.  
10330 North Meridian Street  
Indianapolis, IN 46290**

©2002 Thomson multimedia Inc.  
Trademark(s)® Registered  
Marca(s) Registrada(s)  
Printed in Thailand  
**TOCOM 15920050**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>