



Dual Wake Clock Radio User's Guide



We bring good things to life.

FOR YOUR SAFETY

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

IMPORTANT BATTERY INFORMATION

- When storing or unplugging from AC outlet for a day or more, be sure to remove battery because it can leak and damage the unit.
- Batteries may leak electrolyte if inserted incorrectly, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Dispose of batteries, according to federal, state, and local regulations.

“NO WORRY” BATTERY BACKUP

This clock radio is equipped with a memory holding system powered by a 9-volt alkaline battery (not included).

When power is interrupted or the AC line cord is unplugged, the battery will power the clock radio to keep track of time and alarm settings programmed into memory. Should WAKE TIME occur during the power interruption, the radio will operate or the alarm will sound if remaining battery power is adequate. Normal operation will resume after AC power is restored. When on battery power, the digital display will not light.

Install battery as follows:


- Unlatch and lift off battery compartment door (located on bottom of radio).
- Connect a 9-volt battery.
- Insert battery in compartment and replace compartment door.

NOTE:

- Alkaline batteries are recommended. Carbon-zinc batteries may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if Wake System is not activated). To preserve battery life, the radio should remain plugged into an AC outlet. As the battery gets older, its voltage will drop and memory may be lost. Be sure to replace the battery periodically.
- Be sure to remove battery when storing the unit. Battery will be drained if left connected while the unit is unplugged, and a worn out battery may leak chemicals which can badly damage the clock radio. When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

POWER FAILURE INDICATOR

If AC power is interrupted (disconnected) for a short period, both time and alarm settings will change unless optional battery is installed. After AC power is restored (reconnected) the digital display will blink to indicate that power was interrupted and you must readjust the TIME and ALARM settings.

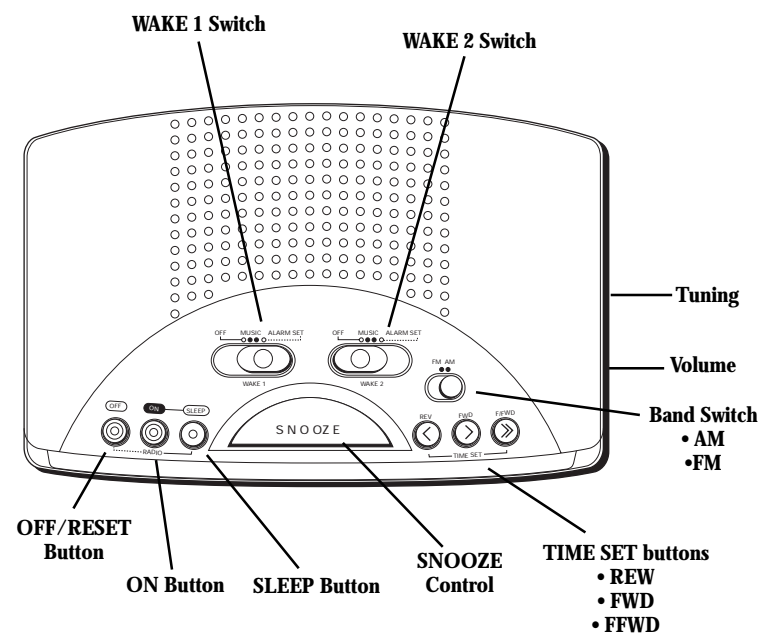

BUILT-IN AFC

The Built-In Automatic Frequency Control (AFC) works only on FM. It helps keep the radio locked on the FM station to which it is tuned.

When tuning in FM stations, you may notice that often the station you desire can be heard on two or three nearby points on the dial. Always tune carefully to the loudest and clearest point.

ANTENNAS

AM Antenna - A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception - Rotating the unit slightly may improve reception of distant AM stations.

FM Antenna - The power cord acts as your FM antenna. The power cord picks up moderate to strong stations and eliminates the need for an external antenna in most strong signal areas. Be sure the power cord is stretched to its full length. Do not coil or bunch the cord together. Changing position of the power cord may improve reception.

OPERATING THE RADIO

- Plug the power cord into any 120V AC household outlet.
- Press the ON button.
- Slide the AM/FM BAND switch to desired broadcast band.
- Turn TUNING dial to select a station and then turn the VOLUME control to your preferred listening level.
- Press the OFF button to turn radio off.

SETTING THE TIME

Use the FAST FORWARD, FORWARD and REVERSE buttons to set the correct time. The AM indicator to the left of the digital display will show when the clock is reading AM time.

SETTING THE WAKE TIME

You can select two different wake times for music or alarm to turn on automatically. WAKE 1 and 2 controls are located on top of the unit behind the SNOOZE bar.

- Slide switch to SET position. The display will change to wake time.
- Use the FAST FORWARD, FORWARD and REVERSE buttons as needed until you reach your desired AM or PM wake time.

For music, select an AM or FM station and then turn the radio off. Set wake time and then slide the switch to MUSIC. For Alarm, set wake time and then slide switch to ALARM position.

If a wake time is set, an indicator in the display lights and the unit turns on in the chosen mode (alarm or music) at the set time for approximately one hour. To turn off the wake mode, slide the switch to OFF or press the OFF button.

NOTE: If both Wake 1 and Wake 2 controls are in the SET position, the time of day is displayed.

USING SNOOZE CONTROL

After the wake mode has activated, you can silence it for another 7 minutes by pressing the SNOOZE button. When the wake mode activates again, you can turn the unit off or use SNOOZE button for up to 59 minutes. The radio or alarm will then turn itself off after about an hour.

SLEEP TO MUSIC

You can drift off to sleep to music knowing that the radio will turn itself off automatically.

- Turn the radio off.
- Press and hold the SLEEP button. The radio will turn on automatically and 0:59 will show in the display.
- Hold down the SLEEP button until you reach a sleep time between 59 and 1 minute.

The radio will play for the chosen length of time (up to 59 minutes) and then turn itself off. If you decide to turn the radio off before the total number of minutes have passed, just press the OFF button.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Consumer Electronics could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

LIMITED WARRANTY

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year.
- (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new or, at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Remove cassette tapes or CDs from unit before shipping as these will not be returned.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson Consumer Electronics, Inc.
Product Exchange Center
32 Spur Drive
El Paso, Texas 79906

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss or damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

SERVICE

This product should be serviced only by those specially trained in appropriate servicing techniques. Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase Date _____

Name of Store _____

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



THOMSON CONSUMER ELECTRONICS

P.O. Box 1976, Indianapolis, IN 46206

© 1998 Thomson Consumer Electronics, Inc.

Trademark(s) ® Registered

Marca(s) Registrada(s)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>