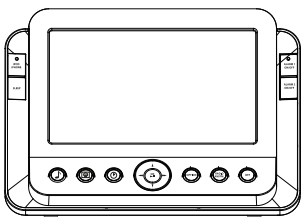 


**RCA**user manual  
guide de l'utilisateur

RC85i



EN/F

It is important to read this user manual prior to using your new product for the first time.  
*Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.*

iPhone is a trademark of Apple Inc.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

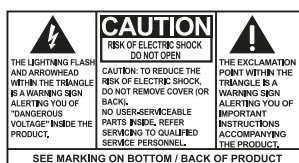 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

# IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If

the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



Portable Cart Warning

- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled on or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## ADDITIONAL SAFETY INFORMATION

- The AC/DC adaptor supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers or power adapters that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- Caution marking is located at bottom of apparatus.
- To be completely disconnect the

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Plugging in for power  
AC OUTLET POWER SUPPLY:  
100-240 V ~ 50/60 Hz

## Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

## Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

## For your records

In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:  
Model No.:  
Date of Purchase:  
Place of Purchase:  
Serial No.:

## Technical information

Product: Digital Photo Frame for iPhone/iPod  
Brand: RCA  
Model: RC85i

## Electrical power information

AC/DC Adaptor:  
Input: 100 - 240 V - AC 50/60 Hz  
Output: 6V~DC 3A

## Before you begin

**Dear RCA customers,**  
Thank you for purchasing the RCA Photo Clock Radio. This product includes a 7" (16:9 Aspect Ratio) TFT Liquid Crystal Display (LCD) monitor with radio, clock, music player and photo functions. Also it supports the use of SD/MMC/MS memory cards or USB flash drives for your music and photo content. This product will play mp3 and Windows Media™ audio (WMA) content.

To start using your iPod/iPhone photo clock radio, please follow the instructions in the following pages.

Card sizes supported:  
MMC card: up to 4GB;  
SD card: up to 32GB;  
Memory Stick: up to 16GB

## Unpacking the unit

You should find the following items in the box:

- 7" photo clock radio
- AC/DC power adapter
- AM antenna loop
- User manual

## Connect the main unit power

- Connect the supplied AC/DC power adapter to the product's DC jack, and connect to a convenient wall outlet.

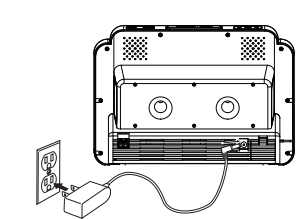
## Music

### Playing music

1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB connector.
2. Press **J** and then press **◀** or **▶** to select the source of music and press **OK**.
3. Press **▲** or **▼** to highlight the file you want to play.
4. Press **OK** to start playback.
5. To pause the playback, press **OK**. Press **OK** again to resume playback.
6. Press **◀** or **▶** to select the previous/next file or press and hold to search backward or forward the current song.

### Settings

1. When a music file is highlighted, press **OPTION**.
2. A pop-up menu shows **Play mode** and **Delete**.
3. Press **▲** or **▼** to highlight **Play mode** and press **OK**.
4. Press **▲** or **▼** to select among normal, Repeat one, Repeat all and Shuffle.



- Once connected with power, "Press OPTION to set the clock time" appears after the RCA logo screen. Refer to the following pages for more information on setting up date, time, alarm, listening to radio and viewing photos.

## Battery back-up operation

This clock radio is equipped with a memory holding system that can be powered with 2 "AAA" batteries (not included). The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, or AC/DC power adapter is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power.

Windows Media is trademarks of Microsoft Corporation in the United States and other countries.

is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

When the battery backup functions, the alarm duration is five minutes only. When AC power is connected, the alarm duration is one hour.

### To install or replace the batteries:

1. Remove battery compartment door (located at the rear of the unit) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
  2. Insert or replace 2 AAA batteries.
  3. Replace the compartment door.
- It is recommended that you replace the batteries every year.
  - It is recommended to plug the unit for AC power while replacing batteries to avoid the loss of clock and wake time/mode settings.

### Power failure indicator

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

## Photo

### Viewing photo

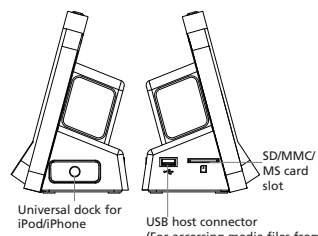
1. Insert an SD, MMC or MS card into the SD/MMC/MS card slot or insert a USB flash drive into the USB connector.
2. Press **☰** and then press **◀** or **▶** to select the source of photo and press **OK**.
3. Press **▲**, **▼**, **◀** or **▶** to highlight the desired file.
4. Press **OK** to start photo slideshow.
5. To pause the slideshow playback, press **OK**. Press **OK** again to resume playback.
6. Press **◀** or **▶** to select the previous/next file.

### Settings

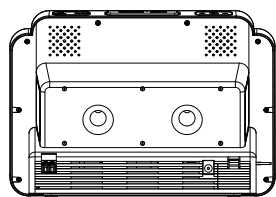 
1. During slideshow playback, press **OPTION**.
2. A pop-up menu shows:
  - **Rotate** - to rotate the photo
  - **Slideshow interval** - to set the playback duration of each photo
  - **Display mode** - to select display mode
  - **Wallpaper** - to select wallpaper
  - **Slideshow Transition** - to select different ways of transition

## General controls

### Side view

Universal dock for iPod/iPhone  
USB host connector (For accessing media files from USB Flash Drive only. Do not use to connect PC.)

### Back view

**AM loop antenna socket** - Connect to the AM loop antenna**DC jack** - Connect to the power adapter**Battery compartment** - To install 2 x AAA batteries

## Clock

### Setting date and time

1. "Press **OPTION** to set the clock time" will be displayed when you first power on the unit. Press **OPTION** to enter clock setting menu. (This prompt will be disappeared and the clock time will be flashing to remind user if no button is pressed for a while.)
2. Press **▲** or **▼** to highlight the time display format and date format, date and time and then press **OK**.
3. Press **◀** or **▶** to highlight the option.
4. Press **▲** or **▼** to change the values and then press **OK** to confirm.
5. Press **OPTION** to save and exit the clock settings menu or the menu will exit automatically if no button is pressed for a while.
6. Press **☰** to toggle among three different clock display formats.

### Setting Alarm

1. Press **ALARM SET**.
2. Press **◀** or **▶** to select Alarm 1 or Alarm 2 setting and then press **OK** to confirm.
3. Press **▲** or **▼** to highlight the

different options include **Alarm Time**, **Alarm Volume**, **Alarm Date**, **Snooze** and **Alarm sound** and then press **OK**.

4. Press **▲** or **▼** to change the values and then press **OK** to confirm.
5. Press **☰** to exit the alarm setting menu or the menu will exit automatically if no button is pressed for a while.
6. Press **ALARM 1 ON/OFF** or **ALARM 2 ON/OFF** to turn/off the alarm.

## Radio

3. Press **▲** or **▼** to select a preset station and press **OK** to confirm.

### Radio step frequency change

In FM/AM radio mode, press **OPTION** and **▲** or **▼** to access "FM step" or "AM step" items (depends on what the current radio band is). Select the desired step frequency and press **OK** for confirmation.

- The default FM step frequency is 200kHz and AM step frequency is 10kHz.
- All radio preset stations will be reset when the step frequency is confirmed to change.

### Antenna

#### Built-in AFC

The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

#### AM Antenna

For AM reception, connect the AM antenna loop to the back of the radio. Stretch out the antenna cord to its fullest length and rotate the antenna for better reception.

## Display brightness

Press **SNOOZE/BRIGHTNESS** to select the brightness level among High, Middle and Low.

## System settings

1. Press **SYSTEM** to show system menu.
2. Press **▲** or **▼** to highlight the option and then press **OK**.
3. In **Language** sub-menu, press **▲** or **▼** to change the values and then press **OK** to confirm.
4. In **Reset all setting sub-menu**, press **OK**. Then press **◀** or **▶** to select **Yes** and press **OK** to confirm.
4. Press **☰** or **SYSTEM** to exit the system menu.

All user defined settings (e.g. clock presets, clock time format and date format) will be lost after reset.

## Warranty information

### Limited warranty

**12 Month Limited Warranty Applies to Acoustic Research Audio/Video Products**

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or

cards, speakers, accessories, computers, computer peripheral or media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR

## Sleep function

### Sleep timer

The unit has a built-in sleep timer which enables the unit to automatically turn off after a set period of time.

Press **SLEEP** repeatedly until the sleep time (Off, 15, 30, 60, 90 Mins) you desire displays.

1. Press **SLEEP** to activate the sleep timer function and the sleep icon will be turned on.
2. When the sleep timer function is activated, press **SLEEP** to show the remaining sleep time.
3. Press **SLEEP** again will show a pop-up menu. To change sleep time (90, 60, 30, 15 mins and off), press **▲** or **▼** to highlight different sleep time and press **OK**.

You can also change the sleep setting from the clock setting menu.

1. Press **OPTION** to enter clock setting menu. This menu can be recalled under in clock display mode screen.
2. Press **▲** or **▼** to highlight Sleep Time and then press **OK**.
3. Press **▲** or **▼** to select the sleep time and then press **OK** to confirm. The default sleep time is 90 mins.
4. Press **▲** or **▼** to highlight Sleep Mode and then press **OK**.

5. Press **▲** or **▼** to select the sleep mode from radio, music (USB or memory card) and iPod/iPhone. The default sleep mode is radio.
6. To turn off the sleep timer, press of **OFF** or **SNOOZE**. It can also be turned off by pressing **SLEEP** twice, then select **OFF** in the pop-up menu.

The display will automatically dimmed so that it will not disturb you while you are sleeping.

## Wallpaper

### Setting wallpaper

Follow the below two options to set the wallpaper:

1. Press **☰** to enter Clock mode if you are in other modes.
2. Press **OPTION** to enter clock setting menu and then press **▲** or **▼** to select Wallpaper.
3. Press **OK**.
4. Select below options by pressing **▲** or **▼** and then **OK**.
  - **Default**: To use the built-in photo as wallpaper
  - **External**: To select a desired photo as wallpaper from USB device or memory card
  - **Off**: To turn off the wallpaper option and use a black background instead
5. If you select External, press **◀** or **▶** to select the source of wallpaper and then press **OK**.
6. Press **▲**, **▼**, **◀** or **▶** to select desired wallpaper.
7. Press **OK** to confirm.

If the "Slideshow" item in the clock setting menu is set to "ON" and "Wallpaper" item is set to "Default" or "Off", the built-in photos will be used for slideshow in clock display mode. Otherwise, the photos in the memory card or USB flash drive will be used for slideshow in clock display mode.

1. Press **☰** and then press **◀** or **▶** to select the source of photo and press **OK**.
2. Press **▲**, **▼**, **◀** or **▶** to select the desired photo from the thumbnails.
3. Press **OPTION** to enter photo setting menu and then press **▲** or **▼** select Wallpaper.
4. Press **▲** or **▼** to select **ON** and press **OK**.

covered by the warranty.

- A new or refurbished unit will be shipped to you freight prepaid.

### What we will do:

Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

### For Canada Customers, please ship to:

Audiovox Return Centre  
c/o Genco  
6885 Kennedy Road,  
Unit#3, Door 16,  
Mississauga, Ontario  
L5T 3A5Audiovox Electronics Corp.  
Attn: Service Department.  
150 Marcus Blvd.  
Hauppauge, N.Y. 11788  
1-877-833-3439

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

For Customer Service  
Visit Our Website At  
[www.rcaudiovideo.com](http://www.rcaudiovideo.com)  
Product Information, Photos,  
FAQ's, User ManualAudiovox Electronics Corp.  
150 Marcus Blvd., Hauppauge, NY 11788  
©2010 Audiovox Electronics Corp.  
Trademark(s) © Registered  
Marque(s) © Déposé(s)  
Printed in China  
Imprimé en Chine

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>