



user manual manual de usuario guide de l'utilisateur

RCD215

Product registration

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at www.rcaudiovideo.com. PURCHASE REGISTRATION: Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act. Register Online at: WWW.RCAAUDIOVIDEO.COM. Click on Product Registration and Fill Out the Brief Questionnaire.



Enregistrer le produit de votre achat. Merci d'avoir acheté un produit RCA. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question, le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur www.rcaudiovideo.com. ENREGISTREMENT EN LIGNE: Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi Fédérale de protection du consommateur). Enregistrez votre produit en ligne sur: WWW.RCAAUDIOVIDEO.COM. Cliquez sur Enregistrement produit et remplissez le court questionnaire.

 
Enregistrer le produit de votre achat. Merci d'avoir acheté un produit RCA. Nous sommes fiers de la qualité et de la fiabilité de tous nos produits électroniques, mais en cas de nécessité de réparation ou pour toute question, le personnel de notre service clientèle est prêt à vous aider. Contactez-nous sur www.rcaudiovideo.com. ENREGISTREMENT EN LIGNE: Enregistrer votre produit en ligne nous permettra de communiquer avec vous pour tout avis de sécurité au sujet du produit en vertu du Federal Consumer Safety Act (Loi Fédérale de protection du consommateur). Enregistrez votre produit en ligne sur: WWW.RCAAUDIOVIDEO.COM. Cliquez sur Enregistrement produit et remplissez le court questionnaire.

ENE/F


It is important to read this user manual prior to using your product for the first time. Es importante leer este manual antes de usar por vez primera su equipo. Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.

Docking your device

5. Dock your device vertically or horizontally.

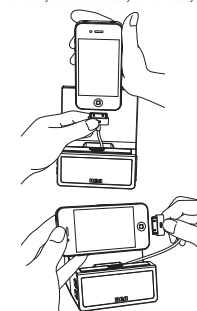

 6. You can simply wrap the cable around the side of the dock if you prefer.

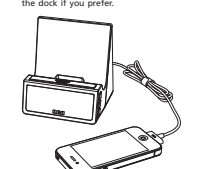

Warranty information

12 Month Limited Warranty Applies to RCA Clock Radios

VOXX Accessories Corporation (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and cost of labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g., dated bill of sale, specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, disks, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or detachment of the factory serial number code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

 
This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

English

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
• Keep these instructions.
• Heed all warnings.
• Follow all instructions.
• Do not use this apparatus near water.
• Clean only with a dry cloth.
• Do not touch any ventilation openings.
• Do not install near any heat sources.
• Do not attempt to disassemble the cabinet.
• Do not attempt to connect power leads.
• Do not attempt to connect power leads.
• Do not attempt to connect power leads.
• Do not attempt to connect power leads.

the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- The ACDC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
• Do not use uncharged chargers or power adapters.
• Always leave sufficient space around the product for ventilation.
• Do not place product in or on a bed, rug, bookcase or cabinet that may prevent air flow through vent openings.
• Do not place lit candles, cigarettes, cigars, etc. on the product.
• Care should be taken so that objects do not fall into the product.
• Do not attempt to disassemble the cabinet.
• To completely disconnect the power input, the ACDC adapter of the apparatus should be disconnected from the mains.
• ACDC adapter is a direct connect device.
• To completely disconnect the power input, the ACDC adapter of the apparatus should be disconnected from the mains.
• ACDC adapter should not be obstructed OR should be easily accessed during intended use.
• The ventilation openings should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
• Do not place any naked flame sources such as lit candles should be placed on the apparatus.
• Batteries should be properly disposed of.
• Only use this in moderate climates.

Electrical consumption

ACDC adapter:
Input : AC 120 - 240 V - 50/60 Hz
Output : DC 5V ~ 2A

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

Español

¡MPORTANTE INSTRUCCIONES DE SEGURIDAD

FAVOR DE GUARDAR ESTO PARA UNA REFERENCIA FUTURA



ADVERTENCIA: PARA EVITAR PELIGRO DE CHOQUE ELÉCTRICO O INCENDIO, NO EXPOGA ESTE PRODUCTO A LA LLUVIA O LA HUMEDAD.

Alguna de la siguiente información técnica no se aplica a su producto en particular. Sin embargo, como con cualquier producto electrónico, se deben tomar precauciones durante su manejo y uso.

- Lea estas instrucciones.
• Conserve estas instrucciones.
• Tome en cuenta todas las advertencias.
• Siga todas las instrucciones.
• No use este aparato cerca del agua.
• Limpie solamente con un paño seco.
• No bloquee ninguna de las aperturas de ventilación.
• No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas, u otros aparatos (incluyendo amplificadores) que produzcan calor.
• No elimine el propósito de seguridad de la clavija polarizada o del tipo a tierra.
• Use solamente con un cable de seguridad.
• Proteja el cable de corriente de pistones o machucos particularmente en las clavijas, receptáculos de conveniencia, y en puntos donde salen del aparato.
• Use solamente accesorios/adaptadores especificados por el fabricante.
• Use solamente con el carro, soporte, tripode, columna, o mesa especificados por el fabricante, o vendidos con el aparato.
• Cuando se utiliza un carro, tenga precaución al mover la combinación de carro/aparato para evitar lesión ocasionada por volcadura.
• Desconecte este aparato durante tormentas eléctricas o cuando no sea utilizado por largos períodos de tiempo.
• Refiera todo a servicio a personal de servicio

 


Consumo eléctrico
Adaptador CA/DC:
Entrada: CA 120 - 240 V - 50/60 Hz
Salida: DC 5V ~ 2A

General controls



TOPE/VELOCIDAD: Turn off the alarm function momentarily (10 minutes); adjust the display brightness.



Back view
DC 5V - Connect to the supplied power adapter.

USB CHARGING - Charge USB powered devices.
AL 1 AL 2 - Slide switch to set Lock, Alarm 1, Alarm 2, and clock time.

Setting Clock Time

- 1. Slide the switch AL 1/AL 2 to clock position.
2. Press HR + and MIN + to set the time.
3. Press hold to decrease or increase the time value quickly.
4. The clock is in 12 hour format. The AM/PM indicator appears to show AMPM time.
5. Slide the switch AL 1/AL 2 to lock position when finished.

Setting Alarm Time

- 1. This unit allows 2 alarm times to be set.
2. Press HR + and MIN + to set the alarm time.
3. Press hold to decrease or increase the time value quickly.
4. The alarm time and the corresponding alarm indicator settings (ALARM 1 or ALARM 2) flash.
5. Slide the switch AL 1/AL 2 to position when finished.
6. While in Lock mode press AL 1 or AL 2 to toggle the alarms on and off. You will see a solid when the alarm is active.
7. Follow steps 1 through 4 to set ALARM 2.

Setting Alarm Time

- Ways to turn off alarm
• To silence the alarm function momentarily, press SNOOZE.
• To turn off the alarm, press OFF.
• To disable the alarm function completely, press AL 1 or AL 2 repeatedly until no indicator shows on the display.

USB charging

Use the USB charging port at the back of the dock to charge your smartphone or to power USB powered devices such as a USB type lamp or fan.

 
Charging function may not be supported for all phones or electronic devices.

Docking your device

- 1. Insert the USB cable (not included) through the hole in the included rubber tie.
2. Wrap the tie around the excess cabling and back onto itself to secure.

Docking your device

- 3. Push your USB cable (not included) through the hole of the soft dock.



- 4. Leave a little slack in the cable to allow you to pull some of the cable out when connecting to your device.



Controles generales


Vista derecha
OFF - Apaga la alarma.

AL 1 - Activa o desactiva Alarma 1.
AL 2 - Activa o desactiva Alarma 2.

Vista izquierda
HR + - Ajusta la hora en modo ajuste de reloj y modo alarma.
MIN + - Ajusta la hora en modo ajuste de reloj y modo alarma.



 Vista superior
SNOOZE - Desactiva momentáneamente la función alarma (10 minutos); ajusta el brillo de pantalla.



Vista posterior
DC 5V - Conecta con el adaptador de corriente suministrado.

USB CHARGING - Carga dispositivos alimentados via USB.

AL 1/AL 2 - Deslice el interruptor para establecer Bloqueo, Alarma 1, Alarma 2, hora del reloj.

Ajuste de la Hora del Reloj

- 1. Deslice el interruptor AL 1/AL 2 a la posición reloj.
2. Presione HR + y MIN + para ajustar la hora.
3. Presione hold para disminuir o aumentar rápidamente el valor del tiempo.
4. La hora de alarma y el indicador de temporizador de alarma correspondiente AL 1 o AL 2 parpadearán.
5. Deslice el interruptor AL 1/AL 2 a la posición AL 1 o AL 2 para bloquear la posición AL 1/AL 2.

Ajuste del Tiempo de Alarma

- Esta unidad permite establecer 2 tiempos de alarma.
1. Deslice el interruptor AL 1/AL 2 a la posición AL 1 o AL 2.
2. Presione HR + y MIN + para establecer la hora de alarma.
3. Presione y mantenga presionado para disminuir o aumentar rápidamente el valor del tiempo.
4. La hora de alarma y el indicador de temporizador de alarma correspondiente AL 1 o AL 2 parpadearán.
5. Deslice el interruptor AL 1/AL 2 a la posición AL 1 o AL 2 para alternar encendido o apagar alarmas.
6. Use la tecla hold para activar o desactivar la alarma.
7. Siga los pasos 1 a 4 para establecer ALARMA 2.

Formas de apagar la alarma

- Para silenciar momentáneamente la función despertador, presione SNOOZE.
Para apagar la alarma, presione OFF.
Para desactivar completamente la función alarma, presione AL 1 o AL 2 repetidamente hasta que ningún indicador se muestre en la pantalla.

Carga USB

Para conectar su teléfono celular a carga: Use un cable USB (no incluido) para conectar su teléfono celular al conector USB del acoplador. Su teléfono celular debería comenzar la carga.

La función de carga puede no estar soportada para todos los teléfonos o dispositivos electrónicos.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>