 




RCA

u
s
e
r
m
a
n
u
a
l

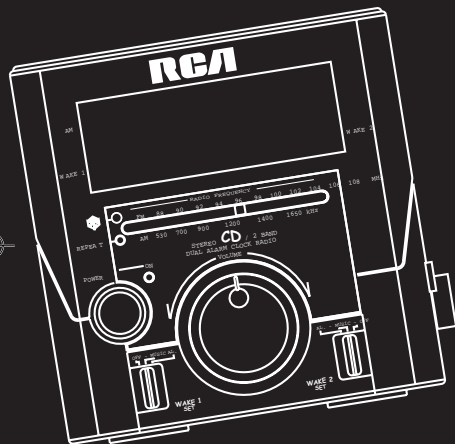

RP3753

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

 
If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

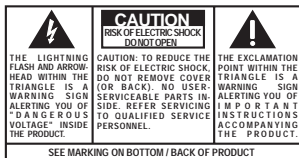

Service

This product should be serviced only by those specially trained in appropriate servicing techniques. Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase Date _____

 
Name of Store _____

Mains Connections

MAINS OUTLET POWER SUPPLY: 120V -60Hz

Note:

Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged.



For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Battery Back-up

This clock radio is equipped with a memory holding system that can be powered with a 9-volt battery (not included). The power failure protection circuit will not operate unless battery is installed.

When normal household power is interrupted, or AC line cord is unplugged, the battery will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless optional battery is installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

Caution



Have a Blast- Just Not in Your Eardrums!

Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

 
The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

THE DIGITAL CD CLOCK RADIO

Protection against mains power failures:


1. Remove battery compartment door (located on the back of the radio) by applying thumb pressure to area indicated on battery door and then lift the door out and off the cabinet.
2. Connect a 9-volt battery connector plug. (6LR61 or NEDA 1604A)
3. Insert battery in the compartment and replace the compartment door.

Battery compartment at the backside of the unit

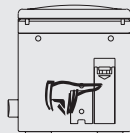



NOTE: Alkaline (6LR61/NEDA 1604A) batteries are recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if radio or alarm are not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. Leaky battery can badly damage the clock radio.

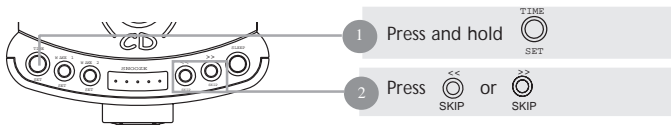 
Setting time



NOTE:

1. Press and hold  or  to skip fast
2. The AM LED indicator will light to show AM time

 
Adjusting display brightness

You may slide  on the left side of the unit to vary the LED display brightness.

1

THE DIGITAL CD CLOCK RADIO

Listening to radio

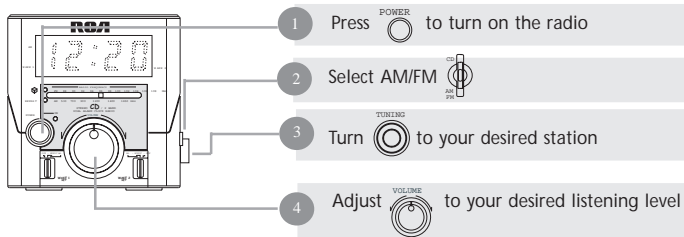


• To improve reception, you may try and:

1. move or rotate the unit for AM reception
2. slide **MONO** on the left side of the unit to MONO for FM reception

• To turn off the radio, press **POWER** again

Sleep to CD/radio

 You can drift off to sleep to CD/radio knowing that the unit will turn itself off automatically. If alarm is set, the unit will turn on again as programmed.

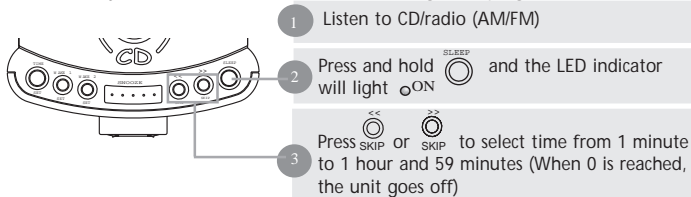


• If you decide to turn off the unit sooner, press **SNOOZE** or **POWER** and this will shut off the sleep cycle.

• When sleep mode is active, subsequent press on **SLEEP** to show the remaining time before the unit goes off.

THE DIGITAL CD CLOCK RADIO

 Listening to compact disc

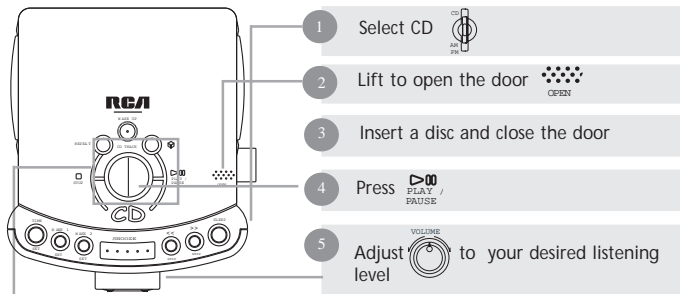




You may listen through a headphone by inserting one into on the left side of the unit.





Note that while the alarm is on, the speaker will sound as well although a headphone is inserted.




Press  **REPEAT** to repeat the entire disc playback and the LED indicator will light

Press   to play music randomly and the LED indicator will light

Press  to pause playback

Press  to stop playback

Press  or  to select track



 
- If the disc compartment is empty, or the disc cannot be played, the LED message "nd" flashes.

- Do not store CDs in damp areas. Do not expose CDs to high temperatures.

- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.

THE DIGITAL CD CLOCK RADIO

Setting alarm with tone

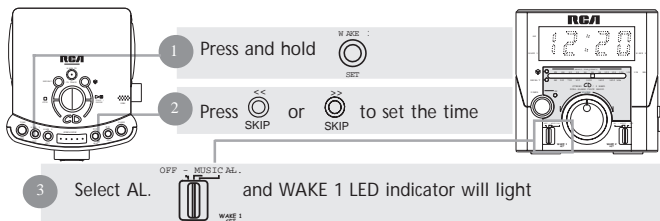

1. You cannot adjust the alarm tone volume.
2. With the **GRADUWAKE** feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds.

Setting alarm with music

- 1 Follow 1 and 2 of "Setting alarm with tone" above
- 2 Select MUSIC and WAKE 1 LED indicator will light
- 3 Slide on the right side of the unit
Insert a disc in the compartment
To wake up to your preferred CD track: (default is track 1)
 - a. Press and hold
 - b. Press or to select track

Radio: Select AM/FM and turn to your desired station
- 4 Turn to your desired wake-up volume




- If the CD compartment is empty, the alarm tone will sound instead when in fact MUSIC mode is selected.
- When setting WAKE 2, same procedure is followed.
- When both WAKE 1 and WAKE 2 are set to MUSIC, ONLY 1 mode (CD or AM or FM) can be selected.


THE DIGITAL CD CLOCK RADIO

Stopping alarm



1. To silence the alarm momentarily:

- Press  and the alarm will sound again when the snooze period is over (see "Adjusting snooze duration" below)

2. To stop alarm from sounding:

- Press  and the alarm will be on again the following day at the same time


3. To cancel alarm completely:

 
- Slide  or  to OFF and the corresponding alarm(s) won't sound again the following day



- If uninterrupted, the alarms will stop sounding in 2 hours.

Adjusting snooze duration

The snooze-alarm control allows extra sleep time after the unit comes on in alarm mode. Press  will turn off the alarm until the snooze period is over. You can use the SNOOZE feature repeatedly for up to about 2 hours, after which the unit will turn off until the next alarm conditions are met.

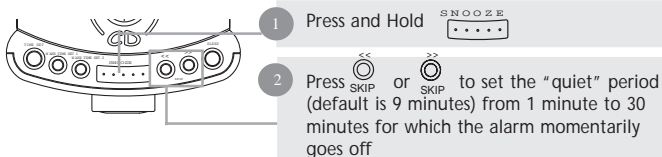



Limited Warranty

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

Thomson multimedia Inc.
Product Exchange Centre,
11721 B Alameda Ave,
Socorro, TX 79927

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss of damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

 
- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

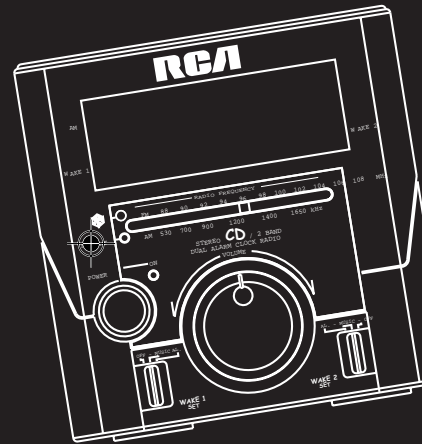

Thomson multimedia Inc.

10330 North Meridian St.

Indianapolis, IN 46290

© 2001 Thomson multimedia Inc.

Trademark(s) © Registered

Marca(s) © Registrada(s)

Marque(s) © Déposée(s)

55147640 (EN/E)

www.rca.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>