

## QUICK START GUIDE



www.rca.com/television

# Choose Your Connections

 
Make your connection decision easier by taking a few minutes to review the jacks on your new HDTV. Compare the jacks on the device you want to connect and see if the same jacks are available on your HDTV. Then refer to the chart below to determine the best connection to make.

For more information about connecting your HDTV to other devices, refer to Chapter 1 of the User's Guide. Make sure you read the safety information sheet provided separately before you connect and operate your TV.

Jacks	Quality	Connects to...	Cables needed (not included)
	★★★★	Devices with an HDMI or a DVI output, such as HD Receivers, Satellite Receivers, and Cable Boxes	HDMI Or if connecting to a DVI device, use these with an HDMI cable Audio +  DVI Adaptor
	★★★	Devices with Y Pb Pr (component) outputs, such as HD Receivers, Satellite Receivers, Cable Boxes, DVD-PVRs, and DVD Players	Component Video Audio
	★★	Devices with S-Video or Video outputs, such as DVD Players, VCRs, Satellite Receivers, and Cable Boxes	S-Video Audio
	★		Video Audio

# 1

## Connect a Signal Source

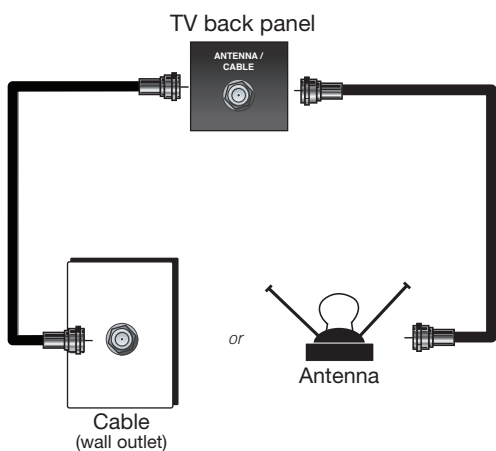

Connect your regular cable to the TV's ANTENNA/CABLE INPUT to receive analog channels or connect an antenna to the TV's ANTENNA/CABLE INPUT to receive off-air local digital and analog channels.

*Note: If you have regular cable, your TV is able to receive some digital channels (using the ANTENNA/CABLE INPUT) because it has a capability called QAM. QAM is a tuner that enables reception of unscrambled digital cable content. Check with your cable provider for information about content availability in your area. Refer to Step 3, Operate Your TV, for information on digital channels.*

If you're connecting a cable box or satellite receiver, use the chart above to help determine which jacks to use for the best connection. Your cable box or satellite receiver needs to be high definition if you want to receive high definition programming. Check with your cable provider for more information.

Continue to Step 2, *Set Up Your TV*, on the back page.

# 2

## Set Up Your TV

**Make sure you have** connected your TV to a signal source and all of your devices. Also, make sure you put the batteries in the remote.

**Now,** plug in the TV. The Power indicator on the front panel lights for a few seconds and goes off during initialization. This only happens when the TV is unplugged and plugged back in, or if power is lost.

Once the Power indicator goes off, turn on the TV. Wait for one minute for the picture to appear as the TV warms up. You'll hear audio during this time and the picture gets increasingly brighter. The assisted setup screen appears once the TV has warmed up. Press OK to continue.

- **Set the Menu Language.** Press OK to select *English* and continue to the next step. To choose another language, press the down arrow button to highlight the language and then press OK.

 
- **Search Channels.** A channel search must be completed in order for your TV to display channels and programming information. Make sure you've connected your TV to cable or an off-air antenna before you begin the channel search.

All the options are selected for you to ensure a full channel search is completed. Press the right arrow button. An alert screen appears to allow you to start a channel search or customize the options.

Press OK to start a channel search or if you want to change some of the options, use the arrow buttons to highlight those options. Press OK to check or uncheck an option. Then highlight *Start Search* and press OK to start the channel search.

When the channel search is complete a message screen appears. Press OK to continue.

- **Set the Quick Startup Option.** Enable *Quick Startup* to have the TV turn on faster. Disable *Quick Startup* and approximately 15 seconds are added to the TV's turn on time, but the TV uses less energy when turned off. Press OK to continue. Read through the next screens that appear and continue to press OK until the screens disappear.

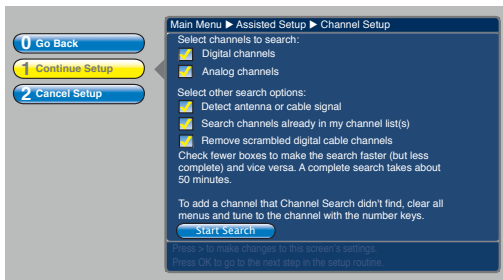

# 3

## Operate Your TV

### Watching TV

#### Turning On Your TV

Press the TV button to turn on the TV and put the remote in TV mode. To turn off your TV, press the ON•OFF button.

#### Changing Channels

- If you have both analog and digital cable channels these will be put into the same channel list. As you change channels, an *A* appears next to the analog channel; a *D* appears next to the digital channel.
- Depending upon the type of signals you have connected to your HDTV, you might notice the channels change slower than you're used to. This is perfectly normal. Digital channels sometimes take longer to tune.

#### Entering Channel Numbers

To tune to a channel, enter the channel number and press OK or wait a few seconds for the channel to tune. Digital channels can have both primary channels (like the analog channel number) and subchannels. To tune to a digital channel with a subchannel, such as 6-1, enter the primary channel number (6), then press the **SUB CH** button. Enter the subchannel number (1) and press OK.

#### Viewing Devices Connected to Your TV

 
To view devices connected to your TV, press the **INPUT** button on your remote. If you have a DVD player, for example, connected to the INPUT 2 VIDEO jack, press INPUT until *INPUT2* appears. Another way to view devices connected to your TV is by using the Autotuning feature. Go to Chapter 3 of the User's Guide for details.

#### Using the Universal Remote

You can program the SAT•AUX or DVD buttons to operate a different brand of device connected to your TV. Go to Chapter 2 of the User's Guide for details on programming the remote.

#### Changing the Screen Format

Your TV allows you to change the format of the picture you're viewing by pressing the **ZOOM+/-** buttons on the remote. The format changes as you press the button and the format style is displayed on-screen.

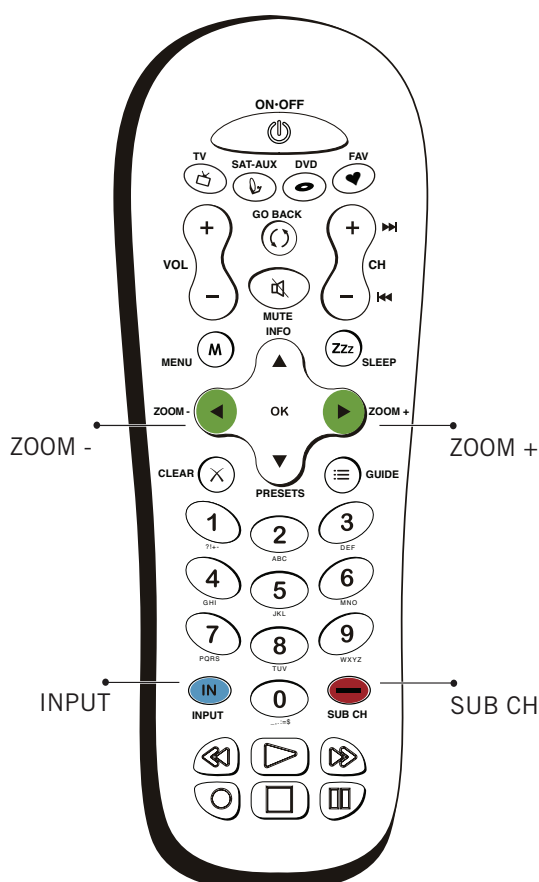

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>