


Mix Me DJ

60-2785

OWNER'S MANUAL — Please read before using this equipment.

Thank you for purchasing a RadioShack Mix Me DJ. Your mixer is a versatile instrument designed for hours of musical fun, that lets you mix your own style of music! You can play and add to your favorite music.

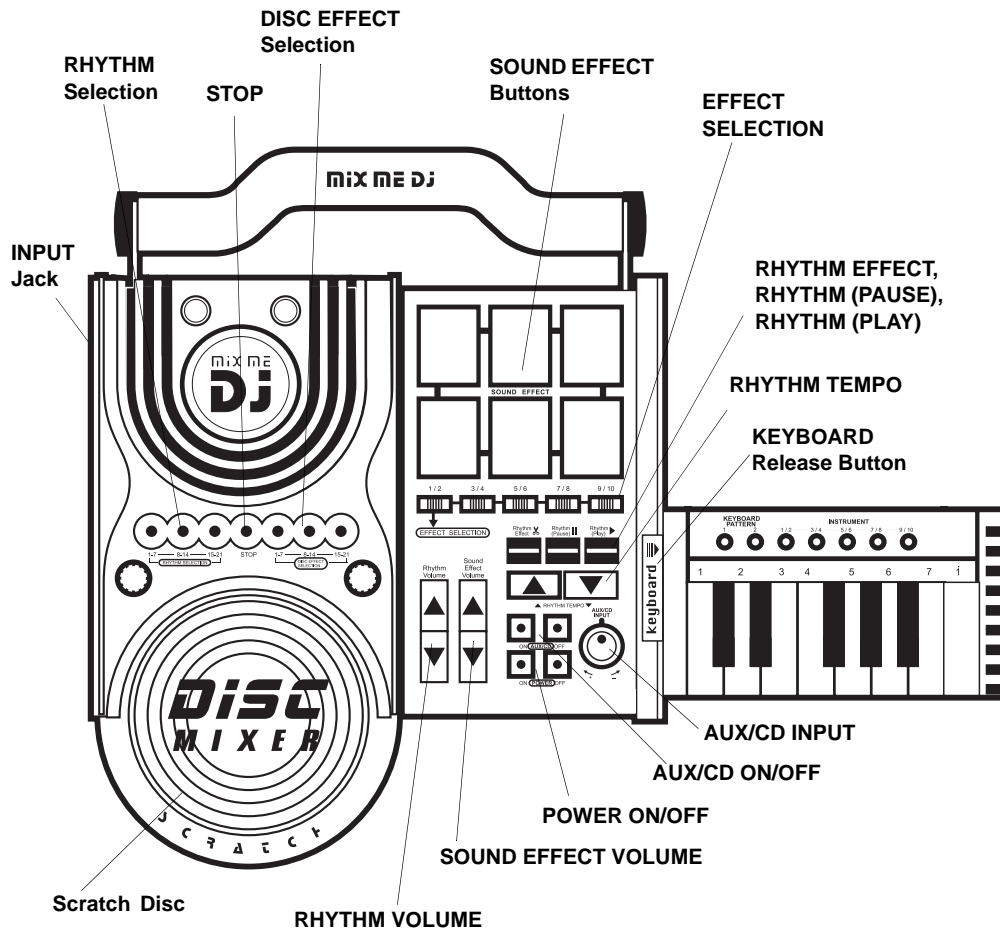

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

⚡ — Caution

💡 — Hint

📌 — Note



RadioShack®

www.radioshack.comSM

© 2002 RadioShack Corporation.

All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

CAUTION

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the mixer. Batteries can leak chemicals that can damage electronic parts.
- If the mixer will not be used for several days, remove the batteries.

WARNING


Dispose of batteries properly; do not bury or burn them.


NOTE

Press any of the rhythm selection keys to change the rhythm at any time.

INSTALLING BATTERIES

The mixer requires six AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover and lift up the cover.
2. Install the batteries as indicated by the polarity symbols (+ and -) marked inside the battery compartment. 
3. Replace the cover and tighten the screw.

When the volume gets low, the LED gets dim or the mixer does not operate normally, replace all of the batteries. 

USING YOUR MIXER


TURNING THE MIXER ON/OFF

Turn on your mixer by pressing any key except RHYTHM VOLUME ▲ or ▼, RHYTHM TEMPO ▲ or ▼, or AUX/CD INPUT. The sound effect buttons flash randomly.

Your mixer does not turn off automatically. To turn it off, press POWER OFF. The lights turn off.

PLAYING THE RHYTHMS

Your mixer can play up to 21 different rhythms.

1. To select a background rhythm, repeatedly press RHYTHM SELECTION 1-7, 8-14, or 15-21. 
2. Repeatedly press RHYTHM VOLUME ▲ or ▼ to adjust the rhythm's volume.
3. Press RHYTHM TEMPO ▲ or ▼ to speed up or slow down the rhythm's tempo.
4. Hold down RHYTHM EFFECT to slice the rhythm effect. Press RHYTHM (PAUSE) to temporarily pause the rhythm. Press RHYTHM (PLAY) to continue the music from where it's paused.
5. Press STOP to turn off the rhythm.

PLAYING THE DISC EFFECT SELECTION AND SCRATCH DISC

You can select from 21 different disc effects.

1. Repeatedly press **DISC EFFECT SELECTION 1-7, 8-14, or 15-21** to select an effect.
2. Turn the scratch disc clockwise (↻) or counterclockwise (↺) to distort or scratch the sound effect. 💡

PLAYING THE SOUND EFFECT

There are a total of 10 sets of sound effects. Each set has 6 pre-recorded effects.

1. Press **EFFECT SELECTION 1/2, 3/4, 5/6, 7/8, or 9/10** once or twice to select a sound effect. Then press any of the six sound effect buttons to hear the selected sound effect. 💡
2. Press **SOUND EFFECT VOLUME ▲ or ▼** to adjust the sound effect volume.

USING AUX/CD

You can connect your music player to the mixer so you can jam to the music with your own effects just like a Disco DJ.

1. Plug one end of the supplied cable into your CD player output or headphone jack, then plug the other end into the **INPUT** jack on the left side of the mixer.
2. Press **AUX/CD ON** or **AUX/CD OFF** to turn the external input on or off.
3. Rotate **AUX/CD INPUT**, to adjust the external music volume. ⚙️
4. Press the desired effect buttons to mix the selected rhythms with your music.
5. Press **STOP** on the mixer to turn off the selected rhythms. The external input sound also turns off. Press **AUX/CD ON** to turn the sound back on.



HINT

Disc Effect Selection and Scratch Disc Sound Effects

The following is a list of phrases the DJ says when you press a **Disc Effect Selection** button and turn the scratch disc. The Disc Effect Selection numbers (between 1 and 21) not listed below make a scratch sound when you turn the scratch disc.

| # | ↻ | ↺ |
|----|-------------------------------|----------------|
| 4 | Bonny. Bonny | Ah! Ah! |
| 5 | Ooh! Ooh! | OK. OK. |
| 8 | Rooh. Rooh. | Woh. Woh |
| 9 | Bang. Bang. | Electric Noise |
| 13 | Where's going. Where's going. | There. There. |
| 16 | Woh. Woh. | Wuh. Wuh. |

Playing the Sound Effect

The following is a list of phrases the DJ says and sounds you hear when you press **EFFECT SELECTION 5/6** and then one of the six sound effect buttons. When you press any of the other **EFFECT SELECTION** buttons, you hear special mixing sound effects.

| # | 5 | 6 |
|---|-----------|---------------|
| 1 | Troy | Shouting |
| 2 | Bonny | Crashing |
| 3 | OK | Bird Call |
| 4 | Laughing | Barking Dog |
| 5 | Screaming | Pouring Water |
| 6 | Ooh! | Animal Call |



NOTE

Before you plug a device into, or turn on **AUX/CD**, turn the volume all the way down. Then turn on the connected device and slowly increase the volume.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

PLAYING THE KEYBOARD

The mini keyboard is specially designed so you can create a short fill in music.

1. Press **KEYBOARD** to release the keyboard.
2. Pull out the mini keyboard.
3. Press **KEYBOARD PATTERN 1** or **2** to choose the keyboard pattern.
4. Press **INSTRUMENT 1/2, 3/4, 5/6, 7/8, or 9/10** once or twice to select an instrument.
5. Press the black and white keys to play your own music.

When you are finished playing the keyboard, slide it back into the mixer until it clicks.

CARE

Keep the mixer dry; if it gets wet, wipe it dry immediately. Use and store the mixer only in normal temperature environments. Handle the mixer carefully; do not drop it. Keep the mixer away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your mixer is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the mixer's internal components can cause a malfunction and might invalidate its warranty.

RadioShack Corporation
Fort Worth, Texas 76102

60-2785
06A02
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>