



Thank you for purchasing your Wireless Optical Mouse from **RadioShack**. Please read this user's guide before installing, setting up and using your new mouse.

Setup

Connect the mouse and receiver when you use the mouse for the first time and when replacing batteries.

1. Remove the battery compartment cover and install two AA alkaline batteries as indicated by the polarity symbols (+/-), then replace the cover.
2. Turn on the mouse.
3. Plug the receiver into an available USB port.
4. Press the USB receiver Connect button.
5. Press the mouse Connect button.



USB Receiver
Plug into an available USB port on your computer.

ON / OFF

Left Button

Scroll Wheel

Right Button

Note: Press any mouse button or the scroll wheel to wake up your computer from screen saver and sleep modes.

- Do not mix batteries of different sizes or chemistries.
- Dispose of old batteries properly. Do not burn or bury batteries.
- Slide **ON/OFF** switch to **OFF** when you finish using your mouse to save battery power.
- If you do not plan to use your mouse for a week or more, remove the batteries. Batteries can leak chemicals that can damage electronic parts.
- Use and store your mouse only in room temperature environments.

- Handle the mouse carefully; do not drop it.
- Keep the mouse away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Keep the mouse dry; if it gets wet, wipe it dry immediately.
- The mouse's optical sensor will not work correctly on a mirror, glass or other reflective surface.
- Keep a distance of more than 2.6 feet (0.8M) between your mouse and other wireless mice.

- Do not place the mouse and the receiver on a metal surface. Metal may impair the RF communication.
- If nearby RF devices cause interference, re-connect between your mouse and receiver.
- Do not modify or tamper with your mouse's internal components. It may cause a malfunction and invalidate its warranty.
- See your operating system's online help for additional information about mouse configuration and use.

What's Included

Wireless Optical Mouse **USB Receiver**
User's Guide

System Requirements

- Operating Systems: Windows Vista™ Windows® XP
Windows Me Windows 2000
Windows 98SE
Macintosh OS 9.0 to 10.3
- Connection: USB 1.1 or 2.0

Specifications

Resolution	1000 DPI
Mouse Frequency	27.045 MHz
Receiver Frequency	26.59 MHz
Mouse Operating Current	28 mA
Receiver Operating Current	25 mA
Operating Distance	3.3 - 3.9 FT (1.0 M - 1.2 M)
Mouse Dimension	117mm x 38mm x 55mm
Receiver Dimension	70mm x 24.2mm x 13.9mm
Weight	75g +/- 5g

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced radio/TV technician for help.
If you cannot eliminate the interference, the FCC requires that you stop using your mouse. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Product	Wireless Optical Mouse
Model	26-339
Responsible Party	RadioShack 300 RadioShack Circle Fort Worth, TX 76102
Phone	817-415-3200

Limited 90-day Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. For complete warranty details and exclusions, check with your local **RadioShack** store.
RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102 04/04

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>