

Wireless Laser Travel Mouse

with Ultra-Compact USB Receiver

26-990

Gigaware™

Thank you for purchasing your Wireless Laser Travel Mouse with Ultra-Compact USB Receiver from RadioShack. The mouse's compact design, hideaway receiver, and carry pouch make it great for travel. Please read this user's guide before installing, setting up and using your new mouse.

Low Battery Indicator

When the mouse's battery is low, the indicator flashes when you move the mouse.

Right Button

Scroll Wheel

- Supports Auto Scroll (Windows)
- For Mac OS 10.4, click the scroll wheel to activate the Dashboard.

Left Button



Setting Up Your Mouse

Your mouse requires two AAA batteries (not supplied) for power. Replace the batteries when the low battery indicator flashes as you move the mouse.

1. Remove the battery compartment cover from the mouse.
2. Insert two batteries as indicated by the polarity symbols (+ and -) marked inside.
3. Slide the eject button in the direction of the arrow to eject the receiver.
Insert the receiver back into the slot when not in use.
4. Replace the battery cover.
5. Slide the **ON/OFF** switch to **ON**.
6. Plug the receiver into your computer's USB port.



Notes:

- When you do not plan to use your mouse for a long time, slide **ON/OFF** to **OFF** to save battery power.
- When your mouse is idle for about 10 minutes, the mouse will go to the sleep mode. To re-activate it, press any mouse button to resume operation.
- See your operating system's online help for additional information about mouse configuration and use.

Battery Notes:

- Dispose of old batteries promptly and properly. Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix batteries of different size or chemistries.
- If you do not plan to use your mouse for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Important Information

- Do not place the mouse or the receiver on a metal surface. Metal may impair the RF communication.
- For optimal performance, place the mouse closer to the receiver.
- Do not place the receiver on the top of computer, wireless router, or monitor to avoid interference.
- If nearby RF devices cause interference, move them away from your mouse and receiver.
- Your mouse's cursor is motion sensitive, with a vary fast response time. If you want to slow down the cursor speed, click **Control Panel -> Mouse Properties -> Pointer Options** to adjust the pointer speed in the Motion tab.

Care and Service

- If you are having trouble operating your mouse, move it closer to the receiver.
- Use and store the mouse only in room temperature environments.
- Do not use the mouse on surfaces made of glass, black velvet, or mirror as these surfaces may disrupt function.
- Keep the mouse dry; if it gets wet, wipe it dry immediately.
- Keep the mouse away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Handle the mouse carefully; do not drop it.
- Do not modify or tamper with your mouse's internal components. It may cause a malfunction and invalidate its warranty.

Class 1 Laser Product

This device uses a laser light beam and is classified as a CLASS 1 laser product. Do not attempt to disassemble this unit. Laser rays from the optical pickup are dangerous to the eyes.

Danger: Visible and invisible laser radiation is possible if open or if the interlock fails or is defeated. Avoid direct exposure to the beam.

Caution: There are no user-serviceable parts inside this unit. Do not open the top cover. Make sure that pins or other foreign objects do not get inside the mouse. Only a qualified service person should remove the cover or attempt to service this device due to possible eye injury.

What's Included

Mouse Receiver
Carry Pouch User's Guide

System Requirements

- Operating System: Windows Vista™ Windows® XP
Windows 2000
Mac OS 10.0.8 or later
- Connection: USB 1.1

Specifications

RF Distance..... 9.8 ft. (3 m)
RF Frequency..... 2.4 GHz
RF Modulation GFSK
RF ID 62565ID, Random, Auto Link
Resolution Up to 1600 dpi
Sensor..... Avago 7532
Movement Detect Mode..... Laser Sensor
Contact Method Micro Switch/Wheel Switch
USB 1.1 Version (1.5 Mbps)
Power Supply
Mouse 3V, Two AAA Batteries
Receiver 4.4~5.25V, 100mA (Max.)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local **RadioShack** store or an experienced radio/TV technician for help. If you cannot eliminate the interference, the FCC requires that you stop using your mouse. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

FCC Declaration of Conformity
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Product	Wireless Laser Travel Mouse with Ultra-Compact USB Receiver
Model	26-990
Responsible Party	RadioShack 300 RadioShack Circle Fort Worth, TX 76102
Phone	817-415-3200

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack** owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK** MAKES NO OTHER EXPRESS WARRANTIES. This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD. EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

www.radioshack.com

04/08



Protect the environment by recycling used electronics. Go to www.recyclingcentral.com to find a recycling location near you.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>