


 



# High Speed Motor

60-7516

OWNER'S MANUAL — Please read before using this equipment.


## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

-  — Warning
-  — Important
-  — Caution
-  — Hint
-  — Note


## CAUTION

Do not replace the motor immediately after use. The motor becomes very hot.

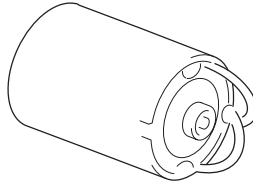

Thank you for purchasing the RadioShack High Speed Motor for the RadioShack Hobby Viper Kit. Cruise to a high speed of up to 1700 feet per minute with your new high speed motor and the Hobby Viper!

## REPLACING THE MOTOR

1. Remove the snap pins and detach the top cover from the Viper. 
2. Use a wrench to detach the right rear tire.



**RadioShack**®


www.radioshack.com™

© 2002 RadioShack Corporation.


All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.


3. Detach the motor cover by loosening the two screws.

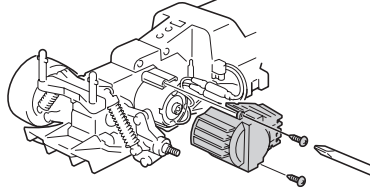


4. Remove the plastic cover from the wires to expose the connectors. Detach the wires by holding the connectors. Do not pull the wires.

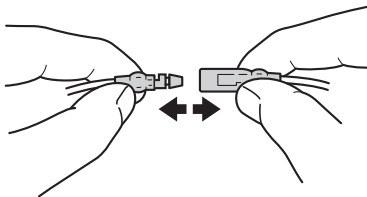


5. Remove the two silver screws on the opposite side.

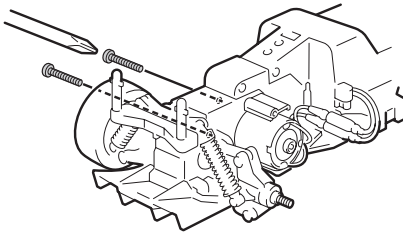

6. Remove the motor from the chassis.

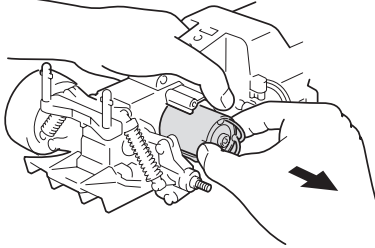

7. Place the new motor so the connectors are vertically aligned, then push the motor all the way in.
8. Fasten with the two screws from the opposite side. Tighten the screws so the motor will withstand vibrations.
9. Attach the motor's connectors to the chassis connectors red to red, black to black.

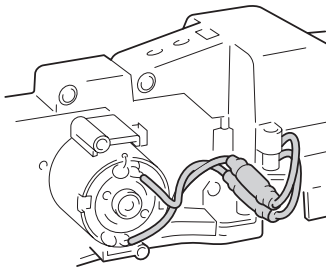

10. Place the plastic covers so they cover the bare metal portions of the connectors.
11. Tuck the wires between the heat sink tabs.
12. Taking care that the wires are inside the cover, attach the motor cover and fasten with the two screws. Do not overtighten.
13. Replace the tire and top cover of the Viper. Check to see that the tires turn easily by hand.

#### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

60-7516  
07A02  
Printed in Malaysia

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>