






# Keychain Databank/Organizer

63-1127

OWNER'S MANUAL — Please read before using this equipment.

## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

-  — Warning
-  — Caution
-  — Important
-  — Hint
-  — Note

## NOTE

If you do not press a button within three minutes, the keychain automatically powers off except in time mode.


### Setting the Time

- **A** appears for an AM hour and **P** appears for a PM hour (in 12-hour format).
- Daylight savings mode is also available in world time mode.

### Telephone Mode

- The maximum number of characters that can be entered for the name is eight. If the characters are less than eight, press **ENTER** twice to move the cursor to the bottom line.
- The maximum number of characters that can be entered for the number is 16. If the digits are less than 16, press **ENTER** twice to store the setting.

**ON/MENU** — Press to turn on the keychain, and to select the mode.

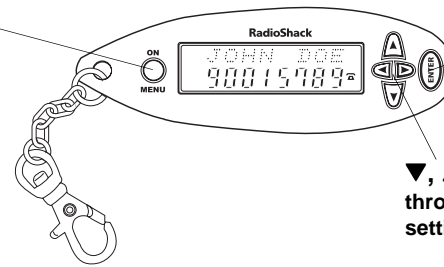

**ENTER** — Press to store a setting.

**▼, ▲, ◀, ▶** — Use to scroll through options and select settings.

Thank you for purchasing the RadioShack Keychain Databank/Organizer. It stores up to 26 names and telephone numbers, and works as a clock, alarm, and stopwatch. It even generates random lottery numbers!

## SETTING THE TIME

1. Repeatedly press **ON/MENU** until the current date and time appear.
2. Hold down **ENTER**. The hour digits flash.
3. Repeatedly press or hold down **▲** or **▼** to set the correct hour.
4. Press **▶**.
5. Repeat steps 3–4 to set the correct minute, date, month, year.
6. The current home city flashes.
7. Repeatedly press or hold down **▲** or **▼** to select the desired city. There are a total of 30 cities:

Beijing	Hong Kong	Tokyo
Sydney	Noumea	Auckland
Samoa	Honolulu	Anchorage
L. A.	Denver	Chicago
New York	Santiago	Rio de Janeiro
Greenland	Azores	London
Paris	Berlin	Rome
Oslo	Vienna	Cairo
Helsinki	Moscow	Dubai
Karachi	Dacca	Bangkok

8. Press **ENTER**.
9. Press **▲** or **▼** to select 12- or 24-hour format.
10. While in time mode, hold down **▶** or **◀** to set up daylight savings mode. One hour is added to the time and **☉** appears.
11. To cancel daylight savings mode, hold down **▶** or **◀** until **☉** disappears.

## VIEWING WORLD TIME

1. Repeatedly press **ON/MENU** until the home city and time appear.

2. Repeatedly press **▲** or **▼** to view the times for the available 30 cities.
3. To change the currently selected city, press **ENTER**. The city flashes.
4. Repeatedly press or hold down **▲** or **▼** until the desired city appears, then press **ENTER** to confirm. The city you select will be the home time city.

## TELEPHONE MODE

### STORING RECORDS

1. Repeatedly press **ON/MENU** until **STORE ?** and **☒** appear.
2. Press **ENTER**. **-** flashes.
3. Repeatedly press or hold down **▲** or **▼** to enter the first character of the name.
4. Press **▶**.
5. Repeat steps 3–4 to enter the rest of the name.
6. After the name is entered, press **ENTER** to store it. The cursor moves to the bottom line and flashes.
7. Repeatedly press **▲** or **▼** to set the first digit of the telephone number.
8. Press **▶**.
9. Repeat steps 7–8 to enter all the digits of the telephone number.
10. After the number is entered, press **ENTER** to store it. **STORED!** appears, then **STORE?** reappears.
11. Follow steps 2–10 to store other records.

### RECALLING RECORDS

1. Press **ON/MENU** until **RECALL ?** and **☒** appear, then press **ENTER**.
2. Press **▲** or **▼** to view stored records. Press **▶** or **◀** to view a stored number that is longer than eight digits.

  
**RadioShack**<sup>®</sup>  
 www.radioshack.com<sup>™</sup>

© 2002 RadioShack Corporation.  
 All Rights Reserved.  
 RadioShack and RadioShack.com are trademarks  
 used by RadioShack Corporation.

## NOTE

### Telephone Mode

If you input the wrong password, **ERROR!** appears.

### Alarm Mode

If you do not press a button within about five seconds, the default display appears.

### Stop Watch Mode

- If you do not reset the counter, the stopwatch starts timing from the last reading.
- If you press **▲**, **▼**, **◀**, or **▶** while **SP** flashes, the timer stops. Press **ENTER** and the total accumulated time appears.

### Replacing the Batteries

When the display dims, replace the battery. For the best performance and longest life, we recommend RadioShack batteries.

### Care

Keep the keychain dry; if it gets wet, wipe it dry immediately. Use and store the keychain only in normal temperature environments. Handle the keychain carefully; do not drop it. Keep the keychain away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

### Service and Repair

If your keychain is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the keychain's internal components can cause a malfunction and might invalidate its warranty.

## CAUTION

Use only a fresh battery of the required size and recommended type.

## WARNING

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or re-conditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.  
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

## FAST SEARCHING MODE

1. Repeatedly press **ON/MENU** until **RECALL?** and **↵** appear.
2. Press **ENTER** twice. **NAME?** appears, then **-** flashes.
3. Use **▲**, **▼**, **◀**, and **▶** to enter the name or the first few letters of the name to find. Press **ENTER** twice. If the record does not exist, **NO THIS!** appears.

## DELETING RECORDS

1. Press **ON/MENU** until **DEL TEL?** and **↵** appear. Press **ENTER**.
2. Repeatedly press **▲** or **▼** until the desired record appears.
3. Press **ENTER**. **DELETE?** appears.
4. Press **ENTER** to confirm deletion, or press any other button to cancel the deletion. **DELETED!** appears after you press **ENTER** to confirm deletion.

## SETTING A SIX-DIGIT PASSWORD

1. Press **ON/MENU** until **UNLOCK!** appears.
2. Press **ENTER**. **NEW:** appears and **-** flashes.
3. Repeatedly press **▲** or **▼** to select the first digit, then press **ENTER** to confirm and move the cursor to next space. After six digits are entered, the password is set and **LOCKED!** appears.
4. Once the password is set, you must input the correct password to enter telephone mode. **↵**

## CLEARING OR CHANGING A PASSWORD

1. Press **ON/MENU** until **LOCKED!** appears.
2. Press **ENTER**. **OLD:** appears and **-** flashes.
3. Input your current password. **NEW:** appears.
4. Input a new password, or press **ENTER** to clear the current password. **UNLOCK!** appears.

## INPUT A POWER UP OR DISPLAY MESSAGE

1. Press **ON/MENU** until **MSG IN?** appears.
2. Press **ENTER**. **-** flashes.
3. Input the characters by pressing **▲**, **▼**, **▶**, or **◀** to move the cursor.
4. Press **ENTER** twice to confirm.

5. Press **ON/MENU** until **SCROLL?** appears. Press **ENTER**. The message scrolls across the display.

## ALARM MODE

1. Repeatedly press **ON/MENU** until **ALM ON** or **OFF** and the set alarm time appear. **↵**
2. Hold down **ENTER** until the hour digit flashes. Repeatedly press **▲** or **▼** to set the hour.
3. Press **▶**. The minute digits flash. Repeatedly press **▲** or **▼** to set the minutes.
4. Press **ENTER** to confirm the setting.
5. Repeatedly press **▲** or **▼** to toggle the alarm time **ON** and **OFF**.
6. At the set alarm time, the alarm sounds for about one minute. Press any button to silence the alarm sooner.

## STOP WATCH MODE

1. Repeatedly press **ON/MENU** until **STW** and the last stopwatch reading appear.
2. Press **ENTER** to reset the counter to **00-00 00**.
3. Press **▲**, **▼**, **▶** or **◀** to start timing.
4. Press **▲**, **▼**, **▶** or **◀** to stop timing at any time. Press **▲**, **▼**, **▶** or **◀** to resume.
5. While the stopwatch is running, press **ENTER** to split the time. **SP** flashes. The timer continues.
6. Press **ENTER** again to return to normal timing. **SP** disappears.

## LOTTERY GAME MODE

1. Press **ON/MENU** until **LOTTERY** appears.
2. Press **ENTER** to generate six random numbers between 1 and 49.
3. For additional random numbers, press **◀** or **▼** to draw single-digit numbers. Press **▶** or **▲** to draw double-digit numbers.

## REPLACING THE BATTERIES

The keychain organizer requires two AG13 button-cell batteries (supplied). **⚠** **↵**

1. Use a Phillips screwdriver to remove the screw on the battery compartment cover, then remove the cover.
2. Remove the old batteries, then place two fresh batteries in the compartment with positive (+) side up.
3. Replace the cover and tighten the screw.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>