


RadioShack®



12-889

Analog AM/FM/WX Radio

Thank you for purchasing your AM/FM/WX AC/DC Portable Radio from **RadioShack**.

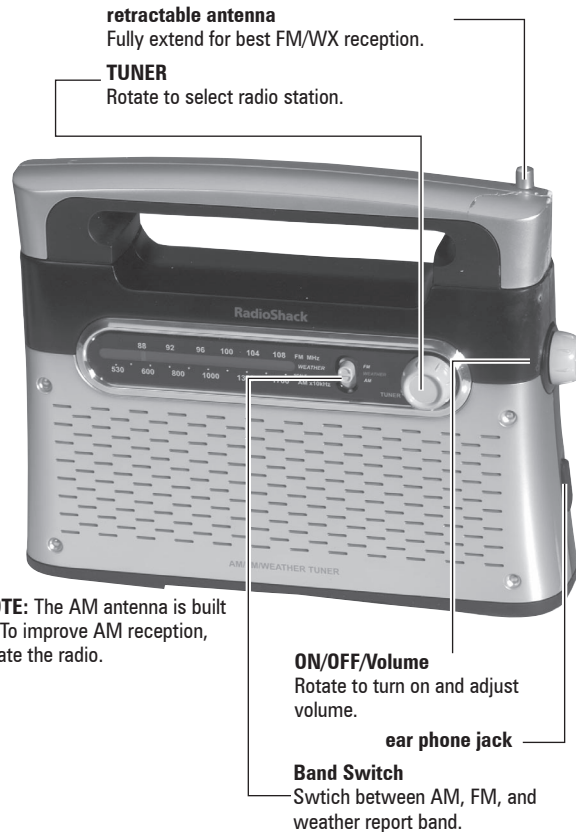

NOTE: The AM antenna is built in. To improve AM reception, rotate the radio.


NOTE: Actual product may vary from images found here.

Please read this user's guide before installing, setting up, and using your new product
www.radioshack.com

powering your radio

Your **RadioShack** portable radio requires four C batteries (not supplied, available at **RadioShack** or online at www.radioshack.com) or 120V AC power.

1. Remove the battery compartment cover. Replace when finished.
2. Route the power cord through the slot and plug into standard 120V AC outlet. Or, place batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.

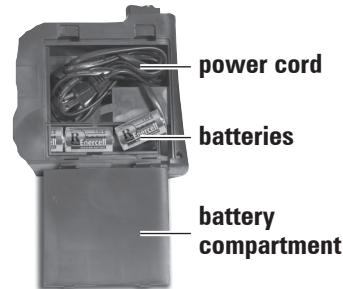

battery notes

- *Dispose of old batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and recommended type.*
- *Do not mix old and new batteries or batteries of different types, capacities, or chemistries.*
- *If you do not plan to use your radio for a month or longer, remove the batteries. Batteries can leak chemicals that may destroy electronic parts.*
- *Keep batteries out of reach of children. They can be fatal if swallowed.*

caring for your radio

- Keep your radio dry. If it gets wet, wipe it dry immediately.
- Use and store your radio only in room temperature environments.
- Handle the radio carefully. Do not drop it.
- Keep your radio away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with your radio's internal components can cause a malfunction and might void your FCC authorization to operate it.

what's included

Portable Radio

User's Guide

using your radio

CAUTION: This device is equipped with a polarized plug to prevent electric shock. One blade is wider than the other. The plug can only fit in an outlet one way. If you cannot easily insert the plug, turn it over and try again. Do not force it.

listening safely

To protect your hearing, follow these guidelines when you use ear phones or head phones.

- Set the volume to the lowest setting before you begin listening with your ear phones. After you begin listening, set the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.


traffic safety

Do not wear ear phones or head phones while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.


Even though some earphones or headphones let you hear some outside sounds when listening at normal volume levels, they can still present a traffic hazard.

important safety instructions

1. Read Instructions before operating the product.
2. Retain Instructions for future reference.
3. Heed all warnings.
4. Follow all instructions.
5. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
6. Do not use attachments not recommended by the product manufacturer, as they may cause hazards.
7. Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, etc.
8. Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. Exercise caution when moving any product and cart combination. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
10. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings. Never block by placing the product on a bed, sofa, rug, or other similar surface. Do not place this product in a built-in installation such as a bookcase or rack unless your provide proper ventilation or are adhering to the manufacturer's instructions.
11. Use only the type of power source indicated on the label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate on battery power, or other sources, refer to the operating instructions.
12. This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
13. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
14. Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
15. If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
16. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.




CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN




WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



The lightning symbol is intended to alert you to the presence of uninsulated, dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

the FCC wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local **RadioShack** store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your phone. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

Product	Analog AM/FM/WX Radio
Model	12-889
Responsible Party	RadioShack 300 RadioShack Circle Fort Worth, TX 76102
Phone	817-415-3200

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

limited 90 day warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. For complete warranty details and exclusions, check with your local **RadioShack** store.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

04/04

©2007. **RadioShack** Corporation.
All rights reserved. **RadioShack** and
RadioShack.com are trademarks
used by **RadioShack** Corporation.

12-889
05A07
Printed in China



RadioShack

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>