

# Single Point Surround Sound Speaker System

Cat. No. 40-5034


Thank you for buying the RadioShack Single Point Surround Sound Speaker System. Your speaker system is specially designed to give you great "full-range" sound quality using only one single satellite speaker and a powered subwoofer. Your satellite speaker contains three 2-inch, high compliance, full range speakers that produce excellent sound as the main speaker of your home theater system. All of the speakers are magnetically shielded. Your subwoofer has a 5 1/4-inch long excursion woofer and a power amplifier to produce tight, floor-rumbling powerful bass down to 55 Hz that you can feel as well as hear.



## Batteries

Your remote control requires two AAA batteries (not supplied) for power. We recommend RadioShack batteries.

1. Slide the battery compartment cover in the direction of the arrow to remove it.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -).
3. Replace the cover.

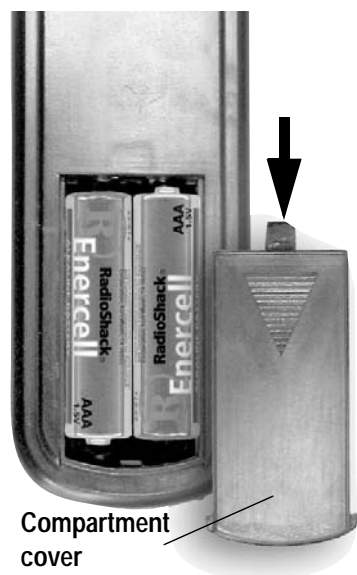

When the remote control stops operating properly, replace the batteries.

### Battery Notes

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the remote for a several weeks, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

## Placement

Where and how you position your speaker has a great effect on the overall sound of your Point Source Audio sound system.

### Cautions:

- Keep the speakers away from heat sources, such as radiators, stoves, or other appliances.
- Place your subwoofer at least 2-3 feet away from your television or your computer's disk drive system so the speaker's magnet won't distort your TV picture's color or erase your floppy disks.
- Do not place the subwoofer's metal plate against the floor.
- To prevent the cabinets from warping or discoloring, do not place the speakers where they are exposed to direct sunlight or excessive humidity.
- Do not place the speakers where they might be knocked over or exposed to falling objects.

### Satellite Speaker

For best results, it is recommended that you place the satellite speaker in a location where the front of the satellite speaker is facing the listening area.

Your satellite speaker is magnetically shielded to prevent interference with your television's picture. It is possible, however, that some interference might occur if the satellite speaker is placed on top of the TV.

If this happens, turn off your TV for 15 - 30 minutes and move the speaker back about 1-inch from the front of the TV. Turn on the TV and recheck for interference. Keep moving the satellite speaker back until the interference disappears.

### Powered Subwoofer

For maximum bass output, place your subwoofer in a corner on the floor. To reduce output, move it away from corners and back walls, and off the floor. Even slightly moving the subwoofer can have a major effect on bass response.

## Connections


You can connect the speaker system to an audio source which has stereo output terminals, such as a DVD player, TV, multimedia PC, video game player, audio component, and more. You can enjoy powerful, clear stereo sound without connecting other elaborate audio systems or speakers.

**Note:** When the stereo output terminals of a DVD player are used, a multi-channel (such as 5.1 channel) sound source will be down mixed to stereo sound, and theater-like sound will be heard from the small Single Point satellite speaker and subwoofer.

### Cautions:

- To avoid any damages to the speaker system, make sure **BASS** on the subwoofer is turned down before making connections.
  - To avoid any damage to the speaker system or your audio system, make sure the power of the audio source is turned off before making connections.
  - Only connect the subwoofer to a power supply of the required type
1. Connect the satellite speaker to the subwoofer with the supplied DIN cable.
  2. Plug one end of the supplied stereo patch cable into "A" of the SOURCE L/R jacks on the back of the subwoofer and the other end into the output of an audio source. You can connect another audio source to "B". Additional stereo patch cables are available at your local RadioShack store.
  3. Connect the power cord to a standard 120 volts/60 Hz AC outlet.

**Warning:** To prevent electrical shock, do not use this polarized plug with an extension cord receptacle or other outlet unless the blades can be fully inserted, preventing blade exposure.

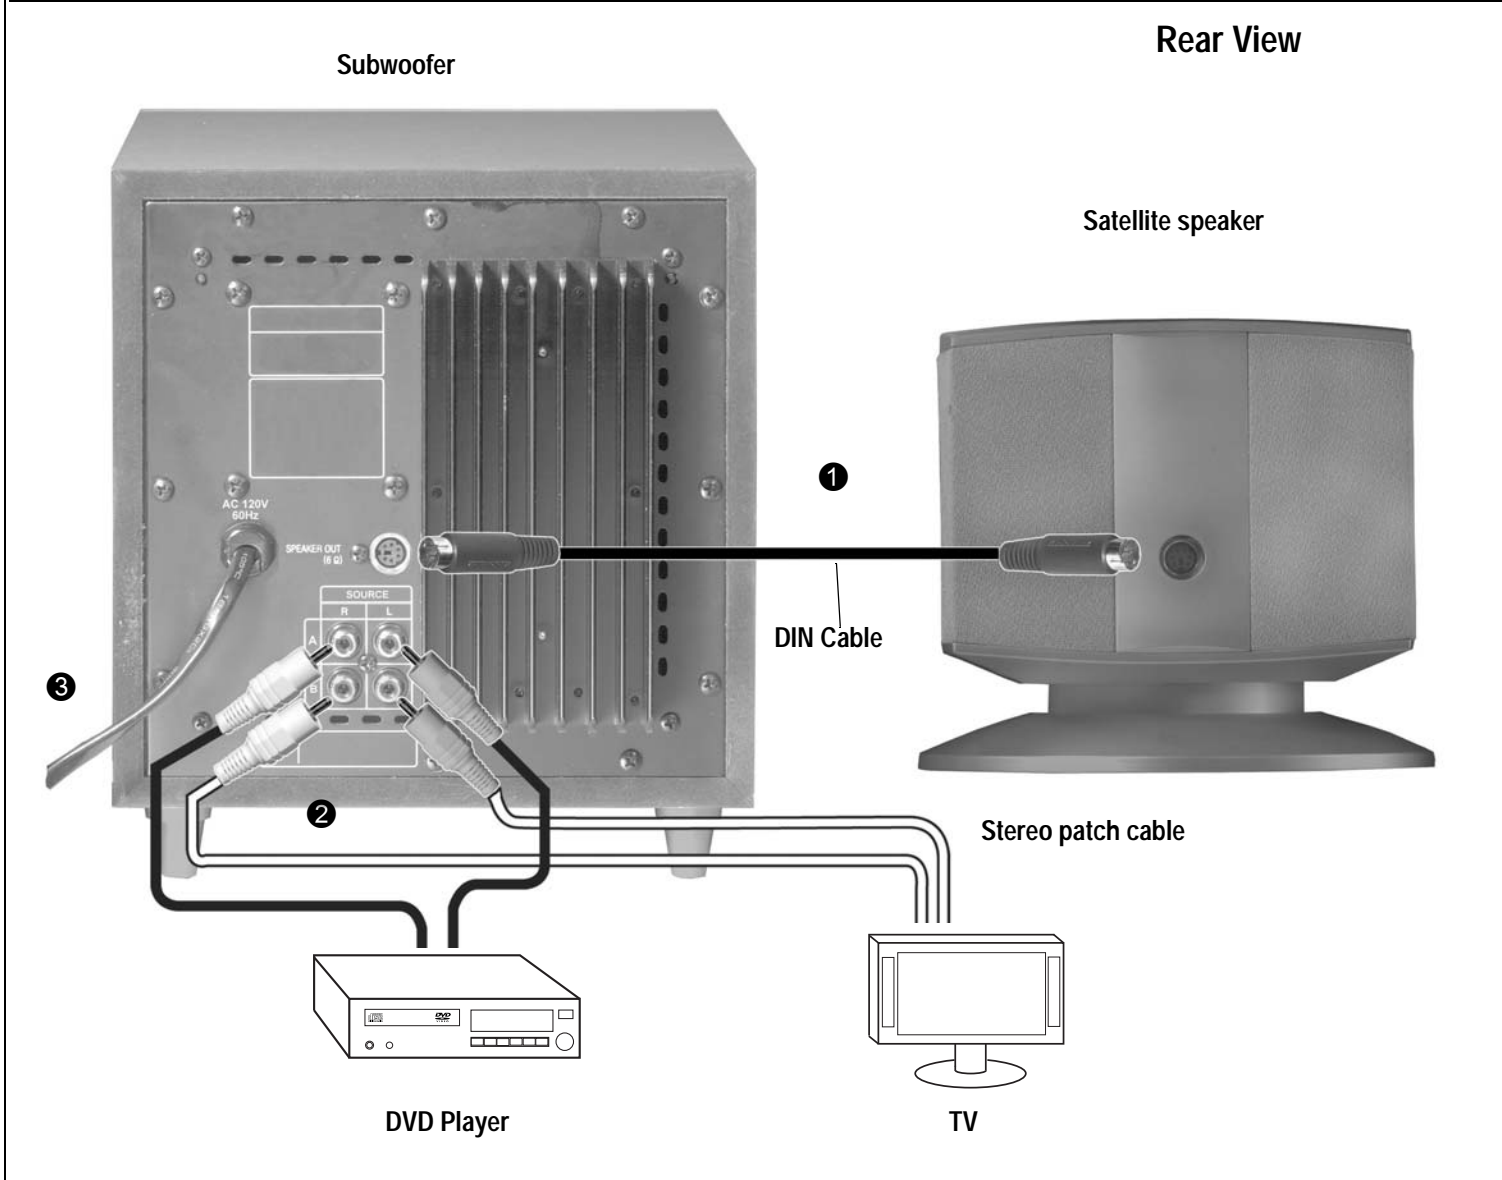

## Operation

**Note:** Your speaker system automatically turns on and its indicator lights green when it receives signals from your audio source. Your speaker system automatically turns off and its indicator lights red if it does not receive a signal within eight minutes. When you turn the speaker system on, you will hear the sound at a low level. This is merely a safety function and not equipment trouble.

After all connections are made, adjust the subwoofer's volume control.

1. Rotate **BASS** counterclockwise to the minimum position.
2. Turn on your audio equipment.
3. Choose the equipment connected to the **A/B** jacks. When **SOURCE** is out, the equipment connected to "A" is selected. When **SOURCE** is pressed in, the equipment connected to "B" is selected. Play the equipment and adjust its overall volume to a comfortable level.
4. Rotate **VOLUME** clockwise, a little at a time, until you achieve the adequate satellite volume level.
5. Rotate **BASS** clockwise, a little at a time, until you achieve a balance of bass between the subwoofer and the satellite.

## Using the Remote

To turn the volume up or down, repeatedly press + or – on the remote.

## Care

Keep the speakers dry; if they get wet, wipe them dry immediately. Use and store the speakers only in normal temperature environments. Handle the speakers carefully; do not drop them. Keep the speakers away from dust and dirt, and wipe them with a damp cloth occasionally to keep them looking new.

**Caution:** You might permanently damage your speakers by cleaning them with a vacuum cleaner. Use a feather duster or a soft loose cloth instead.

## Service & Repair

If your speakers are not performing as they should, take them to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website ([www.radioshack.com](http://www.radioshack.com)), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the speaker's internal components can cause a malfunction and might invalidate their warranty.

### *What's Included*

This user's guide – Speaker system – Stereo patch cable – DIN cable – Remote

### *"Think RadioShack" for all of Your Speaker Accessories!*

Audio/Video Cables – Batteries – Gold Cables–Speaker Grille Fabric – Plugs and Couplers

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.



The lightning symbol is intended to alert you to the presence of uninsulated dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

## Limited 1 Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2004 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

40-5034  
Printed in China  
09A04

## IMPORTANT SAFETY INSTRUCTIONS

Careful attention is devoted to quality standards in the manufacture of your speaker system, and safety is a major factor in its design. However, safety is also your responsibility.

This section lists important information that will help you properly use and enjoy your speakers. Read all the included safety and operating instructions before using the speakers. Follow them closely, and retain them for future reference.

**Heed Warnings** – Follow all warnings on the product and in the operating instructions.

**Cleaning** – Unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Do not use liquid or aerosol cleaners.

**Attachments** – Do not use attachments/accessories not recommended by the product manufacturer, as they might create a hazard.

**Accessories** – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

**Burden** – Do not place a heavy object on or step on the product. The object may fall, causing serious personal injury and serious damage to the product.

**Connecting** – When you connect the product to other equipment, turn off the power and unplug all the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the user's guide of the other equipment carefully and follow the instructions when making any connections.

**Sound Volume** – Reduce the volume to the minimum level before you turn on the product. Sudden high volume sound may cause hearing or speaker damage.

**Sound Distortion** – Do not allow the product to output distorted sound for a long time. It may cause speaker overheating and fire.

**Ventilation** – Slots and openings in the cabinet provide ventilation, ensure reliable operation, and protect from overheating. Do not block or cover these openings, and do not place the product on a bed, sofa, rug, or other similar surface. Do not place the product in a built-in installation such as a bookcase or rack unless it provides proper ventilation as specified by the manufacturer.

**Power Sources** – Operate this product using only the power source indicated on its marking label. If you are not sure of your home's power type, consult your local RadioShack store or local power company.

**Polarization** – This product is equipped with a polarized AC line plug (a plug having one blade wider than the other). This plug will fit in the power outlet only one way. This is a safety feature. If you cannot insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If you need an extension, use a polarized cord.

**Power-Cord Protection** – Route power supply cords so they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

**Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

**Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

**Water and Moisture** – Do not use the subwoofer near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool or other similar areas.

**Objects and Liquids** – Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

**Servicing** – Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**Damage Requiring Service** – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

When the power-supply cord or plug is damaged.

If liquid has been spilled or objects have fallen into the product.

If the product has been exposed to rain or water.

If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.

If the product has been dropped or damaged in any way.

When the product exhibits a distinct change in performance.

**Replacement Parts** – When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**Safety Check** – Upon completion of service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**Heat** – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**Non-use Periods** – Unplug the power cord when you will not use the product for extended periods.

## SAVE THESE INSTRUCTIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Your speaker system conforms to NRTL standards and meets all applicable FCC requirements.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>