

Heavy Duty Wall Phone with Lighted Keypad

43-3260

What's Included

- 7-foot line cord
- 7-inch modular cord
- 9-foot coil cord
- Owner's Manual

Preparation

Selecting a Mounting Location

Your telephone connects directly to a modular telephone line jack. If your telephone wiring does not have a modular jack, you can update the wiring yourself using jacks and adapters (available at your local RadioShack store or online at www.radioshack.com), or have the telephone company update the wiring for you. You must use compatible modular jacks that are compliant with Part 68 of *FCC Rules* and the requirements adopted by the ACTA. The telephone cord and modular plug provided are Part 68 compliant for connecting to the telephone company network.

For single line phones:

The USOC number of the jack to be installed is RJ11C (or RJ11W for a wall plate jack).

For 2 line phones:

The USOC number of the single-line jack to be installed is RJ11C (or RJ11W for a wall plate jack). The USOC number for a two-line jack is RJ14C (or RJ14W for a wall plate).

Mounting and Connecting the Phone

To mount your phone on a wall plate, do the following:

- Plug one end of the supplied short modular cord into the line jack at the back of the base.
Note: Coil any excess cord inside the compartment below the line jack at the back of the base.
- Plug the other end of the cord into a wall plate jack.
- Align the base's keyhole slots with the wall plate studs and slide the phone downward to secure it.

Connecting to the Handset

Plug one end of the supplied coiled cord into the handset's modular jack. Then, connect to the jack on the bottom of the base.

Setting the Ringer

If you don't want to hear the phone ring, slide **RINGER** to **OFF**. You can still make calls with the ringer off and you can still answer calls if you hear another phone on the same line ring. If you want to hear the phone ring, set **RINGER** to **HI** or **LO**.

Setting the Dialing Mode

Slide the **TONE/PULSE** to the setting for the type of service you have. If you are not sure which type you have, perform this simple test.

- Slide **TONE/PULSE** to **TONE**. Lift the handset and listen for a dial tone.
- Press any number except **0**. If your phone requires that you dial an access code (**9**, for example) before you dial an outside number, do not press the access code number.
 - If the dial tone stops, you have touchtone service. Set the switch to **TONE**.
 - If the dial tone continues, you have pulse service. Set the switch to **PULSE**.



Operation

Making a Call

- Pick up the handset and wait for a dial tone.
- Use the keypad to enter the number you wish to dial.
- Hang up the handset when you complete your call.

Note: The phone features a lighted keypad for dialing in a dark room.

Receiving a Call

When you receive a call, the phone rings. To answer the call, pick up the handset.

Adjusting the Handset Volume

To adjust the handset volume before or during a call, tune **HANDSET VOL** to **NORM** or **HI**. Choose your most comfortable listening level.

Using Flash

Flash performs the electronic equivalent of a switch hook operation for special services, such as Call Waiting. For example, if you have Call Waiting, press **FLASH** to answer an incoming call without disconnecting the current call. Press **FLASH** again to return to the first call.

Notes:

- If you do not have any special phone services, pressing **FLASH** might disconnect the current call.
- Pressing **FLASH** does not hang up the system.

Using Redial

To redial the last number you called, pick up the handset and press **REDIAL** when you hear a dial tone. The phone automatically dials the number.

Using Mute

To talk to someone near you without the person you're on the phone with hearing your conversation, hold down **MUTE**. Release **MUTE** when you are ready to resume your conversation.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.	



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

FCC Information

Your phone complies with Part 68 of *FCC Rules* and the requirements adopted by the ACTA. On the back of this product is a label with this product's FCC Product Identification number in the format *US:AAAEQ##TXXXX*. If requested, you must provide this information to the telephone company.

Note: You must not connect your phone to:

- coin-operated systems
- most electronic key telephone systems
- party-line systems

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

We have designed your phone to conform to federal regulations, and you can connect it to most telephone lines. However, each phone (and each device, such as an answering machine) that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN on the bottom of your phone.

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.

NOTICE: If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this phone does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment is hearing aid compatible.

Lightning

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone when storms approach to reduce the possibility of damage.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003, RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

43-3260
Printed in China
09A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>