

2.4GHz Expandable Corded/Cordless Phone System with Digital Answerer

User's Guide —
Please read before using this equipment.

43-3872

Phone Pick-Up Detection — stops recording when you pick up any phone on the same line as the answering system, and resets to answer the next call.

Speakerphone — lets you conduct a hands-free conversation using the handset and base speaker.



Handset Remote Operation — lets you listen to your incoming messages from the handset. (See "Remote Operation" on page 68.)

Message Alert — beeps when you have new incoming message. (See "Setting the Message Alert On or Off" on page 61.)

Convenient Extension Placement — lets you place accessory handsets (up to four total) anywhere you have an AC outlet, regardless of phone jack location.

Call Waiting/Caller ID — lets you answer a call even when you're on the phone and see who's calling before you answer.

Corded Handset — lets you make/receive calls even if there is an AC power failure.

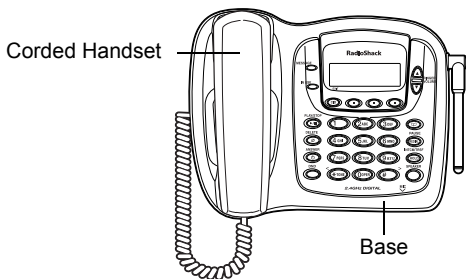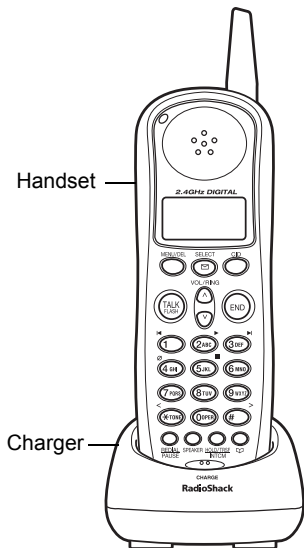

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

! — Important

📌 — Note

⚡ — Caution

💡 — Hint

© 2004 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com
are trademarks used by
RadioShack Corporation.

CONTENTS

Introduction	3	Caller ID and CIDCW (Caller ID on Call Waiting)	47
Important Information	4	Call Waiting Deluxe Features	48
FCC Statement	4	Viewing the Caller ID List	49
Surge Protection	6	Deleting Information From the Caller ID List	50
Important Safety Instructions	7	Deleting all Caller ID name/numbers	50
Important Caller ID Information	8	Calling a Party from the Caller ID List	51
Read This Before Installation	8	Expanding Your Phone	52
Installation	9	Register the Handset to the Base ...	52
Selecting a Location	9	Using the DirectLink Mode	53
Using AC Power	12	Four-Way Conferencing	54
Connecting/Charging the Battery Pack	13	Intercom/Call Transfer Feature	54
Installing the Beltclip	15	The Integrated Answering Device	58
Using a Headset	15	Features	58
Display and Icons	16	Answering System Setup	59
Soft Key Functions (Base)	17	Turning the Answering System On/Off	63
Setting Menu Options	18	Using Your Answering System	63
Using the Interface	18	Remote Operation	68
Using Your Phone	28	Troubleshooting	72
Power Failure Operation	28	Care	74
Making a call	28	Service and Repair	74
Receiving a call	29		
Hanging Up	30		
Switching to Speakerphone During a Call	30		
Call Waiting	30		
Placing a Call on Hold	31		
Redialing	31		
adjusting the ringer, earpiece and speaker volume	32		
Muting the Ringer	33		
Mute Microphone	34		
Tone Dialing Switch-over	34		
Traveling Out of Range	35		
Booster (Handset Only)	35		
Privacy Mode	36		
Conferencing	36		
Find Handset	37		
Speed Dialing	37		
Phonebook	38		
Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial	38		
Editing or Erasing a Stored Name, Phone Number, Distinctive Ring and Speed Dial	43		
Deleting all Phonebook Locations (Base Only)	44		
Copying Phonebook Locations	45		
Testing Stored Emergency Number	46		

INTRODUCTION

Thank you for purchasing a RadioShack 2.4 GHz Multi Handset Expandable Corded Telephone. Unlike other conventional telephones, your telephone supports up to four cordless handsets on a single telephone line. You can add a cordless handset to any room in your home or office that has an AC outlet. No more running to the other end of the house to answer the phone! You can transfer outside calls to other handsets. If you subscribe to Call Waiting with Caller ID, the phone shows you the incoming caller information, even when you are already talking on the phone.

The digital answering system stores up to 12 minutes of messages on a computer chip and records each message's day and time. This gives you advanced capabilities over tape-based answering machines:

- You can delete individual messages and save the rest.
- There are no tapes to bother with and no tape mechanisms to wear out.

The remote operation feature lets you operate your answering system from a touch-tone phone (or from a rotary phone with a pocket tone dialer).

Corded handset does not need AC power to operate. It allows you to make/receive calls if there is an AC power failure.

Cordless phones require AC power to operate. When the power is off, you cannot make or receive calls by using your cordless handset. !

! IMPORTANT !

- Your phone operates on standard radio frequencies as allocated by the FCC.
- It is possible for other radio units operating nearby on similar frequencies to unintentionally intercept your conversation or cause interference. This possible lack of privacy can occur with any cordless phone.

**NOTE**

You must not connect your phone to:

- coin-operated systems
- most electronic key telephone systems

IMPORTANT INFORMATION

This telephone has been tested and found to comply with all applicable UL and FCC standards.

FCC STATEMENT

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the base of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

Your phone is not intended to be used with party-line systems. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0).

To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this phone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage.

This product has been tested and found to comply with the FCC's exposure criteria.

For body worn operation, the FCC RF exposure guidelines were also met when used with the RadioShack accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

SURGE PROTECTION

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone when storms approach to reduce the possibility of damage.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

IMPORTANT CALLER ID INFORMATION

To use Caller ID and Call Waiting, you must be in an area where those services are available and you must subscribe to those services through your local phone company. Where Caller ID is offered, one or more options are generally available:

- caller's number only
- caller's name only
- caller's name and number

If you subscribe to Call Waiting and Caller ID, the system can show you the incoming caller information, even when you are already talking on the phone.

READ THIS BEFORE INSTALLATION

We have designed your phone to conform to federal regulations and you can connect it to most phone lines. However, each device that you connect to the telephone line draws power from the line. We refer to this power draw as the phone's ringer equivalence number, or REN. The REN is on the bottom of your phone.

INSTALLATION

Before using your phone, carefully peel the protective film off the display. The film protects the handset window during shipment and is not necessary for use.

SELECTING A LOCATION

You can place the phone's base on a desk or table, or mount it on a standard wall plate or directly on a wall. Select a location that is: ✓


- near an accessible AC outlet
- near a telephone line jack
- out of the way of normal activities
- away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, and room monitors
- away from other cordless phones

Your telephone connects directly to a modular telephone line jack. If your telephone wiring does not have a modular jack, you can update the wiring yourself using jacks and adapters (available at your local RadioShack store), or have the telephone company update the wiring for you. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details. ✓

The base's location affects the handset's range. If you have a choice of several locations, try each to see which provides the best performance.


NOTES

- If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment. If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.
- The USOC number of the jack to be installed is RJ11C (or RJ11W for a wall plate jack).

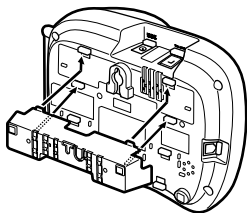


On a Desk Top

1. Insert the two tabs at the top of the narrow end of the supplied bracket into the base's upper tab slots, then press down on the bracket's latches and insert them into the lower slots.
2. Connect the handset cord to left side of the phone and corded handset.

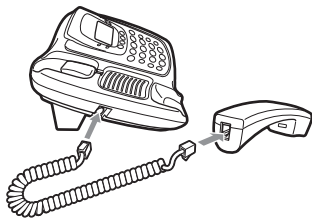

3. Plug one end of the supplied long modular cord into the **TEL LINE** jack on the back of the base.
4. Plug the modular cord's other end into a modular phone line jack.
5. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the base.
6. Route the adapter's cord through the strain relief slot on the base, then plug the adapter into a standard AC outlet.

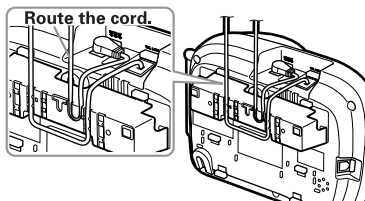

7. Lift the base's antenna to a vertical position.

CAUTION




You must use a Class 2 power source that supplies 9V DC and delivers at least 350 mA. Its center tip must be set to positive and its plug must fit the phone's **DC IN 9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the phone or the adapter.

On a Wall Plate or Wall


To mount the phone directly on a wall, you need two screws (not supplied) with heads that fit into the keyhole slots on the base. Drill two holes $3^{15}/_{16}$ inches apart. Thread a screw into each hole, letting the heads extend about $1/8$ inch.

1. Insert the two tabs at the top of the narrow end of the supplied bracket into the base's lower tab slots, then press down on the bracket's latches and insert them into the upper slots.

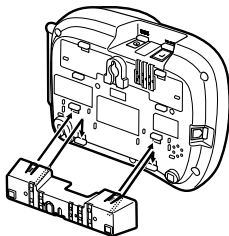


2. Plug one end of the supplied modular cord (short for a wall plate, long for direct wall mounting) into the **TEL LINE** jack on the base's back.
3. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack.

4. Route the adapter and modular cords through the base's grooves.

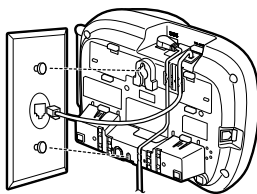


5. For a wall plate, plug the modular cord's other end into the wall plate jack, then align the base's keyhole slots with the wall plate studs and slide the base downward to secure it.

For direct wall mounting, align the base's keyhole slots with the mounting screws and slide the base downward to secure it.

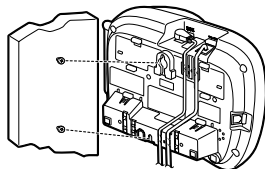

6. Plug the adapter into a standard AC outlet.
7. Lift the base's antenna to a vertical position.
8. Press and push up on the handset holder to lift and remove it. Turn it over and rotate it 180°, then slide it down into its slot and snap it back into place so it holds the handset.

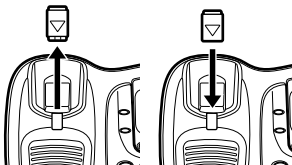

9. Connect the handset cord to left side of the phone and corded handset.

CAUTION




You must use a Class 2 power source that supplies 9V DC and delivers at least 210 mA. Its center tip must be set to positive and its plug must fit the charger's **DC IN 9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the handset or the adapter.

USING AC POWER

You can power the cordless handset using the supplied 9V, 210 mA AC adapter.

Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the charger.

Route the cord through the strain relief slot and plug the adapter into a standard AC outlet.

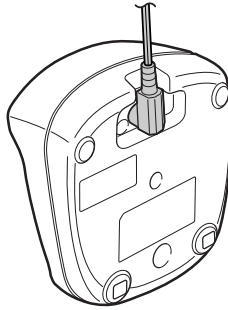

CONNECTING/CHARGING THE BATTERY PACK


The phone comes with a rechargeable nickel-metal hydride (Ni-MH) battery pack in the handset, but not connected. Before using your phone, you must connect the battery pack, then charge it for about 15–20 hours.

1. Press down and slide off the battery compartment cover.
2. Lift the battery pack out of the compartment.
3. Plug the battery pack's connector into the socket in the compartment (the connector fits only one way), then place the battery pack in the compartment.
4. Replace the cover.

To charge the battery pack, place the handset on the charger. The **CHARGE** indicator on the charger lights.

Recharge the battery pack when **Low Battery** flashes on the display.

If you have trouble replacing the battery pack, take the phone to your local RadioShack for assistance.

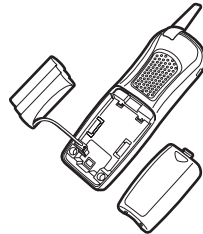


! IMPORTANT !

Be sure the battery pack is properly connected before you try to charge it. The **CHARGE** indicator lights when the handset is on the charger, even if the battery pack is not connected.

WARNING

Dispose of the old battery pack promptly and properly. Do not burn or bury it. There is a risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Recharging the Battery Pack

- If the battery pack becomes weak during a call, **Low Battery** flashes. When this happens, you cannot make a call until you recharge the battery pack.!
- If the display is blank and the phone does not work, recharge the battery pack. (The battery power might be too low to light the display.)
- About once a month, fully discharge the battery by keeping the handset off the charger until **Low Battery** flashes on the display. Otherwise, the battery pack loses its ability to fully recharge.
- Using a damp cloth, clean the charging contacts on the handset and charger about once a month.
- If you are not going to use your phone for an extended period, disconnect the battery pack. This increases the battery pack's usable life.
- The supplied battery pack should last for about a year. If the battery pack does not hold a charge for more than two hours after an overnight charge, replace it with a new 3.6-volt, 800 mAh battery pack with a connector that fits the socket in the battery compartment. You can order a replacement battery pack through RadioShack. Install the new battery pack and charge it for about 15–20 hours. 

INSTALLING THE BELTCLIP

To attach the beltclip


Insert the beltclip into the holes on each side of the handset. Press down until it clicks.

To remove the beltclip

Pull either side of the beltclip to release the tabs from the holes.

USING A HEADSET

You can make or answer calls with hands-free convenience using an optional headset that has a $\frac{3}{32}$ -inch (2.5-mm) plug. RadioShack has a variety of headsets available.

To connect the headset, gently flip open the rubber headset jack cover on the side of the handset, then insert the headset's plug into the jack. 

Connecting a headset disconnects the handset's earpiece and microphone.

▲/▼ on the handset also controls the headset's volume.

With a headset connected, you can make or answer calls as usual using the keys on the handset.

When you finish using the headset, disconnect it from the handset and close the rubber cover to protect the jack.

 
NOTES

- If you place the handset on the charger to recharge it while the headset is connected, be sure the headset seats properly.
- You can use a headset holder (available from your local RadioShack store) to hang the handset on your belt for greater convenience when using a headset.

DISPLAY AND ICONS

Example of the standby mode display

- Handset



- Base



- * appears if you have a new message.
- appears if you turn your answering system off.
- ** appears when the message storage is full.
- appears if you set your answering system to announce only.

ICON		Appears During	DESCRIPTION
Handset	Base		
	-	Standby/ Talk	The Battery icons indicate the handset battery status. This icon changes depending on the battery status (full, medium, low, and empty).
		Standby	The Ringer off icon indicates that ringer is turned off.
		Talk	The Mute icon appears when you mute the handset.
	-	Talk	The Speaker icon appears when the handset speaker phone is used.
		Talk	The Privacy icon appears when the Privacy Mode is turned on.
		Talk	The Recording icon appears while recording a conversation.
	-	Talk	The Booster icon appears when the Booster is turned on.

SOFT KEY FUNCTIONS (BASE)


“Soft” keys are keys that change function during the operation of the phone. There are three soft keys on the base. Soft Keys allow you to:

- Access the main menu
- Store or edit phone numbers or Caller ID message

The function of each soft key is determined by the icon that appears directly above it. For example, when the base is in standby mode, pressing soft key 1 will page the handset. When the handset is in talk mode, pressing soft key 1 will accept a call waiting call.


Complete information on the features controlled by the soft keys can be found under each feature.

In standby mode

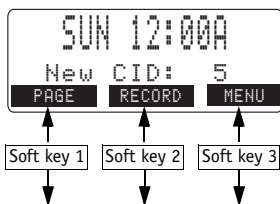

In talk mode

 (base speaker phone)



(Corded handset)



SETTING MENU OPTIONS

Your phone has eight main menu options: **DirectLink Mode, Room/Baby Monitor, Handset Setup, Base Setup, Answ. Setup, Global Setup, System Reset, and HS Registration.**

NOTES

- For Global Setup, Answ. Setup, and System Reset, and HS Registration menu options, make sure the line is not in use and the handsets are within range of the base.
- If you do not press a key within 30 seconds, the phone will time out and exit the menu mode. When setting Day and Time, the time-out period is extended to two minutes.

USING THE INTERFACE

Below are some tips for using the software interface on your phone.

From the handset

- Press **MENU/DEL** to access the main menu.
- Use \wedge/\vee to scroll through options.
- Press **SELECT/☒** to make a selection.
- Press **END** to exit the menu.

From the base

- Press the **MENU** soft key to access the main menu.
- Use \wedge/\vee to scroll through options.
- Press the **OK** soft key to make a selection.
- Press the **BACK** soft key to return to the previous screen.
- Press **CID/EXIT** to exit the menu.

DirectLink Mode

In DirectLink® mode, a pair of handsets can function as two-way radios. DirectLink Mode allows two handsets to communicate with each other without the base unit or a telephone line. Use them at sporting events or while shopping to stay in contact with family members or friends. You must set both handsets to DirectLink Mode to activate this feature. ☑

Using DirectLink Mode (Handset only)

1. Press **MENU/DEL** and select the DirectLink Mode menu. **To enter DirectLink mode press [SELECT]** appears.
2. Press **SELECT/☒** to enter DirectLink mode. You will hear a confirmation tone, and **DirectLink Mode Complete** appears.
3. To return to normal mode, press **MENU/DEL**, and then press **SELECT/☒**, or return the handset to the cradle.

Room/Baby Monitor

This feature allows you to monitor sounds in another room. Place the base or a handset in the room you wish to monitor; it will function as a microphone. A second handset can be set to function as a remote speaker, allowing you to monitor sounds in the room. ☑

Using Room/Monitor

1. Press **MENU/DEL** (or the **MENU** soft key on the base) and select the Room Monitor menu. **To Room Monitor (or Listen to;** on the base) appears.
2. Select the handset or base you want to monitor by using **^/v**.


NOTES

DirectLink Mode

- You must have at least two handsets to use Direct Link Mode.

Room/Baby Monitor

- This feature only works when the handset(s) is within the range of the base.
- You can monitor a room using the corded handset. While monitoring the room from the base, pick up the corded handset.

3. Press **SELECT**/ (or the **OK** soft key on the base).
4. To turn off the Room Monitor, press **END** (or the **END** soft key on the base).

Handset Setup/Base Setup


The following submenu options must be set separately for each handset and the base.

Selecting a Ringer Tone

Ringer Tone lets you choose from ten ringer tones or ten melodies:

- Ringers (Flicker (default), Clatter, Soft Alert, Wake Up, Light Bug, Beep Boop, Tone Board, Chip Chop, Party Clap, Reminder)
- Melodies (Beethoven's Symphony #9 [Beethoven9], For Elise [Elise], We Wish You A Merry Christmas [Merry-Xmas], Home Sweet Home [Hm Swt Hm], Lorri Song #6 [Lorri Song], When Irish Eyes Are Smiling [Irish Eyes], Aura Lee, Let Me Call You Sweet Heart [Sweetheart], Star Spangled Banner [Star Spngl], Old MacDonald [Old MacDld])

You must set a separate ringer tone on each handset.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Handset Setup or Base Setup menu, and then the Ringer Tone submenu.
2. Press \wedge/\vee to move the pointer. You will hear the ringer or melody as you scroll through the options.
3. When you reach the ringer tone you want, press **SELECT**/ (or the **OK** soft key on the base). You will hear a confirmation tone.

Distinctive Ringer Setup

Distinctive Ringer allows you to assign a designated ring tone to a stored phonebook number (100 stored locations available). When a call is received and the Caller ID information matches the information in one of the phonebook memory locations, the phone uses the distinctive ring assigned to that particular caller. You can assign distinctive rings to multiple phonebook memory locations. Switching the setting to Distinctive Off disables distinctive ringing; all incoming calls will have a normal ring tone. Switching to Distinctive On activates all programmed distinctive ring memory locations.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Handset Setup or Base Setup menu, and then the Distinctive Ring submenu.
2. Press \wedge/\vee to select **On** or **Off** (default is on).
3. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

Setting the AutoTalk (Handset only)

Autotalk allows you to answer the phone simply by removing the handset from the cradle. You do not have to press any buttons to answer the call.

1. Press **MENU/DEL**. Select the Handset Setup menu and then the AutoTalk submenu.
2. Press \wedge/\vee to select **On** or **Off** (default is off).
3. Press **SELECT/☒**. You will hear a confirmation tone.

Setting the Anykey Answer (Handset only)

Anykey Answer allows you to answer the phone by pressing any number key, ***/TONE/<**, or **#/>** on the handset.

1. Press **MENU/DEL**. Select the Handset Setup menu, and then the Anykey Answer submenu.
2. Press **^/v** to select **On** or **Off** (default is off).
3. Press **SELECT/☒**. You will hear a confirmation tone.

Setting the True Banner (Handset only)

True Banner lets you customize the name your handset displays.

The name will be displayed on the LCD screen during Standby Mode, Intercom, Intercom Hold, Room Monitor and Copy Phonebook operation. The banner name will be displayed on the receiving handset as well (default is " ").

1. Press **MENU/DEL**. Select the Handset Setup menu, and then the Banner submenu.
2. Use the number keypad (**0-9**), ***/TONE/<**, **#/>**, or **MENU/DEL** to enter or edit the name.
3. Press **SELECT/☒**. You will hear a confirmation tone.

Selecting a Language

Language selects which language the menu display will use. Choose from English, French, or Spanish.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Handset Setup or the Base Setup menu, and then the Language submenu.

2. Press \wedge/\vee to choose "English", "Français" (French), or "Español" (Spanish) (default is English).
3. Press **SELECT**/ \boxtimes (or the **OK** soft key on the base). You will hear a confirmation tone.

Adjusting the LCD Contrast (Base only)

Contrast adjusts the base LCD brightness. Choose one of the 10 levels for optimum viewing.

1. Press the **MENU** soft key. Select the Base Setup menu and then the Contrast submenu.
2. Press \wedge/\vee to adjust the contrast of the LCD (10 levels.) (default is level 5).
3. Press the **OK** soft key. You will hear a confirmation tone.

Setting the Key Touch Tone

Key Touch Tone is the tone your keypad makes when keys are pressed. You can turn this tone on or off.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Handset Setup or Base Setup menu and then the Key Touch Tone submenu.
2. Press \wedge/\vee to select **On** or **Off** (default is on).
3. Press **SELECT**/ \boxtimes (or the **OK** soft key on the base). You will hear a confirmation tone.

**NOTE**

If no key is pressed for two minutes, the phone will exit the menu mode.

Global Setup

If you change one of the global settings, you change that setting for all registered handsets and the base. Only one handset or the base can change global settings at a time.

Setting Day and Time

Day & Time sets the day and time of your display (Default is SUN 12:00 AM).

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Global Setup menu, and then the Day & Time submenu option.
2. Press \wedge/\vee to select the day of the week, and then **SELECT/☒** (or the \rightarrow soft key on the base).
3. Press \wedge/\vee to set hour, and then press **SELECT/☒** (or the \rightarrow soft key on the base).
4. Press \wedge/\vee to set minute, and then press **SELECT/☒** (or the \rightarrow soft key on the base).
5. Press \wedge/\vee to choose **AM** or **PM**, and then press **SELECT/☒** (or the **SAVE** soft key on the base). You will hear a confirmation tone.

Setting CIDCW (Caller ID on Call Waiting)

Caller ID on Call Waiting (CIDCW) displays the name and number of an incoming call while you are on the line. Call Waiting Deluxe (CWDX) allows you to handle call waiting calls in seven different ways.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Global Setup menu, and then the CIDCW submenu.

2. Press \wedge/\vee to select **CW On/CWDX On**, **CW On/CWDX Off**, or **CW Off/CWDX Off**, and then press the **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone (default is CW on/CWDX off).

Setting the Area Code

If you enter a 3-digit area code number in the “Area Code” option, your local area code does not appear in the Caller ID message. For calls received from outside your local area code, you will see a full 10-digit number. ↙

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Global Setup menu, and then the Area Code submenu.
2. Press the number keypad (0-9) to enter a 3-digit area code.
3. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

Setting the Dial Mode

Sets the dial mode to tone or pulse. Most phone systems use tone dialing; the default setting is tone dialing. Set the dialing mode to match the dialing system used by your local phone service.

- If you are not sure of your dialing system, set the unit to tone dialing. Make a trial call. If the call connects, leave the setting as is; otherwise set the unit to pulse dialing.
- If your phone system requires pulse dialing and you need to send DTMF tones in certain situations during a call, you may switch over to tone dialing (refer to “Tone Dialing Switch-over” on page 34).

NOTES

- If the area code has already been stored in memory, the stored area code will be displayed. To change it, use **MENU/DEL** (or the **DELETE** soft key or **DELETE** on the base) and number keys to enter the new area code.
- If your calling area requires 10-digit dialing, do not program this option.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Global Setup menu, and then the Dial Mode submenu.
2. Press \wedge/\vee to select **Tone** or **Pulse** (the initial setting is Tone).
3. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

System Reset (Handset only)

System Reset is used to clear the handset's ID from the main base unit, or the base ID from the handset.

De-register the Handset

Deregister HS clears the handset ID from the base. Use this option, for example, when you change the digital security code.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the System Reset menu, and then the Deregister HS submenu.
2. Press \wedge/\vee to select the handset ID to be de-registered from the list, and then press **SELECT/☒**. **Deregister HS?** appears.
3. Press \wedge/\vee to select **Yes**, and then press **SELECT/☒**. You will hear a confirmation tone.

When de-registration is complete, **Deregistration Complete** appears.

4. After de-registering the handset, move to "Handset Registration" below. ✓



NOTE

Make sure to perform the Handset Registration after de-register the handset.

Handset Registration

Handset Registration clears the base ID. Use this option, for example, if you wish to deregister the base to use the handset with 43-3570 or 43-3871.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the System Reset menu, and then the Replacing Base submenu.
2. Press \wedge/\vee to select **Yes**, and then press **SELECT/☒**. You will hear a confirmation tone.

The base information will be deleted.

When replacing the base is complete, **Place handset on main base to register** appears, register the handset to the new base (see page 52).

USING YOUR PHONE

POWER FAILURE OPERATION

Because the 43-3872 is a corded/cordless combination phone, it can still perform several of its functions during a power failure. The following features will function even during a power failure.

- Making and receiving calls with the corded handset
- Redialing the last number redialed.
- Adjusting the volume on the main base
- Call waiting feature on the main base
- DirectLink mode

All other features are disabled during a power failure.



NOTE

If the line is in use by another handset(s) or the base "**Line In Use**" appears in the display of all registered handset's or the base's that are not in use.

MAKING A CALL

From the handset

1. Remove the handset from the cradle.
2. Press **TALK/FLASH**.
3. Listen for the dial tone.
4. Dial the number.

OR

1. Remove the handset from the cradle.
2. Dial the number.
If pause is required, press **REDIAL/PAUSE**. **P** appears in the display, which represents a pause
3. Press **TALK/FLASH**.

From the Handset Speakerphone

1. Remove the handset from the cradle.
2. Press **SPEAKER**.
3. Listen for the dial tone.
4. Dial the number.
5. When the other party answers, talk into the microphone.

From the base

1. Pick up the corded handset, or press **SPEAKER**.
2. Listen for the dial tone.
3. Dial the number.

OR

1. Dial the number.
If pause is required, press **REDIAL/PAUSE**.
2. Pick up the corded handset, or press **SPEAKER**.

RECEIVING A CALL

From the handset

1. Remove the handset from the cradle.
(If AutoTalk is on, the phone will automatically answer the call when you pick it up.) ✓
2. Press **TALK/FLASH**.

OR

If the handset is off the cradle, press **TALK/FLASH** or any number. (Anykey answer is on.)

NOTES

- The handset microphone is located at the bottom of the handset. Position yourself as near to the handset as possible and speak clearly.
- The base microphone is located under the base. Position yourself as near to the base as possible.
- To set "Autotalk", see page 21 or to set "Anykey Answer" see page 22.

From the base

Press **SPEAKER** or pick up the corded handset.

HANGING UP

From the handset or handset speakerphone, press **END** or return the handset to the cradle (AutoStandby).

From the base, press **SPEAKER** or return the corded handset to the base.

SWITCHING TO SPEAKERPHONE DURING A CALL

To switch a normal call to the speakerphone, press **SPEAKER** on the handset. To switch from a speakerphone call to a normal call, press **SPEAKER** again.

CALL WAITING

If you have Call Waiting service and a call waiting tone sounds while you are on a call, press **TALK/FLASH** on the handset or the **FLASH** soft key on the base to accept the waiting call. There is a short pause, and then you will hear the new caller. To return to the original caller, press **TALK/FLASH** on the handset or the **FLASH** soft key on the base again. ✓

NOTES

- You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.
- You can place a call on hold for five minutes. When five minutes has passed, the call is disconnected, and the phone returns to standby mode.
- While a call is on hold, CIDCW can not be received.

PLACING A CALL ON HOLD

1. During a call, press **HOLD/TRSF/INTCM** on the handset or **INTCM/TRSF/HOLD** on the base. The call will be put on hold. ✓
2. To return to the call, pick up the corded handset or press **TALK/FLASH** on a handset. To talk to the caller on a speakerphone, press **SPEAKER** on the base or on a handset.

REDIALING

The last three phone numbers dialed can be quickly redialed from the handset or base. ✓

1. Press **REDIAL/PAUSE** in standby mode.
2. Press **REDIAL/PAUSE**. Each press of the key will display one of the last three number redialed.
3. Press **TALK/FLASH** or **SPEAKER** on the handset (or pick up the corded handset, or **SPEAKER** on the base). The selected number is dialed.
4. To hang up, press **END** (or return the corded handset to the base, or **SPEAKER** on the base).

✓ NOTES ✓

Placing a Call on Hold

- If you leave a call on hold for more than ten seconds, the display screen will read, *Line on Hold*.

Redialling a Call

- If the number exceeds 32 digits, only the first 32 digits are retained in redial memory.
- If the redial memory is empty, you will hear a beep.
- Redial numbers stored in the handset and the base are independent from each other.
- To store or delete a redial numbers, see page 41-42.

ADJUSTING THE RINGER, EARPIECE AND SPEAKER VOLUME

Ringer volume

In standby mode, repeatedly press \wedge/\vee on the handset or base to select ringer volumes. You can select from one of three ringer volumes (Off, Low, or High) for the handset, and one of four ringer volumes (Off, Low, Medium, and High) for the base.

Earpiece and Speaker Volume

You can select earpiece volume from among six volume levels on the handset and the base. For speaker volume, select from among six volume levels on the handset and ten volume levels on the base. Pressing the volume up key or volume down key on the handset or base during a call will change the earpiece or speaker volume. This setting will remain in effect after the telephone call has ended.

If you press the volume up key when the earpiece is at the maximum volume level, an error tone sounds.


The error tone also sounds if you press the volume down key at the lowest volume.



NOTE

The Audio Tone feature can not be used while using speaker phone.

Audio Tones (Base only)

The audio tone features provide three different tone levels (Natural Tone, High Tone, or Low Tone). If you have difficulty of hearing a caller adjust audio tone level. The default setting, Natural Tone, is recommended for hearing aid users. 

1. While on a call, press the **MENU** soft key.
2. Press \wedge/\vee to select **Audio Tone Setup**, and then the **OK** soft key.

3. Press the **CHANGE** soft key to scroll through audio tone levels.

MUTING THE RINGER

Do Not Disturb (DND)

The do not disturb feature (DND) allows you to mute the ringer, the base, and any registered handsets at the same time. The phone must be in standby mode. Press and hold **DND** on the base. You will hear a confirmation tone, and the **DND LED** illuminates. To cancel the DND feature, press **DND** again. You can also mute the ringer tone while the phone is ringing by pressing **DND** on the base.

Temporarily Muting the Ringer


To mute the ringer tone temporarily for each handset or the base, when the phone is ringing, press **END** on the handset you want to mute or **PLAY/STOP ►/■** on the base. The mute will last for the current incoming call only. The ringer tone will return to the previous setting starting with the next incoming call. ✓

NOTE

While charging a handset, you can not mute the ringer tone for the handset.

MUTE MICROPHONE

You can temporarily mute the microphone so that the caller cannot hear you.


1. During a call, press **MENU/DEL** (or the **MENU** soft key on the base).
2. Press \wedge/\vee to move the pointer to **MUTE**, and then **SELECT/☒** (or the **OK** soft key on the base). **Mute On** and  appear in the display.

To cancel muting, repeat above step again. **Mute Off** appears.

NOTES

- The tone feature only applies when the dial mode is set to pulse.
- This special number can be stored in a memory location. This is referred to as Chain Dialing (see page 38).

TONE DIALING SWITCH-OVER

If your telephone company requires pulse dialing, you can switchover to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc. 

If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press the ***TONE/<** key. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.

TRAVELING OUT OF RANGE

During a call, as you begin to move your handset too far from your base unit, noise may increase. If you pass the range limits of the base unit, you will hear a beep and see **Out of Range** on the display, and then the handset returns to standby mode.

BOOSTER (HANDSET ONLY)


If you encounter interference while using your phone, you can manually improve the sound by setting the Booster to on. **This works only when the phone is in use.**

1. While on a call, press **MENU/DEL**.
2. Press \wedge/\vee to move the pointer to **Clarity Boost**, and then **SELECT/☒**.
Boost On and **B** appear in the display.
To turn Off the Clarity Booster, repeat above step again is on, **Boost Off** appears.

PRIVACY MODE

Privacy Mode prevents interruption from other registered handsets or the base. **This works only when the phone is in use.**

1. Press **MENU/DEL** (or the **MENU** soft key on the base) during talk mode.
2. Press \wedge/\vee to move the pointer to **Privacy Mode** and then **SELECT/☒** (or the **OK** soft key on the base).

Privacy Mode On and  appear in the display. To exit the Privacy Mode, repeat above step again. **Privacy Mode Off** appears.

CONFERRING

If you have more than one handset, up to four people can participate in a conference call.

3-Way Conferencing

- Outside line + Handset + Base (or Handset)

4-Way Conferencing

- Outside line + Handset + Handset + Base

Joining a Conference Call

You can easily join a call already in progress.

From the base

1. Press **SPEAKER** on the base or pick up the corded handset to join the conference call.

2. To hang up, press **SPEAKER** or return the corded handset to the base. The handset(s) will still be connected to the call.

From a second handset

1. Press **TALK/FLASH** or **SPEAKER** on the handset to join the call.
2. To hang up, return the handset to the cradle or press **END** on the handset. The base or other handset will still be connected to the call.

FIND HANDSET

To locate the handset, press the **PAGE** soft key on the base when the phone is in standby mode. All registered handsets beep for 60 seconds, and **Paging** appears on the handset display. To cancel paging, press any key on the handset or the **CANCEL** soft key on the base. ☑

SPEED DIALING

You can program up to ten speed dial numbers in each handset. You must program a speed dial number before you can use the speed dialing feature. When the phone is in standby mode, press and hold a number key (**0-9**) associated with the speed dial until the phone number appears, and then press **TALK/FLASH** or **SPEAKER** (or the **SPEAKER** on the base). The number stored in the speed dial (SPD1 - SPD0) is dialed.

☑ **NOTE** ☑

If the battery pack is completely drained, the handset will not beep when paging.

PHONEBOOK

You can store names and numbers in your phone's phonebook, search for names alphabetically, and dial phonebook entries with just a few key presses. Phonebook memory is stored independently in the cordless handsets or the base. You can store up to 100 numbers in each handset and the base.

The phone uses the same memory locations to store phonebook entries and Caller ID messages. Any empty phonebook locations are used to store Caller ID messages. For example, if you have stored 100 phonebook entries on your handset, the handset will not store Caller ID messages.

The memory locations in the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing.

STORING AND EDITING PHONE NUMBERS, NAMES, DISTINCTIVE RINGS AND SPEED DIAL



When the memory is full, you will hear a beep and **Memory Full** appears. You cannot store names and numbers.

1. When the phone is in standby mode, press .
2. If you are using the base, press \wedge/\vee to select **Store**.

If you are using the handset, skip this step.

3. Press **SELECT/☒** (or the **OK** soft key on the base). **Store/Edit Name** appears.

4. Enter the name (up to 16 characters) by using the number keypad. If a name is not required, go to step 5. <No Name> will be used as the name.

Refer to the letters on the number keys to select the desired characters. With each press of a number key (0-9), the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
1	1								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	p	q	r	s	7	
8 tuv	T	U	V	t	u	v	8		
9 wxyz	W	X	Y	w	x	y	z	9	
	&	<	>	<	>	/	(blank)	-	-
0 oper	.	,	:	?	!	@	'	"	*
	#	0							

For example, to enter Movies:

- 1) Press 6 once, and then press #/> to move the cursor to the right.
- 2) Press 6 six times.
- 3) Press 8 six times.
- 4) Press 4 six times.
- 5) Press 3 five times.
- 6) Press 7 eight times.


If you make a mistake while entering a name

Use **#/TONE/<** to move the cursor to the incorrect character.

Press **MENU/DEL** (or the **DELETE** soft key or **DELETE** on the base) to erase the wrong character, and then enter the correct character. To delete all characters press and hold **MENU/DEL** (or the **DELETE** soft key or **DELETE** on the base).

 **NOTE** 

The pause key counts as one digit. Pressing **REDIAL/PAUSE** more than once increases the length of the pause between numbers. Each pause represents a 2 second delay.

5. Press **SELECT/☒** (or the **OK** soft key on the base) to store the name; **Store/Edit No.** appears.
6. Use the number keypad, ***/TONE/<**, to enter the phone number (up to 20 digits). 

If you make an error, use **MENU/DEL** (or the **DELETE** soft key or **DELETE** on the base) to erase the incorrect digits. When you are finished, press **SELECT/☒** (or the **OK** soft key on the base) to store the number.
7. **Distinctive Ring** appears. Press **^/v** to move the pointer to one of the Distinctive Ring options and then press **SELECT/☒** (or the **OK** soft key on the base).

If you choose not to store a Distinctive Ring, simply select the "No Selectn" option.
8. **Speed Dial** appears. Press **^/v** to move the pointer to select the Speed dial location (10 locations: SPD1-SPD0).

If you choose not to store the name/number as a Speed Dial, simply choose the "No Selectn" option.
9. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone, and **Done!** appears in the display.

Storing Caller ID Messages in the Phonebook

Messages shown in the Caller ID list (see page 47) can be stored in the phonebook. The phone number and name of the party on the Caller ID list can be stored in memory. ☑

1. When the phone is in standby mode, select the Caller ID message to be stored.
2. Press **SELECT/☑** (or the **STORE** soft key on the base). **Store/Edit Name** appears.

If the Caller ID message is already stored in memory, you will hear a beep and **This data is already stored!!** appears. The number will not be stored.

3. To complete the setting, follow the steps 4-9 in "Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial" on Page 38.

Storing a Redial Record

1. With the phone in standby mode, press **REDIAL/PAUSE**.
2. Press **REDIAL/PAUSE** repeatedly to display the number to be stored.
3. Press **SELECT/☑** (or the **STORE** soft key on the base). **Store/Edit Name** appears.
4. To complete the setting, follow the steps 4-9 in "Storing and Editing Phone Numbers, Names, Distinctive Rings and Speed Dial" on Page 38.


☑ NOTES ☑

- If a call comes in via a telephone system that does not offer Caller ID service, no information is stored.
- If the Caller ID message was received as a private/unknown number, or the message does not have the number, you cannot store the message in the phonebook. If it was received as private/unknown name, the message will be stored as <No Name>.
- Even if all 100 memory locations are full, the message will be stored in the phonebook. However, the message will be erased from the Caller ID list.

Deleting a Redial Record



1. With the phone in standby mode, press **REDIAL/PAUSE**.
2. Press **REDIAL/PAUSE** repeatedly to display the number to be deleted.
3. Press **MENU/DEL** (or the **DELETE** soft key or **DELETE** on the base).
4. Press \wedge/\vee to choose **Yes**.
5. Press **SELECT/☒** (or the **OK** soft key on the base). The redialed number is deleted.

Viewing the Phonebook

1. Press .
2. If you are using the base, press \wedge/\vee to select **Dial/Edit**, and then press the **OK** soft key. If you are using the handset, skip this step.
3. Press \wedge/\vee to scroll through the phonebook locations. Phonebook locations appear in alphabetical order (from first to last when you press \vee , from last to first when you press \wedge).

You can also use the letters on the number keys to select the first letter of the desired name. Press a number key (**2-9** and **0**) once for the first letter, twice for the second letter, and so on. The first location that begins with the letter you entered appears.


For example, to search for an entry beginning with the letter M, press **6** once. Press \wedge/\vee , until the phonebook location is displayed.

4. To finish the viewing operation press **END** (or  during a call) on the handset, or **CID/EXIT** on the base. 

Making Calls Using the Phonebook From Standby Mode

1. When the phone is in standby mode, view the phonebook location to dial (see "Viewing the Phonebook" on page 42).
2. Press **TALK/FLASH** or **SPEAKER** (or **SPEAKER** on the base).
3. To hang up press **END** (or **SPEAKER** on the base).

OR

1. Press **TALK/FLASH** or **SPEAKER** (or **SPEAKER** on the base).
2. View the phonebook location to dial (see "Viewing the Phonebook" on page 42).
3. Press **SELECT**/ (or the **DIAL** soft key). The number in the displayed phonebook location is dialed.
4. To hang up press **END** (or **SPEAKER** on the base).

EDITING OR ERASING A STORED NAME, PHONE NUMBER, DISTINCTIVE RING AND SPEED DIAL

1. When the phone is in standby mode, view the phonebook location to edit or erase (see "Viewing the Phonebook" on Page 42).



NOTE

During a call, don't press **END** or the call will disconnect.


2. Press **SELECT/☒** (or the **EDIT** soft key on the base) to edit the entry.

To delete the entry, press **MENU/DEL** on the handset. (or press **DELETE** or the **DELETE** soft key on the base, and use \wedge/v to select **Yes** and then press the **OK** soft key).


3. If you are editing the entry, follow the steps 4 to 9 under "Phonebook (Storing Phone Numbers, Names, Distinctive Rings, and Speed Dial)" on page 38 to complete the editing operation.

If you are deleting the entry, press \wedge/v to select **Yes**, and press **SELECT/☒** (or the **OK** soft key). You will hear a confirmation tone, and **Deleted!** appears in the display.

DELETING ALL PHONEBOOK LOCATIONS (BASE ONLY)

1. When the phone is in standby mode, press .
2. Press \wedge/v to select **Delete All**, and press the **OK** soft key on the base. **Delete All?** appears.
3. Use \wedge/v to select **Yes**, and then press the **OK** soft key. You will hear a confirmation tone.

COPYING PHONEBOOK LOCATIONS

Copy Phonebook allows you to transfer stored phonebook locations from handset to handset or from base to handset without having to manually re-enter names and numbers. You can transfer one memory (phonebook location) at a time, or all memory locations at once. 

From the handset

1. Press **MENU/DEL**. Select the Global Setup menu, and then Copy Phonebook submenu.
2. Press \wedge/\vee to choose **One memory** or **All Memory** and then press **SELECT/☒**.
If you choose **All Memory**, go to step 4.
3. Press \wedge/\vee , or the number keypad (2-9 and 0) to select the phonebook location you want to export, and then press **SELECT/☒**.
4. Press \wedge/\vee to select the handset to which you want to transfer the phonebook locations, and then press **SELECT/☑**.
If you select All Memory in the step 2, **Are you sure?** appears. Press \wedge/\vee to select **Yes**, and then press **SELECT/☑**.
5. The phonebook locations will be transferred to the handset. **Copying** and the receiving handset name appear. When the transfer is completed **Done!** appear.



NOTES

- The phonebook location stored in the handset can not to be transferred to the base.
- When the memory of the receiving handset is full, **Not enough memory in Receiving Handset** appears. You cannot transfer the phonebook location.
- When transferring, speed dial setting is released.
- If receiving handset already has the phonebook location with the same phone number, the transferred phonebook location will not be stored.


NOTE


If the selected handset is in out of range or data transfer is canceled, **Unavailable** appears in the display. Phonebook locations will not be transferred.

From the base

1. When the phone is in standby mode, press . 
2. Press \wedge/\vee to select **Copy**, and then press the **OK** soft key.
3. Press \wedge/\vee to select the handset to which you want transfer the phonebook locations and then press the **OK** soft key.
4. Press \wedge/\vee to select **One Memory** or **All Memories** and then press the **OK** soft key.

If you select **All Memory**, **Are you sure?** appears on the display screen. Press \wedge/\vee to select **Yes**, and then press the **OK** soft key.

If you select **One Memory**, press \wedge/\vee , or the number key (**2-9 and 0**) to select the phonebook location you want to export and then press the **COPY** soft key.

5. The phonebook locations will be transferred to the handset. **Copying** and the receiving handset name appear. When the transfer is completed **Done!** appears.

TESTING STORED EMERGENCY NUMBER

If you store an emergency service's number (police department, fire department, ambulance) and you choose to test the stored number, make the test call during the late evening or early morning hours to avoid peak demand periods. Also, remain on the line to explain the reason for your call.

CALLER ID AND CIDCW (CALLER ID ON CALL WAITING)

You must subscribe to Caller ID services through your local telephone provider to use these features.

When the telephone rings, the Caller ID feature allows you to view the caller's name, phone number, date and time of call. With CIDCW (Caller ID on Call Waiting), you will hear a call waiting tone while you are on a call, and the Caller ID data is displayed. To accept the waiting call, press **TALK/FLASH** (or the **FLASH** soft key on the base).

Additionally, you can dial a number stored in the Caller ID list or save data to your Phonebook locations.!

When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the name will appear in the display (up to 15 characters).

You may receive any one of the following messages:

When a private name is received; **Private Name**

When a private number is received; **Private Number**

When an unknown name is received; **Unknown Name**

When an unknown number is received; **Unknown Number**

When invalid data is received; **Incomplete Data**

NOTES

- If you answer a call before the Caller ID message is received, the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name does not appear. (This includes some international calls.)
- When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.
- Data errors appear as "!"

! IMPORTANT !

Memory locations for Caller ID messages and Phonebook locations (including Speed Dials) are common, you can store up to all 100 locations for each handset or the base. A Caller ID message is not stored when you have stored 100 of the phonebook locations. When you have stored all 100 of the phonebook locations and Caller ID messages in total, the earliest Caller ID message is overwritten.

NOTES

- To activate features, select **CW On/CWDX On** in the CIDCW option. See page 24.
- If you don't press a key within 30 seconds while in the operation, the phone back to a call. To return back to a call, press **TALK/FLASH** (or **SPEAKER** on the base).
- Check with your local telephone company for a full list of options.

CALL WAITING DELUXE FEATURES

Your phone gives you new options for call waiting. At the touch of a button, you can place the caller on hold, send them to your voice mail service, or conference them into your current call. You must subscribe to Call Waiting and Call Waiting Deluxe to use these features. Not all features are available in all areas. Check with your local telephone company for details.

1. When you receive a Call Waiting call, press **MENU/DEL** (or the **CWDX** soft key on the base).
2. If you are using handset, press \wedge/\vee to select **CW Deluxe**, and then press **SELECT/☒**.

If you are using the base, skip this step.

3. Press \wedge/\vee or the number keypad (1-7) to select an option.

Ask to Hold - A prerecorded message states that user will be available shortly, and the call is place on hold.


Tell Busy - A prerecorded message tells the caller you are busy, and the waiting call is disconnected.

Forward Call - The caller is sent to your voice mail box, if available.

Answer/Drop 1 - Disconnects the first call, and connects to the new caller.


Conference - Starts a conference call with your first and second callers.

Drop First/Drop Last - During a conference call, allows you to choose to drop the first or last caller.

4. Press **SELECT**/ (or the **OK** soft key on the base). A confirmation screen will appear, and the phone returns to the call.



VIEWING THE CALLER ID LIST

The Caller ID list stores information for incoming calls - even unanswered calls.

You can store up to 100 Caller ID messages and phonebook locations (including Speed Dials) for each handset or the base. You can view the Caller ID list during a call or when the phone is in standby mode. 

1. Press **CID** (or **CID/EXIT** on the base).

The summary screen appears. The screen shows the number of new messages and total messages.

2. To view the Caller ID messages in historical order (newest to oldest or from oldest to newest), use,  key to scroll through the messages from the latest to the earliest, or  key to scroll back through the messages.

To view the Caller ID messages with alphabetical search, press the number key pad (**2-9** and **0**) with the letter associated with the first letter of the desired message.

3. To finish the viewing operation, press **END** (or **CID** during a call) on the handset, or **CID/EXIT** on the base.

NOTES

- The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will disappear.
- Once you view the Caller ID list with alphabetical search, you cannot switch back to historical order unless you exit and re-enter the operation.



Once the Caller ID data has been deleted, the information cannot be retrieved

DELETING INFORMATION FROM THE CALLER ID LIST

1. When the phone is in standby mode, view the Caller ID information to be deleted (see "Viewing the Caller ID List" on page 49).
2. Press **MENU/DEL** (or **DELETE** or the **DELETE** soft key on the base).
3. Press \wedge/\vee to select **Yes**.
4. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

DELETING ALL CALLER ID NAME/NUMBERS

1. When the phone is in standby mode, press **CID** (or **CID/EXIT** on the base).
2. Press **MENU/DEL** (or **DELETE** or the **DELETE** soft key on the base). **Delete All?** appears.
3. Press \wedge/\vee to choose **Yes**.
4. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

CALLING A PARTY FROM THE CALLER ID LIST

From Standby Mode

1. When the phone is in standby mode, select the Caller ID message (see "Viewing the Caller ID List" on page 49). ✓
2. To have the phone dial a "1" before the displayed Caller ID number, press ***TONE/**<. To have the phone dial the stored area code before the displayed Caller ID number, press **#/**>.
3. Press **TALK/FLASH** or **SPEAKER** (or **SPEAKER** on the base). The displayed phone number dials automatically.

From Talk mode

1. Press **TALK/FLASH** or **SPEAKER** (or **SPEAKER** on the handset).
2. View the Caller ID message you want to dial (see "Viewing the Caller ID List" on page 49).
3. Press **SELECT/**☒ (or the **DIAL** soft key on the base). The displayed phone number will be dialed.

NOTES

- When a long distance call has been set, "1" appears in the display.
- You cannot make a call from the Caller ID list if your phone is connected to a private branch exchange (PBX).
- With the phone in talk mode, you can not make a call using the caller ID list from the base.

EXPANDING YOUR PHONE

! IMPORTANT !

If you purchase an extra handset, please register the handset to the original/main base before using it. The handset will not operate until it is registered.

NOTES

- All of the handsets ring when a call is received.
- An extra handset can be registered when the main base is in standby mode.

Four Multi-Handset Expandability

Your phone supports up to four handsets. You can now place a fully- featured cordless handset anywhere AC power is available to connect the handset charger. !

Up to two handsets can be used for outside and/or intercom call.

Effective combination, for example:

- four-way conferencing (one base, two handsets, and one outside line) while on an intercom call using the other two handsets.

REGISTER THE HANDSET TO THE BASE

Handsets supplied with the phone are registered to the base by the factory. When charged, pre-registered handsets display a handset ID number. Handsets that have not been registered display **Place handset on main base to register**. When you register an extra handset to the base, the handset ID will be assigned. ✓

1. Before registering the extra handset, the battery pack **MUST** be charged for 15-20 hours.
2. With the main base in standby mode, press the **MENU** soft key on the base.
3. Press \wedge/\vee on the base to select **HS Registering**, and then press the **OK** soft key.

4. On the handset, press and hold #/> for two seconds. To cancel registration, press the **CANCEL** soft key on the base.
5. While the handset is registering, **Handset Registering** will appear in the Handset LCD. When **Registration Complete** is displayed, the handset has been registered to the base. If **Registration Failed** appears, please try these steps again.

USING THE DIRECTLINK MODE

To use this feature, you must enter the two handsets into the DirectLink mode first. ☞

To enter the DirectLink mode, see “Using DirectLink Mode (Handset only)” on page 19.

DirectLink call

1. When the phone is in the DirectLink standby mode, press the **TALK/FLASH**.
2. Select the handset to which you wish to DirectLink with by pressing the number keys (1-4). Your handset will then page the other handset.
3. On the receiving handset, press **TALK/FLASH**, or if Anykey Answer is on, press any number key, * /**TONE** /< or # />.
4. When you finish your conversation, press **END** on either handset. Return the handset to the cradle, or press **MENU/DEL** and then **SELECT/☒** (cancelling DirectLink mode).

NOTE

Handsets can be in Direct Link mode while other handsets are in use. To use other handsets, register them to the original base.


FOUR-WAY CONFERENCING

A fourth person, at either the handset or the base, may be added to the conference call. For example, to add a fourth party to an ongoing conference call at the base or another handset, press **TALK/FLASH** on the fourth party's handset (or **SPEAKER** on the base or pickup the base corded handset). To remove either caller from your conversation, press **END** on the party's handset (or **SPEAKER** on the base or return the handset to the base). The other parties will still be connected to the call.

NOTES

- If the party is busy or out of range, the handset returns to standby mode.
- If you do not select a handset or the base within thirty seconds, the operation will be canceled.
- If the party does not answer within one minute, the operation is canceled.
- If the party is out of range, **Unavailable** appears in the display, and the operation will be canceled.
- If all handsets and the base are paged, only the first party to answer the page will connect.

INTERCOM/CALL TRANSFER FEATURE

Intercom and Call Transfer features are available for your phone. 

Intercom

The intercom feature lets you communicate with another handset or the base without using the phone line.

Making an Intercom Page From a handset

1. With the phone in standby mode, press **HOLD/TRSF/INTCM**.
2. Use \wedge/\vee to select the base or the handset you want to talk with, and then press **SELECT/☒**. If you select **All**, all other handsets and the base will be paged. An intercom tone sounds. To cancel intercom, press **END** or the **CANCEL** soft key.

From the base

1. With the phone in standby mode, press **INTCM/TRSF/HOLD** on the base.
2. Use \wedge/\vee to select the handset you want to talk with, and then press the **OK** soft key. If you select **A11**, all other handsets will be paged. An intercom tone sounds.
To cancel intercom, press **INTCM/TRSF/HOLD** or the **CANCEL** soft key.

Answering an Intercom Page

When the intercom page tone sounds, the display will show the ID of the handset or base that is paging.

From a handset

1. Pick up the handset from the cradle. (If AutoTalk is enabled, the handset will automatically answer when you pick it up.)
2. Press **TALK/FLASH** or **HOLD/TRSF/INTCM**.

From the base

Pick up the corded handset. To answer with the base speakerphone, press **INTCM/TRSF/HOLD** or **SPEAKER**, or the **ANSWER** soft key.

To hang up an intercom page from:

- Handset: press **END** or return the handset to the cradle.
- Base: press the **END** soft key or return the corded handset to the base.

Call Transfer Feature

The call transfer feature allows you to transfer a call between the base and a handset or between two handsets.

From a handset

1. During a call, press **HOLD/TRSF/INTCM** on the handset. The Call will be put on hold.
2. Use press \wedge/\vee to select the base or the handset you want to transfer the call to, and then press **SELECT/☒**. If you select **All**, all other handsets and the base will be paged.

The call will automatically be placed on hold, and paging tone sounds.

To cancel the transfer, press **TALK/FLASH** on the initiating handset.

From the base

1. During a call, press **INTCM/TRSF/HOLD** on the base.
The Call will be put on hold.
2. Use \wedge/\vee to select the handset you want to transfer the call to, and then press the **OK** soft key. If you select All, all handsets will be paged. A paging tone sounds. To cancel the transfer, press **SPEAKER** on the base.

Answering a Call Transfer Page

When the page tone sounds, the display will show the ID of the handset or base that is transferring the call.

To answer a page from a handset

1. Pick up the handset from the cradle. (If AutoTalk is enabled, the handset will automatically answers when you pick it up. Or If Any Key Answer is enabled, pressing a number key, ***/TONE/<** or **#/>** will answer the page.)
2. Press **TALK/FLASH** or **HOLD/TRSF/INTCM**.

To answer a page from the base

Pick up the corded handset. To answer with the base speakerphone, press **HOLD/TRSF/INTCM**, **SPEAKER**, or the **ANSWER** soft key.

Accepting the call transfer

After answering the page, if you want to accept the call and speak to the outside caller, press **TALK/FLASH** on the receiving handset or **SPEAKER** on the base.

THE INTEGRATED ANSWERING DEVICE

The phone has a built-in answering system that answers and records incoming calls. You can also use your answering system to record a conversation, leave a voice memo message or to announce a special outgoing message to callers when you're away from your phone.

FEATURES

- Digital Tapeless Recording
- Up to 12 Minutes of Recording Time
- Call Screening On/Off
- Personal or Pre-recorded Outgoing Messages
- Voice Prompts for Menu Setup Guidance (English, Spanish, or French)
- Time and Day Announcement
- Remote Message Retrieval
- Toll Saver
- Conversation Recording
- Voice Memo
- Message Alert

Digital Tapeless Recording allows you to quickly review, save, or delete the messages you choose. You will never have to worry about a tape wearing out, jamming, or resetting improperly.

The Integrated Answering System is easy and convenient to use, but please read through all of the instructions carefully.

ANSWERING SYSTEM SETUP

This main menu option allows you to set up the built in answering device.

Record a Personal Outgoing Message (Base Only)

Record Greeting allows you to record a personal outgoing message (greeting) which the answering system automatically plays when you receive a call. ✓

1. Press the **MENU** soft key. Select the Answ. Setup menu, and then the Record Greeting submenu. To **record greeting press [START]** appears.
2. Press the **START** soft key. You will hear "Record Greeting." The message counter displays 30 and then begins to count down.
3. Position yourself near the base microphone and record your greeting.
4. When you are finished recording, press the **STOP** soft key. Your greeting will playback for confirmation.

Selecting Your Greeting (Base only)

Select Greeting allows you to choose between the two outgoing messages, a pre-recorded message or your own greeting. ✓

1. Press the **MENU** soft key. Select the Answ. Setup menu, and then the Select Greeting. **Play back greeting** appears, and the current outgoing message is played. LCD is an example if you recorded your greeting.

✓ NOTES ✓

Record a Personal Outgoing Message (Base Only)

- The greeting must be more than two seconds long, or it will not be recorded.

Selecting Your Greeting Base Only

- To delete the personal outgoing message, press the **DELETE** soft key or **DELETE** while the message is playing. The system announces "Greeting has been deleted."

2. Once you have recorded a personal greeting, press the **CHANGE** soft key to choose the greeting. The selected outgoing message is played. Each time you press the **CHANGE** soft key, the phone switches the outgoing message between the prerecorded and the personal outgoing message.

Setting a PIN Code

Security code selects a two-digit Personal Identification Number (PIN) code. A PIN code is required to play your messages from a remote location.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Answ. Setup menu, and then the Security Code submenu.
2. Enter a two-digit PIN code (01-99) using the number keypad (**0-9**) (default is 80).
3. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

Setting the Ring Time

Ring Time allows you to set the number of rings the caller hears before your answering system plays the outgoing message. You can set the ring time to answer after two, four, or six rings. If you enable the Toll Saver (TS), the answering system picks up after two rings if you have new messages and after four rings if there are none.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Answ. Setup menu, and then the Ring Time submenu.

2. Press \wedge/\vee to select a Ring Time (Toll Saver, 2 Times, 4 Times, or 6 Times) (default is toll saver).
3. Press **SELECT**/ \boxtimes (or the **OK** soft key on the base). You will hear a confirmation tone.

Setting the Record Time

Record Time sets the duration for recording the incoming messages. You have three record time options. The options "one minute" or "four minutes" set the duration for recording the incoming messages. "Announce only" answers the call but prevents the caller from leaving a message.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Answ. Setup menu, and then the Record Time submenu.
2. Press \wedge/\vee to select Record Time (1 Minute, 4 Minutes, or Announce Only) (default is one minute)
3. Press **SELECT**/ \boxtimes (or the **OK** soft key on the base). You will hear a confirmation tone.

Setting the Message Alert On or Off

Message Alert sounds an alert tone when you have an unheard message. If you set the Message Alert on, whenever a new message is received, the soft alert tone will sound every 15 seconds.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Answ. Setup menu, and then the Message Alert submenu.
2. Press \wedge/\vee to select **On** or **Off** (default is off).

3. Press **SELECT**/ (or the **OK** soft key on the base). You will hear a confirmation tone.

Turning the message alert tone off by pressing any key

To quickly turn off the Message Alert tone, press any key on the base unit; the tone will automatically deactivate.

Turning the message alert tone off from a remote location

When all new messages are played back using the remote playback feature (see "Remote Operation" pages 68-70) the Message Alert tone will automatically deactivate. The tone will not deactivate until all new messages are played back.

Setting the Language of your Answering System

Language allows you to set the language of your answering system announcements to English, French, or Spanish.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Answ. Setup menu, and then the Language submenu.
2. Press \wedge/\vee to choose English, Français (French), or Español (Spanish) (default is English).
3. Press **SELECT**/ (or the **OK** soft key). You will hear a confirmation tone.

Setting the Call Screen

Without answering the call, Call Screen allows you to listen to the incoming message being left by the caller.

1. Press **MENU/DEL** (or the **MENU** soft key on the base). Select the Answ. Setup menu, and then the Call Screen submenu.

2. Press \wedge/\vee to select **On** or **Off** (default is on).
3. Press **SELECT/☒** (or the **OK** soft key on the base). You will hear a confirmation tone.

TURNING THE ANSWERING SYSTEM ON/OFF

1. To turn the answering system On, press **ANSWER** \odot on the base in standby mode.

After the announcement "Answering System is on", the current greeting message will be played and you will hear a confirmation tone. The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you.

2. To turn the answering system Off, press **ANSWER** \odot on the base. You will hear the announcement "Answering System is off."

USING YOUR ANSWERING SYSTEM

The message counter displays the number of messages stored in memory. If the display flashes, then there are new messages waiting for you. The answering system is designed to play your new messages first. After you play all your new messages, you can then play your old messages.

**NOTE**


Time stamp will not be heard until you have set the time.

New Message LED

The new message LED on the handset is designed to work with your answering system. The LED flashes when you have new messages in your answering system. The LED stops flashing when all new messages are played back.

Playing your messages

1. When the phone is in standby mode, press **PLAY/STOP ►/■**.

The system announces the number of new and old messages while the message counter displays only the number of new messages. The time and day that each message was received is announced after the message is played. The message counter will then display the number of current stored messages. 

2. When all new messages have been played, you hear a confirmation tone and the system announces "End of messages." The system returns to standby. After you have reviewed your new messages, you can play your old messages by pressing **PLAY/STOP ►/■** again. Once you have listened to a new message, it then becomes an old message. The old messages will be played in the order in which they were received.

Repeating a message

1. Press **PLAY/STOP ►/■** to review your messages. The number of stored messages is announced.

2. To repeat the current message, press the |<< soft key after a few seconds of beginning the message. To quickly scroll backwards through a message, press and hold the |<< soft key. To repeat the previous message, press the |<< soft key within a few seconds (about four seconds during remote operation) after a message begins playing. If you have several messages, press the |<< soft key repeatedly until you return to the message you want to replay. If the current message is the first new message, the system plays back from the beginning of the current message (it does not go back into the old message group).
3. Press **PLAY/STOP ▶/■** at any time to stop reviewing messages and return to standby.
The message counter shows the number of messages stored in memory.

Skipping a message

1. Press **PLAY/STOP ▶/■** to review your messages. The number of stored messages is announced.
2. Press the >>| soft key at anytime to skip to the next message.

Each time the >>| soft key is pressed, the system scans forward one message. If you have several messages, press the >>| soft key repeatedly to find the message you want to play. To quickly scroll through a message, press and hold the >>| soft key. The system advances through the playback at double speed.

3. Press **PLAY/STOP** ►/■ at anytime to stop reviewing your messages and return to standby. The message counter shows the number of messages stored in memory.


Deleting a message


To maintain maximum record time, delete the old messages. When you press the **DELETE** soft key or **DELETE**∅ on the base, you are permanently deleting the message. Once deleted, the message cannot be replayed or retrieved.

1. Press **PLAY/STOP** ►/■ to review your messages.
2. Press the **DELETE** soft key or **DELETE**∅ at anytime during the message to delete the message. You hear a confirmation tone and the message is deleted.
3. To delete all messages, press the **DELETE** soft key or **DELETE**∅ on the base, when the phone is in standby mode. After the announcement "To delete all messages, press delete again," press the **DELETE** soft key or **DELETE**∅ again.


When you try to delete all messages without first listening to your new messages, you hear several short beeps followed by an announcement "Please playback all messages." This protects you from accidentally erasing messages you have not yet reviewed.

Voice memo


The voice memo function allows the user to record messages (more than two seconds and less than four minutes). 

1. In standby mode, press the **RECORD** soft key on the base. 
2. Press the **START** soft key. You will hear the announcement "Record Memo Message" and a confirmation tone.
3. Start your recording.
4. When you have finished, press the **STOP** soft key to stop recording. The system returns to standby.

Recording a conversation

You can record a conversation from the handset or the base (more than two seconds and within ten minutes). 

From the base

1. During a conversation, press the **MENU** soft key on the base.
2. Press \wedge/\vee to select **Call Record**, and then press the **OK** soft key. **Recording a Call** and  appears on the base. A confirmation tone, that can be heard by both parties, sounds during recording.
3. To stop recording, press the **MENU** soft key and \wedge/\vee to select **Call Record**, and then press the **OK** soft key. You will hear a confirmation tone.

NOTES

Voice Memo

- The voice memo messages are recorded as an incoming messages.
- When the answering system is full, **FULL** appears on the display, and recording is terminated.

Recording a Conversation

- While a conferecing, you can not record the conversation.

NOTES

- Time stamp will not be heard until you have set the time. See "Setting Day and Time" on page 24.
- The system will only playback messages for four minutes and then it returns to the command waiting mode. To continue playing your messages, press 0 then 2 again within 15 seconds.
- If you enter an incorrect PIN code three times, you will hear a beep and the system will return to standby.
- During the remote operation, "**Line Remote**" appears on the handset.
- If the answering system is recording an incoming message, the recording operation is canceled when you start remote

From the handset

1. While on a call, press **MENU/DEL**.
2. Press \wedge/\vee to move the pointer to **Call Record**, and then **SELECT/☒**.
Recording a Call and **R** appear in the display.
To turn stop recording, repeat above step again, **Stop Recording** appears.

REMOTE OPERATION

You can check, play, or delete messages, even record a new greeting message from a remote location (when you are away from home, or from another room using a handset). Additionally, you can turn On or Off your answering system remotely. ☑

Remote access away from home

You can operate your answering system from a remote location using any touch-tone telephone.

1. Call your telephone number and wait for the system to answer. If the answering system is off, it will answer after about ten rings and sounds a series of beeps.
2. During the greeting message (or a series of beeps when the answering system is off), press 0 and enter your PIN code within two seconds (see "Setting a PIN Code" on page 60).
3. The answering system announces the current time and the number of messages stored in memory. You hear "To play incoming messages, press zero-two. For help, press one-zero". You will hear a beep.
4. Enter a command within 15 seconds, each command there after must be

entered within two seconds. You may select a command from the following chart:

Command	Function
0 then 1	Repeat a Message ✓
0 then 2	Playing incoming Messages
0 then 3	Skipping a Message
0 then 4	Deleting a Message
0 then 5	Stop Operation ✓
0 then 6	Answering System On
0 then 7	Memo Record/Stop ✓
0 then 8	Greeting Message Record/Stop ✓
0 then 9	Answer System Off
1 then 0	Help Guidance

5. After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You may enter another command at this time from the chart above.
6. When you are finished, hang up to exit the system. The answering system automatically returns to standby.

✓ NOTES ✓

- For Repeat a Message function, press **0** then **1** within about four seconds to repeat the previous message, or press **0** then **1** after about four seconds to repeat the current message.
- For Memo Record and Greeting Message Record function, the first time you enter the corresponding command, it starts the Recording function. If you want to stop the recording, enter the command again.

NOTES


Remote access with the handset

- If you press **END** before the answering system answers, the phone will return to standby.
- When the answering system does not answer within 6 seconds, you hear a beep and the phone will return to standby.
- When you receive a call, the remote operation is canceled.
- You can change the handset volume during a remote operation.
- During the remote operation **Remote Answering Machine operation** appears on the base.
- If you have new messages and old messages, only the new messages will be played. After you have reviewed your new messages, you can play your old messages by again pressing **▶/2**.

Remote Key Function

- For Repeat a Message function, press **◀/1** within about four seconds to repeat the previous message, or press **◀/1** after about four seconds to repeat the current message.
- For Memo Record and Greeting Message Record function, the first time you enter the corresponding command, it starts the Recording function. If you want to stop the recording, enter the command again.

Remote access with the handset

You can operate your answering system from another room using a handset. 





1. Press **SELECT/☒ Remote Answering Machine operation** appears on the display. The answering system announces the current time and the number of messages stored in the memory.
2. You hear "For help, press zero".

If no command is entered and if you have a message, the answering system start playing the messages.

The answering system announces the message number in the beginning of the message. The time and day that each message was received is announced after the message is played.

3. Enter a command within 30 seconds. You may select a command from the following chart:

Remote Key Function

◀/1	Repeat a Message 
▶/2	Playing incoming Messages
▶/3	Skipping a Message
⊘/4	Deleting a Message/Greeting Message
■/5	Stop Operation 
6	Answering System On
7	Memo Record/Stop 
8	Greeting Message Record/Stop 
9	Answer System Off
0	Help Guidance

4. After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You may enter another command at this time from the chart above.
5. When you are finished, press **END** to exit the system. The answering system automatically returns to standby.

TROUBLESHOOTING

If your phone is not performing to your expectations, please try these simple steps first

Symptom	Suggestion
The CHARGE LED won't illuminate when the handset is placed in the cradle.	<ul style="list-style-type: none">• Make sure the AC adapter is plugged into the charger and wall outlet.• Make sure the handset is properly seated in the cradle.• Make sure the charging contacts on the handset are clean.
The audio sounds weak.	<ul style="list-style-type: none">• Move the handset and/or base to a different location away from and/or scratchy metal objects or appliances and try again.• Make sure that you are not too far from the base.
Can't make or receive calls.	<ul style="list-style-type: none">• Check both ends of the base telephone line cord.• Make sure the AC adapter is plugged into the base and wall outlet.• Disconnect the AC adapter for a few minutes, and then reconnect it.• Remove the base ID (see "Handset Registration" on page 27) and register the handset (see "Register the Handset to the Base" on page 52).• Make sure that you are not too far from the base.• If an outside call is already established, you cannot make another outside call.
The handset doesn't ring or receive a page.	<ul style="list-style-type: none">• Charge the batteries in the handset for 15-20 hours by placing the handset on the base or charging cradle.• The handset may be too far away from the base unit.• Place the base unit away from appliances or metal objects.• Remove the base ID (see "Handset Registration" on page 27) and register the handset (see "Register the Handset to the Base" on page 52).

Symptom	Suggestion
During power failure, can't make or receive a call.	<ul style="list-style-type: none"> • Make sure to use corded handset to make or receive a call. • Make sure that the line cord is connected.
Severe noise interference.	<ul style="list-style-type: none"> • Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.
Caller ID information does not appear on the display.	<ul style="list-style-type: none"> • The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current.
Cannot register the handset at the base.	<ul style="list-style-type: none"> • Charge the battery pack for 15-20 hours. • Remove the base ID (see "Handset Registration" on page 27) and register the handset (see "Register the Handset to the Base" on page 52).
The handset doesn't communicate with another handsets.	<ul style="list-style-type: none"> • Remove the base ID (see "Handset Registration" on page 27) and register the handset (see "Register the Handset to the Base" on page 52). • Make sure that you have registered all handsets.
The handset or the base can't join the conversation	<ul style="list-style-type: none"> • Make sure there are not two handsets already using the three-way conference feature. • When recording a conversation, when viewing memory locations, and while another handset or the base is in privacy mode, the 2nd handset (or the base) cannot join the conversation.
The answering system does not work.	<ul style="list-style-type: none"> • Make sure the base unit is plugged in. • Make sure that the answering system is turned on. • Make sure that the message record time is not set to Announce only (see "Setting the Record Time" on page 61).
Messages are incomplete.	<ul style="list-style-type: none"> • The incoming messages may be too long. Remind callers to leave a brief message. • The memory may be full. Delete some or all of the saved messages.

Symptom	Suggestion
No sound on the base unit speaker during call monitoring or message playback.	<ul style="list-style-type: none"> • Adjust the speaker volume on the base unit. • Make sure the call screen feature is set to On.
Cannot access remote call-in features from another touch-tone phone.	<ul style="list-style-type: none"> • Make sure you are using the correct PIN number. • Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your phone.
Time stamp cannot be heard.	<ul style="list-style-type: none"> • Make sure you have set the time (see "Setting Day and Time" on Page 24).

If you still have problems, disconnect the phone. If other phones on the same line work properly, the fault is in this phone or its installation. If you cannot find the problem, take the phone to your local RadioShack store for assistance.

CARE

Keep the phone dry; if it gets wet, wipe it dry immediately. Use and store the phone only in normal temperature environments. Handle the phone carefully; do not drop it. Keep the phone away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

SERVICE AND REPAIR

If your phone is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the phone's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

MEMO

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>