

## READ THIS FIRST

We have designed your telephone to conform to federal regulations and you can connect it to most telephone lines. However, each device you connect to the phone line draws power from it. This power draw is the device's *Ringer Equivalence Number*, or REN. The REN is on the bottom of your phone.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (or three in rural areas) your phones might not ring. If ringer operation is impaired, remove one of the devices from the line.

If your phone causes problems on the phone line, the telephone company can disconnect your service. The phone company tries to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

The phone company can also make changes to its lines, equipment, operations, or procedures that could affect the phone's operation. The phone company notifies you in advance, so you can take the necessary steps to prevent interruption of your phone service.

## FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the bottom of your phone.

**Note:** You must not connect your telephone to:

- Coin-operated systems
- Party-line systems
- Most electronic key phone systems

## CARE

- Keep the phone dry.
- Handle the phone carefully. Do not drop it.
- Do not use or store the phone in temperature extremes.
- Keep the phone away from dust and dirt.
- Do not modify or tamper with the phone's internal components. Doing so might invalidate the phone's warranty and void your FCC authorization to operate it. If the phone is not operating as it should, take it to your local RadioShack store for assistance. If the trouble is harming the phone lines, the phone company might ask you to disconnect the telephone until you fix the problem.

### RadioShack Limited Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*

3/97

**RadioShack**

**A Division of Tandy Corporation**

**Fort Worth, Texas 76102**

1A8

Printed in Hong Kong

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

# ET-212 Big Button Phone with Lighted Keypad

n Amplified Handset

n Neon Bulb Ringer Indicator

n Memory Dialing

n Redial

n Adjustable Handset Volume

n Flash

n Desk or Wall Mounting

**Owner's Manual**

Cat. No. 43-873

## SET UP

Plug the coiled handset cord into the jacks on the handset and base.

Plug one end of the supplied long telephone line cord into the jack on the back of the base. Plug the other end into a modular phone jack.

Illustration

As shown below, attach the mounting bracket based on how you are mounting the phone.

Illustration

If you mount the phone on the wall, press up on the handset cradle hook to remove it. Then turn it over so its tabbed edge faces up and press it back down into its slot.

Illustration

**Note:** The USOC number of the jack to be installed is RJ11C (RJ11W for a wall plate jack).



This symbol is intended to alert you that parts inside the telephone present a risk of electric shock. Do not open the case.



This symbol is intended to alert you to important operating and servicing instructions included in the papers with the telephone.



## USING THE PHONE

Handset cradle hook holds handset in place when phone is wall mounted. Use this hook to hold the handset temporarily without disconnecting a call.

Press the switchhook to disconnect a call.

Press **STORE** once before and after you enter the phone number you want to store. See "Storing/Dialing Numbers in Memory."

Set to **TONE** or **PULSE** to match the type of service you have. If you have pulse service, you can move it to **TONE** (or press **\***) during a call to use tone services, such bank-by-phone.

Set to **LOW**, **MED**, or **HI** to adjust the handset volume to a comfortable listening level.

Set **RINGER** to 1, 2, or 3 to adjust the ringer's tone.

Slide **RINGER VOL.** to adjust the ringer volume to a comfortable level.

Press **FLASH** instead of the switchhook for special services such as Call Waiting.

Press **REDIAL** to dial the last number dialed (up to 32 digits).

Indicator lights when the handset is off the hook.

## STORING/DIALING NUMBERS IN MEMORY

To store a number in memory:

1. Lift the handset and press **STORE**.
2. Enter the telephone number you want to store (up to 16 digits).  
**Note:** To enter a pause of about 4 seconds to access a second dial tone, press **REDIAL**. Each pause entry counts as one digit in memory.
3. Press **STORE** again.
4. Press **P1**, **P2**, or **P3**, then return the handset to the cradle.

To dial a number in memory:

1. Lift the handset.
2. Press **P1**, **P2**, or **P3**.

**Note:** If you store an emergency service's number (police, fire department, ambulance) and you want to test the stored number, make the test call during the late evening or early morning hours to avoid peak demand periods. Also, remain on the line to explain the reason for your call.

© 1998 Tandy Corporation.  
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>