 
 




Cat. No. 60-3067
OWNER'S MANUAL

Please read before using this equipment.

Base Station Walkie-Talkies



  RadioShack®






INTRODUCTION



Get ready to have lots of fun with your RadioShack Base Station Walkie-Talkies! They require no special license to operate, and you can use them around the house, on campouts and hikes, or anywhere else you want to talk. You can use the walkie-talkies to communicate with up to two other people from distances up to 150 feet away (depending on the weather conditions and battery strength). You can even use them to send "secret" signals using Morse code.




 To keep your hands free, you can attach the walkie-talkie's belt clip to your belt and carry the base station over your shoulder with the attached breakaway shoulder strap. To remove the belt clip, push the tab on the clip and slide it down.



© 1999 Tandy Corporation.
All Rights Reserved.

 RadioShack is a registered trademark used by Tandy Corporation.




INSTALLING BATTERIES

You need three standard 9V batteries (not supplied) to power the walkie-talkies and base station (one for each walkie-talkie and one for the base station). For the best performance and longest life, we recommend RadioShack alkaline batteries.

Caution: Use only fresh batteries of the required size and type.


To install batteries in each walkie-talkie:

 1. Use a screwdriver to loosen the screw on the battery compartment cover, then remove the cover.
2. Snap a fresh battery into the terminals and place it inside the compartment.
3. Replace the cover and tighten the screw.

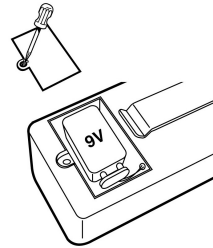


To install a battery in the base station:

 1. Use a screwdriver to loosen the screws on the battery compartment cover, then remove the cover.

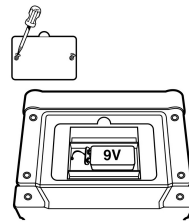

3

 


-
2. Snap a fresh battery into the terminals and place it inside the compartment.
 3. Close the cover and tighten the screws.

If either of the walkie-talkies or the base station does not transmit properly or the sound weakens, replace its battery. If you do not plan to use your walkie-talkies and the base station for several days, remove the batteries.



Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.



 Caution: If you do not plan to use the walkie-talkies for a long time, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.




4

  

OPERATION

USING THE WALKIE-TALKIES

 Note: For the best results, use the walkie-talkies with the antennas pointing upward.

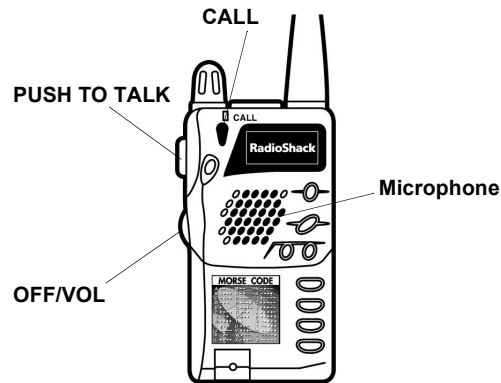


1. Rotate **OFF/VOL** on each walkie-talkie counterclockwise until it clicks to turn on the walkie-talkies, then adjust the volume to a comfortable listening level.
2. Hold down **PUSH TO TALK** on one of the walkie-talkies, then speak into the microphone in a normal voice.
3. Release **PUSH TO TALK** when you finish talking.

-
4. To send Morse Code signals, hold down **PUSH TO TALK** and repeatedly press **CALL**. Use short presses for dots and long presses for dashes. See the International Morse Code charts on the front of each walkie-talkie and the base station.
 5. When you finish, rotate **OFF/VOL** clockwise until it clicks to turn off each of the walkie-talkies.


USING THE BASE STATION

 Note: At least one of the walkie-talkies must be turned on for the base station to receive or send sound.

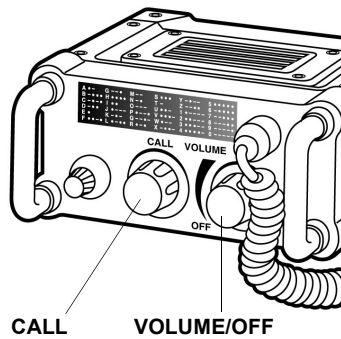



-
1. Rotate **VOLUME** clockwise until it clicks to turn on the base station, then set the volume to a comfortable listening level.
 2. Hold down **PUSH TO TALK** on the microphone attached to the base station, then speak into the microphone in a normal voice.

 PUSH TO TALK

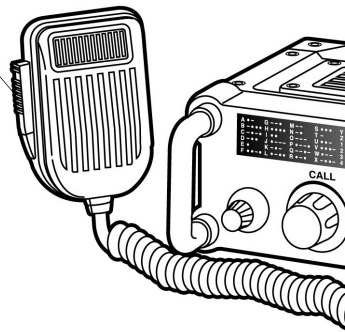




  -
3. To send Morse Code signals, hold down **PUSH TO TALK** on the microphone and repeatedly press **CALL** on the base station. Use short presses for dots and long presses for dashes. See the International Morse Code charts on the front of each walkie-talkie and the base station.
 4. Rotate **VOLUME** counterclockwise until it clicks to turn off the base station.



8

 

CARE

To enjoy your walkie-talkies and base station for a long time:

- Keep the walkie-talkies and base station dry. If they get wet, wipe them dry immediately.
- Use and store the walkie-talkies and base station only in normal temperature environments.
- Handle the walkie-talkies and base station gently and carefully. Don't drop them.
- Keep the walkie-talkies and base station away from dust and dirt.
- Wipe the walkie-talkies and base station with a damp cloth occasionally to keep them looking new.

Modifying or tampering with the walkie-talkies or base station's internal components can cause a malfunction and invalidate their warranty and void your FCC authorization to operate them. If your walkie-talkies and base station are not performing as they should, take them to your local RadioShack store for assistance.



 
 
FCC INFORMATION

Your RadioShack Base Station Walkie-Talkies comply with Part 15 of *FCC Rules* and might cause TV or radio interference even when they are working properly. To determine if your walkie-talkies and base station are causing the interference, turn them off. If the interference goes away, the walkie-talkies and base station are causing it.

Try to eliminate the interference by:

- moving the walkie-talkies and base station away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your walkie-talkies.



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

(Continued)



 
(Continued)

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,
Fort Worth, TX 76102

We Service What We Sell


04/99



RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

06A99

 Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>