



## **RCR503BR Series** **3 in 1 Universal Remote Control** **User's Guide**

Congratulations on your purchase of the RCR503BR. This user-friendly remote makes juggling multiple remote controls a thing of the past! This one unit controls up to three components, including the most popular brands of TVs, VCRs or DVD players, and satellite receivers, cable boxes, or digital TV converter boxes. The RCR503BR is easy to use, easy to program, and it gives you total control—at the touch of your fingertips!

## **RCR503BR Series** **Control Remoto Universal 3 en 1** **Manual del Usuario**

Felicitaciones por la compra del RCR503BR. ¡Este amigable control remoto convierte a los malabarismos con los múltiples controles remotos en una cosa del pasado! Esta unidad controla hasta tres componentes, incluyendo las marcas más populares de TVs, VCRs o DVDs, y receptores de satélite, cajas para el cable o convertidores de TV digital. El RCR503BR es fácil de utilizar, fácil de programar y le pone el control al alcance de su mano.

## **Série RCR503BR** **Télécommande Universelle 3 en 1** **Guide de l'utilisateur**

Nous vous félicitons d'avoir acheté la télécommande RCR503BR. Cette télécommande conviviale élimine les nombreuses télécommandes ennuyeuses! Cet accessoire commande jusqu'à trois appareils, y compris ceux des marques les plus répandues de téléviseurs, magnétoscopes et lecteurs de DVD, ainsi que des récepteurs de diffusion par satellite, câblesélecteurs ou boîtiers décodeurs numériques. La RCR503BR est facile à utiliser, facile à programmer et vous donne le plein contrôle—au bout des doigts!

©2012 VOXX Accessories Corporation  
A wholly-owned subsidiary of VOXX International Corporation  
Una subsidiaria propiedad total de VOXX International Corporation  
Une filiale en propriété exclusive de VOXX International Corporation  
Indianapolis, IN

Audiovox Canada Limited  
c/o Genco, 6685 Kennedy Road, Unit 3, Door 16,  
Mississauga, Ontario, Canada L5T 3A5

**RCR503BR NA IB 01**  
**UEI 2028 IC**

Made in China  
Hecho en China  
Fabriqué en Chine

Trademarks ® Registered.  
Marcas registradas ®.  
Marques ® déposées.

[www.rcaaudiovideo.com](http://www.rcaaudiovideo.com)

## Battery Installation

Your RCR503BR universal remote requires 2 new AAA alkaline batteries (sold separately).

### To install the batteries:

- Turn the unit over, and remove the battery compartment cover.
- Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.


### Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

## Programming with Direct Entry

To program your remote to control up to three components, follow these steps:

- Manually turn on the component you wish to program the remote to operate.
- Find the four-digit code for your brand of TV, VCR, DVD, satellite receiver, cable box, or digital TV converter in the enclosed code lists.
- Press and hold the **CODE SEARCH** key until the indicator light turns on.
- Release the **CODE SEARCH** key.
- Press and release the **TV, VCR-DVD** or **SAT-CBL-DTC** key. The indicator light blinks and then remains lit.  
**Note:** DTC refers to digital TV converter.
- Enter the four-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.  
**Note:** If the indicator light blinks multiple times, you've entered an invalid code. Start from step 2 again.
- Aim the remote at the component and press the **ON-OFF** key. The component should turn off.  
**Note:** If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the Code Search Method that follows.

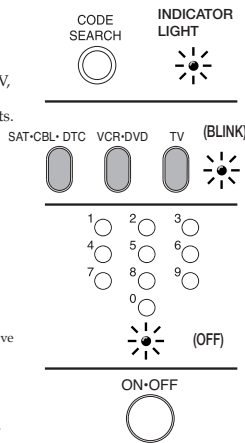

## Programming With Code Search

If your TV, VCR, DVD, satellite receiver, cable box, or digital TV converter does not respond after you have tried all the codes for your brands, or if your brand is not listed, try searching for your code via the Code Search Entry Method. To program your remote via the Code Search Entry Method, follow these steps:


- Manually turn on the component you wish to program the remote to operate.
- Press and hold the **CODE SEARCH** key until the indicator light turns on.
- Release the **CODE SEARCH** key.



## Programming With Code Search Continued

- Press and release the component key you wish the remote to control—**TV, VCR-DVD** or **SAT-CBL-DTC** key. The indicator light blinks once and remains lit.  
**Important:** Find the ENTER key on your remote (don't press it yet). You will need to press this key quickly in step 6 below.
- Press and release the **ON-OFF** key until the component turns off.  
**Important:** You may have to press the **ON-OFF** key up to 200 times.
- As soon as the component turns off, press the **ENTER** key within 4 seconds. The indicator light turns off.

**Note:** If you wait longer than 4 seconds to press ENTER, the remote goes to the next code—you will need to start the code search from step 1 again.

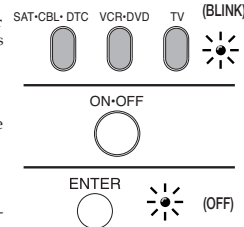

## Menu Function – TV, SAT-CBL-DTC, VCR-DVD

The Menu function on your remote is used to make changes on selected settings. The **MENU** key operates in TV, DBS and DVD Modes. Each menu varies from brand to brand.

The TV Menu is used to make changes in the TV settings, such as changing color, channels and timers. The **SAT-CBL-DTC** Menu navigates through the Menu screens to make changes to settings. The VCR or DVD Menu you can navigate to languages, subtitles and more.

While in Menu Mode, these keys function as follows:

Mode	Vol up/down	Ch +/-
TV, SAT-CBL-DTC, VCR-DVD	Cursor moves right/left	Cursor moves up/down

### To use the Menu function, follow these steps:

- Press the component button whose menu you wish to access (**TV, VCR-DVD** or **SAT-CBL-DTC**).
- Press the **MENU** key. The menu of the chosen component is shown.  
**Note:** Some functions of some brands may not be fully supported.
- To exit the menu mode press the corresponding component key on the remote (**TV, VCR-DVD** or **SAT-CBL-DTC**).

### Special Notes for Menu Use

- In the Menu Mode of RCA, GE and PROSCAN TVs, pressing the **MENU** key selects the highlighted item. The numeric keys may also be used to select the menu choice.
- For SONY components, pressing the **ENTER** key while in Menu Mode returns to the previous menu.

## Accessing Digital Channels

The INPUT and — (dash) key lets you enter a digital sub-channel number, like 59.1, directly. Use the number keys to enter the main channel number (in this case, "59"). Then press the INPUT (-) key and press the subchannel number (in this case, "1"). The INPUT key has two other functions as well: (1) it toggles through all the video sources connected to your TV; and (2) when the remote is in VCR mode, this button toggles between VCR and the TV input.

## Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal components can cause malfunction and invalidate its warranty.

## 90 Day Limited Warranty

VOXX Accessories Corporation warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it to the address below for a replacement with a current equivalent. This replacement is the company's sole obligation under this warranty. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE IS DISCLAIMED. This warranty excludes defects or damage due to misuse, abuse, or neglect. Incidental or consequential damages are disclaimed where permitted by law. This warranty does not cover product purchased, serviced or used outside the United States or Canada.

**U.S.A.:** Audiovox Return Center, 150 Marcus Blvd., Hauppauge, New York 11788

**CANADA:** Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16, Mississauga, Ontario L5T 3A5

## Instalación de las Baterías

Su control remoto universal RCR503BR requiere de 2 baterías alcalinas AAA nuevas (se venden por separado). Para instalar las baterías:

- Voltee la unidad, y quite la tapa del compartimiento de baterías.
- Introduzca las baterías, cuidando que el (+) y el (-) de las baterías sean iguales a las marcas dentro del compartimiento de las baterías.

### Precauciones sobre las baterías:

- No combine baterías nuevas y viejas.
- No combine diferentes tipos de baterías: alcalinas, estándar (carbón-zinc) o recargables (níquel-cadmio).
- Siempre remueva de inmediato baterías viejas, débiles o desgastadas, y recíclelas o deséchelas según lo disponen las normas locales y nacionales.

## Programando con Entrada Directa

Para programar hasta 3 componentes en su control remoto, siga los siguientes pasos:

- Encienda manualmente el componente que usted desea programar en el control remoto.
- Localice el código de cuatro dígitos para la marca de su TV, VCR, DVD, receptor de satélite o caja para el cable en la lista de códigos anexa.
- Presione y sostenga la tecla **CODE SEARCH** (búsqueda de códigos) hasta que se ilumine el indicador.
- Luego suelte la tecla **CODE SEARCH**.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>