 


# Quick Start **1**, **2**, **3** Guide

## **1** Connecting Your HDTV

Find the back panel of your HDTV, and connect your antennas or regular analog cable wall outlet.

Regular cable outlet

 


OR

Off-air antenna for regular (ANALOG) broadcasts



Off-air antenna for DIGITAL broadcasts

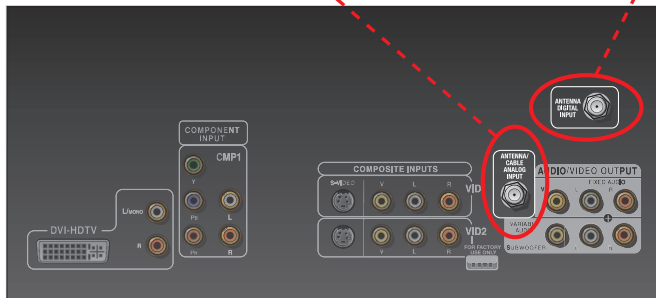

**Note:** This back panel illustration is for representation only. Your back panel might be different.

**Important:**

Do not connect the ANTENNA DIGITAL INPUT jack to a digital cable signal.

**Tip:**

If you need help deciding what type of antenna to use, go to [antennaweb.org](http://antennaweb.org). By entering where you live, this mapping program tells you what local analog and digital stations are available to you.


continues inside...

TOCOM 16556340

# 1

## Connecting Your HDTV (continued from previous page)

 Use the other input and output jacks to connect the rest of your home entertainment devices to the HDTV. Use the jacks that offer the best connection for each device.

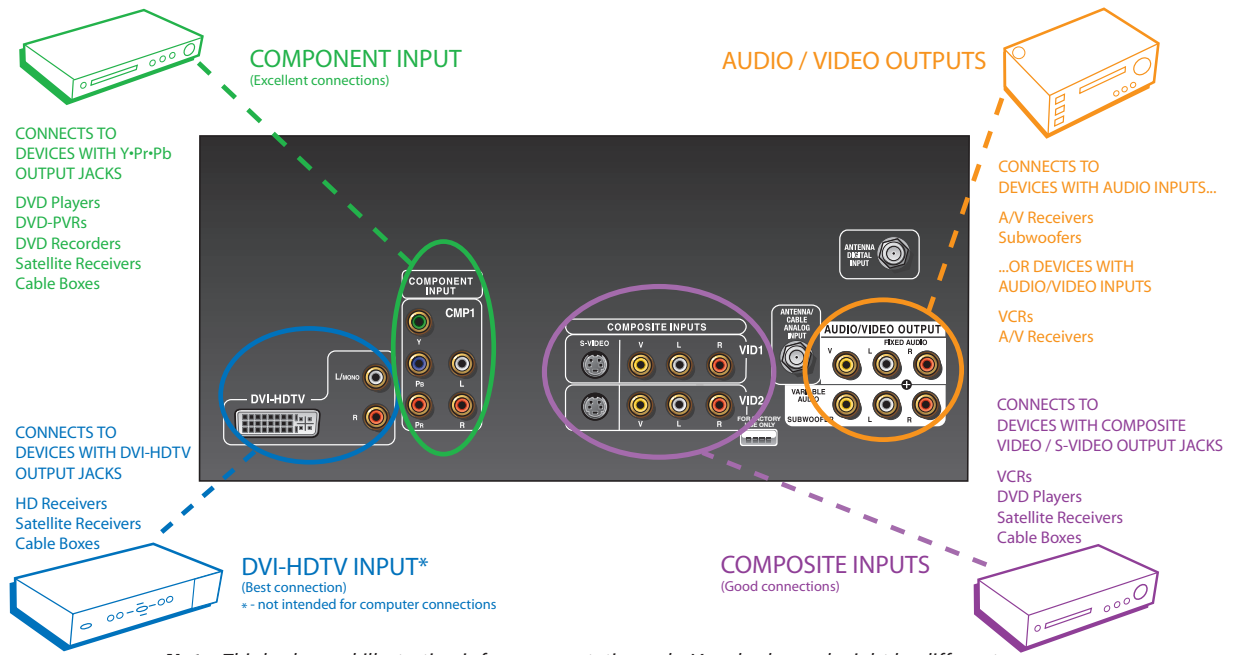

**Note:** This back panel illustration is for representation only. Your back panel might be different.

Your HDTV also has front panel input jacks for easy access.

# 2

 
## Turning On Your TV

### A. Plug in the TV.

Locate power cord for TV. Plug flat end into power jack on TV. Plug other end into wall outlet.

### B. Put Batteries in the Remote.

Insert 2 batteries by matching the polarities to the inside of the remote.

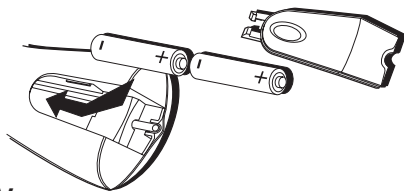


### C. Turn on the TV.

Press the TV button on your remote to turn on the TV. (You can also press the Power button on the front panel of the TV.)

While the TV is warming up, look at the remote to find the arrow and OK buttons, which you'll be using during the assisted setup.

 Some remotes have arrows that look like this:

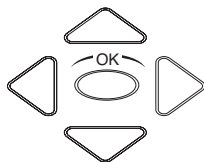

Other remotes have arrows that look like this:



### Important:

For more detailed instructions, refer to Chapter 1 of the User's Manual.

### Important Information About Your Remote Control

Your remote control is universal—it can control many different kinds of devices. See Chapter 2 of the User's Manual for programming instructions.

You can also program your HDTV to automatically tune to the A/V input you're using for each device when you press that device's button. See the Autotuning section in Chapter 3 of the User's Manual for more information.

# 3

## Setting Up Your TV

The first time you turn on your TV, the *Initial Setup* screens appear automatically. This setup routine guides you through the following steps to set up your HDTV:

- **Set the Menu Language**
- **Complete Channel Search.**

**Note:** Make sure you have signals connected to both the ANTENNA DIGITAL INPUT and the ANTENNA/CABLE ANALOG INPUT jacks on your HDTV before you perform the channel search on both sources.

- **Change the Channel List and Channel Labels**

**Note:** Changing Lists and Labels can be time consuming. You can change these later through the Setup menu.

- **Run the Automatic Convergence**

**Note:** For best results, repeat the Auto Convergence function (from the Setup menu) once the HDTV's been running for an hour. You can access Auto Convergence in the Setup menu (see the User's Manual for more information).

### Watching TV...

Now you're ready to watch TV! Your TV has two tuners: one for analog TV channels and one for off-air digital channels.

**To see which tuner you're on:** look at the channel number that appears in the bottom left corner of your screen when you change channels—a 'D' appears next to the channel number on the digital tuner, while an 'A' appears next to the channel number on the analog tuner.

**To switch between the tuners:** press the ANT•CAB or ANTENNA button on your remote.

**To tune directly to a regular channel:** enter the channel number and press OK.

Digital channels can have both primary channels (like the analog channel number) and subchannels. These subchannels might offer programming that's different from the primary channel. **NOTE:** Not all digital channels offer subchannels.

**To tune directly to a digital subchannel:** make sure you're on the digital tuner; then, enter the primary channel number, press the right arrow button, enter the subchannel number, and press OK.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>