


RCA

user manual
guide de l'utilisateur

RC130i
RC130iBL
RC130iGR
RC130iPK

Made for
 iPod  iPhone

 Conçu pour
 iPod  iPhone

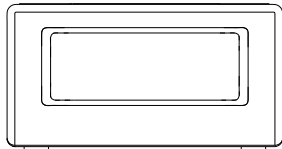


EN/F

It is important to read this user manual prior to using your new product for the first time.
Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

IMPORTANT SAFETY INSTRUCTIONS

 PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

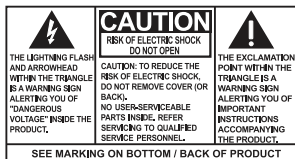

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories

specified by the manufacturer.

- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Portable Cart Warning

ADDITIONAL SAFETY INFORMATION

- The AC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers that came with your product or that is listed in the user's guide.

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- To be completely disconnect the power input, the AC adaptor of apparatus shall be disconnected from the mains.
- AC adaptor is a disconnect device. The AC adaptor should not be obstructed OR should be easily accessed during intended use.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candle should be placed on the apparatus.

- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

Electrical power information

AC Adaptor:

Input: 100 – 240 V AC, 50/60 Hz

Output: 5V DC, 1.2 A

“Made for iPod” and **“Made for iPhone”** mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

FCC Information

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

Before you begin

Plugging in for power


- Connect the supplied power adapter to the unit's Power jack, and connect the other end to a convenient wall outlet.
- Once connected with power, the clock flashes. Refer to the "Clock" section and follow the instructions to set the clock time.

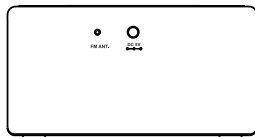

- To turn on the unit, press and hold **SOURCE**.

General controls

 Top view

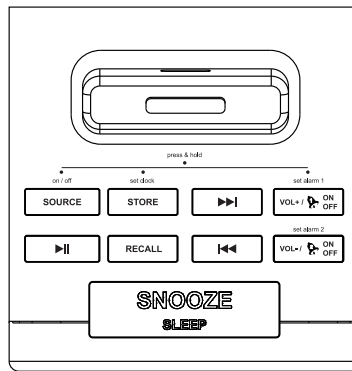

SOURCE – Press to select source; press and hold to turn the unit on or to standby mode.

STORE – In radio mode, store radio stations as presets. In standby mode, press and hold to set the clock time.

◀▶ – Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time and wake time.

VOL+/ON/OFF – In radio or iPod mode, increase volume. In standby mode, press to turn on/off alarm 1 or press and hold to set alarm 1.

 
⏸ – Play/pause when in iPod/iPhone mode. In radio mode, switch to iPod/iPhone mode.

RECALL – Recall preset stations


VOL-/ON/OFF – In radio or iPod mode, decrease volume. In standby mode, press to turn on/off alarm 2 or press and hold to set alarm 2.

SNOOZE/SLEEP – Turn off the wake function momentarily; set sleep time. Refer to "Sleep function".

Front view

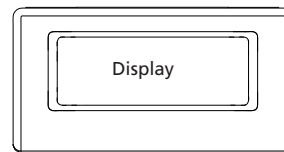

Rear view

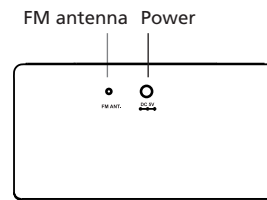 

POWER – Connect to the power adapter

Clock

Setting clock

1. In standby mode, press and hold **STORE** until the hour flashes on the display.
2. Press **◀▶** to adjust the hour time. Indicator beside PM lights when the time is set to PM. Press **STORE** to shift to minute time. Press **◀▶** to adjust the minute time and then press **STORE** to save. The time decrements or increments follow a faster rate when you press and hold the **◀▶**.

3. To save and exit the clock setting, wait for about 5 seconds or press **STORE** until the hour and minute stop flashing.

Auto time synchronization

Each time an iPhone/iPod is docked, the clock would automatically synchronize with the iPhone's or iPod's time.

When docking an iPhone/iPod,

- the clock will be synced to the iPhone.
- the time on your iPhone is provided by your mobile phone service. The time on your iPod is provided from iTunes during the last connection to your computer. Please note that it is possible to have up to 59 seconds time difference between iPhone or iPod time display.

Radio

Listening to the radio

To turn on or off radio:

- In standby mode, press and hold **SOURCE** to switch to radio mode.
- Press and hold **SOURCE** to return to standby mode.

To tune frequency:

- In radio mode, press **◀▶**. The selected frequency shows on the display.
- Press and hold **◀▶** to automatically search for the previous/next available station.

FM Antenna

This unit is equipped with an FM antenna at the back. Uncoil the antenna to its full length for best reception. Tape the end of the antenna onto the wall if possible to improve reception.

Station presets

To store a station as preset:

1. Tune to a radio station.
2. Press **STORE**, an available preset location (e.g. **P01**) shows on the display.
3. Press **◀▶** to select a desired preset location (01 - 20).
4. Press **STORE**. You can save up to 20 preset stations.

To recall a preset station:

1. In radio mode, press **RECALL**.
- The existing preset station number shows on the display.
2. Press **RECALL** repeatedly to select a desired preset station. The station number changes by a faster rate when you press and hold the button.

iPod/iPhone

Listening to iPod/iPhone

To connect iPod/iPhone:

Place your iPod/iPhone on the universal dock for iPod/iPhone.

To select iPod mode:

- In standby mode, press and hold **SOURCE** to turn on the unit. Press **SOURCE** until iPod is displayed.
- Playback from the iPod/iPhone starts automatically.
- If no iPod/iPhone is connected in the iPod mode, the unit will exit the iPod mode and return to standby mode.

To control the playback:

1. During playback, press **⏸** to pause the playback and press again to resume.
2. Press **◀▶** to skip to the previous or next file.
- Press and hold **◀▶** to search backward or forward on the current playback content.

To charge the iPod/iPhone:

- You may charge the battery of your iPod/iPhone through the universal dock for iPod while the unit is in standby mode, radio mode or iPod mode. Charging control should be operated on the iPod/iPhone.

iPod/iPhone

Incoming call alert

When there is an incoming call during iPhone music playback, the music station will stop music playback and play the ringtone. Music playback would resume when the phone call is finished.



Made for:

- iPhone 4 16GB, 32GB
- iPhone 3GS 8GB, 16GB, 32GB
- iPhone 3G 8GB, 16GB
- iPod touch 4th generation 8GB, 32GB, 64GB
- iPod touch 3rd generation 32GB, 64GB
- iPod touch 2nd generation 8GB, 16GB, 32GB
- iPod touch 1st generation 8GB, 16GB, 32GB
- iPod nano 6th generation 8GB, 16GB
- iPod nano 5th generation 8GB or 16GB
- iPod nano 4th generation (video) 8GB, 16GB
- iPod nano 3rd generation (video) 4GB, 8GB
- iPod classic 80GB, 120GB, 160GB
- iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB
- iPod nano 1GB, 2GB or 4GB
- iPod 5th generation (video) 30GB, 60GB, 80GB
- iPod mini 4GB, 6GB
- iPod 4th generation 20GB, 40GB
- iPod 4th generation (color display) 20GB, 30GB, 40GB, 60GB

Wake function

Set wake time

This unit allows 2 wake times to be set.

1. In standby mode, press and hold **VOL+/ ON/OFF** or **VOL-/ ON/OFF** until the hour flashes on the display.
2. Press **◀◀ / ▶▶** to set the wake time. The time decrements or increments follow by a faster rate when you press and hold the button. Press **VOL+/ ON/OFF** or **VOL-/ ON/OFF** to adjust the minute when you have finished setting the hour. Press **VOL+/ ON/OFF** or **VOL-/ ON/OFF** when you have finished setting the minute.
3. Press **◀◀ / ▶▶** to select the alarm source.
b – Buzzer
F – FM Radio
I – iPod/iPhone
Press **VOL+/ ON/OFF** or **VOL-/ ON/OFF** to confirm.
4. Press **◀◀ / ▶▶** to set the alarm volume level from level 10 to level 30.
5. To save and exit the wake setting, press **VOL+/ ON/OFF** or **VOL-/ ON/OFF**.

- To check the wake time after setting, press **VOL+/ ON/OFF** or **VOL-/ ON/OFF** and the respective assigned wake time shows on the display.
- The unit is equipped with **GRAD-U-WAKE** feature, the alarm tone volume will increase gradually to its maximum in 10-30 seconds. The maximum volume level depends on the alarm volume level set in step 4.

Turn off the wake function

To silence the wake function momentarily:

- Press **SNOOZE/SLEEP**. The alarm will sound again when the snooze period is over. The snooze period is 9 minutes.

To turn off the alarm

- Press any keys other than **SNOOZE/SLEEP**.

To stop the wake function or to disable the wake function completely:

- Press **VOL+/ ON/OFF** or **VOL-/ ON/OFF** twice until the indicator beside **AL1** or **AL2** does not show on the display.

Sleep function

In the sleep mode, the radio or iPod can be set to operate for a certain period of time before turning off automatically.

To set the sleep time:

1. Press **SNOOZE/SLEEP** repeatedly to cycle among the sleep time available (90min, 80min, 70min, 60min, 50min, 40min, 30min, 20min, 10min or 00. The sleep time is default to 0).

To change or check the remaining time in sleep mode:

- Press **SNOOZE/SLEEP** once to check the remaining sleep time. Press **SNOOZE/SLEEP** repeatedly to select another sleep time.

To cancel the sleep mode:

- Press and hold **SOURCE** to cancel the sleep mode and turn off the unit.

If you press **SNOOZE/SLEEP** repeatedly to select "00", this will only turn off the sleep function. The unit will not be turned off.



Warranty information

12 Month Limited Warranty Applies to RCA Clock Radios

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computer, computer peripheral, etc.

media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other

than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to the address shown below.
- Note that product will be returned with factory default settings. Consumer will be responsible to restore any personal preference settings.

Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788

1-800-645-4994

For Canada Customers, please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Visit <http://store.audiovox.com> to find the best accessories for your products.



For Customer Service
Visit Our Website At
www.rcaaudiovideo.com
Product Information, Photos,
FAQ's, User Manual

© 2011 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark(s) ® Registered
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>