




QuickStartGuide

 
TH20/TH22 series
www.rcaaudiovideo.com

Congratulations on purchasing your new RCA Player.
Please read these instructions for quick tips on using the player.


Getting started


1. Install the battery into the player:
 - Apply thumb pressure to slide the battery compartment cover in the direction of the arrow, then remove the cover.
 - Insert the supplied AAA battery, following the polarity marks in the battery compartment.
 - Replace the cover.
2. Rotate the USB plug out of the player body and connect the player to your PC as shown.
3. The RCA easyRip™ Media Software installer is stored on the player. Go to **MyComputer** in the Start menu, find and open the drive letter associated with the player (i.e. RCA MP3) and then double-click the **rcaeasyrip_setup.exe** file to launch the installer.
4. Transfer audio files to your player using either of the two methods below:
 - a) **RCA easyRip:** Helps to rip CD's, create playlists, load content and manage your library with an intuitive and modular design. Click the easyRip icon () on your PC desktop to launch the software.


* RCA easyRip is currently not compatible with Audiobooks.

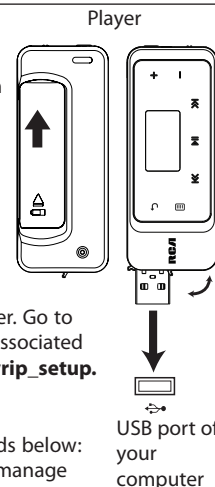

v5.0 (1.0.5.0) (EN/E)

 
- For details in using RCA easyRip, click the **Help** icon () on the module dock.
- b) **Windows Explorer:** Simply drag and drop media files onto the drive letter associated with the player.
- Your RCA Player is also compatible with most PC music management softwares.

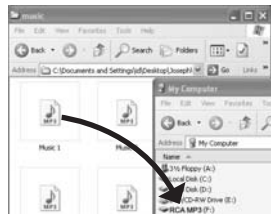

5. Disconnect the player from your PC by clicking the **Safely Remove Hardware** icon () in the system tray (located in the lower right corner of your screen) and selecting the player from the list of devices, then unplug the player from the PC.

Installing the belt clip

 Step 1:
Place the belt clip here

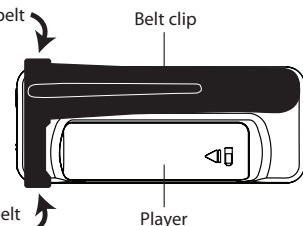


Step 2:
Push here until the belt clip completely locks in place

* The latest software can be downloaded from www.rcaaudiovideo.com.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Removing the belt clip

 Lift up the clip here

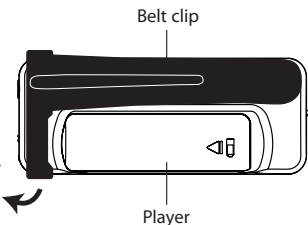

Learn more about the player

 
- **To view the user manual directly from the player:**
 - Step 1: Click **Start**.
 - Step 2: Click **My Computer** (XP users) / Click **Computer** (Vista and 7 users).
 - Step 3: Find and open the drive letter associated with the player (i.e. RCA MP3) and then open User Manuals folder.
 - Step 4: From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

- **Keep player out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.**

 
Need more help?

Do not return this product to the store.
Visit www.rcaaudiovideo.com for the latest firmware, RCA easyRip Media Software, user manual and FAQ's.

General controls

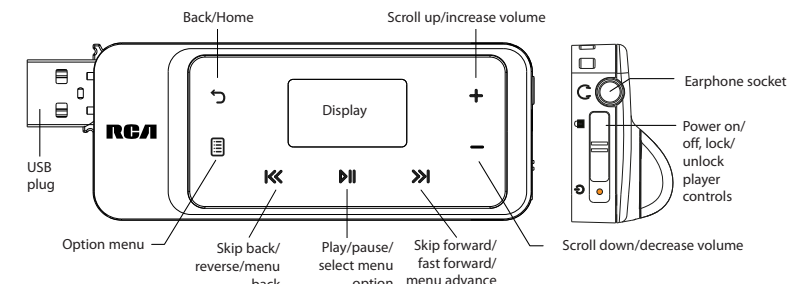


 
 
 
Turn the player on/off

 
Slide and hold the Power/Lock Slider () away from the headphone jack.






 




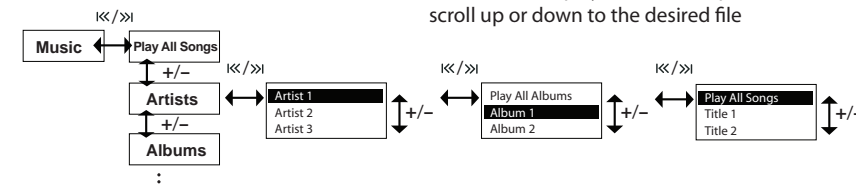

Go to the Home menu (to access Music, Audiobooks, Favorites and Settings)

Press and hold 

Navigate to an audio file

In the Home menu, press  or  to go back or advance in the player menu and press  or  to scroll up or down to the desired file



Play an audio file	Press  or 
Pause playback	Press  at the playback (Now Playing) screen, press again to resume
Show the Option menu	Press 
Adjust the volume	Press  or  at the playback (Now Playing) screen
Skip to the next file (or section of audiobooks*)	Press 
Skip to the previous file (or section of audiobooks*)	Press  within the first 4 seconds of the current audio file
Reverse or fast forward an audio file	Press and hold  or  during playback
Lock the keys	Slide the Power/Lock Slider () toward the headphone jack. To unlock, slide the Power/Lock Slider () toward the middle position.
Delete files from the player	Refer to page 17-22 of the user manual
Reset the player	Remove and replace the battery

* Refer to the user manual for information on section skipping for audiobooks.

Visit <http://store.audiovox.com> to find the best accessories for your products.

For Customer Service
Visit Our Website At
www.rcaaudiovideo.com
Product Information, Photos,
FAQ's, User Manual

© 2010 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark Registered
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>