

RP3528

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

Precautions for the unit

- Do not use the unit immediately after transportation from a cold place to a warm place; condensation problems may result.
- Do not store the unit near fire, places with high temperature or in direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.
- Clean the unit with a soft cloth or a damp chamois leather. Never use solvents.
- The unit must only be opened by qualified personnel.

Headset safety

To use a headset safely, please keep the following in mind:

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience ringing in your ears, turn down the volume or stop using the headset.
- Do not use a headset while driving a motorized vehicle or riding a bike. It may cause a traffic hazard and is illegal in many areas.
- Even if your headset is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that can't hear sounds around you.

FCC Information

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.


Powering the Recorder

Important Battery Information


- Alkaline batteries are recommended for longer play. Carbon-zinc or nickel cadmium rechargeable batteries can substantially reduce play time.
- If you're not going to use your player for a month or more, be sure to remove batteries because they can leak and damage the unit.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all batteries are not replaced at the same time, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

Battery Installation

1. Open battery door by pressing down on the arrow, sliding it as indicated and lifting up.
2. Insert 2 "AA" alkaline batteries into the battery compartment. Be sure each battery is installed as shown on the battery diagram on the battery door.
3. Close the battery door by sliding door into the closed position.

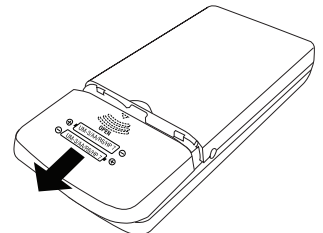


 NOTE: If the recording sounds distorted, or if the tape moves very slowly or not at all, check the batteries, try AC power or a fresh set of batteries before seeking service (See Record/Battery Indicator).

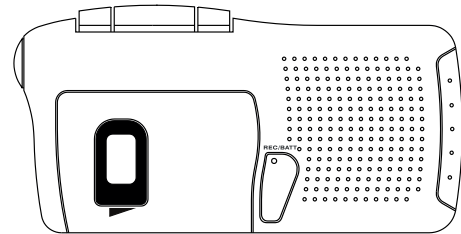

It is important to read this user manual prior to using your new product for the first time.
 Es importante leer este manual antes de usar por vez primera su equipo.

Important safety instructions

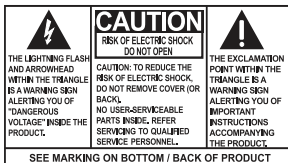

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.

 
Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

AC/DC Power Converter (Not Included)

To save batteries you can use an AC/DC converter (not included) to operate your recorder.

1. Connect the converter into the DC 3V jack on the recorder.
2. Connect the other side of the converter into a household outlet. When the AC/DC converter is used, batteries are automatically disconnected.



Specification of AC/DC Power Converter

Output: 3V DC @ 200 mA

Polarity: +





Record/ Battery Indicator

- Recording Indicator—Light will remain on when in continuous record mode.
- Battery Condition Indicator—When in the record mode, the brightness level of the light indicates battery condition. When the indicator is dim or does not light, batteries are weak and need replacing. Note that the optional AC/DC Converter must be disconnected from DC 3V jack to check batteries.

Using the Recorder

Insert or Remove a Microcassette

1. Press the **STOP/EJECT** button to stop recorder or to open cassette door and remove microcassette. Note that when in play or record mode you must press **STOP/EJECT** once to turn player off and again to open the cassette door.
2. Insert microcassette into the cassette door with the side to be used visible through cassette door window. Face exposed tape outward and close door. Note that Rim drive and capstan drive tapes look alike, but only CAPSTAN DRIVE MICROCASSETTE tapes will work in this recorder.

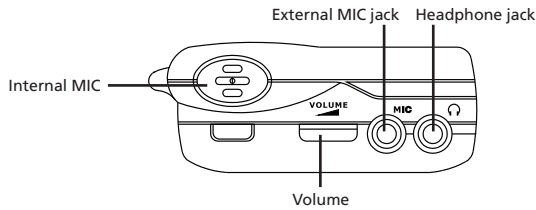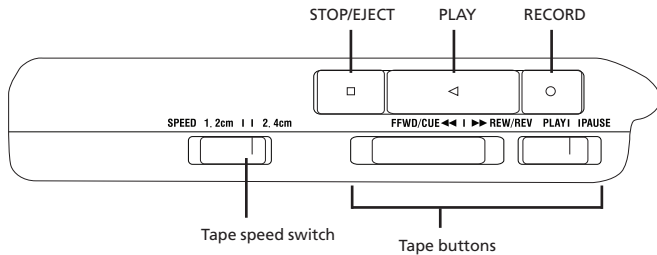

TIP: Always push **STOP/EJECT** before storing. This will relieve pressure on certain parts in the recorder that might deform after long periods of time.

Volume Control

- Adjust the volume when in the PLAY mode to your preferred listening level.
- Adjust the volume when in the RECORD mode to fine tune the sensitivity of the built-in microphone for record operations.

Record

Records continuously when the recorder is in the RECORD mode.

1. Press **RECORD** button (**PLAY** button will depress also). Note that your recorder is equipped with a microcassette sensing mechanism. This mechanism prevents the **RECORD** button from being pressed when cassette is not in the recorder. (See Erase Protection.)
2. Speak normally into the microphone. To obtain optimum recording quality, place the recorder with the microphone freely exposed to sound source and as close as convenient. A built-in automatic record level control will set record level for optimum recordings. Avoid recording near unwanted noise sources, such as air conditioners or fans.
3. Push **STOP/EJECT** button when finished recording.

TIP: For conferences, to obtain optimum recording quality, place the recorder with the microphone freely exposed to the sound source and as close as convenient. A built-in automatic recording level control will set record level for optimum recordings. Avoid recording near unwanted noise sources, such as air conditioners or fans.

Record with an External Microphone

To record with external microphone, plug the microphone into the MIC JACK. The built-in microphone is disconnected. You can also use your own microphone for recording. Your microphone should be an Electret Condenser Microphone and it's impedance should be 2.2k ohm.

Headphone Jack

 
Plugging in an optional headphone, the speaker is automatically silenced for private listening. When recording with the built-in microphone, you can use the optional headphone to listen to what is being recorded. Note that the headphone jack is designed to permit use of stereo headphones with your mono recorder. Playback will be heard in mono only.

Play/Pause Button

This convenient PAUSE feature is most helpful while recording because you can stop the recorder momentarily without resetting the control buttons. Slide the **PLAY/PAUSE** button to the **PAUSE** position to stop operation in PLAY, RECORD, FFWD, and REW modes. Slide button to the **PLAY** position to resume operation.

Tape Speed

- 2.4cm—is the tape speed which is compatible with most single-speed microcassette recorders.
- 1.2cm—doubles the record time and will allow up to 2 hours of recording time when using both sides of a 60 minute (MC-60) microcassette tape.



IMPORTANT: Do not change speed while recording.

Tape Play

To listen to your recorded microcassette, rewind to the starting point and press **STOP/ EJECT** button. Press **PLAY** and adjust the **VOLUME** to desired listening level.

Rewind (REW)/ FAST FORWARD (FFWD)

- **REW**—Slide switch to **REW** to rewind to beginning or any point of your recording. Press the **STOP/EJECT** button after you have rewound the desired amount.
- **FFWD**—Slide switch to **FFWD** to advance the tape. Press **STOP/EJECT** button after you have reached the desired location on the tape.

Review (REV)/ Cue

This feature is helpful in finding the beginning or the end of the recorded segment on the tape. While in PLAY mode, Slide and hold the **REV** or **CUE** switch and listen for change from noise to silence (end of recording) or from silence to noise (beginning of recording). When desired portion has been reached, release the **REV** or **CUE** switch. Use the same procedure if you want to skip a portion or listen to the same segment again.

 
Care & Maintenance

Tape Erase

To erase a tape simply record over the unwanted recording.

Erase Protection

When you record new material, the cassette deck records over whatever is on a tape. To protect a tape from accidental erasure, break off one or both plastic tabs (one for each tape side) on the side of the cassette tape. If you decide later to record on the tape, seal the hole with a piece of cellophane tape.



QUIT SLACKING


A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.



Cleaning the Tape Heads

Over time, iron oxide particles from the magnetic tape build up on the parts that come in contact with the tape. These deposits can cause incomplete erasure, a muffled sound during playback.

To clean the heads, open the compartment door, push the **PLAY** button and gently clean the heads, capstan and pinch wheel with a head cleaner. Allow 30 minutes drying time when using a liquid cleaner.

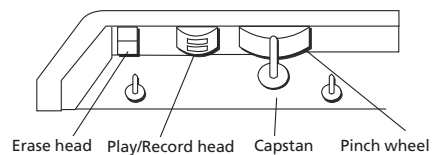

Warranty

12 Month Limited Warranty **Applies to RCA Voice Recorders**

AUDIOVOX ACCESSORIES CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Recommendations before returning your product for a warranty claim:

- If your product is capable of storing content (such as an mp3 player, voice recorder, camcorder, digital photo frame, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.
- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials. Ship to

Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788

1-800-645-4994

For Canada Customers, please ship to:

Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Visit <http://store.audiovox.com> to find the best accessories for your products.



For Customer Service
Visit Our Website At
www.rcaaudiovideo.com
Product Information, Photos,
FAQ's, User Manual

© 2011 Audiovox Accessories Corporation
111 Congressional Blvd., Suite 350
Carmel, IN 46032
Trademark(s) ® Registered
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>