

FCC Information

FCC Information
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC Information


FCC Information
In the event that service should be required, you may need both the model number. In the space below, record the date and place of purchase.
Date of Purchase:
Place of Purchase:
Service Information
This product should be serviced only by those specially trained in appropriate servicing techniques.

Ecology
Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.
Maintenance
Clean the unit with a soft cloth, or a damp leather chamois. Never use solvents.

FCC Information


Precautions for Batteries
If you do not use the unit for more than one month, be sure to remove the batteries to avoid leakage.
When installing batteries, be sure that the polarities are correct. Reversing polarity may cause personal injury and damage to the batteries.

Power Supply
(Backup power) 2 x "AAA"
ESD Remark:
In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

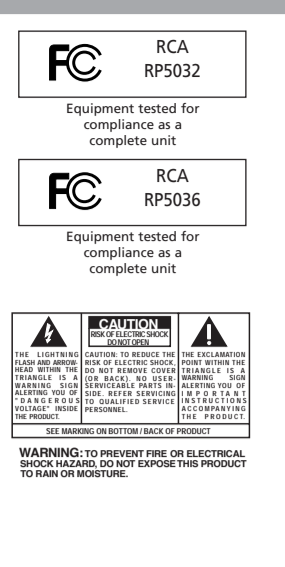

Comercializadora Thomson de México, S.A. de C.V.
Álvaro Obregón No. 151, Piso 13, Col. Roma, Delegación Cuauhtémoc, C.F. 06700, México, D.F.
Teléfono: 52-55-11-020380
RFC: CTR-980723-K55

Thomson Inc.
P.O. Box 1976, Indianapolis, IN 46206-1976
©2007 Thomson Inc.
Trademark(s) © Registered
Marca(s) © Registrada(s)
Marque(s) © Déposé(s)
www.rcaaudiovideo.com
Printed in China/Impreso en China

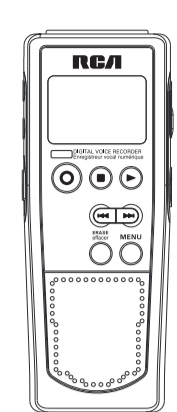

RP5032
RP5036

General Controls

General Controls diagram showing buttons: Recording indicator, Built-in microphone, FORWARD, STOP, PLAY, REVERSE, MENU, VOL UP, VOL DOWN, ERASE, and TONE. Includes descriptions for each function.

General Controls

General Controls diagram showing ports: External microphone jack, Connects headphones, and USB jack. Includes descriptions for each port.

The Display

The Display diagram showing various display elements: Battery level indicator, Key Lock, Time/date/recorded time, AMP/PM, Recording Conditions, Keypoint, Automatic Recording, Recording Qualities, Folder (A/B/C/D), File selected, Total number of files in a folder, Bookmark, Play, Record, Total remaining time for recording, Playback mode, and Play one/Play all.

Display Messages

Display Messages table listing functions and their corresponding display messages: ALL, APPEND, CUT-F, CUT-S, DELETE, FULL, MM/DD, 12 HOUR, 24 HOUR, TIME, INSERT, INTRO, OFF, ON, SEN MID, TONE, NO TONE, VOL 15, YEAR, LOCKED, FORMAT, SPEED, WAIT..., 001%, PAUSE.

Before You Begin

Before You Begin section containing: Unpacking Your Player, Auto power shut down, Using earphones and external microphone, Starting up the unit, Shutting down the unit, and Key lock.

Before You Begin

Before You Begin section containing: Tone and Setting the Time instructions with corresponding icons.

Setting the Time

Setting the Time instructions for 12-hour and 24-hour modes, including steps for setting the hour, minute, and day.

Basic Operation

Basic Operation section containing: Select folder, Normal Playback, and Deleting a bookmark instructions.

Recording Mode

Recording Mode section containing: Setting Recording Mode and Manual Recording instructions.

Recording Quality / Condition

Recording Quality / Condition section containing: Setting Recording Quality and Definition of recording modes (CONF, DICT, LP, HQ).

Setting the Time

Setting the Time instructions for Year/Date/12/24/Time Setting, including steps for setting year, month, and date.

Basic Operation

Basic Operation section containing: Select folder, Normal Playback, and Deleting a bookmark instructions.

Bookmark

Bookmark section containing: Creating a bookmark and Skipping to a bookmark instructions.

Recording Mode

Recording Mode section containing: Setting Recording Mode and Manual Recording instructions.

Recording Quality / Condition

Recording Quality / Condition section containing: Setting Recording Quality and Definition of recording modes (CONF, DICT, LP, HQ).

Other Functions

Other Functions section containing: IntroScan and Play one / play all instructions.

Erasing File / Folder

Erasing File / Folder section containing: Erasing selected file and Erasing all files in a folder instructions.

Advanced Operation

Advanced Operation section containing: CAUTION, Speed, and Insert instructions.

Advanced Operation

Advanced Operation section containing: Append, Cut, and Playback instructions.

Advanced Operation

Advanced Operation section containing: Format (Caution! All data inside the memory will be erased) and Playback instructions.

Other Functions

Other Functions section containing: IntroScan and Play one / play all instructions.

Erasing File / Folder

Erasing File / Folder section containing: Erasing selected file and Erasing all files in a folder instructions.

Advanced Operation

Advanced Operation section containing: CAUTION, Speed, and Insert instructions.

Advanced Operation

Advanced Operation section containing: Append, Cut, and Playback instructions.

Advanced Operation

Advanced Operation section containing: Format (Caution! All data inside the memory will be erased) and Playback instructions.

Connecting to the Computer

Connecting to the Computer section containing: Installing the USB Driver (Windows 98SE system) and Plugged into the computer instructions.

Connecting to the Computer

Connecting to the Computer section containing: Using your unit as a file storage device and Transferring Files via Windows Explorer (Drag and Drop) instructions.

Troubleshooting Tips

Troubleshooting Tips section containing: Unit doesn't turn on, Cannot edit, Cannot activate the unit after pressing on keys, Display keeps flashing when unit is off, Cannot record, Cannot show recording date and time during playback, No sound from speaker during playback, Cannot stop recording when AVR ON, Cannot erase recorded file(s), Cannot keep the saved setting, and Cannot stop recording when AVR ON.

U.S. Limited Warranty

U.S. Limited Warranty section containing: What your warranty covers, For how long after your purchase, What we will do, How to make a warranty claim, and Thomson Inc. Product Exchange Center information.

U.S. Limited Warranty

U.S. Limited Warranty section containing: What your warranty does not cover, Limitation of Warranty, and How state law relates to this warranty.

Connecting to the Computer

Connecting to the Computer section containing: Installing the USB Driver (Windows 98SE system) and Plugged into the computer instructions.

Connecting to the Computer

Connecting to the Computer section containing: Using your unit as a file storage device and Transferring Files via Windows Explorer (Drag and Drop) instructions.

Troubleshooting Tips

Troubleshooting Tips section containing: Unit doesn't turn on, Cannot edit, Cannot activate the unit after pressing on keys, Display keeps flashing when unit is off, Cannot record, Cannot show recording date and time during playback, No sound from speaker during playback, Cannot stop recording when AVR ON, Cannot erase recorded file(s), Cannot keep the saved setting, and Cannot stop recording when AVR ON.

U.S. Limited Warranty

U.S. Limited Warranty section containing: What your warranty covers, For how long after your purchase, What we will do, How to make a warranty claim, and Thomson Inc. Product Exchange Center information.

U.S. Limited Warranty

U.S. Limited Warranty section containing: What your warranty does not cover, Limitation of Warranty, and How state law relates to this warranty.

Canadian limited warranty

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

Note

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries. Should your product not perform properly during the warranty period, either: 1. Return it to the selling dealer with proof of purchase for replacement.

Note

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries. Should your product not perform properly during the warranty period, either: 1. Return it to the selling dealer with proof of purchase for replacement.

Note

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries. Should your product not perform properly during the warranty period, either: 1. Return it to the selling dealer with proof of purchase for replacement.

Note

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries. Should your product not perform properly during the warranty period, either: 1. Return it to the selling dealer with proof of purchase for replacement.

Canadian limited warranty section containing: Thomson multimedia Ltd. contact information, warranty details, and disclaimers.

Note section containing: Thomson multimedia Ltd. contact information, warranty details, and disclaimers.

Note section containing: Thomson multimedia Ltd. contact information, warranty details, and disclaimers.

Note section containing: Thomson multimedia Ltd. contact information, warranty details, and disclaimers.

Note section containing: Thomson multimedia Ltd. contact information, warranty details, and disclaimers.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>