

2.1 Wooden Woofer System S21114

INTRODUCTION

Thank you for using NEUTAC 2.1 Wooden Woofer System. This high-quality 2.1 system amplified the optimum sound from your Video Game Consoles, CD, DVD/VCD, MP3, PC and other compatible audio devices.



SPECIFICATION

Model Code: S21114

Normal Power Output (Total): 22W

Speaker Driver Unit:

- Woofer: 3"4 Ω 10W;
- Satellite: 1"8 Ω 3W x 4

Frequency Response Range:

- 30Hz-20KHz

Size:

- Woofer 111 x 230 x 185mm
- Satellite 62 x 69 x 168mm

Power Supply Input:

- AC 230V/50Hz

CONNECTION

*Please make sure the system and the devices are Power off before establish any connection.

1. Playstation 1 and 2/ Xbox/Game Cube

- Step 1. Connect the game console to the VIDEO IN and AUDIO IN section, which is located at the back of the woofer by using the 1To3 RCA cable provided with the game console.
- Step 2. Connect the TV to the VIDEO OUT and AUDIO OUT section, which is located at the back of the woofer by using the 3To3 RCA cable attached with the speaker system.
- Step 3. Connect the two satellites to the woofer by using the built in cable on the satellites.

*Please refer to Figure 1 for cable connection

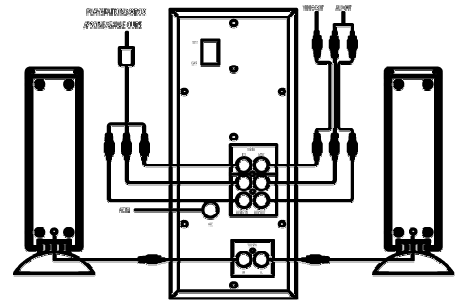 


Figure 1

2. DVD/VCD Player

- Step 1. Connect the DVD/VCD player to the VIDEO IN and AUDIO IN section, which is located at the back of the woofer by using the 1To3 RCA / 2To3 RCA / 3To3 RCA cable. This cable may have been provided with your DVD/VCD player.
- Step 2. Connect the TV to the VIDEO OUT and AUDIO OUT section, which is located at the back of the woofer by using the 3To3 RCA cable attached with the speaker system.
- Step 3. Connect the two satellites to the woofer by using the built in cable on the satellites.

*Please refer to Figure 2 for cable connection

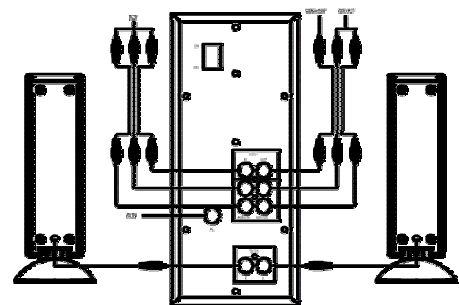 


Figure 2

3. PC/CD Player/MP3 Player/Game Boy

- Step 1. Connect the PC/CD Player/MP3 player to the AUDIO IN section, which is located at the back of the woofer by using the 1To2 RCA cable attached with the speaker system.
- Step 2. Connect the two satellites to the woofer by using the built in cable on the satellites.

*Please refer to Figure 3 for cable connection

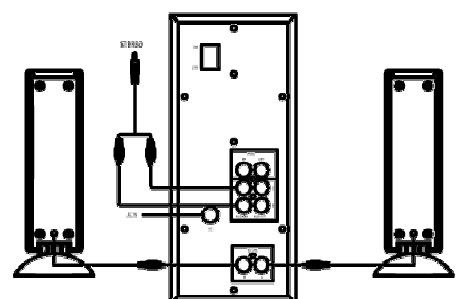 


Figure 3

OPERATION

1. You must make sure that the system and the devices are Power off before establish any connection.
2. Connect your device to the woofer system. (See **CONNECTION** section for details of how to connect your device with the woofer system.)
3. Connect the main power from the woofer to the socket.
4. Switch ON the Power button at the back of the woofer.
5. Use the knobs on the remote control to adjust the volume and the bass of speakers.

SAFETY INSTRUCTIONS

IMPORTANT

Please unplug the system if any of the following conditions exist:

- The power cord or plug becomes frayed or otherwise damaged.
- Your system has been dropped or the enclosures have been otherwise damaged.
- Liquid has been spilt into a speaker enclosure.
- You suspect that your system needs repairing.
- Your system is exposed to rain or any other excessive moisture.

TROUBLESHOOTING

If you experience problems during the installation of your system please first check the following conditions:

- Make sure all the connections between the system and devices are fully seated.
- Make sure that the power supply is switched on.
- Check the LED light on the remote control. If it is not illuminated, check the power connection.
- If connected to a non-standard game console or audio device, please consult the manual of those devices for connection.

PRECAUTIONS

- Your system should be situated away from heat sources such as radiators and heaters.
- Do not place your system on an unstable table, stand, tripod or bracket.
- Keep your system dry and avoid contact with damp or wet areas.
- Read the instructions manual carefully before the installation of your system.
- Keep this instructions manual for future reference.
- Follow all the instructions in this manual to operate your system.

ATTACHMENTS

Do not use attachments or accessories not attach with our original package as they may cause hazards. We do not take any responsibility of failure cause by this problem.

CLEANING

Unplug this product from the power source before cleaning. Do not use liquid or aerosol cleaners. Use a soft cloth for cleaning.

WARNING

- Electrical equipment may be hazardous if misused.
- An adult must always supervise the operation of this product, or similar products.

HELPLINE: 0208 991 3788

In the event of any difficulties being experienced with this product, please contact the help line between 10:00a.m. and 4:00p.m., Monday to Friday (excluding Bank Holiday).

12 MONTHS WARRANTY

This product is guaranteed for a period of 12 months from the date of purchase.

This warranty is only applicable to the original purchaser of this product. A purchase receipt of this product is required before the warranty becomes valid and it must clearly show the date of purchase.

This warranty only covers failures due to defects in materials or workmanships, which occur during normal use.

This warranty does not cover industrial use of abuse.

Visit our website to find out more about our other products.

www.neutac.co.uk



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>