

## Table Of Contents

Button Description.....2-3  
 Battery Installation .....3  
 Programming Your Universal Remote  
     TV .....4  
     TV Codes .....4-5  
     VCR .....5-6  
     VCR Codes .....6-7  
     DBS .....7  
     DBS Codes .....7  
     Cable Box.....7-8  
     Cable Box Codes .....8  
     DVD .....9  
     DVD Codes.....9  
 Programming With Code Search .....9  
 Retrieving Codes.....10  
 TV Menu .....11  
 DBS Menu.....12  
 DVD Menu .....13  
 Trouble Shooting .....14

This RCA Universal Remote Is Compatible With  
 Most Models Of The Following Brands  
 (Of Infrared Remote Controlled Components manufactured after 1990):



## Button Description

### INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

### OFF/ON

The OFF/ON button operates the same as your original remote  
 Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the OFF/ON button to turn the device off.

### CODE SEARCH

Used to program the remote or to search through codes.

### DBS/CABLE, VCR/DVD, TV

The DBS/CABLE, VCR/DVD, and TV buttons are used to select the device you want to control.

### REW, PLAY, FF, REC, PAUSE, STOP

The REW, PLAY, FF, REC, PAUSE, and STOP buttons operate the same as on your original VCR remote. You must press the RECORD button **twice** to begin recording.

### TV/VCR

The TV/VCR button operates the TV/VCR function of your VCR.

### ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process.

### VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons increase or decrease the channel numbers or volume.

### MUTE

To MUTE the volume on the TV.

### PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

### 0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

### MENU


The MENU button calls up the TV set up menu.

## Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. Remove the battery compartment cover.

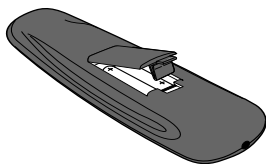

2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3. Press and push the battery cover back into place.

Note: Reprogramming may be required after batteries are removed.

## Programming For TV

 
1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).



4. Enter the code using the Number Buttons.

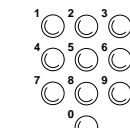

After your code is entered, the **INDICATOR LIGHT** will turn off.



5. Aim the remote at your TV and press the **OFF/ON** button. Your TV should turn off.




Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your TV on, press **CHAN+**. If the TV responds, no further programming is required.



7. Enter your code here for easy reference.

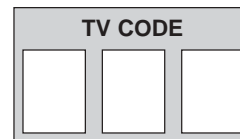

## TV Code List

Abex.....	172	Electrohome .....	004, 006
Admiral .....	001, 173	Emerson .....	002, 003, 019, 022
Advertura .....	174	.....030, 171, 191, 004	
Aiko .....	016	.....038, 046, 006, 012, 023, 024, 025	
Akai .....	002	.....026, 027, 028, 029, 031, 032,	
Alleron .....	046	.....033, 034, 035, 036, 037, 039	
Amtron .....	038	.....041, 042, 043, 044, 047, 123	
Anam National.....	003, 038	.....124, 162, 177, 179	
AOC.....	006, 005, 004, 007	Envision .....	004, 006
Audiovox .....	038	Fisher .....	048, 049, 051, 162, 180
Belcor.....	004	Fujitsu .....	046
Bell & Howell .....	001, 083, 162	Funai .....	038, 046
Bradford .....	038	Futuretec .....	038
Brokwood.....	004	GE .....	000, 054, 003, 004, 006
Candle .....	004, 006, 008, 174	.....022, 052, 055, 087, 164, 165	
Celebrity.....	002	.....166, 167, 168, 181	
Citizen .....	016, 171, 004, 006, 008	Gibraltar .....	004, 151
.....038, 105, 174, 177		Grundty .....	171, 038, 046
ColorTyme .....	004, 006	Hallmark .....	004, 006
Concerto .....	004, 006	Harvard .....	038
Contec / Cony .....	012, 013, 038	Hitachi .....	059, 004, 148, 006, 012
Craig .....	038	.....013, 060, 061, 135, 136, 137	
Crown .....	038, 171	.....138, 139, 140, 141, 142, 143	
Curtis Mathes .....	171, 000, 004	.....144, 145, 146, 150, 179	
.....006, 015, 105, 162		IMA .....	038
CXC .....	038	Infinity .....	062
Daewoo .....	016, 190, 005	Janeil .....	174
.....171, 004, 006, 017, 127		JBL .....	062
Daytron .....	004, 006, 171	JCB .....	002
Dimensia .....	000	JC Penny .....	000, 054, 005, 171
Dumont .....	004, 151	.....004, 052, 006, 172, 008, 022, 058	
Dynatech .....	004	.....063, 064, 072, 087, 105, 181	
Electroband .....	002	Jensen .....	004, 006

## TV Code List Continued

 
JVC .....159, 013, 012, 182, 054 .....060, 065, 066, 067, 123, 157, 158	.....007, 019, 096, 099, 101, 102, 103 .....129, 179, 188, 190
Kawasho .....002, 004, 006	Runco .....151
Kenwood .....004, 006, 019	Sampo .....004, 006, 171, 172
Kloss Novabeam .....068, 069, 174, 183	Samsung .....171, 004, 005, 105, 006 .....012, 015, 017, 019, 104, 106, 172
KTV .....171, 038, 177, 070	Sansui .....191
LG (Goldstar).....005, 156, 004, 006 .....172, 012, 019, 056, 057, 058, 155, 171	Sanyo .....048, 080, 004 .....180, 162, 169, 049
Loewe .....062	Scotch .....006
Logik .....083	Scott .....004, 038, 046
Luxman .....004, 006	.....006, 012, 024, 035
LXI .....000, 062, 006, 073 .....162, 181, 049, 072	Sears .....000, 048, 189, 004, 046 .....006, 013, 019, 049, 051, 066
Magnavox .....062, 004, 006, 130 .....134, 183, 008, 019, 068, 069 .....075, 076, 077, 088, 131 .....132, 133, 219, 235	Sharp .....072, 162, 180, 181 .....173, 095, 171, 004, 006 .....012, 029, 111, 112, 113, 122
Majestic .....083	Shogun .....004
Marantz .....004, 006, 062	Signature .....001, 083
Megatron .....006, 059	Simpson .....008
Memorex .....083, 006, 001, 082, 162	Sony .....002, 218
MGA .....005, 004, 006	Soundesign .....004, 038, 046, 006, 008
.....079, 082, 019, 022, 051, 080	Squareview .....189
Midland .....054, 151, 171, 172, 181	SSS .....004, 038
Minutz .....052	Starlite .....038
Mitsubishi.....005, 004, 006 .....125, 082, 081, 019, 022 .....051, 079, 080, 135	Supre-Macy .....174
Montgomery Ward .....083	Supreme .....002
Motorola.....003, 173	Sylvania.....062, 004, 006, 088, 076 .....116, 008, 019, 068, 069 .....075, 077, 161, 183
MTC .....005, 004, 105, 006	Symphonic.....038, 189, 033
Multitech .....038	Tandy .....173
NAD .....006, 185, 072	Tatung .....003
NEC .....005, 004, 006, 003	Technics .....054
Nikko .....006, 016	Techwood .....004, 006, 054
NTC .....016	Teknika .....016, 005, 171, 004, 006 .....008, 012, 013, 038, 046, 076 .....082, 083, 105, 170
Onwa .....038	Tera .....004, 012, 093
Optimus .....185	TMK .....004, 006
Optonica .....095, 173	Toshiba .....105, 162, 160
Orion .....191, 035	Totevision .....171
Panasonic .....170, 054, 062, 003	Universal .....052, 087
Philco.....062, 005, 004, 006, 183 .....008, 012, 019, 003 .....068, 069, 075, 077	Victor .....066, 182
Philips .....062, 004, 075, 008, 019 .....003, 012, 068, 069 .....076, 086, 087, 088	Vidtech .....004, 005, 006
Pilot .....004, 171	Viking .....174
Pioneer .....004, 006, 090	Wards .....000, 062, 095, 005, 004 .....046, 052, 006, 083, 001, 019 .....024, 033, 068, 069, 075, 076 .....087, 088, 119, 120
Portland .....016, 005, 171, 004, 006	Yamaha .....004, 005, 006, 019
Price Club .....105	Zenith .....051, 083, 004, 152 .....151, 153, 154, 217
Prism .....054	
Proscan .....000, 181	
Proton .....004, 006, 012, 093	
Pulsar .....151	
Pulser .....004	
Quasar .....003, 054, 070	
Radio Shack / Realistic .....000, 095, 171, 004, 038, 006, 012, 049, 162	
RCA .....000, 181, 100, 233, 203 .....212, 098, 005, 003, 004, 006	

## Programming For VCR


1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **VCR/DVD** button (The **INDICATOR LIGHT** will blink then remain lit).

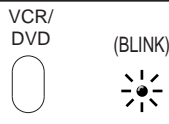

4. Enter the code using the Number Buttons.

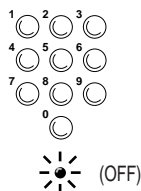

After your code is entered, the **INDICATOR LIGHT** will turn off.

## Programming For VCR Continued

5. Aim the remote at your VCR and press the **OFF/ON** button. Your VCR should turn off.




Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your VCR on, press **CHAN+**. If the VCR responds, no further programming is required.



7. Enter your code here for easy reference.

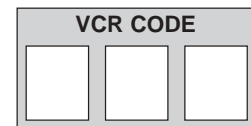

## VCR Code List

Admiral .....001	.....011, 016, 018
Adventura .....026	KLH .....061
Aiko .....027	Kodak .....014, 021
Aiwa .....026	LG (Goldstar).....014, 018, 054, 009
Akai.....008, 113, 112, 003, 005, 007, 111	Lloyd .....026
American High .....021	Logik .....061
Asha .....013	LXI .....014
Audio Dynamics .....009, 010	Magnavox .....022, 062, 104, 063 .....021, 108, 124
Audiovox .....014	Magnin .....013
Bell & Howell .....011	Marantz .....062, 011, 010, 016 .....009, 018, 021, 022, 064
Beaumarck .....013	Marta .....014
Broksnick .....025, 012	Matsushita .....021
Calix .....014	MEI .....021
Candle .....014, 013, 015	Memorex .....026, 014, 104, 001 .....011, 013, 021, 022, 023
Canon .....021, 022	MGA .....029, 065, 113
Capehart .....020, 110	MGN Tech. ....013
Carver .....062	Midland .....053
CCE .....027, 061	Minolta .....055, 056, 107
Citizen .....014, 013	Mitsubishi.....065, 055, 072, 029 .....056, 066, 067, 068 .....069, 070, 071, 073
ColorTyme .....009	Montgomery Ward .....074, 106, 113, 123
Colt .....061	Motorola .....001, 021
Craig .....013, 014, 023, 061	MTC .....013, 026
Curtis-Mathes .....022, 013, 115, 024, 000, 009, 016, 018, 021	Multitech .....013, 016, 026 .....053, 061
Cybermex .....013	NEC .....064, 076, 011, 010 .....079, 009, 018, 078 .....111, 123
Daewoo .....027, 025, 015, 017, 019 .....026, 028, 110	Nikko .....014
Daytron .....110	Noblex .....013
DBX .....009, 010	Olympus .....021
Dimensia .....000	Optimus .....001, 014
Dynatech .....026	Optonica.....096
Electrohome.....014, 029	Orion .....031
Electroponic .....014	Panasonic .....109, 021, 022, 125 .....126, 127 .....016, 055, 056 .....107, 120
Emerson .....014, 025, 026, 065 .....041, 015, 012, 021 .....024, 029, 030, 031 .....032, 033, 034, 036 .....037, 038, 039, 040 .....042, 044, 045, 046 .....047, 105, 113, 116 .....117, 130	Pentax .....016, 055, 056 .....107, 120
Fisher .....011, 023, 052, 048 .....049, 050, 051, 118	Pentax Research .....018
Fuji .....021, 119	Philco .....022, 062, 063, 021
Funai .....026	Philips .....062, 096, 022 .....021, 124
Garrard .....026	Pilot .....014
GE .....000, 022, 013, 115 .....053, 021, 120	Pioneer .....055, 010, 080 .....081, 123
Grandiente .....026	Portland .....016, 017, 019, 110
Harley Davidson .....026	ProScan .....000
Harman Kardon .....009	Protec .....061
Harwood .....061	Pulsar .....104
Headquarter .....011	Quarter .....011
Hitachi .....055, 120, 056, 057 .....107, 111	Quartz .....011
Hi-Q .....023	Quasar .....021, 022, 125
Instant Replay .....021	RCA .....000, 091, 087, 115 .....083, 088, 090, 089 .....055, 022, 091, 003 .....013, 021, 056, 082 .....084, 085, 086, 107, 120, 125
JCL .....021	Radio Shack / Realistic .....014, 001, 011, 013 .....023, 021, 026, 029 .....049, 050, 096
JC Penny .....014, 011, 022, 013 .....009, 118, 060, 107 .....010, 021	Radix .....014
Jensen .....055, 056, 111	
JVC .....009, 010, 011, 018 .....111, 123	
Kenwood .....009, 010, 123, 111	

## VCR Code List Continued

Randex.....014	.....065, 116
Ricoh.....128	Totevision.....013, 014
Runco.....104	TMK.....013, 024, 047
Samsung.....013, 015, 112, 053	Unitech.....013
.....055, 033	Vector Research.....009, 010
Sanky.....001, 104	.....015, 016
Sansui.....010, 092, 111, 123	Victor.....010
Sanyo.....011, 013, 023	Video Concepts.....009, 010
Scott.....025, 065, 015, 012	.....015, 016, 113
.....032, 038, 116	Videosonic.....013
Sears.....014, 055, 011, 023	Wards.....026, 022, 013, 055
.....118, 021, 028, 048	.....001, 061, 014, 015
.....049, 050, 051, 056, 107	.....021, 023, 029, 056
Sharp.....001, 095, 017, 029	.....096, 101, 102, 103
.....094, 096, 097	.....107, 116
Shintom.....056, 061, 098	XR-1000.....021, 026, 061
Shogun.....013	Yamaha.....009, 010, 011
Signature.....001	.....018, 111
Singer.....021, 061, 128	Zenith.....104, 119, 098, 128
Sony.....099, 119, 098	
STS.....021, 107	
Sylvania.....022, 062, 026, 065	
.....021, 063, 065, 124	
Symphonic.....026	
Tandy.....011	
Tashiko.....014	
Tatung.....111	
Teac.....026, 085, 111	
Technics.....021, 109	
Teknika.....026, 022, 014, 129	
.....021, 100	
Toshiba.....015, 055, 049, 051	

## Programming For DBS

Follow same instructions for programming Cable Box but use DBS code list.

The DBS codes are programmed using the DBS/CABLE key.

## DBS Code List

 
Alphastar.....079	Philips.....085
Echostar (Dish System).....089	Primestar.....076
Echosphere (Dish Net).....078	Proscan.....071, 080, 081
GE.....071, 080, 081	RCA.....071, 080, 081
Hitachi SYS I.....084	Sony.....072
Hitachi SYS II.....083	Toshiba.....073
Hughes.....083, 077, 090	Uniden.....086
Magnavox.....085	
JVC.....082	
Panasonic.....075	

## Programming For Cable Box


1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




 3. Press and release the **DBS/CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



## Programming For Cable Box Continued

4. Enter the code using the Number Buttons.

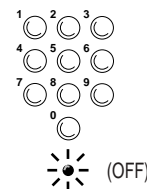

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **OFF/ON** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your Cable Box on, press **CHAN+**. If the Cable Box responds, no further programming is required.




7. Enter your code here for easy reference.

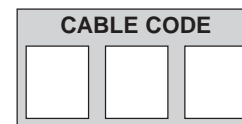

## Cable Box Code List

 
ABC.....001, 003, 004	Samsung.....034
.....005, 006, 007	Scientific Atlanta.....006, 036
Antronix.....008, 009	037, 038
Archer.....008, 009, 010, 011	Signal.....018
Cabletenna.....008	Signature.....003
Cableview.....008	Sprucer.....000
Century.....011	Standard Component.....039
Citizen.....011	Starcom.....001, 007, 018
Colour Voice.....012, 013	Stargate.....018
Comtronics.....015	Starquest.....018
Contec.....016	Tocom.....004, 023
Eastern.....017	Tusa.....018
Garrard.....011	TV86.....027
GC Electronics.....009	Unika.....008, 009, 011
Gemini.....018, 019	United Cable.....001
General Instru.....049, 001, 003	Universal.....008, 009, 010, 011
Hamlin.....035	View Star.....015, 016, 025, 027
Hitachi.....003	Zenith.....050, 051
Jasco.....011	
Jerrold.....049, 001, 003, 005	
.....007, 018, 023, 024, 046	
Magnavox.....025	
Movie Time.....027, 028	
NSC.....027, 028	
OAK.....029, 016	
Panasonic.....000, 048	
Philips.....011, 012, 013, 019	
.....025, 030, 031, 032	
Pioneer.....034, 033	
RCA.....047, 000, 049	
Realistic.....009	
Regal.....022, 035	
Regency.....017	
Rembrandt.....003	



## Programming For DVD

Follow same instructions for programming VCR but use DVD code list.

The DVD codes are programmed using the VCR/DVD key.

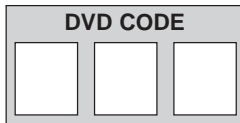


## DVD Code List

Aiwa .....	350	RCA .....	160
Hitachi .....	351	Sanyo .....	359
JVC .....	161, 352	Sony .....	166, 360, 361
Konka .....	353, 354	Toshiba .....	167, 362, 363
Magnavox .....	162, 356, 357	Zenith .....	364
Mitsubishi .....	163		
Panasonic .....	355		
Philips .....	162, 356, 357		
Pioneer .....	165		
ProScan .....	160		

## Programming With Code Search

If your TV, VCR, DVD, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.


1. Turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV, VCR/DVD** or **DBS/CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
4. Press and release **OFF/ON** until your device turns off.
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.

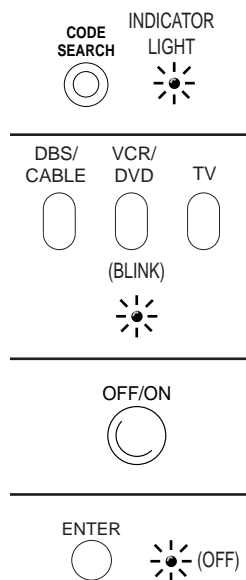


## Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DBS, DVD or Cable Box after your device is set-up using Code Search, use this procedure.

 
1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.



2. Press and release the device button for the device's code you are retrieving (**TV, VCR/DVD, or DBS/CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

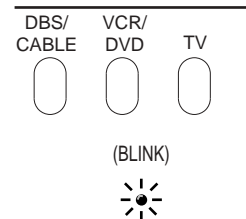

 3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.




4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.

 6. Repeat step 4 until you have retrieved all three numbers in the code.



## Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

### Entering the TV Menu Mode:

1. Push the **TV** button on the remote.
2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.

While in **TV MENU** these buttons will function as follows:

**VOL UP/DOWN** buttons will operate as **CURSOR RIGHT/LEFT**.

**CHAN+/-** keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan TVs pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.

Note: Not all functions in competitive models and brands of televisions may be fully supported.


### Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

#### Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.

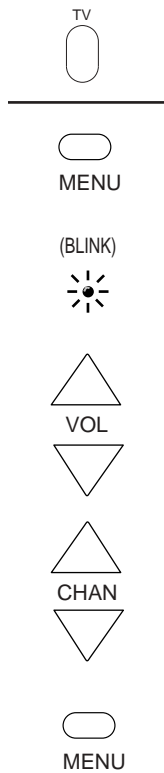

## DBS Menu Function

The DBS Menu is used to navigate thru the Guide screens, to make changes in the DBS settings such as channel lists, passwords, etc.

### Entering the DBS Menu Mode:

1. Push the **DBS•CABLE** button on the remote.
2. Push the **MENU** key.

This puts the remote in DBS Menu Mode. The DBS Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DBS Menu Mode.

While in **DBS MENU MODE** these buttons will function as follows:

**VOLUME UP/DOWN** button will operate as **CURSOR RIGHT/LEFT**.

**CH+/-** button will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan DBS systems pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of DBS systems may be fully supported.


### Exiting the DBS Menu Mode:

 
Push the **DBS•CABLE** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DBS Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DBS Menu Mode after 10 seconds of inactivity with no keys being pushed.

#### Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.

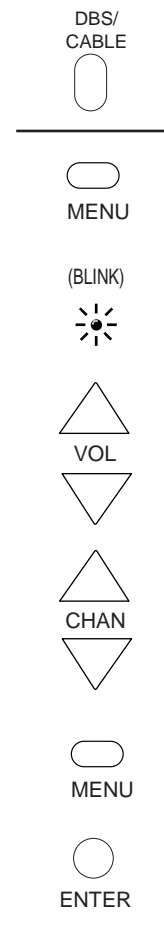



## DVD Menu Function

The DVD Menu is used to navigate thru the Navigation screens, to change settings such as language, sub-titles, etc.

### Entering the DVD Menu Mode:

1. Push the **VCR/DVD** button on the remote.
2. Push the **MENU** key.

This puts the remote in DVD Menu Mode. The DVD Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DVD Menu Mode.

While in DVD MENU MODE these buttons will function as follows:

**VOLUME UP/DOWN** button will operate as **CURSOR RIGHT/LEFT**.

**CH+/-** button will operate as **CURSOR UP/DOWN**.

Pushing the **ENTER** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice.

Note: Not all functions in competitive models and brands of DVD systems may be fully supported.

### Exiting the DVD Menu Mode:

Push the **VCR/DVD** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DVD Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DVD Menu Mode after 15 seconds of inactivity with no keys being pushed.

### Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.



## Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method (page 9).
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the <b>REC</b> button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required <b>ENTER</b> after a channel, press <b>ENTER</b> after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed. (See page 3).

Note: Reprogramming may be required after batteries are removed.

## Questions

Please visit [www.rca.com](http://www.rca.com)

## RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

### RC926 Wireless Phone Jack


**Turn Just About Any Electrical Outlet Into A Phone Jack Instantly**

Exclusive technology sends phone signal through the electrical wiring in your home.

*No Wiring, No Drilling, No Tools!*  
Installs In Two Simple Steps


#### STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

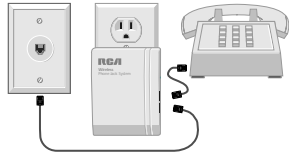

#### STEP 2

Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.

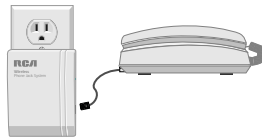

#### Works With:

- Corded Phones
- Cordless Phones
- Answering Machines
- Fax Machines
- Computer Modems

#### Compatible With:

- Call Waiting
- Call Forwarding
- Three-Way Calling
- Speed Dialing

RC926  
**\$79<sup>95</sup>**  
Plus Shipping/Handling & Sales Tax

### ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCA Amplified TV Antenna. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8¼ H. X 8½ W. X 4½ D.

ANT200  
**\$45<sup>95</sup>**  
Plus Shipping/Handling & Sales Tax



ANT200

## How To Order

**To order, see your local RCA retailer. Or:**

#### ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above-listed Accessories.

**1-800-338-0376**

#### ORDER BY MAIL:

Complete this order form and mail to:

**RCA Accessories**  
**PO Box 8419**  
**Ronks, PA 17573**

Include this completed form with your order.

Description	Model #	Price	Qty.	Total
Wireless Phone Jack	RC926	\$79.95		
Amplified TV Antenna	ANT200	\$45.95		
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				\$5.00
Total Amount Due				

Name: \_\_\_\_\_  
 Address: \_\_\_\_\_  
 City/State: \_\_\_\_\_  
 Zip: \_\_\_\_\_  
 Daytime Phone Number: \_\_\_\_\_

Check Enclosed                       Money Order Enclosed

Visa                                       MasterCard                       Discover

Card Number: \_\_\_\_\_  
 \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_

Exp: \_\_\_\_\_  
 Signature: \_\_\_\_\_

Shipping and handling is charged for all orders.

Please allow 4-6 weeks for mail orders.



## Limited 90 Day Warranty

Thomson multimedia Inc. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2001 Thomson multimedia Inc.  
Product Exchange Center  
11721 Alameda Ave.  
Socorro, TX 79927  
PRCU300 Rev0901

Trademark(s) ®Registered Marca(s) Registrada(s)  
Made in Indonesia  
[www.rca.com](http://www.rca.com)

**RCA**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>