



RCU704 Series **4 in 1 Universal Remote Control** **User's Guide**

Congratulations on your purchase of the RCU704. This user-friendly remote makes juggling multiple remote controls a thing of the past! This one unit controls up to four components, including the most popular brands of TV, VCR, DVD and DBS-CABLE equipment. The RCU704 is easy to use, easy to program, and it gives you total control—at the touch of your fingertips!

Série RCU704 **Télécommande Universelle 4 en 1** **Guide de L'utilisateur**

Nous vous félicitons d'avoir acheté la télécommande RCU704. Cette télécommande conviviale élimine les nombreuses télécommandes ennuyeuses! Cette seule télécommande commande jusqu'à quatre appareils, dont les marques les plus populaires de téléviseur, magnétoscope, DVD et DBS-CÂBLE. La RCU704 est facile à utiliser, facile à programmer et vous donne le plein contrôle—au bout des doigts!

RCU704 Series **Control Remoto Universal 4 en 1** **Manual del Usuario**

Felicitaciones por la compra del RCU704. ¡Este amigable control remoto convierte a los malabarismos con los múltiples controles remotos en una cosa del pasado! Esta unidad controla hasta cuatro componentes, incluyendo las más populares marcas de TV, VCR, DVD y equipos de DBS-CABLE. El RCU704 es fácil de utilizar, fácil de programar y le pone el control al alcance de su mano.

©2004 THOMSON INC.
10330 N. Meridian Street
Indianapolis, IN 46290

Made in Indonesia.
Fabriqué en Indonésie.
Hecho en Indonesia.

RCU704SP, RCU704SP2, RCU704MSP2 NA IB REVA
R532J REV8

Trademarks ® Registered.
Marques ® déposées.
Marcas registradas ®.

Battery Installation

Your RCU704 universal remote requires 2 new AAA alkaline batteries (sold separately).

To install the batteries:

1. Turn the unit over, and remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

Note: Reprogramming may be required after batteries are removed.

Programming with Direct Entry

To program your remote to control up to four components, follow these steps:

 
1. Manually turn on the component you wish to program the remote to operate.
2. Find the three-digit code for your brand of TV, VCR, DVD, satellite receiver or cable box in the enclosed code lists.
3. Press and hold the **CODE SEARCH** key until the indicator light turns on.
4. Release the **CODE SEARCH** key.
5. Press and release the **TV**, **VCR** or **DBS-CABLE** key. The indicator light blinks and then remains lit.

Note: DBS references satellite receiver.

To program the DVD-AUX key: Press the **DVD-AUX** key. The indicator light continues to blink until you select the component you want the **DVD-AUX** key to control. To control a DVD, press the **VCR** key. To control a TV, press the **TV** key. To control a satellite receiver or cable box, press the **DBS-CABLE** key. The indicator light stops blinking and remains lit.

6. Enter the three-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.
7. Aim the remote at the component and press the **OFF-ON** key. The component should turn off.

Note: If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the Code Search Method that follows.

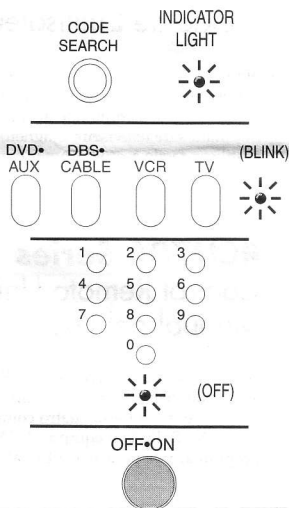

Programming With Code Search

If your TV, VCR, DVD, satellite receiver or cable box does not respond after you have tried all the codes for your brands, or if your brand is not listed, try searching for your code via the Code Search Entry Method. To program your remote via the Code Search Entry Method, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light turns on.
3. Release the **CODE SEARCH** key.
4. Press and release the component key you wish the remote to control—**TV, VCR** or **DBS-CABLE** key. The indicator light blinks once and remains lit.

To program the DVD·AUX key: Press the **DVD·AUX** key, followed by the component key you wish the **DVD·AUX** key to control. For DVD, press the **DVD·AUX** key, followed by the **VCR** key. For an auxiliary component, press the **DVD·AUX** key, followed by the corresponding component key (**TV, VCR, DBS-CABLE**).

5. Press and release the **OFF·ON** key until the component turns off.

Important: You may have to press the **OFF·ON** key up to 200 times.

6. When the component turns off, press the **ENTER** key. The indicator light turns off.

CODE
SEARCH



INDICATOR
LIGHT



DVD·
AUX



DBS·
CABLE



VCR



TV



(BLINK)



OFF·ON



ENTER



(OFF)

Menu Function – TV, VCR, DVD, DBS

The Menu function on your remote is used to make changes on selected settings. The **MENU** key operates in TV, VCR, DVD and DBS Modes. Each menu varies from brand to brand.

The TV Menu is used to make changes in the TV settings, such as changing color, channels and timers. The DBS Menu navigates through the Guide screens, to make changes in the DBS settings, such as channel lists and passwords. The VCR and DVD Menu makes changes through the Navigation screens, such as languages and subtitles.

While in Menu Mode, these keys function as follows:

Mode	Vol up/ down	Ch +/-
TV	Cursor moves right/left	Cursor moves up/down
VCR	Cursor moves right/left	Cursor moves up/down
DVD	Cursor moves right/left	Cursor moves up/down
DBS	Cursor moves right/left	Cursor moves up/down

 
Using Menu Functions

To use the Menu function, follow these steps:

1. Press the component button whose menu you wish to access (**TV**, **VCR**, **DVD-AUX** or **DBS-CABLE**).
2. Press the **MENU** key. The menu of the chosen component is shown.

Note: Some functions of some brands may not be fully supported.

3. To exit the menu mode press the corresponding component key on the remote (**TV**, **VCR**, **DVD-AUX** or **DBS-CABLE**).

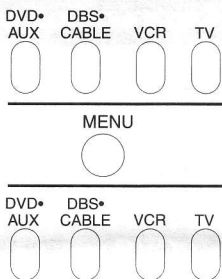


Special Notes for Menu Use

1. In the Menu Mode of RCA, GE and PROSCAN TVs, pressing the **MENU** key selects the highlighted item. The numeric keys may also be used to select the menu choice.
2. For SONY components, pressing the **ENTER** key while in Menu Mode returns to the previous menu.

Sleep Feature

The RCU704 has a **SLEEP** key, which automatically turns off your TV at a duration you choose from 1 to 99 minutes. To set the Sleep Timer, follow these steps:

 1. Press and hold the **SLEEP** key. The indicator light turns on and remains lit.
2. Release the **SLEEP** key.
3. Enter the desired time in minutes on the numeric keypad. (For minutes 1-9, press 0 before the actual number). The indicator light turns off. The maximum time for the Sleep Feature is 99 minutes.
4. Leave the remote aimed at the TV. The Sleep Feature will not work unless the remote is aimed at the TV.

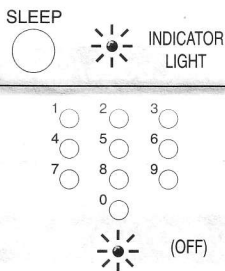

90 Day Limited Warranty

Our company (in the U.S., THOMSON INC./In Canada, Thomson multimedia Ltd.) warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. For a prompt, no charge replacement of equivalent product, return the defective product postage prepaid to the appropriate address.

In the US:
Product Exchange Center
11721 Alameda Avenue
Socorro, TX 79927

In Canada:
Thomson multimedia Ltd.
6200 Edwards Boulevard
Mississauga, Ontario Canada L5T 2V7

This replacement is the company's sole obligation under this warranty. THOMSON INC./ Thomson multimedia Ltd. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state/province to province.

Garantía Limitada por 90 Días

Nuestra compañía (THOMSON INC., en los Estados Unidos/ Thomson multimedia Ltd., en Canadá) garantiza que por 90 días a partir de la fecha de compra, repondrá este producto si se encuentra con defectos en el material o la fabricación. Para obtener una rápida restitución sin cargos de un producto equivalente, devuelva el producto defectuoso con el importe postal prepago a la dirección correspondiente.

En los Estados Unidos:
Product Exchange Center
11721 Alameda Avenue
Socorro, TX 79927

En Canadá:
Thomson multimedia Ltd.
6200 Edwards Boulevard
Mississauga, Ontario Canada L5T 2V7

Esta restitución es la única responsabilidad de la compañía bajo esta garantía. THOMSON INC./Thomson multimedia Ltd. no será responsable por ningún daño imprevisto o consiguiente, o por cualquier pérdida que surja en conexión al uso o inhabilidad de usar este producto. Algunos estados / provincias no permiten la exclusión o limitación de daños imprevistos o consiguientes, así que la limitación o exclusión antes mencionada podría no aplicarle a usted. Esta garantía excluye los defectos o daños originados por maltrato, abuso o negligencia. Esta garantía le otorga derechos legales específicos, y usted podría también tener otros derechos, los cuales varían de un estado a otro, o de una provincia a otra.

TV Codes/Codes de Téléviseur/ Códigos de TV

Abex	172
Admiral	001, 046, 047, 083, 095, 173, 191
Adventura	174
Aiko	016
Akai	002
Alleron	046, 047
Amtron	038
Anam National	003, 038
AOC	004, 005, 006, 007, 082
Apex	236
Audiovox	038
Belcor	004
Bell & Howell	001, 048, 049, 073, 083, 162
Bradford	038
Broksonic	000, 004, 239
Brokwood	004
Candle	004, 006, 008, 174
Celebrity	002
Citizen	004, 006, 008, 016, 038, 105, 132, 171, 174, 177, 191
Colortyme	004, 006
Concerto	004, 006
Contec/Cony	012, 013, 038, 063
Craig	038
Crosley	000, 062
Crown	038, 062, 130, 171
Curtis Mathes	000, 004, 006, 015, 048, 049, 073, 105, 162, 171, 212
CXC	038
Daewoo	004, 005, 006, 016, 017, 082, 171, 190
Daytron	004, 006, 171
Dimensia	000, 212
Dumont	004, 151, 217
Dynatech	004
Electroband	002
Electrohome	000, 002, 003, 004, 006, 019, 022, 064
Emerson	004, 006, 012, 023, 025, 026, 029, 030, 033, 035, 036, 037, 038, 041, 042, 043, 046, 047, 048, 049, 073, 123, 162, 171, 177, 179, 191
Envision	004, 006
Fisher	048, 049, 051, 073, 162, 180
Fujitsu	046, 047
Funai	038, 046, 047, 189
Futuretec	038
GE	000, 003, 004, 006, 022, 052, 054, 055, 064, 087, 100, 165, 166, 167, 181, 203, 212, 233
Gibraltar	004, 151
Goldstar	004, 005, 006, 012, 019, 056, 082, 155, 156, 171, 172

Grundy	038, 046, 047, 171
Hallmark	004, 006
Harvard	038
Hisense	237
Hitachi	004, 006, 012, 013, 059, 060, 063, 135, 136, 145, 148, 179, 185
IMA	038
Infinity	062, 130
Janeil	174
JBL	062, 130
JCB	002
JC Penney	000, 004, 005, 006, 008, 013, 022, 052, 054, 055, 063, 064, 072, 082, 087, 100, 104, 105, 109, 132, 166, 167, 171, 172, 181, 203, 212, 233
Jensen	004, 006
JVC	012, 013, 054, 055, 060, 063, 065, 066, 123, 157, 159, 242
Kawasho	002, 004, 006
Kenwood	004, 006, 019
Kloss Novabeam	038, 068, 069, 174, 183
KTV	038, 070, 171, 177
LG	005, 082
Loewe	062, 130
Logik	001, 083
Luxman	004, 006
LXI	000, 006, 048, 049, 062, 072, 073, 100, 109, 130, 162, 181, 203, 212, 233
Magnavox	000, 004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 133, 134, 183, 219, 235
Majestic	001, 083
Marantz	004, 006, 059, 062, 130
Megatron	006, 059
Memorex	001, 005, 006, 046, 047, 048, 049, 073, 082, 083, 162, 191
MGA	004, 005, 006, 019, 022, 051, 064, 079, 080, 082
Midland	054, 055, 151, 171, 172, 181
Minut	052
Mitsubishi	004, 005, 006, 019, 022, 051, 064, 079, 080, 082, 125, 135
Montgomery Ward	001, 083
Motorola	003, 173
MTC	004, 005, 006, 082, 105
Multitech	038
NAD	006, 072, 109, 136, 185
NEC	003, 004, 005, 006, 082
Nikko	006, 016
NTC	016

TV Codes Continued/Suite Codes de Téléviseur Continúo Códigos de TV

Onwa.....	038	Sharp.....	004, 006, 012, 026, 029, 095,
Optimus.....	136, 185	111, 112, 171, 173
Optonica.....	095, 173	Shogun.....	004
Orion.....	030, 035, 191	Signature.....	001, 083, 173
Panasonic.....	003, 054, 055, 062, 109, 130, 170	Simpson.....	008
Philco.....	003, 004, 005, 006, 008, 012, 019, 062, 068,	Sony.....	002, 218
.....	069, 075, 077, 082, 088, 130, 132, 134, 183	Soundesign.....	004, 006, 008, 038, 046, 047, 132
Philips.....	002, 003, 004, 008, 012, 019, 062, 068, 069,	Squareview.....	189
.....	075, 076, 087, 088, 130, 132, 134, 167, 183	SSS.....	004, 038
Pilot.....	004, 171	Starlite.....	038
Pioneer.....	004, 006, 136, 179, 185	Supre-Macy.....	174
Portland.....	004, 005, 006, 016, 082, 171	Supreme.....	002
Price Club.....	105	Sylvania.....	004, 006, 008, 019, 062, 068, 069, 075,
Prima.....	238	076, 077, 088, 130, 132, 134, 183, 189
Prism.....	054, 055	Symphonic.....	026, 029, 033, 038, 046, 047, 155, 189
PROSCAN.....	000, 100, 181, 203, 212, 233	Tandy.....	173
Proton.....	004, 006, 012	Tashiko.....	072
Pulsar.....	151	Tatung.....	003
Pulser.....	004	Technics.....	054, 055
Quasar.....	003, 054, 055, 070, 109, 170	Techwood.....	004, 006, 054, 055
RadioShack.....	000, 048, 049, 073, 162, 212	Teknika.....	001, 004, 005, 006, 008, 012, 013,
RadioShack/Realistic.....	004, 006, 012, 038, 048, 049,	016, 038, 046, 047, 063, 076, 082,
.....	073, 095, 162, 171, 172	083, 105, 132, 170, 171
RCA.....	000, 003, 004, 005, 006, 007, 019,	Tera.....	004, 012
.....	054, 055, 082, 096, 098, 099, 100,	TMK.....	004, 006
.....	101, 102, 103, 129, 179, 181, 188,	Toshiba.....	000, 048, 049, 072, 073, 105,
.....	190, 203, 212, 233, 240	109, 118, 160, 162, 190, 241
Runco.....	151, 217	Totevision.....	171
Sampo.....	004, 006, 171, 172	Universal.....	052, 087, 166, 167
Samsung.....	004, 005, 006, 012, 013, 015, 017,	Victor.....	066
.....	019, 082, 104, 105, 106, 171, 172	Vidtech.....	004, 005, 006
Sansui.....	191	Viking.....	174
Sanyo.....	004, 048, 049, 073, 080, 162, 169, 180	Wards.....	000, 001, 004, 005, 006, 019, 033,
Scotch.....	006	046, 047, 052, 062, 068, 069, 075,
Scott.....	004, 006, 012, 035, 038, 046, 047	076, 082, 083, 087, 088, 095, 130,
Sears.....	000, 004, 006, 013, 019, 046, 047, 048, 049,	134, 166, 167, 173, 183, 212
.....	051, 063, 066, 072, 073, 100, 109, 110,	White Westinghouse.....	000, 001, 190, 191
.....	162, 180, 181, 189, 203, 212, 233	Yamaha.....	004, 005, 006, 019, 082
.....		Zenith.....	000, 001, 004, 051, 083, 151, 152, 154, 217

VCR Codes/Codes de Magn/Códigos de VCR

Admiral.....	001	Garrard.....	026
Adventure.....	026	GE.....	000, 013, 021, 022, 053, 087, 091, 115, 120
Aiko.....	027	Go Video.....	131, 138
Aiwa.....	026	Goldstar.....	009, 014, 018, 054, 057
Akai.....	003, 007, 111, 112, 119	Gradiente.....	026
American High.....	021	Harley Davidson.....	026
Asha.....	013	Harman Kardon.....	009
Audio Dynamics.....	009, 010	Harwood.....	061
Audiovox.....	014, 054	Headquarter.....	011
Beaumarck.....	013	Hitachi.....	026, 055, 056, 057, 084, 107, 111, 120
Bell & Howell.....	011	Hi-Q.....	023
Broksonic.....	012, 025, 031	Instant Replay.....	021
Calix.....	014, 054	JCL.....	021
Candle.....	013, 014, 015, 016, 017, 018, 019	JC Penney.....	009, 010, 011, 012, 013, 014, 021, 022,
Canon.....	021, 022	051, 054, 055, 056, 061, 062, 084, 107, 118
Capehart.....	110	Jensen.....	055, 056, 084, 111
Carver.....	062	JVC.....	009, 010, 011, 018, 111, 123, 132
CCE.....	027, 061	Kenwood.....	009, 010, 011, 016, 018, 111, 123
Citizen.....	013, 014, 015, 016, 017, 018, 019, 027, 054	KLH.....	061
Colortyme.....	009	Kodak.....	014, 021, 054
Colt.....	061	LG.....	014, 054
Craig.....	013, 014, 023, 054, 061	Lloyd.....	026
Curtis Mathes.....	000, 009, 013, 016, 018,	Logik.....	061
.....	021, 022, 024, 087, 091, 115	LXI.....	014, 054
Cybermex.....	013	Magnavox.....	021, 022, 062, 063, 104, 124
Daewoo.....	015, 017, 019, 025, 026, 027, 110	Magnin.....	013
Daytron.....	061, 110	Marantz.....	009, 010, 011, 016, 018, 021, 022, 062
DBX.....	009, 010	Marta.....	014
Dimensia.....	000	Matsushita.....	021
Dynatech.....	026	MEI.....	021
Electrohome.....	014, 029, 054	Memorex.....	001, 011, 013, 014, 021, 022,
Electrophonic.....	014	023, 026, 031, 054, 104, 130
Emerson.....	003, 007, 012, 014, 015, 021, 024,	MGA.....	029, 065
.....	025, 026, 029, 031, 032, 033, 038, 041,	MGN Tech.....	013
.....	054, 065, 116, 130	Midland.....	053
Fisher.....	011, 023, 049, 051, 118	Minolta.....	055, 056, 084, 107
Fuji.....	021, 119	Mitsubishi.....	029, 055, 056, 065, 066, 084, 123
Funai.....	026	Montgomery Ward.....	001

VCR Codes Continued/Suite Codes de Magn/ Continúo Códigos de VCR

Motorola	001, 021	Samsung	013, 015, 033, 053, 055, 112, 134
MTC	013, 026	Sanky	001, 104
NEC	009, 010, 011, 018, 111, 123	Sansui	010, 031, 111, 123, 130
Nikko	014, 054	Sanyo	011, 013, 023, 135
Noblex	013	Scott	012, 015, 025, 032, 038, 065, 116
Olympus	021	Sears	000, 011, 014, 021, 023, 026, 049, 051, 054, 055, 056, 084, 107, 118
Optimus	001, 014, 054	Sharp	001, 017, 029, 096
Optonica	096	Shintom	056, 061, 084, 098, 119
Orion	000, 031, 130	Shogun	013
Panasonic	021, 022, 109, 125, 127	Signature	001
Pentax	016, 055, 056, 084, 107, 120	Singer	021, 061, 128
Pentax Research	018	Sony	098, 099, 119
Philco	021, 022, 062, 063	STS	021, 107
Philips	021, 022, 062, 096, 124, 136	Sylvania	021, 022, 026, 062, 063, 065, 124
Pilot	014	Symphonic	026
Pioneer	010, 055, 123	Tandy	011
Portland	016, 017, 019, 110	Tashiko	014, 054
PROSCAN	000	Tatung	111
Protec	061	Teac	026, 085, 111
Pulsar	104	Technics	021, 109
Quarter	011	Teknika	014, 021, 022, 026, 054, 100
Quartz	011	Toshiba	015, 049, 051, 055, 065, 113, 116, 118
Quasar	021, 022, 125	Totevision	013, 014, 054
RadioShack	001, 014, 054, 096	TMK	013, 024
RadioShack/Realistic	011, 013, 014, 021, 022, 023, 026, 029, 049, 054, 096	Unitech	013
Radix	014, 054	Vector Research	009, 010, 015, 016
Randex	014	Victor	010
RCA	000, 003, 007, 013, 021, 022, 055, 056, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 100, 107, 115, 120, 125, 133	Video Concepts	009, 010, 015, 016
Realistic	001, 011, 013, 014, 015, 021, 022, 023, 026, 029, 049, 054, 096	Videosonic	013
Ricoh	128	Wards	001, 013, 014, 015, 021, 022, 023, 026, 029, 054, 055, 056, 061, 084, 088, 090, 096, 107, 116
Runco	104	XR-1000	021, 026, 061
		Yamaha	009, 010, 011, 018, 111
		Zenith	026, 098, 104, 119, 128, 130, 137

PVR* Codes/Codes de PVR*/Códigos de PVR*

RePlay	139	Tivo	140
--------------	-----	------------	-----

*PVR's are programmed under the VCR+DVD or VCR key.
*Les PVR sont programmés à la touche VCR+DVD, VCR ou DVD+MUX.
*Los PVR están programados bajo la tecla VCR+DVD o DVD+MUX.

DVD Codes/Codes de DVD/Códigos de DVD

Aiwa	350	Onkyo	147
Apex	383, 384, 389	Oritron	152
Broksonic	379	Panasonic	148, 355
Daewoo	385	Philips	162, 356, 357, 358, 371, 377
Emerson	386, 387	Pioneer	149, 150, 165
Funai	387	PROSCAN	160
Go Video	372	Qwestar	152
Hitachi	141, 351	RCA	153, 160, 374, 380, 382
JVC	146, 161, 352, 373	Samsung	154, 155, 368, 375
Kenwood	142	Sansui	168
Konka	353, 354	Sanyo	359, 376
Magnavox	143, 162, 357, 358	Sharp	156, 158, 369
Memorex	144	Sony	157, 159, 164, 166, 360, 361
Mintek	145	Sylvania	387
Mitsubishi	163	Toshiba	167, 169, 362, 363, 365, 368, 381
NAD	386	Zenith	364, 367, 378

TV·DVD Combo Codes/Codes de TV·DVD Combinés/Combinación de Códigos TV·DVD

	TV	DVD
Broksonic	239	379
RCA	240	380
Toshiba	241	381

VCR·DVD Combo Codes/Codes de Magn·DVD Combinés/Combinación de Códigos VCR·DVD

	VCR	DVD
Go Video	131	372
JVC	132	373
Philips	136	377
RCA	133	374
Samsung	134	375
Sanyo	135	376
Zenith	137	378

Portable DVD Codes/Codes de lecteur DVD portable/Códigos para DVD Portátil

RCA	382
-----------	-----

Satellite Codes/Codes de Satellite/ Códigos de Satélite

Alphastar	079	Motorola	047, 071
Dish Network	078	Panasonic	075
Echostar	089	Philips	085
Express Vu	091	Primostar	076
GE	047, 071, 080, 081	PROSCAN	047, 071, 080, 081
Hitachi	083, 084	RCA	047, 071, 080, 081
Hughes Network Systems	077, 083, 090	Sony	072
JVC	082	Star Choice	092
Magnavox	085	Toshiba	073
		Uniden	086

Cable Codes/Codes de câblodélecteur/ Códigos para Cable

ABC	001, 003, 004, 005, 006	Philips	011, 012, 025
Antronix	008, 009	Pioneer	033, 034
Archer	008, 009, 011	PROSCAN	003
Cabletenna	008	RCA	000, 049
Cableview	008	Realistic	009
Century	011	Regal	022, 035
Citizen	011	Regency	017
Colour Voice	012	Rembrandt	003
Eastern	017	Samsung	034
Garrard	011	Scientific Atlanta	006, 036, 037, 038
GC Electronics	009	Signal	018
GE	000, 003	Signature	003
Gemini	018	Sprucer	000
General Instruments	000, 001, 003, 046, 049	Starcom	001, 018
Hamlin	020, 021, 022, 035	Stargate	018
Hitachi	003	Starquest	018
Jasco	011	Tocom	004, 023
Jerrold	000, 001, 003, 005, 018, 023, 046, 049	Tusa	018
Magnavox	025	TV86	027
Motorola	000, 003, 046	Unika	008, 009, 011
Movie Time	027	United Cable	001
NEC	005	Universal	008, 009, 011
NSC	027	View Star	025, 027
Panasonic	000, 048	Zenith	000, 050, 051

Garantía Limitada por 90 Días

Nuestra compañía (THOMSON INC., en los Estados Unidos/ Thomson multimedia Ltd., en Canadá) garantiza que por 90 días a partir de la fecha de compra, repondrá este producto si se encuentra con defectos en el material o la fabricación. Para obtener una rápida restitución sin cargos de un producto equivalente, devuelva el producto defectuoso con el importe postal prepago a la dirección correspondiente.

En los Estados Unidos:
Product Exchange Center
11721 Alameda Avenue
Socorro, TX 79927

En Canadá:
Thomson multimedia Ltd.
6200 Edwards Boulevard
Mississauga, Ontario Canada L5T 2V7

Esta restitución es la única responsabilidad de la compañía bajo esta garantía. THOMSON INC./Thomson multimedia Ltd. no será responsable por ningún daño imprevisto o consiguiente, o por cualquier pérdida que surja en conexión al uso o inhabilidad de usar este producto. Algunos estados / provincias no permiten la exclusión o limitación de daños imprevistos o consiguientes, así que la limitación o exclusión antes mencionada podría no aplicarle a usted. Esta garantía excluye los defectos o daños originados por maltrato, abuso o negligencia. Esta garantía le otorga derechos legales específicos, y usted podría también tener otros derechos, los cuales varían de un estado a otro, o de una provincia a otra.

TV Codes/Codes de Téléviseur/ Códigos de TV

Abex	172
Admiral	001, 046, 047, 083, 095, 173, 191
Advertura	174
Aiko	016
Akai	002
Alleron	046, 047
Amtron	038
Anam National	003, 038
AOC	004, 005, 006, 007, 082
Apex	236
Audiovox	038
Belcor	004
Bell & Howell	001, 048, 049, 073, 083, 162
Bradford	038
Broksonic	000, 004, 239
Brokwood	004
Candle	004, 006, 008, 174
Celebrity	002
Citizen	004, 006, 008, 016, 038, 105, 132, 171, 174, 177, 191
Colortyme	004, 006
Concerto	004, 006
Contec/Cony	012, 013, 038, 063
Craig	038
Crosley	000, 062
Crown	038, 062, 130, 171
Curtis Mathes	000, 004, 006, 015, 048, 049, 073, 105, 162, 171, 212
CXC	038
Daewoo	004, 005, 006, 016, 017, 082, 171, 190
Daytron	004, 006, 171
Dimensia	000, 212
Dumont	004, 151, 217
Dynatech	004
Electroband	002
Electrohome	000, 002, 003, 004, 006, 019, 022, 064
Emerson	004, 006, 012, 023, 025, 026, 029, 030, 033, 035, 036, 037, 038, 041, 042, 043, 046, 047, 048, 049, 073, 123, 162, 171, 177, 179, 191
Envision	004, 006
Fisher	048, 049, 051, 073, 162, 180
Fujitsu	046, 047
Funai	038, 046, 047, 189
Futuretec	038
GE	000, 003, 004, 006, 022, 052, 054, 055, 064, 087, 100, 165, 166, 167, 181, 203, 212, 233
Gibraltar	004, 151
Goldstar	004, 005, 006, 012, 019, 056, 082, 155, 156, 171, 172

Grundy	038, 046, 047, 171
Hallmark	004, 006
Harvard	038
Hisense	237
Hitachi	004, 006, 012, 013, 059, 060, 063, 135, 136, 145, 148, 179, 185
IMA	038
Infinity	062, 130
Janeil	174
JBL	062, 130
JCB	002
JC Penney	000, 004, 005, 006, 008, 013, 022, 052, 054, 055, 063, 064, 072, 082, 087, 100, 104, 105, 109, 132, 166, 167, 171, 172, 181, 203, 212, 233
Jensen	004, 006
JVC	012, 013, 054, 055, 060, 063, 065, 066, 123, 157, 159, 242
Kawasho	002, 004, 006
Kenwood	004, 006, 019
Kloss Novabeam	038, 068, 069, 174, 183
KTV	038, 070, 171, 177
LG	005, 082
Loewe	062, 130
Logik	001, 083
Luxman	004, 006
LXI	000, 006, 048, 049, 062, 072, 073, 100, 109, 130, 162, 181, 203, 212, 233
Magnavox	000, 004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 133, 134, 183, 219, 235
Majestic	001, 083
Marantz	004, 006, 059, 062, 130
Megatron	006, 059
Memorex	001, 005, 006, 046, 047, 048, 049, 073, 082, 083, 162, 191
MGA	004, 005, 006, 019, 022, 051, 064, 079, 080, 082
Midland	054, 055, 151, 171, 172, 181
Minut	052
Mitsubishi	004, 005, 006, 019, 022, 051, 064, 079, 080, 082, 125, 135
Montgomery Ward	001, 083
Motorola	003, 173
MTC	004, 005, 006, 082, 105
Multitech	038
NAD	006, 072, 109, 136, 185
NEC	003, 004, 005, 006, 082
Nikko	006, 016
NTC	016

TV Codes Continued/Suite Codes de Téléviseur Continúo Códigos de TV

Onwa.....	038
Optimus.....	136, 185
Optonica.....	095, 173
Orion.....	030, 035, 191
Panasonic.....	003, 054, 055, 062, 109, 130, 170
Philco.....	003, 004, 005, 006, 008, 012, 019, 062, 068, 069, 075, 077, 082, 088, 130, 132, 134, 183
Philips.....	002, 003, 004, 008, 012, 019, 062, 068, 069, 075, 076, 087, 088, 130, 132, 134, 167, 183
Pilot.....	004, 171
Pioneer.....	004, 006, 136, 179, 185
Portland.....	004, 005, 006, 016, 082, 171
Price Club.....	105
Prima.....	238
Prism.....	054, 055
PROSCAN.....	000, 100, 181, 203, 212, 233
Proton.....	004, 006, 012
Pulsar.....	151
Pulser.....	004
Quasar.....	003, 054, 055, 070, 109, 170
RadioShack.....	000, 048, 049, 073, 162, 212
RadioShack/Realistic.....	004, 006, 012, 038, 048, 049, 073, 095, 162, 171, 172
RCA.....	000, 003, 004, 005, 006, 007, 019, 054, 055, 082, 096, 098, 099, 100, 101, 102, 103, 129, 179, 181, 188, 190, 203, 212, 233, 240
Runco.....	151, 217
Sampo.....	004, 006, 171, 172
Samsung.....	004, 005, 006, 012, 013, 015, 017, 019, 082, 104, 105, 106, 171, 172
Sansui.....	191
Sanyo.....	004, 048, 049, 073, 080, 162, 169, 180
Scotch.....	006
Scott.....	004, 006, 012, 035, 038, 046, 047
Sears.....	000, 004, 006, 013, 019, 046, 047, 048, 049, 051, 063, 066, 072, 073, 100, 109, 110, 162, 180, 181, 189, 203, 212, 233

Sharp.....	004, 006, 012, 026, 029, 095, 111, 112, 171, 173
Shogun.....	004
Signature.....	001, 083, 173
Simpson.....	008
Sony.....	002, 218
Soundesign.....	004, 006, 008, 038, 046, 047, 132
Squareview.....	189
SSS.....	004, 038
Starlite.....	038
Supre-Macy.....	174
Supreme.....	002
Sylvania.....	004, 006, 008, 019, 062, 068, 069, 075, 076, 077, 088, 130, 132, 134, 183, 189
Symphonic.....	026, 029, 033, 038, 046, 047, 155, 189
Tandy.....	173
Tashiko.....	072
Tatung.....	003
Technics.....	054, 055
Techwood.....	004, 006, 054, 055
Teknika.....	001, 004, 005, 006, 008, 012, 013, 016, 038, 046, 047, 063, 076, 082, 083, 105, 132, 170, 171
Tera.....	004, 012
TMK.....	004, 006
Toshiba.....	000, 048, 049, 072, 073, 105, 109, 118, 160, 162, 190, 241
Totevision.....	171
Universal.....	052, 087, 166, 167
Victor.....	066
Vidtech.....	004, 005, 006
Viking.....	174
Wards.....	000, 001, 004, 005, 006, 019, 033, 046, 047, 052, 062, 068, 069, 075, 076, 082, 083, 087, 088, 095, 130, 134, 166, 167, 173, 183, 212
White Westinghouse.....	000, 001, 190, 191
Yamaha.....	004, 005, 006, 019, 082
Zenith.....	000, 001, 004, 051, 083, 151, 152, 154, 217

VCR Codes/Codes de Magn/Códigos de VCR

Admiral.....	001
Adventura.....	026
Aiko.....	027
Aiwa.....	026
Akai.....	003, 007, 111, 112, 119
American High.....	021
Asha.....	013
Audio Dynamics.....	009, 010
Audiovox.....	014, 054
Beaumarck.....	013
Bell & Howell.....	011
Broksonic.....	012, 025, 031
Calix.....	014, 054
Candle.....	013, 014, 015, 016, 017, 018, 019
Canon.....	021, 022
Capehart.....	110
Carver.....	062
CCE.....	027, 061
Citizen.....	013, 014, 015, 016, 017, 018, 019, 027, 054
Colortyme.....	009
Colt.....	061
Craig.....	013, 014, 023, 054, 061
Curtis Mathes.....	000, 009, 013, 016, 018, 021, 022, 024, 087, 091, 115
Cybermex.....	013
Daewoo.....	015, 017, 019, 025, 026, 027, 110
Daytron.....	061, 110
DBX.....	009, 010
Dimensia.....	000
Dynatech.....	026
Electrohome.....	014, 029, 054
Electroponic.....	014
Emerson.....	003, 007, 012, 014, 015, 021, 024, 025, 026, 029, 031, 032, 033, 038, 041, 054, 065, 116, 130
Fisher.....	011, 023, 049, 051, 118
Fuji.....	021, 119
Funai.....	026

Garrard.....	026
GE.....	000, 013, 021, 022, 053, 087, 091, 115, 120
Go Video.....	131, 138
Goldstar.....	009, 014, 018, 054, 057
Gradiente.....	026
Harley Davidson.....	026
Harman Kardon.....	009
Harwood.....	061
Headquarter.....	011
Hitachi.....	026, 055, 056, 057, 084, 107, 111, 120
Hi-Q.....	023
Instant Replay.....	021
JCL.....	021
JC Penney.....	009, 010, 011, 012, 013, 014, 021, 022, 051, 054, 055, 056, 061, 062, 084, 107, 118
Jensen.....	055, 056, 084, 111
JVC.....	009, 010, 011, 018, 111, 123, 132
Kenwood.....	009, 010, 011, 016, 018, 111, 123
KLH.....	061
Kodak.....	014, 021, 054
LG.....	014, 054
Lloyd.....	026
Logik.....	061
LXI.....	014, 054
Magnavox.....	021, 022, 062, 063, 104, 124
Magnin.....	013
Marantz.....	009, 010, 011, 016, 018, 021, 022, 062
Marta.....	014
Matsushita.....	021
MEI.....	021
Memorex.....	001, 011, 013, 014, 021, 022, 023, 026, 031, 054, 104, 130
MGA.....	029, 065
MGN Tech.....	013
Midland.....	053
Minolta.....	055, 056, 084, 107
Mitsubishi.....	029, 055, 056, 065, 066, 084, 123
Montgomery Ward.....	001

VCR Codes Continued/Suite Codes de Magn/ Continúo Códigos de VCR

Motorola001, 021
MTC013, 026
NEC009, 010, 011, 018, 111, 123
Nikko014, 054
Noblex013
Olympus021
Optimus001, 014, 054
Optonica096
Orion000, 031, 130
Panasonic021, 022, 109, 125, 127
Pentax016, 055, 056, 084, 107, 120
Pentax Research018
Philco021, 022, 062, 063
Philips021, 022, 062, 096, 124, 136
Pilot014
Pioneer010, 055, 123
Portland016, 017, 019, 110
PROSCAN000
Protec061
Pulsar104
Quarter011
Quartz011
Quasar021, 022, 125
RadioShack001, 014, 054, 096
RadioShack/Realistic011, 013, 014, 021, 022, 023, 026, 029, 049, 054, 096
Radix014, 054
Randex014
RCA000, 003, 007, 013, 021, 022, 055, 056, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 100, 107, 115, 120, 125, 133
Realistic001, 011, 013, 014, 015, 021, 022, 023, 026, 029, 049, 054, 096
Ricoh128
Runco104

Samsung013, 015, 033, 053, 055, 112, 134
Sanky001, 104
Sansui010, 031, 111, 123, 130
Sanyo011, 013, 023, 135
Scott012, 015, 025, 032, 038, 065, 116
Sears000, 011, 014, 021, 023, 026, 049, 051, 054, 055, 056, 084, 107, 118
Sharp001, 017, 029, 096
Shintom056, 061, 084, 098, 119
Shogun013
Signature001
Singer021, 061, 128
Sony098, 099, 119
STS021, 107
Sylvania021, 022, 026, 062, 063, 065, 124
Symphonic026
Tandy011
Tashiko014, 054
Tatung111
Teac026, 085, 111
Technics021, 109
Teknika014, 021, 022, 026, 054, 100
Toshiba015, 049, 051, 055, 065, 113, 116, 118
Totevision013, 014, 054
TMK013, 024
Unitech013
Vector Research009, 010, 015, 016
Victor010
Video Concepts009, 010, 015, 016
Videosonic013
Wards001, 013, 014, 015, 021, 022, 023, 026, 029, 054, 055, 056, 061, 084, 088, 090, 096, 107, 116
XR-1000021, 026, 061
Yamaha009, 010, 011, 018, 111
Zenith026, 098, 104, 119, 128, 130, 137

PVR* Codes/Codes de PVR*/Códigos de PVR*

RePlay139	Tivo140
--------	----------	------	----------

*PVR's are programmed under the VCR+DVD or VCR key.
*Les PVR sont programmés à la touche VCR+DVD, VCR ou DVD+MUX.
*Los PVR están programados bajo la tecla VCR+DVD o DVD+MUX.

DVD Codes/Codes de DVD/Códigos de DVD

Aiwa350
Apex383, 384, 389
Broksonic379
Daewoo385
Emerson386, 387
Funai387
Go Video372
Hitachi141, 351
JVC146, 161, 352, 373
Kenwood142
Konka353, 354
Magnavox143, 162, 357, 358
Memorex144
Mintek145
Mitsubishi163
NAD386

Onkyo147
Oritron152
Panasonic148, 355
Philips162, 356, 357, 358, 371, 377
Pioneer149, 150, 165
PROSCAN160
Qwestar152
RCA153, 160, 374, 380, 382
Samsung154, 155, 368, 375
Sansui168
Sanyo359, 376
Sharp156, 158, 369
Sony157, 159, 164, 166, 360, 361
Sylvania387
Toshiba167, 169, 362, 363, 365, 368, 381
Zenith364, 367, 378

TV·DVD Combo Codes/Codes de TV·DVD Combinés/Combinación de Códigos TV·DVD

BroksonicTV	DVD
RCA239379
Toshiba240380
241381

VCR·DVD Combo Codes/Codes de Magn·DVD Combinés/Combinación de Códigos VCR·DVD

	VCR	DVD
Go Video	131	372
JVC	132	373
Philips	136	377
RCA	133	374
Samsung	134	375
Sanyo	135	376
Zenith	137	378

Portable DVD Codes/Codes de lecteur DVD portable/Códigos para DVD Portátil

RCA	382
-----------	-----

Satellite Codes/Codes de Satellite/ Códigos de Satélite

Alphastar	079	Motorola	047, 071
Dish Network	078	Panasonic	075
Echostar	089	Philips	085
Express Vu	091	Primostar	076
GE	047, 071, 080, 081	PROSCAN	047, 071, 080, 081
Hitachi	083, 084	RCA	047, 071, 080, 081
Hughes Network Systems	077, 083, 090	Sony	072
JVC	082	Star Choice	092
Magnavox	085	Toshiba	073
		Uniden	086

Cable Codes/Codes de câblodélecteur/ Códigos para Cable

ABC	001, 003, 004, 005, 006	Philips	011, 012, 025
Antronix	008, 009	Pioneer	033, 034
Archer	008, 009, 011	PROSCAN	003
Cabletenna	008	RCA	000, 049
Cableview	008	Realistic	009
Century	011	Regal	022, 035
Citizen	011	Regency	017
Colour Voice	012	Rembrandt	003
Eastern	017	Samsung	034
Garrard	011	Scientific Atlanta	006, 036, 037, 038
GC Electronics	009	Signal	018
GE	000, 003	Signature	003
Gemini	018	Sprucer	000
General Instruments	000, 001, 003, 046, 049	Starcom	001, 018
Hamlin	020, 021, 022, 035	Stargate	018
Hitachi	003	Starquest	018
Jasco	011	Tocom	004, 023
Jerrold	000, 001, 003, 005, 018, 023, 046, 049	Tusa	018
Magnavox	025	TV86	027
Motorola	000, 003, 046	Unika	008, 009, 011
Movie Time	027	United Cable	001
NEC	005	Universal	008, 009, 011
NSC	027	View Star	025, 027
Panasonic	000, 048	Zenith	000, 050, 051

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>