


VR609HF

USER'S GUIDE

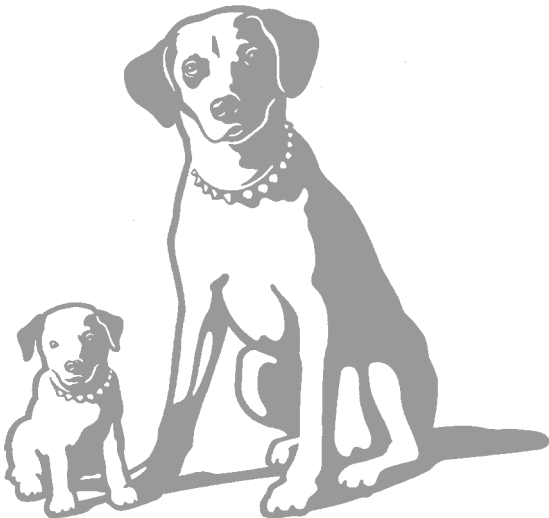

VIDEO CASSETTE RECORDER

TRISTAR

Important Information

WARNING

To reduce the risk of fire or shock hazard, do not expose this VCR to rain or moisture.

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Cautions

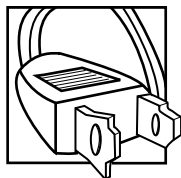

CAUTION: To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label on the back of the product for the proper operating voltage. FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Note To Cable TV Installer

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the VCR.

Model No. VR609HF

Serial No. _____

Purchase Date: _____

Dealer / Address / Phone: _____

Table of Contents

Important Information

Warnings _____	i
Cautions _____	i
Note to Cable TV Installer _____	i
Product Registration _____	i

Hooking Up the VCR

Choosing a Hookup _____	2
Antenna or Cable System Without a Cable Box _____	3
Cable System With Cable Box to Unscramble All Channels _____	4
Cable System With Cable Box to Unscramble Pay Channels Only _____	5
Connecting Two VCRs for Copying Tapes _____	6

Setting Up the VCR

Startup	
Check Accessories With VCR _____	7
Insert Batteries in Remote _____	7
Turn on the TV _____	8
Turn on the VCR _____	8
Place Channels in VCR's Memory _____	8
Add or Remove Channels from VCR's Memory _____	9
Select a Language/Choisissez une Langue _____	9
Set the Time and Date _____	9
Use TV•VCR Button _____	10
Set Auto TV/VCR Feature _____	10

Using the Remote Control

Controlling a TV _____	11
Remote Control _____	12-13

Playing a Tape

Operating Instructions _____	14
Using the Playback Features	
Auto Play Feature _____	15
Pause for Stop-Action _____	15
Picture Search _____	15

Frame Advance _____	16
Slow Motion _____	16
Automatic Tracking _____	16
Manual Tracking _____	16
DISPLAY Button _____	17
Time Counter _____	17
Commercial Scan _____	18
Index Search _____	18
Zero Search _____	19
Tape Playback: HI-FI/LINEAR/ MIX Feature _____	19

Recording a Program

Types of Recordings _____	20
Recording Speeds _____	20
Recording Pause _____	20
Basic Recording –	
Operating Instructions _____	21
Watch a TV Channel While VCR is Recording a Different Channel _____	21
Recording While You're Away	
Timer Recording _____	22
Checking or Clearing Timer Recordings _____	23
Timer Recording From the VCR's Line Input _____	23
Recording Broadcast Stereo TV or SAP _____	24
Recording Audio Only _____	25
Express Recording (XPR) _____	26
Using Two VCRs for Copying and Editing Tapes _____	27

References

Location of Controls	
Front Panel _____	28
Back Panel _____	29
Display Panel _____	30
Specifications _____	31
Cleaning the VCR _____	31
Trouble Checks _____	32-33
Limited Warranty _____	34
Index _____	35-37

Choosing a Hookup

The hookups on pages 3 through 5 are divided into two hookup types: Basic (A) and Advanced (B).

The basic hookups show the backs of TVs that have only an antenna/cable connection. It is the easier of the two and additional accessories may not be needed.

The advanced hookups show the VCR hooked up to a monitor/receiver (TV with audio and video jacks). This connection may improve the picture quality as well as convenience of operation.

Answer the questions to choose the hookup for your VCR.

1. How do you receive your TV signals?

Choose one answer from below.

- A. Outside antenna – Turn to page 3.
- B. Rabbit ears (set-top) and/or bow tie antenna – Turn to page 3.
- C. Cable System – Go to question 2.

2. What type of cable-TV system* do you have?

Choose one answer from below.

- A. Cable without a box – Turn to page 3.
- B. Cable box to unscramble all the channels – Turn to page 4.
- C. Cable box to unscramble only pay channels, such as HBO, Showtime, Cinemax, etc. – Turn to page 5.

*You may need to contact your local cable company for assistance.

Optional Hookups

How to hook up two VCRs for copying tapes?

- A. Select a hookup by answering the questions above.
- B. Then modify the connections as shown on page 6.

Antenna or Cable System Without a Cable Box

A. Basic hookup.

Use this hookup for a simple connection which requires fewer accessories.

1. Set the **CH3 CH4** switch on back of VCR to either channel 3 or 4.


You will tune the TV to this channel and use the **TV•VCR** button to watch the VCR.

2. Connect as shown.

This connection may require additional accessories not provided.

3. Plug in power cords of VCR and TV.

4. **Continue to page 7.**

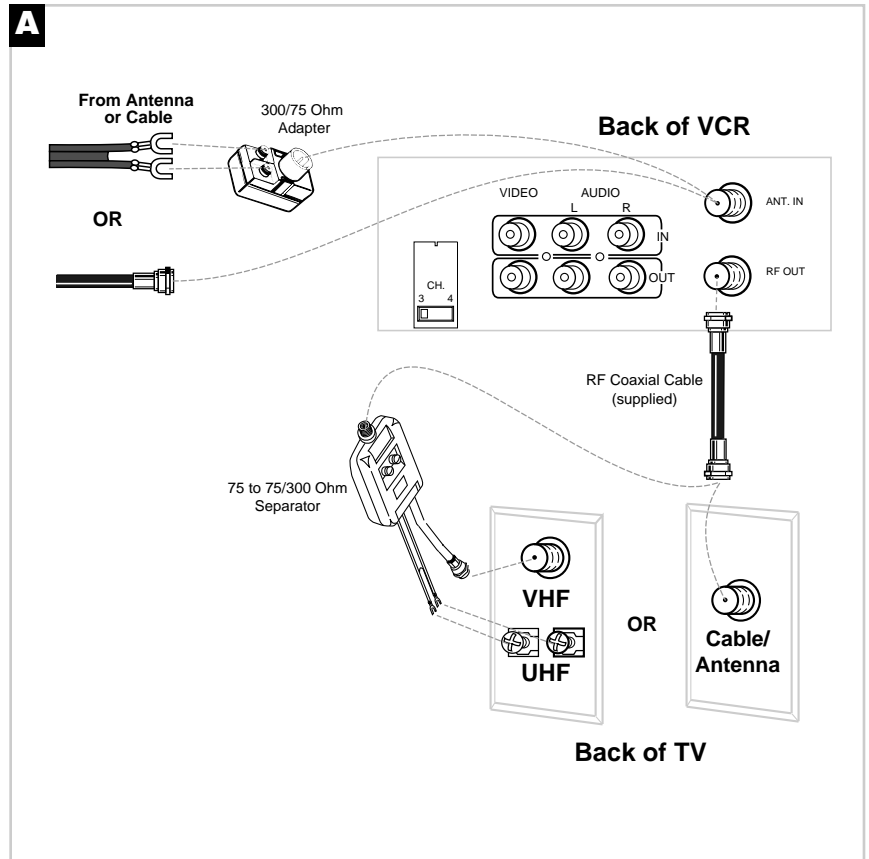

B. Advanced hookup.

Use this hookup for slightly improved picture quality, hi-fi stereo playback, and more convenient operation — use of **TV•VCR** button not required.

1. Connect as shown.

This connection requires additional accessories not provided.


If your TV is not stereo, you may need a Y-adaptor to hear sound from both left and right channels.

2. Plug in power cords of VCR and TV.

3. **Continue to page 7.**

You will tune the TV to its video input to watch the VCR.

Set the Auto TV/VCR feature to OFF. See page 10.

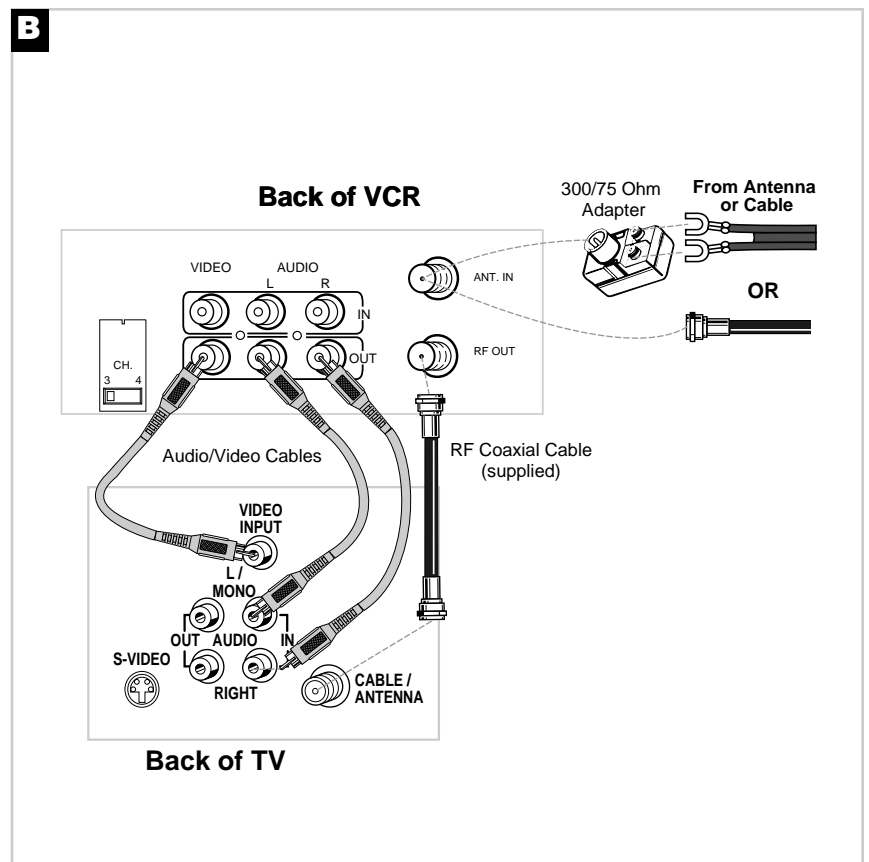


Cable System With Cable Box to Unscramble All Channels

A. Basic hookup.

Use this hookup for a simple connection which requires fewer accessories.

1. Set the **CH3 CH4** switch on back of VCR to either channel 3 or 4.
You will tune the TV to this channel and use the TV•VCR button to watch the VCR.
2. Connect as shown.
This connection may require additional accessories not provided.
3. Plug in power cords of VCR, TV, and cable box.
4. **Continue to page 7.**

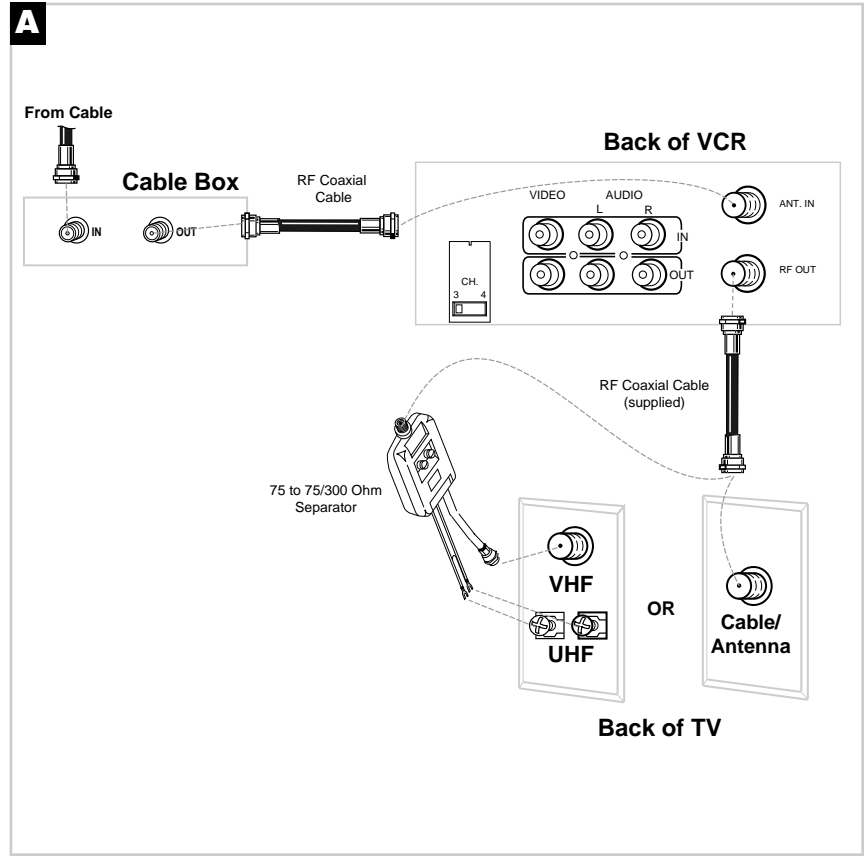


B. Advanced hookup.

Use this hookup for slightly improved picture quality, hi-fi stereo playback, and more convenient operation — use of TV•VCR button not required.

1. Connect as shown.
This connection requires additional accessories not provided.
If your TV is not stereo, you may need a Y-adapter to hear sound from both left and right channels.
2. Plug in power cords of VCR, TV, and cable box.
3. **Continue to page 7.**

You will tune the TV to its video input to watch the VCR.
Set the Auto TV/VCR feature to OFF. See page 10.

Caution: The unauthorized recording of satellite broadcasts, television programs, or other materials may infringe the rights of others.

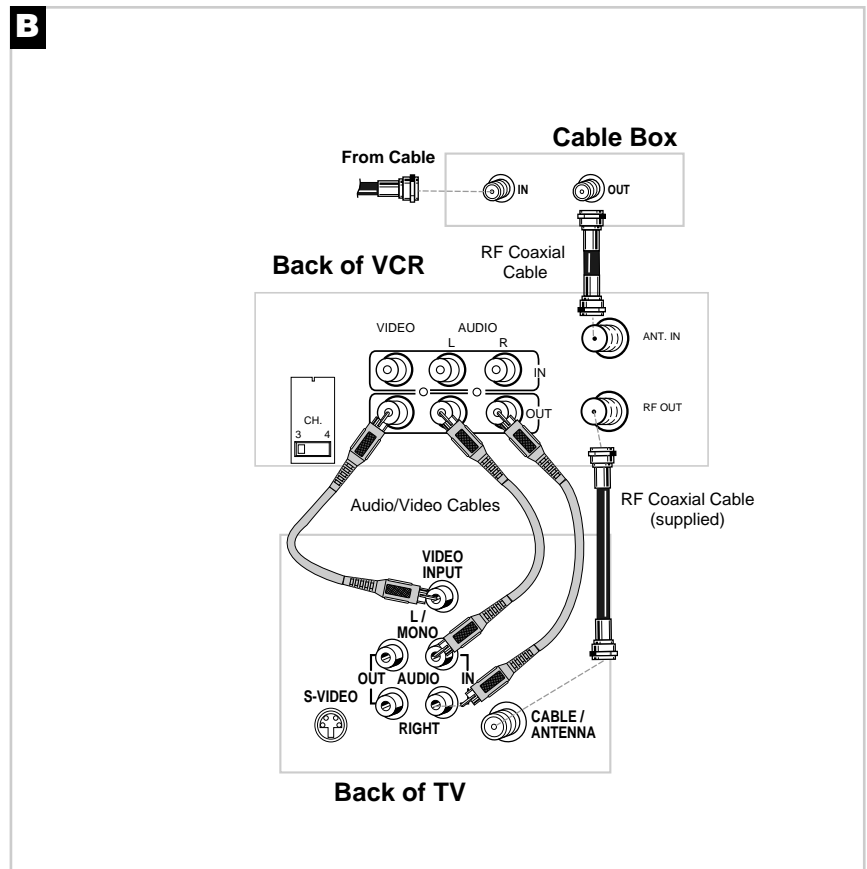


Cable System With Cable Box to Unscramble Pay Channels Only

(such as HBO, Showtime, Pay-Per-View, etc.)

A. Basic hookup.

Use this hookup for a simple connection which requires fewer accessories.


1. Set the **CH3 CH4** switch on back of VCR to either channel 3 or 4.
You will tune the TV to this channel and use the TV•VCR button to watch the VCR.
2. **Connect as shown.**
This connection may require additional accessories not provided.
3. **Plug in power cords of VCR, TV, and cable box.**
4. **Continue to page 7.**

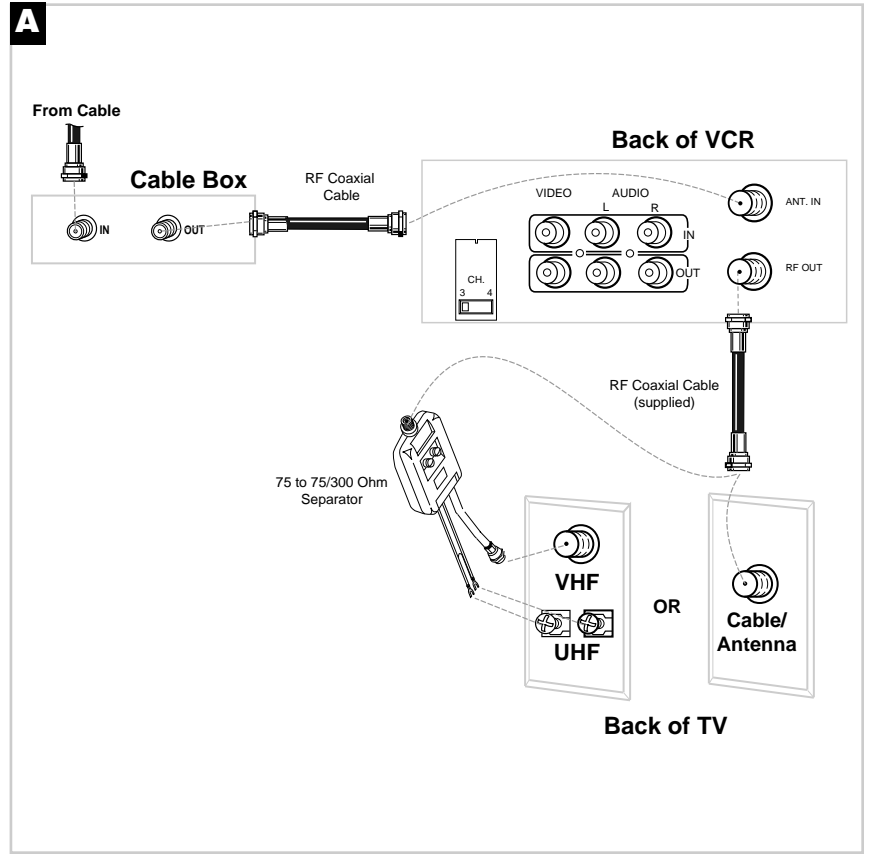

B. Advanced hookup.

Use this hookup for slightly improved picture quality, hi-fi stereo playback, and more convenient operation — use of TV•VCR button not required.

1. **Connect as shown.**
This connection requires additional accessories not provided.
If your TV is not stereo, you may need a Y-adaptor to hear sound from both left and right channels.
 2. **Plug in power cords of VCR, TV, and cable box.**
 3. **Continue to page 7.**
- You will tune the TV to its video input to watch the VCR. All pay channels are viewed through the VCR.

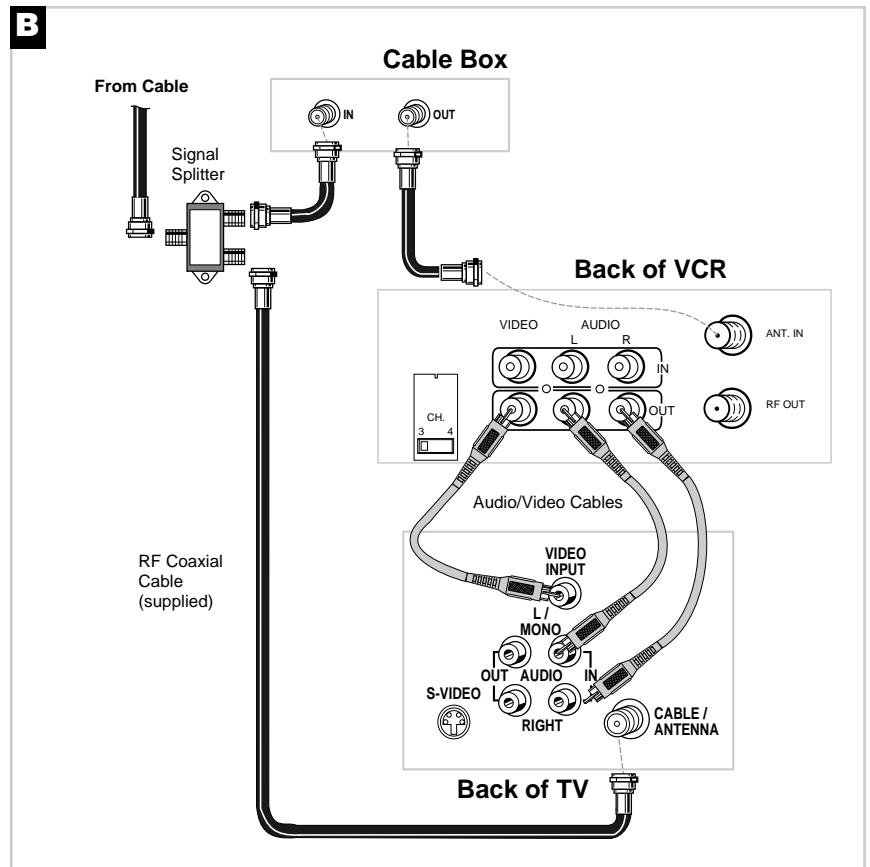


Connecting Two VCRs for Copying Tapes

Option A hookup.

Use this hookup for a simple connection which requires fewer accessories.

1. Select a hookup from pages 2 through 5 and then modify with this connection.
2. Set the CH3 CH4 switch on the playback VCR to either channel 3 or 4.
You will tune the recording VCR to this channel to receive the signal from the playback VCR.
3. Connect as shown.
This connection may require additional accessories not provided.
4. Plug in power cords of VCRs and TV.
5. **Continue to page 7.**

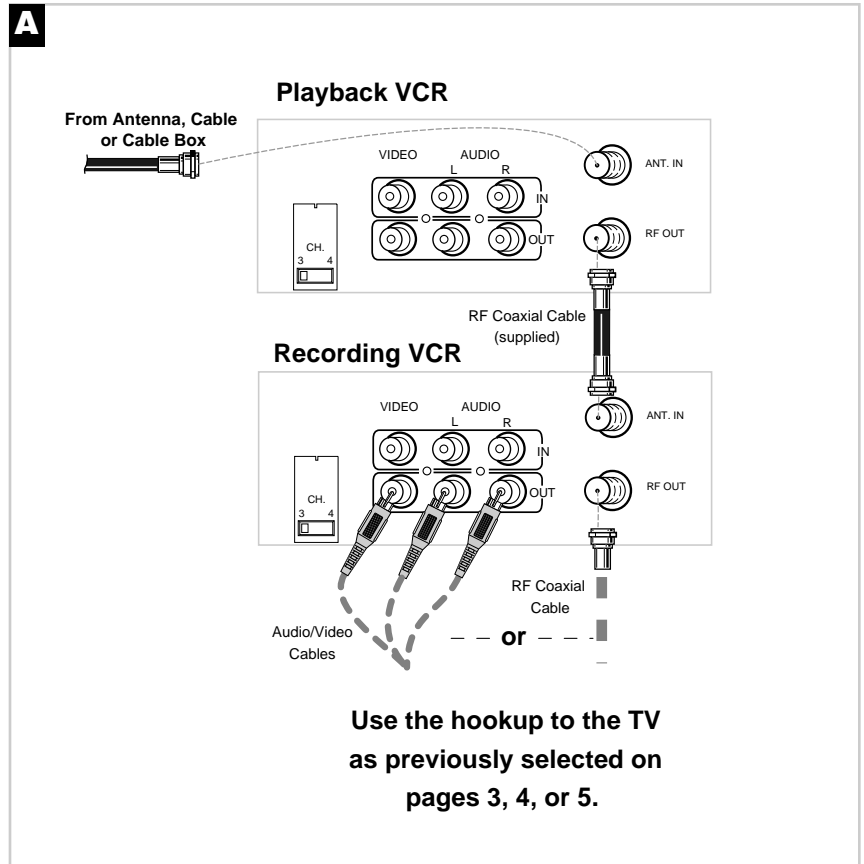


Option B hookup.

Use this hookup for slightly improved copy quality and more convenient operation — use of TV•VCR button not required.

1. Select a hookup from pages 2 through 5 and then modify with this connection.
2. Connect as shown.
This connection requires additional accessories not provided.
If your other VCR is not stereo, you may need a Y-adaptor to hear sound from both left and right channels.
3. Plug in power cords of VCRs and TV.
4. **Continue to page 7.**

You will select the line (audio/video) input on the recording VCR to receive the signal from the playback VCR.


Caution: The unauthorized recording of satellite broadcasts, television programs, or other materials may infringe the rights of others.

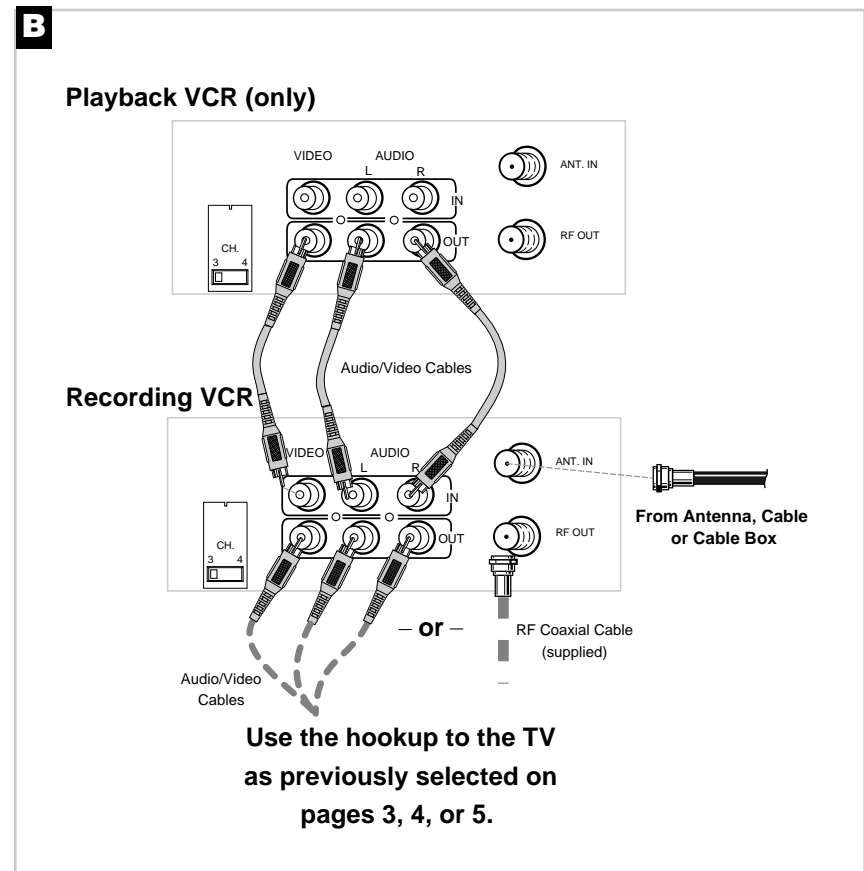


Startup

1. Check accessories with VCR.

Contact your dealer if any items are missing.

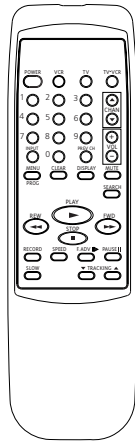

Remote
(Stock No. 233455)

 


2 "AA" Batteries



RF Coaxial Cable
(Stock No. 221392)

2. Insert batteries in remote.

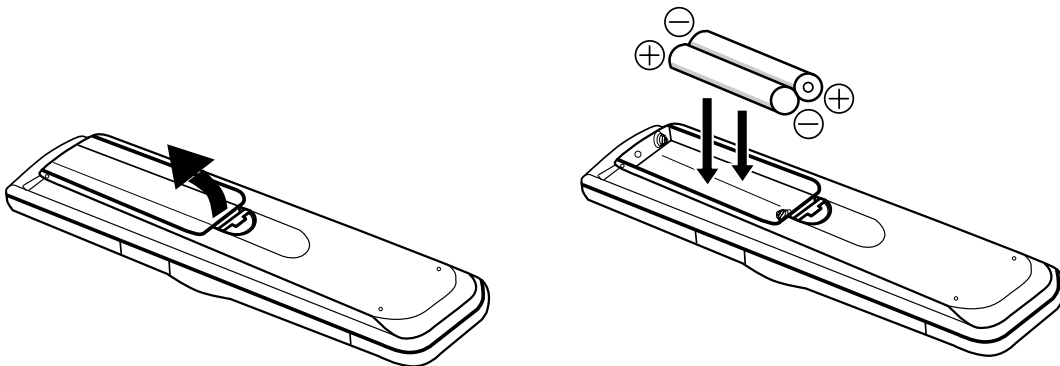

continued on next page

Startup

3. Turn on the TV.

- A. Turn on the TV.
- B. If you used one of the basic hookups, tune the TV to the channel selected with the CH3 CH4 switch on back of VCR.
If you used one of the advanced hookups, tune the TV to the TV's video input. (See TV owner's manual for details.)

4. Turn on the VCR.



- A. Press VCR on the remote.

5. Place channels in the VCR's memory.

The first time you turn on the VCR or after a power interruption, perform the AUTO CHANNEL SEARCH so that your VCR can locate the channels available through your signal type—cable or antenna. The signal type is automatically selected when you perform the AUTO CHANNEL SEARCH function. Also, if you change the signal type, you will need to perform AUTO CHANNEL SEARCH again.

- A. Press MENU to display the VCR MAIN MENU on the TV screen. If this menu does not appear:
 - Make sure TV is tuned to same channel as the CH3 CH4 switch on the back of the VCR or the TV's video input (refer to TV's manual).
 - Press VCR, then press MENU again.
 - If you use a basic hookup, check VCR indicator in display panel – it should be on. Press TV•VCR to turn it on.
 - Check the connections.
- B. Press 3 to display the CHANNELS menu.
- C. Press 1 to begin AUTO CHANNEL SEARCH.
The VCR automatically selects CABLE (cable TV) or ANTENNA. If you need to change the setting manually, press 3.

Wait until the channel numbers stop changing. This takes about one to two minutes. The TV will then tune to the lowest channel found. Pressing CHAN on the remote or CHANNEL on the VCR up or down will select only the active channels.

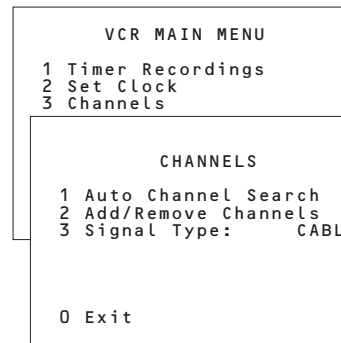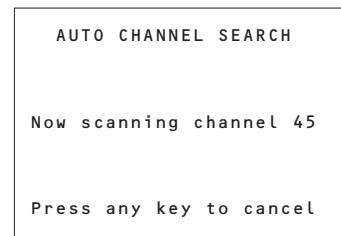


Startup

6. Add or remove channels from the VCR's memory.

You may want to add or remove channels if some of them are not active, have weak signals, or you do not want to watch them.

We recommend channels be placed in memory using the AUTO CHANNEL SEARCH feature *described on the previous page* before adding or removing channels. Channels 1-125 and VID1 were placed in memory at the factory.


- A. Press VCR on the remote.
- B. Press MENU on the remote to see the VCR MAIN MENU on the TV screen.
- C. Press 3 to display the CHANNELS menu.
- D. Press 2 to display the ADD/REMOVE CHANNELS menu.
- E. Follow the directions on the screen.
- F. Add or remove more channels by entering channel numbers or using CHAN up or down on the remote or CHANNEL up or down on the VCR.

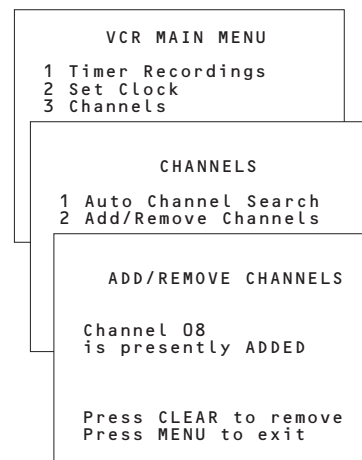

7. Select a language./Choisissez une langue.


You can select the language for the displays on the VCR.

- A. Press MENU on the remote to see the VCR MAIN MENU on the TV screen.
- B. Press 6 to display the LANGUAGE menu.
- C. Select English or French.
 - Press 1 to select English.
 - Press 2 to select Français (French).

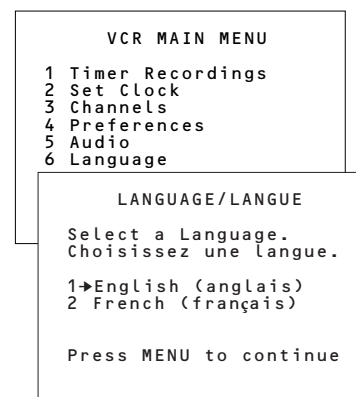


8. Set the time and date.

When you first turn on the VCR, --:-- appears in the clock area of the VCR's display panel.

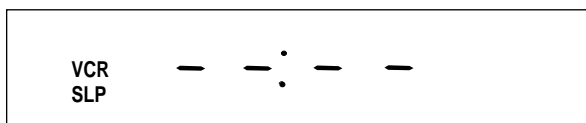

- A. Press MENU on remote to display the VCR MAIN MENU on the TV screen.
- B. Press 2 to display SET TIME AND DATE.
- C. Enter the time and date with the number buttons on the remote.
 - Press 0 before single-digit numbers.
Example: press 0, then 5, then 0, then 7 for a time of 5:07. Press 1 for AM or 2 for PM.
 - Press CLEAR on the remote to change incorrect entries.
- D. Press MENU on remote to remove SET TIME AND DATE from the TV screen and start the clock. The time will appear in the VCR's display panel and the time and date will appear on the TV screen when you press DISPLAY.

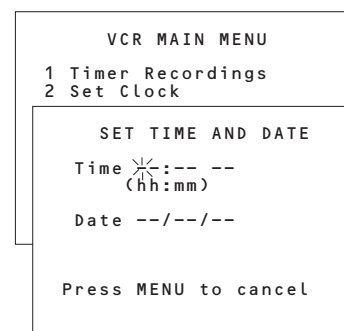

continued on next page

Startup

9. Use TV•VCR button.

Skip this step if you used one of the advanced hookups.

When using one of the basic hookups, the TV•VCR button lets you switch between the picture coming from the VCR or the picture from the TV channel. This button lets you record a program on the VCR while watching another channel on the TV. *Details are on page 21.*


- A. Press VCR to set the remote to control the VCR.
- B. Press TV•VCR to see the picture from the VCR.
The VCR indicator lights in the display panel.
- C. Press CHAN up or down on the remote or CHANNEL up or down on the VCR to change channels on the VCR.
The channel number changes in the display panel.
- D. Press TV•VCR to see the TV channels.
The VCR indicator does not light in the display panel. Change channels using the TV's remote.
- E. Return the TV to the VCR viewing channel — CH3 or CH4.
- F. Press VCR, then TV•VCR to switch back to the picture from the VCR.

10. Set Auto TV/VCR feature.

If you used one of the basic hookups and did not connect the audio/video jacks of the VCR to the TV, leave the Auto TV/VCR feature set to ON.

If you have connected your VCR using the audio/video input of your TV, you can prevent the VCR indicator from turning on automatically and interrupting the cable or antenna signal to your TV.

- A. Press MENU on the remote to see VCR MAIN MENU on the TV screen.
- B. Press 4 to display PREFERENCES.
- C. Press 2 to select Auto TV/VCR: ON or OFF.
 - Select ON if you used one of the basic hookups and watch the VCR on channel 3 or 4 of your TV. The VCR will automatically switch the TV•VCR setting to VCR every time the VCR is turned on, a tape with the safety tab removed is inserted, or you press PLAY.
 - Select OFF if you used one of the advanced hookups and watch your VCR on the video input channel of your TV. The VCR indicator will not turn on automatically and the signal from your antenna or cable to your TV will not be interrupted. Pressing TV•VCR on the remote will still turn the VCR indicator on or off and switch the antenna signal.

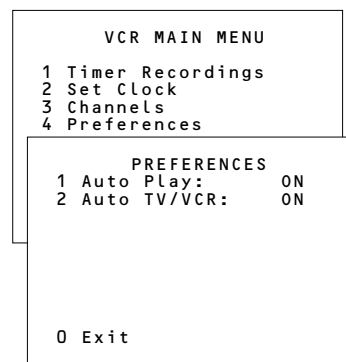

Controlling a TV

The VCR's remote is preprogrammed to control the basic functions of a compatible RCA, ProScan, or GE TV. The remote can also be set up to control other manufacturer's brands. To program the remote, use the remote buttons that correspond to your brand.

Program the remote for a TV

1. Turn on the TV.
2. Point the VCR remote at the TV.
3. Hold the TV button and press two number buttons for your brand. If the TV changes channels when the CHAN up or down button is pressed, set up is complete.
4. Release the buttons.
5. Repeat steps 2 – 4 with two other buttons if the first ones do not work.

Helpful Hint: Notice the difference between the TV and VCR on-screen displays. This is one way to tell if the remote is set to control the VCR or the TV.

Brand *	Remote Button	Brand *	Remote Button
Akai	03	NAD	07
AOC	06	NEC	06
Candle	06	Panasonic	04,11
Citizen	06	Philco	04,06
Colortyme	06	Philips	03,04,06
Concerto	06	Pioneer	06
Curtis Mathes	01,06	Portland	06
Daewoo	06	ProScan	01
Daytron	06	Proton	06
Electrohome	06	Quasar	11
Emerson	06	Radio Shack	01,05,13
Envision	05,06	RCA	01,06
Fisher	05,08	Realistic	05
GE	00,01,06,11	Sampo	06
Goldstar	06	Samsung	06,09
Hallmark	06	Sanyo	05,08
Hitachi	06	Sears	01,05,06,07,
Infinity	04		08,10
J C Penny	00,01,06,09	Sharp	06,13
JBL	04	Sony	03
Jensen	06	Soundesign	06
JVC	10,11	Sylvania	04,06
Kawasho	03,06	Technics	11
Kenwood	06	Techwood	06
Loewe	04	Teknika	06
Luxman	06	TMK	06
LXI	04,05,07	Toshiba	05,07,09
Magnavox	04,06	Universal	00
Marantz	04,06,12	Victor	10
MGA	06	Wards	00,01,04,06,
Mitsubishi	06,12		13
MTC	06	Zenith	02


* The remote may not be able to control every model TV of the brands listed.

Operate the TV

After you have set up your remote to control your TV, test the TV buttons to see which ones operate your TV.

1. Point the remote at the TV and press TV.
2. If TV does not turn on in step 1, press TV and then POWER.
3. Use the "TV Function Buttons" as described on page 13.

Remote Control

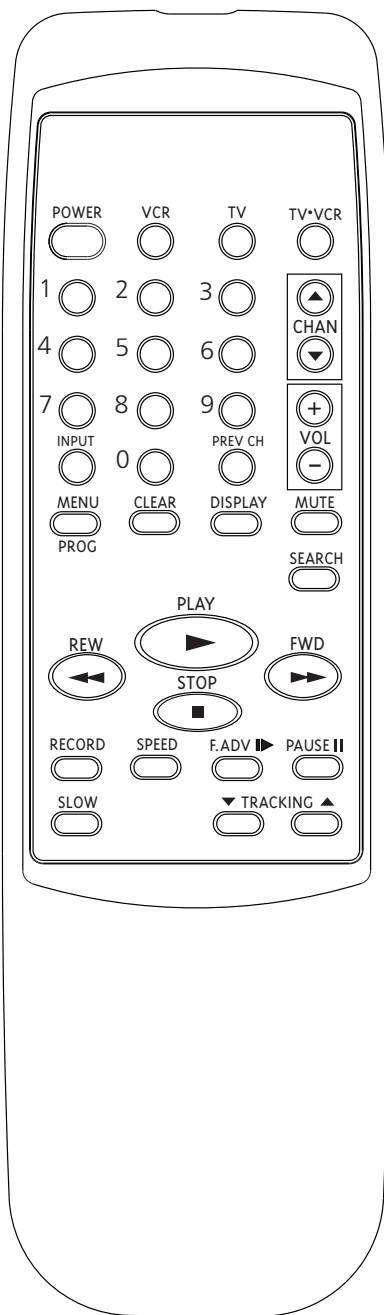

Component Buttons

Press one of the buttons to set the remote to operate that component.

TV

Turns on a compatible RCA, ProScan, or GE TV and sets the remote to control the TV.

Used with **POWER** button to turn on another brand of TV, other than RCA, when the remote is programmed to control that TV. See page 11.

VCR

Turns on a compatible RCA, ProScan, or GE VCR and sets remote to control the VCR.

VCR Function Buttons

CHAN Up or Down

Selects next higher or lower channel in the VCR's channel memory.

CLEAR

Resets time counter to 0:00:00.

Allows you to change entries when setting the clock or VCR for a timer recording.

DISPLAY

Shows VCR operating displays on the TV screen.

Displays the time counter.

FWD (Fast Forward)

Fast forwards the tape when the VCR is stopped.

Searches the picture in forward motion during playback.

F.ADV (Frame Advance)

Lets you view one frame with each press of the button while the tape is paused.

INPUT

Turns the line input on or off. VID1 appears in VCR's display panel and VIDEO appears on TV screen.

Line input refers to the signal coming from the component connected to the AUDIO/VIDEO IN jacks on the back of the VCR.

MENU PROG

Displays the VCR MAIN MENU on the TV screen.

Removes a menu from the screen.

Used to program the VCR.

Numbers (0 through 9)

Select a channel up to 99 by pressing two numbers.

Select a cable channel over 99 by pressing and holding 1 until 1-- appears on the screen. Then press the other two numbers.

PAUSE

Pauses action for viewing during playback.

Pauses recording to prevent recording of unwanted scenes.

PLAY

Plays a tape.

POWER

Turns the VCR on and off.

PREV CH (Previous Channel)

Switches between two channels.

Select one channel and then use the number buttons to select another. Press PREV CH to switch between the two channels.

Remote Control

VCR Function Buttons

(continued)

RECORD

Starts VCR recording.

Used for express recording (XPR).

See page 26.

REW (Rewind)

Rewinds the tape when the VCR is stopped.

Searches the picture in reverse motion during playback.

SEARCH

Displays INDEX and ZERO SEARCH menus on TV.

Lets you advance tape 60 or 120 seconds during playback.

SLOW

Used for slow-motion playback.

SPEED (Tape Speed)

Selects a recording speed (SP or SLP).

STOP

Stops the normal functions such as record, playback, rewind, fast forward, and pause.

TRACKING Up and Down

Lets you manually reduce the streaks that may appear on the picture during play or pause.

Reduces picture "jitter" during stop-action playback.

TV•VCR

Switches the picture signal so that it either comes from the VCR or the TV channel. See page 10.

TV Function Buttons

Press the TV button to set remote to control a compatible TV. Some buttons may not work with every TV.

CHAN Up or Down

Selects next higher or lower channel in the TV's channel memory when remote is set to control a TV.

CLEAR

Removes menus or status displays from the screen.

DISPLAY

Shows the status displays on the screen.

Removes menus or displays from the screen.

MUTE

Turns the TV sound on or off.

Numbers (0 through 9)

Select a channel up to 99 by pressing two numbers.

Select a cable channel over 99 by pressing and holding 1 until 1-- appears on the screen. Then press the other two numbers.

POWER

Turns off a compatible TV when remote is set to control TV.

Used with TV button to turn on a compatible TV, other than RCA, when the remote is programmed to control that TV. See page 11.

PREV CH (Previous Channel)

Switches between two channels.

Select one channel and then use the number buttons to select another. Press PREV CH to switch between the two channels.

Works as an ENTER key on some TVs.

VOL (Volume) Up and Down


Raises and lowers sound.


Operating Instructions

To Play a Tape

1. Turn on the TV and tune it to channel 3, 4, or TV's video input to see the picture from the VCR.

2. Insert a tape in the VCR.

VCR automatically turns on. The cassette-in indicator  lights, and the VCR indicator lights if the Auto TV/VCR feature is set to ON. The tape automatically begins playback if the safety tab on the cassette has been removed and the Auto Play feature is turned on.

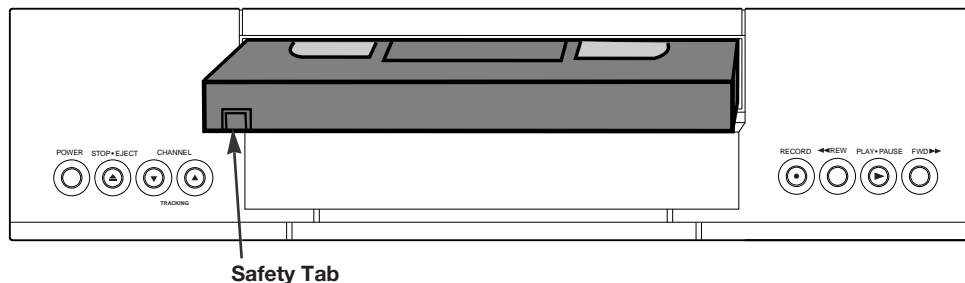


3. Press PLAY on the remote or PLAY•PAUSE on the VCR, if necessary. PLAY appears in the VCR's display panel.
4. Press TRACKING up or down to remove any streaks from the picture, if necessary. *Details are on page 16.*
5. Press STOP on the remote or STOP•EJECT on the VCR.
6. Press REW. REW will appear in the VCR's display panel.
The VCR will automatically rewind the tape if it reaches the end of the tape during playback. While rewinding, you can press POWER and the VCR will turn off after rewinding.
7. Press STOP•EJECT on the VCR to eject the tape once it is completely rewound.

Using the Playback Features

Auto Play Feature

This feature lets you tell the VCR whether you want it to automatically start playing a tape that is inserted with the safety tab removed.

1. Press MENU on the remote to see the VCR MAIN MENU on the TV screen.
2. Press 4 to display the PREFERENCES menu.
3. Press 1 to select Auto Play: ON or OFF.
 - Select ON to have a tape with its safety tab removed start playing automatically.
 - Select OFF if you do not want a tape with its safety tab removed to start playing

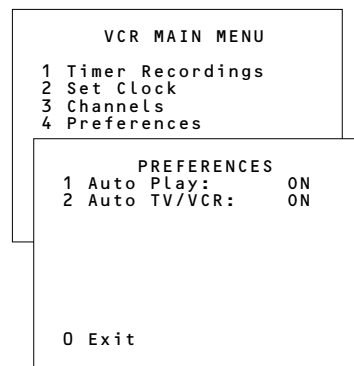

Pause for Stop Action

This feature stops the tape in action and allows you to examine the details of the scene. Stop action works best for tapes recorded in the SP and SLP speed.

1. Press PAUSE on the remote or PLAY•PAUSE on the VCR during playback to stop the action.

PAUS appears in the VCR's display panel.

Press TRACKING up or down during stop-action pause to reduce picture "jitter".
2. Press PLAY•PAUSE on the VCR or PLAY on the remote to return to playback.

The VCR will automatically switch from stop-action playback to stop after a few minutes.

Picture Search

You can search a picture during playback by fast forwarding or rewinding the tape. Sound is turned off during picture search. Picture search works best for tapes recorded in the SP and SLP speed.

Fast Forward Search

1. During playback, press FWD to search forward at a faster-than-normal speed.

SRCH+ appears in the VCR's display panel.
2. To return to playback, press FWD, PLAY on the remote, or PLAY•PAUSE on the VCR.

Rewind Search

1. During playback, press REW to search in reverse at a faster-than-normal speed.

SRCH- appears in the VCR's display panel.
2. To return to playback, press REW, PLAY on the remote, or PLAY•PAUSE on the VCR.

Using the Playback Features

Frame Advance

Frame advance lets you view one stop-action frame after another. Frame advance works best for tapes recorded in the SP or SLP speed.

1. Press PAUSE to stop the action.
PAUS appears in the VCR's display panel.
2. Press F.ADV each time you want to view a frame of the scene.
3. Press PAUSE or PLAY on the remote or PLAY•PAUSE on the VCR to resume normal playback.

Slow Motion

You can view the picture in slow motion during play or play pause. Sound is turned off during slow-motion playback. Slow motion works best in the SP or SLP speed.

1. During playback, press SLOW to start slow-motion playback.
SLOW appears in the VCR's display panel.
2. Use TRACKING up or down to remove any streaks from the picture.
3. Press PLAY on the remote or PLAY•PAUSE on the VCR to return to playback.
The VCR will automatically switch from slow-motion playback to stop after a few minutes.

Automatic Tracking

The VCR has automatic tracking which adjusts the picture when playing back a tape recorded on another VCR. Automatic tracking is turned on whenever a tape is inserted or the VCR's power is turned on.

Manual Tracking

Occasionally, you may need to manually adjust tracking on a tape recorded on a different VCR or camcorder. The TRACKING buttons on the remote or VCR are used when playing a tape. They have no effect during recording.

- When streaks or snow appear, press TRACKING up or down for the best possible picture.
- Press TRACKING up or down during stop-action pause to reduce picture "jitter".

Using the Playback Features

DISPLAY Button

1. Press DISPLAY to display the status of the VCR, channel number, time counter, date, time, and tape speed on the TV screen. The VCR status will appear in the display panel.

The time and date must be set before they are displayed. If you do not press DISPLAY again, these displays will time out.


2. Press DISPLAY again to have only the time counter remain on the TV screen. The time counter will appear instead of the time in the VCR's display panel.
3. Press DISPLAY again to remove the time counter from the TV screen.

The time counter will remain in the VCR's display panel.

4. Press DISPLAY again to return to the normal status displays.

The time will appear in the VCR's display panel.

Turning off the VCR automatically returns the displays to normal.

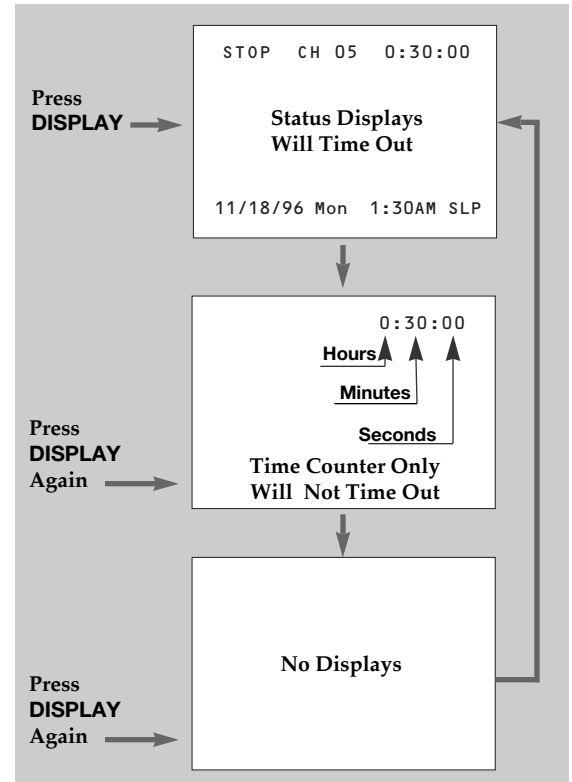

Time Counter


The time counter shows the elapsed time it takes to record a program or play back a segment of a prerecorded tape. It helps locate the beginning or end of programs you taped. The time counter resets to 0:00:00 whenever the tape is ejected from the VCR.

For example, if a 30-minute program was recorded at the beginning of the tape, you would:

1. Insert the prerecorded tape. Make sure the tape is rewound. Press STOP on the remote or STOP•EJECT on the VCR.
2. Press DISPLAY twice to display only the time counter on the TV screen.
3. Press CLEAR to reset the time counter to 0:00:00.
4. Press FWD to fast forward the tape until the time counter reads 0:30:00. Press STOP on the remote or STOP•EJECT on the VCR.

This is the approximate end of the program and you can begin recording at this spot.

5. Press DISPLAY to remove the time counter from the screen and return to the normal displays.

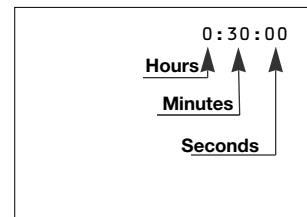

Using the Playback Features

Commercial Scan (SEARCH Button)

This is useful for scanning commercials or short program segments.

1. Press SEARCH once during playback to advance the tape approximately 60 seconds.
2. Press SEARCH twice during playback to advance the tape approximately 120 seconds.
SRCH+ appears in the VCR's display panel.

Index Search

The VCR has a "VHS Index Search System" that automatically records an index mark on the tape every time you begin recording a program. During playback you can locate the program you want to play by the number of index marks.

The VCR will automatically locate the index number you select. The VCR will search forward or reverse from the location you are on the tape.

1. Insert the prerecorded tape and press STOP.
2. Press SEARCH on the remote to display the INDEX SEARCH menu on the TV screen.
3. Press FWD or REW to search for the next index mark or press two number buttons to enter the specific index mark you want the VCR to search for.
Press CLEAR to correct an entry.
4. Press FWD to search forward or press REW to search in reverse.
5. Press STOP to stop index searching.

Some index marks may be missed by the VCR.

- A mark too close to your location on the tape.
- The mark at the beginning of a recorded segment of five minutes or less.
- The first index mark on the tape when you start at the beginning of the tape.

```
INDEX SEARCH
Press REW or FF
to begin scanning
OR
Enter a specific
Index number
  03
Press SEARCH to exit
```

```
INDEX SEARCH

Searching for
Index number
  03
Press STOP to cancel
```

Using the Playback Features

Zero Search

The zero search feature allows you to quickly return to a counter reading of 0:00:00 at any spot on the tape. This is convenient when you want to watch a segment of the tape several times.

1. Insert the prerecorded tape and press STOP.
2. Press DISPLAY twice to display only the time counter on the TV screen.
3. Locate the point on the tape that you want to return to quickly.
4. Press CLEAR to reset the time counter to 0:00:00.
5. You can continue to play the tape or perform other functions. When you are finished, press STOP.
6. Press SEARCH twice to display the ZERO SEARCH menu. The current tape counter is displayed.
7. Press REW to return to 0:00:00. When the VCR reaches 0:00:00 it will begin playback.

If the time counter reading has a minus (-) in front of it, press FWD to return to a reading of 0:00:00.

8. Press STOP to stop zero search.

```

ZERO SEARCH

Current tape counter is
  2:17:25

Press REW to go to
  0:00:00

Press SEARCH to exit
    
```

-OR-

```

ZERO SEARCH

Current tape counter is
 -2:17:25

Press FF to go to
  0:00:00

Press SEARCH to exit
    
```

Tape Playback: HI-FI/LINEAR/MIX Feature

The VCR records the same audio on both the hi-fi and linear tracks on the tape. The hi-fi stereo sound is recorded on separate left and right stereo channels. Monaural sound is recorded on the linear track.

To enjoy hi-fi sound, connect your VCR to a stereo television or amplifier/receiver using the audio/video jacks. The Tape Playback: HI-FI/LINEAR/MIX feature lets you select which audio you play back.

To Select Playback Sound

1. Press MENU to see the VCR MAIN MENU on the TV screen.
2. Press 5 to see the AUDIO menu on the TV screen.
3. Press 2 to switch between HI-FI, LINEAR, or MIX sound.
 - Select HI-FI to play back sound recorded on the hi-fi track and for normal use.

The HI-FI indicator is lit in the VCR's display panel during hi-fi playback.
 - Select LINEAR to play back the sound recorded on the linear monaural track.
 - Select MIX to play back the sound recorded on both the linear track and the hi-fi track, sound-on-sound.

```

VCR MAIN MENU

1 Timer Recordings
2 Set Clock
3 Channels
4 Preferences
5 Audio
    
```

```

AUDIO

1 Reception: STEREO
2 Tape Playback: HI-FI

0 Exit
    
```

Types of Recordings

Your VCR provides different types of recording. These types are explained in the following sections:

Basic Recording – Operating Instructions

Recording While You're Away

Timer Recording

Recording Broadcast Stereo TV or SAP (Second Audio Program)

Recording Audio Only

Express (XPR) Recording

Using Two VCRs for Copying Tapes

Using the Recording Features

Recording Speeds

Press **SPEED** on the remote to select a recording speed (SP or SLP). The speed you select appears on the TV screen and in the VCR's display panel. The VCR automatically selects the playback speed (SP, LP, or SLP).

Cassette Type	Recording Time	
	SP	SLP
T120	2Hr	6Hr
T160	2Hr 40Min	8Hr

SP (Standard Play) gives the best quality recording.

That is why most prerecorded, rental tapes are recorded in SP. Fewer programs can be recorded on the tape. Special effects such as pause, slow motion, picture search, and frame advance work well.

SLP (Super Long Play) gives three times the recording time of tapes recorded in SP. Special effects such as pause, slow motion, picture search, and frame advance work well.

Recording Pause

This feature allows you to prevent recording short passages of unwanted material.

Press **PAUSE** during recording to stop and start recording. **REC.P** appears in the VCR's display panel.


The VCR will automatically switch from pause to stop after a few minutes.

Types of Recordings

Basic Recording – Operating Instructions

To Make a Recording

Turn on the TV and tune it to the VCR viewing channel, either 3, 4, or TV's video input channel.

1. Insert a tape with safety tab in place.
The cassette-in indicator  lights in the VCR's display panel.
2. If using one of the basic hookups, make sure the VCR indicator appears in the VCR's display panel. If not, press TV•VCR to turn it on.
3. Select recording speed using SPEED on the remote.
The tape speed indicator appears in the VCR's display panel and on the TV screen.
4. Select the channel to be recorded.
The channel number appears in the VCR's display panel and on the TV screen.
5. Press RECORD to begin recording. REC appears in the VCR's display panel while the VCR is recording.

Watch a TV Channel While VCR is Recording a Different Channel

1. Follow steps 1 through 5 above.
2. If using one of the basic hookups, press TV•VCR to switch to the TV channel. The VCR indicator will turn off in the display panel.
3. Select the channel you want to watch with the TV's channel buttons.
4. Press STOP on the remote or STOP•EJECT on the VCR when recording is finished.

Recording While You're Away (Timer Recording)

The timer program feature lets you program the VCR to record up to eight different programs within a one year period. Before setting the timer, make sure that:


- The clock is set correctly.
- A tape with safety tab has been inserted with enough tape to record the programs.

Setting a Timer Recording

1. Press **MENU** on the remote to display **VCR MAIN MENU**.
2. Press **1** to display **TIMER RECORDINGS** menu.
3. Press **1** to display **Create a New Program** menu.
4. Press **1, 2, 3, or 4** to select type of program.
 - 1 One time — single program recorded once.
 - 2 Daily — program recorded at same time every day.
 - 3 Weekdays — program recorded at same time Monday through Friday.
 - 4 Weekly — program recorded at same time once a week.
5. Press number buttons on the remote to enter the channel number (use **INPUT** or **0, 0** to select video input), start time including **AM** or **PM**, end time, and start date of the recording. Just follow the on-screen prompts. Press **CLEAR** to correct an entry.
6. Press **SPEED** on the remote to change recording speed.
7. Press **MENU** to enter your program. A reminder appears which will time out or you can press **MENU** to return to the **VCR MAIN MENU**.
PROGRAMS OVERLAP may appear on the screen if you have entered two programs where the times overlap.
8. The **TIMER RECORDINGS** menu appears. Press **1** to enter an additional timer program, or press **0** to exit.
9. **Turn off the VCR** before recording begins.
TIMER appears in the VCR's display panel when the timer has been programmed.
10. **If using a cable box, leave it turned on and tuned to the channel you want to record.**

Stopping a Recording in Progress


Press and hold **STOP** on the remote or **STOP•EJECT** on the VCR for approximately three seconds.

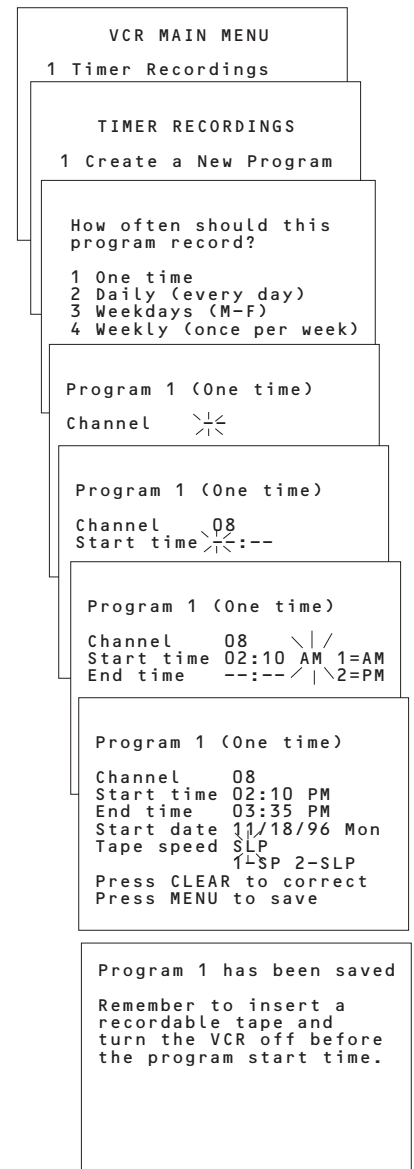

Recording While You're Away

Checking or Clearing Timer Recordings


1. Press MENU on the remote to display VCR MAIN MENU on TV screen.
2. Press 1 to display the TIMER RECORDINGS menu.
3. Press 2 for Review Existing Progs. feature.
4. Press MENU to display information for the next program.
5. Press CLEAR when the program you want to erase appears on the screen.

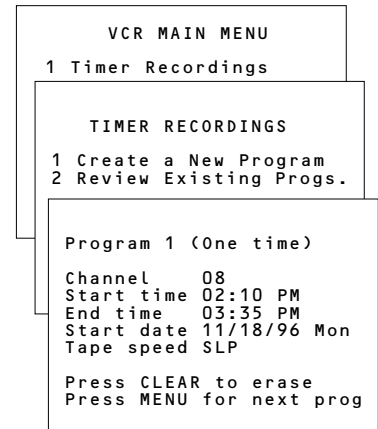

Timer Recording From the VCR's Line Input

The line input refers to the signal coming from the AUDIO and VIDEO IN jacks of the VCR. Recording from the line input is convenient if you have a satellite receiver or similar component attached to these jacks. To timer record from the component connected to the VCR's line input:

Press INPUT (or 0,0) to select VIDEO in place of the channel number on the TV screen during timer programming.

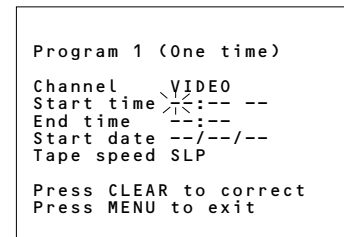


Recording Broadcast Stereo TV or SAP (Second Audio Program)

Some TV programs are broadcast with stereo audio or a second audio language (SAP). The Reception: STEREO/MONO/SAP feature lets you select the type of audio you want to record.

To Record Stereo Broadcast TV or SAP

Turn on the TV and tune it to the VCR viewing channel, either 3, 4, or TV's video input.

1. Insert a tape with safety tab in place.
2. If using one of the basic hookups, make sure the VCR indicator appears in the VCR's display panel. If not, press TV•VCR to turn it on.
3. Use SPEED on the remote to select a recording speed. The tape speed indicator appears in the VCR's display panel and on the TV screen.
4. Select the channel or line input to be recorded. The channel number or VIDEO appears on the TV screen.
5. Set the Reception: STEREO/MONO/SAP feature for the type of audio you want to record.
 - A. Press MENU to display the VCR MAIN MENU on the TV screen.
 - B. Press 5 to display the AUDIO menu.
 - C. Press 1 to select the type of audio Reception: STEREO, MONO, or SAP.
 - Set to STEREO for normal recording and to record broadcast stereo TV. The STEREO indicator lights in the VCR's display panel when the station you are tuned to is broadcasting stereo.
 - Set to MONO if the stereo signal is weak and the sound is too "noisy".
 - Set to SAP to record SAP (second audio program) instead of the main audio. The SAP indicator lights in the VCR's display panel when the station you are tuned to is broadcasting SAP.
 - D. Repeatedly press 0 to remove the menus from the TV screen.
6. Press RECORD to start recording. REC appears in the VCR's display panel.
7. Press STOP on the remote or STOP•EJECT on the VCR when you are finished.

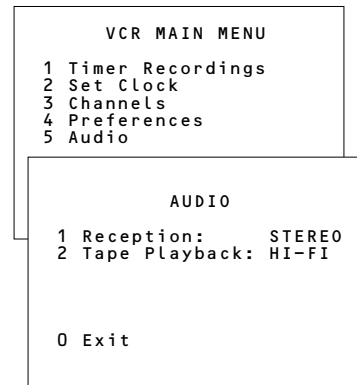


Recording Audio Only

You can record audio only from another audio source connected to the AUDIO IN (L and R) jacks on the back of the VCR. Any video on the tape will be erased when you record audio only.


To Record Audio Only

1. Press the INPUT button to select a line input.
Press INPUT to record from the AUDIO IN jacks on the back of the VCR. VID1 appears in the VCR's display panel.
The VCR will record audio from the audio equipment connected to the AUDIO IN jacks.
2. Use SPEED on the remote to select the recording speed.
The tape speed indicator appears in the VCR's display panel.
3. Make sure the Reception: STEREO/MONO/SAP feature is set to STEREO.
 - A. Press MENU to display the VCR MAIN MENU on the TV screen.
 - B. Press 5 to display the AUDIO menu.
 - C. Press 1 to select Reception: STEREO.
4. Start audio source playing and press RECORD to begin recording.
REC appears in the VCR's display panel.
5. Press STOP on the remote or STOP•EJECT on the VCR when you are finished.

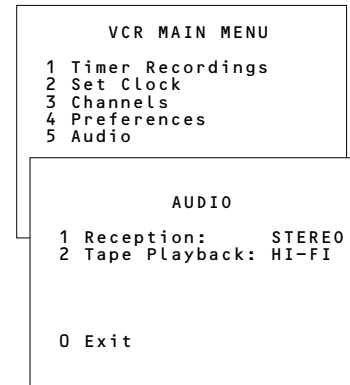

Express Recording (XPR)

Express recording lets you record up to four hours without using the timer program feature. The VCR will turn off automatically at the end of the recording.

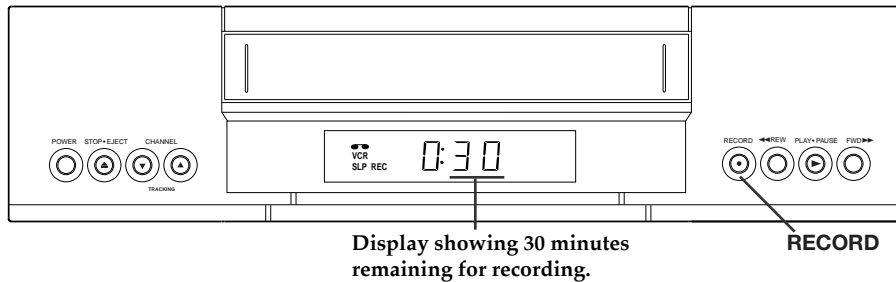

Operating Instructions

1. Turn on the VCR.
2. Insert a tape with safety tab in place.
3. Select the channel you want to record.
4. Select the desired recording speed using SPEED on the remote.
5. Press RECORD twice to activate XPR recording.
6. Press RECORD repeatedly until the amount of recording time for the program is displayed in the VCR's display panel or on the TV screen.

Press RECORD	Recording Time
0:30	(30 Min)
1:00	(1 Hr)
1:30	(1 Hr, 30 Min)
2:00	(2 Hrs)
3:00	(3 Hrs)
4:00	(4 Hrs)
	(Normal Recording)
0:00	(Stops)

REC Ch 11
Record Length 0:30

Press REC to set length

Express Display on TV Screen

Each press increases the time — 30 minutes up to two hours and then one hour up to four hours.

The amount of time the VCR will record and REC will appear in the VCR's display panel.

You can increase the amount of recording time by pressing REC or RECORD.

Stopping a Recording in Progress

Press and hold STOP on the remote or STOP•EJECT on the VCR for approximately three seconds.

Using Two VCRs for Copying and Editing Tapes

Operating Instructions (Refer to hookup on page 6.)

Use this VCR as the playback VCR and the other as the recording VCR.


Caution: The unauthorized recording of television programs and other materials may infringe the rights of others.

1. Turn on the TV and VCRs.
2. Tune TV to the VCR viewing channel, either 3, 4, or TV's video input.
3. If you have connected your VCR using Option A (page 6), tune recording VCR to channel 3 or 4 — the one selected on the back of the playback VCR.
If you have connected your VCR using Option B (page 6), press INPUT on recording VCR's remote to select the line input (VID1).
4. Insert the tape you want to copy into playback VCR. Insert a blank tape with safety tab in place into recording VCR.
5. Press PLAY, then PAUSE on playback VCR when you reach the point on the tape or program where you want to begin copying. If the tape was not recorded on the playback VCR, streaks may appear and you may need to adjust tracking.
6. Press RECORD, then PAUSE, on recording VCR.
7. Press PAUSE buttons on both VCRs at the same time to begin copying the tape.*
8. Edit out segments that you do not want to copy by pressing PAUSE on recording VCR to stop copying the tape. Then locate the next segment you want to copy on the playback VCR by using FWD, REW, and PLAY. Press PAUSE on the playback VCR. Press PAUSE at the same time on both VCRs to resume copying.
9. Press STOP on both VCRs when you are finished.

* You may turn off the TV after the recording has started as it does not have to be on to copy a tape.

Location of Controls

Front Panel

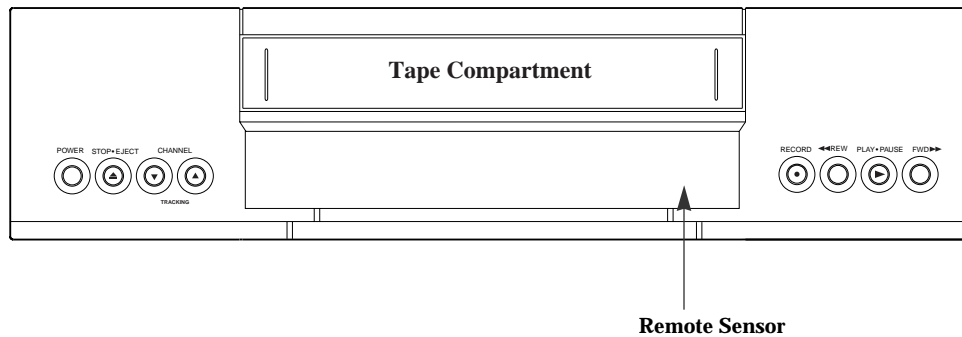

CHANNEL or TRACKING Up or Down

Selects next higher or lower channel in the VCR's channel memory.

Adjusts tracking during playback or pause.

FWD (Fast Forward)

Fast forwards the tape when the VCR is stopped.

Searches the picture forward during playback.

PLAY•PAUSE

Plays a tape.

Pauses the tape for stop-action viewing during playback.

Pauses the tape during recording to prevent recording unwanted material.

POWER

Turns the VCR on or off.

RECORD

Start the VCR recording.

Used for express recording.

Remote Sensor

Receives signals from the remote control.

Aim the remote at this sensor with no objects between them.

REW

Rewinds the tape when the VCR is stopped.

Searches the picture in reverse during playback.


STOP•EJECT

Stops the normal functions such as record, playback, rewind, fast-forward, or pause.

Press when the VCR is stopped to eject the cassette.

Location of Controls

Back Panel

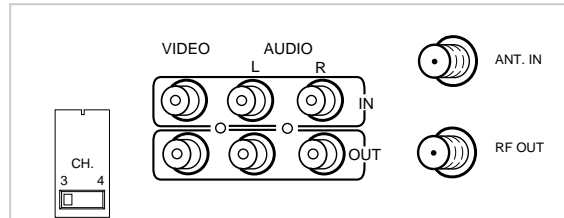

CH3 CH4 Switch

Selects the channel to which you will tune the TV to see the VCR picture if you connect the VCR using one of the basic hookups.

ANT. (Antenna) IN Connector

Receives the signal from an antenna or cable system that is attached to this connector.

RF OUT Connector

Passes signal to TV using the cable supplied.


VIDEO and AUDIO (L and R) IN Jacks

Receives signals from another component, like a VCR or camcorder, when it is connected to these jacks. Use INPUT to select VID1 in the VCR's display panel.

VIDEO and AUDIO (L and R) OUT Jacks

Sends signals from VCR to another component, like a TV monitor or VCR, when it is connected to these jacks.

Display Panel

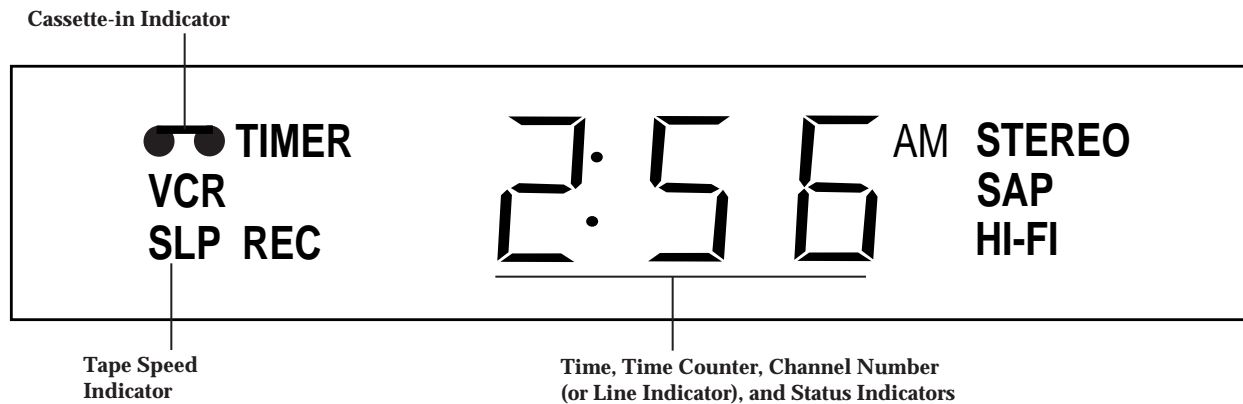**Cassette-in Indicator ()**

Lights when a tape is in the VCR. Flashes while tape is ejecting.

Channel Number, Line Indicator (VID1), Time, Time Counter, or Status Indicator

The current time, time counter, channel number, or line indicator (VID1) appears here.

Status indicators show what the VCR is doing.

BYE	Turned off
F.FWD	Fast forward
HI	Turned on
PLAY	Playback
PAUS	Frame advance
PAUS	Play pause
REC	Record
REC.P	Record pause
REW	Rewind
SLOW	Slow motion
SRCH+	Forward search
SRCH-	Reverse search
STOP	VCR stopped
T.REC	Timer recording

HI-FI Indicator

Lights during hi-fi playback when Tape Playback: HI-FI/LINEAR/MIX feature is set to HI-FI.

REC Indicator

Lights when the VCR is recording.

SAP Indicator

Lights when the Reception: STEREO/MONO/SAP feature is set to SAP, and the station you are tuned to is broadcasting SAP.

STEREO Indicator

Lights when the Reception: STEREO/MONO/SAP feature is set to STEREO, and the station you are tuned to is broadcasting stereo.

Tape Speed Indicators (SP or SLP)

Press SPEED to change.

TIMER Indicator

Lights when a timer recording is set.

VCR Indicator (Applies Only to Basic Hookups)

Press TV•VCR to turn on or off.

Specifications

Format:	VHS
Record/Playback System:	Video: 4-Head Audio: 2 Hi-Fi record/playback system
Video Signal System:	EIA standard: NTSC color
Antenna:	75-ohm external VHF/UHF combined antenna terminal
Tuner:	USA: 181 channels capability* (125 cable channels) Canada: 178 channels capability* (122 cable channels)
Type:	AutoProgramming frequency synthesis
Power Requirement:	120V AC, 60 Hz
Power Consumption:	19 watts
Dimensions:	3.5 inches high (90 mm) 14 inches wide (360 mm) 12.2 inches deep (313 mm)
Weight:	9.9 pounds (4.5 kg)
Storage Temperature Range:	- 22°F (- 30°C) to +149°F (+65°C)
Operating Temperature Range:	+41°F (+5°C) to +104°F (+40°C)

*Check your cable company's compatibility requirements.

Cleaning the VCR

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your VCR. Remove dust from the ventilation holes on the top, back, sides, and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a non-abrasive, anti-static cleaner and polisher.

Trouble Checks

Sometimes problems can be easily solved by checking a few basic things. Check below before you call for help or take your VCR to an Authorized RCA VCR Servicenter.

Trouble	Here's what to try:
No power	<ul style="list-style-type: none"> • Plug VCR into an operating outlet. • Check connections.
VCR does not respond to remote	<ul style="list-style-type: none"> • Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote to reset it. Reinstall the batteries and try remote again. • Aim remote at VCR with no objects between them. • Change batteries.
Remote no longer controls a compatible TV	<ul style="list-style-type: none"> • Press TV to set remote to control the corresponding compatible TV. <i>See page 11.</i> • Reprogram remote for RCA TV. <i>See page 11.</i> • Aim remote at TV with no objects between them. • Change batteries. • Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote to reset it. Reinstall the batteries and try remote again.
No picture when VCR turned on – using a basic hookup	<ul style="list-style-type: none"> • Press TV•VCR to turn VCR indicator on. <i>See page 10.</i> • Check to see if Auto TV/VCR feature is set to OFF. <i>See page 10.</i>
Poor or no picture for normal TV viewing	<ul style="list-style-type: none"> • Press TV•VCR to turn VCR indicator off. • Switch TV to an active channel. • Check antenna connections.
Snowy or no picture during playback	<ul style="list-style-type: none"> • Press TV•VCR to turn VCR indicator on. • Check TV channel selected (3 or 4) to make sure it matches the channel selected with CH3 CH4 switch on back of VCR. • Check TV's fine tuning. • Check video cable connections between VCR and TV monitor. • Set TV monitor to video input channel. • Try another tape. • Some snow/streaks are normal during search, frame advance, slow-motion, or stop-action playback.
Time counter not working	<ul style="list-style-type: none"> • The time counter does not advance during unrecorded portions of tape. When an unrecorded segment of tape is encountered, the time counter will hold its count until recorded material is detected again. • A minus (–) will appear in front of the time if you rewind the tape farther back than a counter reading of 0:00:00.
Will not record or play	<ul style="list-style-type: none"> • No cassette in VCR. • Eject and re-insert cassette. • Broken tape — try another cassette.

Trouble Checks

Trouble	Here's what to try:
Streaks in picture during normal playback	<ul style="list-style-type: none"> • Some snow/streaks are normal during search, frame advance, slow-motion, or stop-action playback.
Will not record	<ul style="list-style-type: none"> • VCR is in pause mode. Press PAUSE. • Safety tab removed from cassette. • Make sure the line indicator (VID1) is turned off in VCR's display panel for normal recording from the VCR's tuner. Press INPUT to turn off the line indicator.
Rewind does not operate	<ul style="list-style-type: none"> • Tape already rewound.
Timer recording not made or wrong program recorded	<ul style="list-style-type: none"> • Cable box was not turned on or was tuned to the wrong channel at time recording was to begin. • Program entered incorrectly (wrong channel or times). • Power interruption. Clock area in display panel will show - :- - -. • Check to see if time and date are correct — including AM/PM. • Check Signal Type: CABLE/ANTENNA feature. <i>See page 8.</i> • Program exceeded tape's length or tape was not rewound beforehand. • VCR was not turned off at the time recording was to start. • No tape in VCR or cassette's safety tab broken off.
Clock shows incorrect time or date	<ul style="list-style-type: none"> • Power interruption. Clock on the front panel will show --:--. • Clock was not set accurately (check AM/PM and date). • Time counter display appears in VCR's display panel. Press DISPLAY on remote.
VCR makes noise when stopped	<ul style="list-style-type: none"> • VCR is removing tape from heads. This is normal. The head cylinder inside the VCR will continue to rotate for a few minutes after you put the VCR in the stop mode.
Will not auto channel search active channels correctly	<ul style="list-style-type: none"> • Check antenna connections. • Check Signal Type: CABLE/ANTENNA feature. <i>See page 8.</i>
Cannot select channels over 69	<ul style="list-style-type: none"> • Cable channels over 69 can only be selected if Signal Type: CABLE/ANTENNA feature is set to CABLE. <i>Details are on page 8.</i>
Cassette with safety tab removed does not start to play automatically	<ul style="list-style-type: none"> • Set Auto Play ON/OFF feature to ON. <i>Details are on page 15.</i>
Displays appear in wrong language	<ul style="list-style-type: none"> • Language feature set incorrectly. <i>Details are on page 9.</i>
Stereo or SAP sound not recorded	<ul style="list-style-type: none"> • Reception: STEREO/MONO/SAP feature must be set to STEREO to record broadcast stereo. <i>See page 24.</i> • Reception: STEREO/MONO/SAP feature must be set to SAP to record SAP. <i>See page 24.</i> • STEREO or SAP indicator not on. Station not broadcasting stereo or SAP.

Limited Warranty

What your warranty covers:

- Any defect in material or workmanship.

For how long after your purchase:

- Ninety days for labor charges.
- One year for parts.

The warranty period for rental units begins with the first rental or 45 days from the date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA VCR Servicenter the labor charges to repair your VCR.
- Pay any Authorized RCA VCR Servicenter for the new or, at our option, refurbished replacement parts required to repair your VCR.

How you get service:

- Take your VCR to any Authorized RCA VCR Servicenter. To identify your nearest Authorized RCA VCR Servicenter, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the service technician your evidence of purchase date.
- Pick up your VCR when repairs are completed.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your VCR. Any additional information should be obtained from your Dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your VCR.
- Damage from misuse or neglect.
- Cleaning of video/audio heads.
- Remote control batteries.
- A VCR that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A VCR purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your VCR. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your VCR outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

Index

— A —

Accessories, Included	7
Add or Remove Channels from Memory	9
ADD/REMOVE CHANNELS Menu	9
ANT. (Antenna) IN Connector	3-6, 29
Antenna Connections	2,3
AUDIO and VIDEO Jacks	3-6,10,23,25,29
AUDIO Menu	19,24,25
Auto Channel Search Feature	8
Auto Play Feature	14,15
Auto TV/VCR Feature	3,4,10
Automatic Tracking	16

— B —

Back Panel	29
Basic Recording	21
Batteries, Inserting in Remote	7
BYE Indicator	30

— C —

Cable System With Cable Box	
Connections	2,3-5
Cable System Without Cable Box	
Connections	2,3
Cable TV Installer, Note	i
Card, Registration	i
Cassette-In Indicator	14,21,30
CH3 CH4 Switch	3-6,8,29
CHAN and CHANNEL Up and Down	
Buttons	8,9,10,11,12-13,28
Channel Number Indicator	30
CHANNELS Menu	8
Checking Timer Programs	23
Checks, Trouble	32-33
Choisissez une Langue	9
Choosing a Hookup	2
Cleaning the VCR	31
CLEAR Button	9,12-13,17,18,19,22,23
Clearing Timer Programs	23
Codes, Compatible TVs	11
Commercial Scan	18
Compatible TV Chart	11
Connections	
Antenna	2,3
Cable System With Cable Box	2,4,5
Cable System Without Cable Box	2,3
Choosing	2
Two VCRs for Tape Copying	6

Contents	1
Controlling a Compatible TV	11
Copying and Editing Tapes	27
Copying Tape, Connections	6

— D —

Date, Set	9
Design Specifications	31
DISPLAY Button	9,12-13,17
Display Panel	30
Displays, On-Screen	17
Displays, Status	17,30

— E —

Editing and Copying Tapes	27
Express Recording	26
Express recording, Stopping	26

— F —

F.ADV (Frame Advance) Button	12,16
F.FWD (Fast Forward) Indicator	30
Fast Forward Search	15
First-Time Operation	7-10
Frame Advance	16
Front Panel	28
FWD (Fast Forward) Button	12,17,18,19,28

— H —

HI Indicator	30
HI-FI Indicator	19,30
Hookups	
Antenna	2,3
Cable System With Cable Box	2,4,5
Cable System Without Cable Box	2,3
Choosing	2
Two VCRs for Tape Copying	6

— I —

Index Feature	18
INDEX SEARCH Menu	18
INPUT Button	12,22,23,24,25,27,29,30

(continued on next page)

Index

— L —

LANGUAGE Menu	9
Limited Warranty	34
Line Input, Recording From	23

— M —

Make a Recording	21
Making a Timer Recording	22
Manual Tracking	16
MENU PROG Button	8,9,10,12,22,23,24,25
MUTE Button	12-13

— N —

Note to Cable TV Installer	i
Number	
Buttons ..	8,9,10,11,12,17,18,19,21,22,23,24,25

— O —

On-Screen Displays	17
Operation	
Basic Recording	21
Copying Tapes	27
Editing Tapes	27
Express Recording	26
First Time	7-10
Playback	14
Playback Features	15-19
Recording Audio Only	25
Recording Broadcast Stereo TV	24
Recording One Channel While	
Watching Another	21
Timer Recording	22-23

— P —

PAUS Indicator	15,30
PAUSE Button	12,15,20,27
Pause for Stop Action	15
Pause, Recording	20
Picture Search	15
Play a Tape	14
PLAY Button	12,14,15,16,27
PLAY Indicator	30
Playback Sound, Selecting	19
Playback Speeds	20

Playback, Slow Motion	16
PLAY•PAUSE Button	15,16,28
POWER Button	11,12-13,14,28
PREFERENCES Menu	10,15
PREV CH (Previous Channel) Button	12-13
Problems, Solving	32-33
Product Registration	i
Program Remote to Control a TV	11
PROGRAMS OVERLAP Screen	22

— R —

REC Indicator	21,24,25,26,27,30,
REC.P (Record Pause) Indicator	20,30
Reception: STEREO/MONO/SAP	
Feature	24,25,30
RECORD Button	12-13,21,24,25,26,27,28
Recording	
Audio Only	25
Basic	21
Broadcast Stereo TV	24
Express Recording	26
From the Line Input	23
SAP (Second Audio Program)	24
Speeds	20
Timer Recording	22-23
Types of	20
Two VCRs for Copying and Editing	
Tapes	27
Registration Card	i
Remote Batteries, Inserting	7
Remote Sensor	28
Remove or Add Channels from Memory	9
REMOVE/ADD CHANNELS Menu	9
REW (Rewind) Button	12-13,14,15,18,19,28
REW Indicator	30
Rewind Search	15
RF OUT Connector	3-6, 29

— S —

Safety Precautions	i
Safety Tab	14
SAP (Second Audio Program), Recording	24
SAP Indicator	24,30
SAP, Playback	19
SEARCH Button	12-13,18,19
Searching, Picture	15
Select a Language	9
Selecting Playback Sound	19
Sensor, Remote	28

Index

Set Clock Feature 9
 Set the Time and Date 9
 SET TIME AND DATE Menu 9
 Setting a Timer Recording 22
 Setting Up the VCR 7-10
 Signal Type: CABLE/ANTENNA Feature 8
 SLOW Button 12-13,16
 SLOW Indicator 16,30
 Slow Motion Playback 16
 SLP Indicator 20,30
 SLP Speed 20
 Solving Problems 32-33
 SP Indicator 20,30
 SP Speed 20
 Specifications 31
 SPEED Button 12-13,20,21,22,24,25,26
 Speeds, Recording 20
 SRCH + and - Indicators 15,18,30
 Startup 7-10
 Status Displays 17,30
 STEREO Indicator 24,30
 Stereo TV, Recording 24
 Stop Action Pause 15
 STOP Button 12-13,17,18,19,21,22,24,26,27
 STOP Indicator 30
 Stopping a Timer Recording 22
 Stopping an Express Recording 26
 STOP•EJECT Button 14,17,21,22,24,26,28

— T —

T.REC (Timer Recording) Indicator 30
 Tab, Safety 14
 Table of Contents 1
 Tape Playback: HI-FI/LINEAR/MIX
 Feature 19
 Tape Speed Indicators 20,30
 Tape, Playing 14
 Time and Date, Set 9
 Time Counter 17,30
 Time Display 30
 Time, Set 9
 TIMER Indicator 22,30
 Timer Recording 22-23
 TIMER RECORDINGS Menu 22,23
 TRACKING Buttons 12-13,14,15,16,28
 Tracking, Automatic and Manual 16
 Trouble Checks 32-33
 Turn On TV 8
 Turn on VCR 8
 TV Button 11,12,13
 TV Codes, Compatible 11

TV, Turn On 8
 TV•VCR Button 10,12-13,21,24
 Types of Recordings 20

— U —

Use TV•VCR Button 10

— V —

VCR Controls 28-30
 VCR Indicator 8,10,12,14,21,30
 VCR MAIN MENU 8,9,10,15,19,22,23,24,25
 VCR, Cleaning 31
 VCR, Turn On 8
 VCRs Memory, Placing Channels In 8
 VCRs, Connecting for Tape Copying 6
 VID1 Indicator 9,25,29,30
 VIDEO Indicator 23,24
 VOL (Volume) Buttons 12-13

— W —

Warranty, Limited 34
 Watch One Channel While Recording
 Another 21

— X —

XPR Recording 26

— Z —

Zero Search Feature 19
 ZERO SEARCH Menu 19

For your nearest Authorized Servicenter
call toll-free in the U.S.A.

1-800-336-1900

Canadian Consumers –
Your toll free numbers are:

English: 1-800-522-0338

French: 1-800-522-0445

If your VCR needs service, please contact your dealer
or the nearest Servicenter from the yellow pages.
Please do not send any products to the Indianapolis
address listed in this manual or on the carton. This
will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**

10330 North Meridian Street
Indianapolis, IN 46290-1024

©1996 Thomson Consumer Electronics, Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
Printed in Korea
Part Number 96-VR609HF-1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>