


RCA

video cassette recorder user's guide

VR628HF

9700008

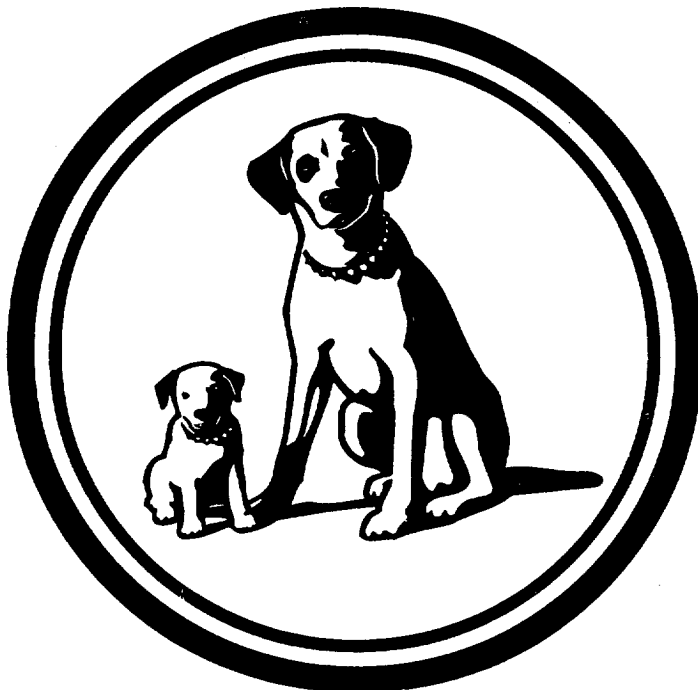

IMPORTANT INFORMATION

WARNING
RISK OF ELECTRIC
SHOCK DO NOT OPEN

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.




This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

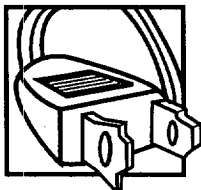

Caution: To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the product.

Model No. **VR628HF** _____

Serial No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

IMPORTANT SAFEGUARDS

In addition to the careful attention devoted to quality standards in the manufacture of your product, safety is a major factor in the design of every product. However, safety is your responsibility too.


This sheet lists important information that will help to assure your enjoyment and proper use of the product and accessory equipment. Please read them carefully before operating and using your product.

Installation


- 1 Read and Follow Instructions**—All the safety and operating instructions should be read before the product is operated. Follow all operating instructions.



- 2 Retain Instructions**—The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings**—Comply with all warnings on the product and in the operating instructions.
- 4 Polarization/Grounding**—This product is equipped with either a polarized, non-polarized, or a grounding type power cord plug. If equipped with the non-polarized type (two blades of identical size), the following does not apply.

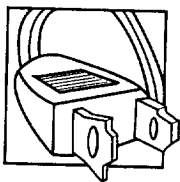


- A polarized power plug (two blades, one wider than the other) will fit into a power receptacle only one way. This is a safety feature. Do not defeat it. If you are unable to insert the plug fully, try reversing it, or have an electrician change the receptacle. If you need an extension cord, use only a polarized extension cord.

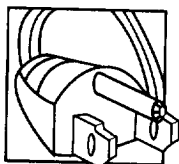

- A grounding type power plug (two blades and a round pin) will fit only into a grounding type receptacle with matching openings. This is safety feature. Do not defeat it. You may need an electrician to install a grounding type receptacle. If you need an extension cord, use only a grounding type extension cord.

- 5 Power Sources**—This product should be operated only from the type of power source indicated on the product's marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

- 6 Overloading**—Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.

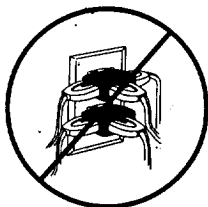


- 7 Power-Cord Protection**—Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords where they are attached to plugs, convenience receptacles and at the point where they exit from the product.
- 8 Ventilation**—Slots and openings in the enclosure are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or another heat source (including amplifiers). This product should not be placed in a built-in installation such as a bookcase or equipment rack unless proper ventilation is provided or the product manufacturer's instructions have been followed.
- 9 Attachments**—Do not use attachments unless recommended by the product manufacturer as they may cause hazards.
- 10 Water and Moisture**—Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool and the like.
- 11 Accessories**—Do not place this product on an unstable surface or support. The product may fall, causing serious injury to a child or adult as well as serious damage to the product. Any mounting of the product should follow the manufacturer's instructions and use only a mounting accessory recommended by the manufacturer.

- 11A** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



12 Outdoor Antenna Grounding—If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See example below.

Example of Antenna Grounding

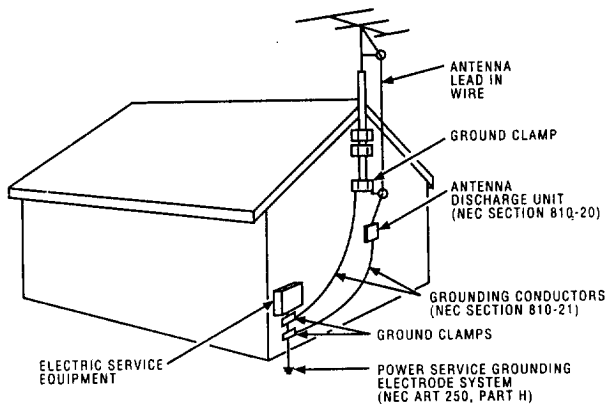

13 Power Lines—An outside antenna system should not be located in the vicinity of overhead power lines, other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching or approaching such power lines or circuits as contact with them might be fatal. Installing an outdoor antenna can be hazardous and should be left to a professional antenna installer.

Use

14 Cleaning—Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

15 Object and Liquid Entry—Never push objects of any kind into this product through openings as they may touch dangerous voltage or “short-out” parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

16 Lightning—For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges.



Service

17 Servicing—Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18 Conditions Requiring Service—Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance, such as the inability to perform basic functions—this indicates a need for service.

19 Replacement Parts—When replacement parts are required, have the service technician verify that the replacement parts he uses have the same safety characteristics as the original parts. Use of replacements specified by the product manufacturer can prevent fire, electric shock, or other hazards.

20 Safety Check—Upon completion of any service or repairs to this product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the product is in safe operating condition.

TABLE OF CONTENTS

First Things First	3
Setting up the VCR	7
Using the Menu to Set Up Features	8
Language	8
Digital Satellite System Setup	8
Cable Box Setup	10
VCR Channels List.....	12
To Auto Channel Search	13
To Change the Signal Type.....	14
To Add or Remove Channels	14
Time and Date.....	14
Set Daylight-Saving Time	14
Set the Time and Date	15
VCR Plus+ Channels	16
Additional Set-Up Features in the PREFERENCES Menu.....	18
Remote VCR1/VCR2 Option	18
Auto Play.....	19
Auto TV/VCR.....	19
Front Panel (VCR Display)	20
VCR Basics	21
Remote Buttons.....	22
Component Buttons	22
VCR Function Buttons.....	22
TV Function Buttons	24
Playing a Tape	24
Automatic Rewind.....	25
Tape Eject	25
Recording	25
Check the Safety Tab	26
Recording	27
Recording Features	28
Express Recording	28
Timer Recording	29
Timer Recording with VCR Plus+	30
Stopping a Timer Recording	32
Reviewing and Clearing Programs	32
Recording Broadcast Stereo TV or SAP (Second Audio Program).....	32
Recording Audio Only	33
Using Two VCRs for Copying and Editing Tapes	34

TABLE OF CONTENTS

Programming the Remote	35
To Control a TV	36
To Control an Auxiliary Component	38
To Control a Laser Disc Player or DVD Component	39
To Control a Digital Satellite Receiver or Cable Box	40
Other Features	41
Picture Search Options	42
Forward and Reverse Search	42
Slow Motion	42
Commercial Scan (SEARCH Button)	42
Frame Advance	43
Index Search	43
Go-To Search	44
Tracking	44
Time Counter	44
On-Screen Displays	45
Audio Set-Up Features	46
Reception	46
Tape Playback	47
Connections	49
Things to Know Before Connecting Components	49
Connecting Your VCR	50
Jacks and Cables	50
Choosing a VCR Connection	51
Advantages of Audio/Video Cable Connections	51
Don't Forget About the Auto TV/VCR Feature	51
TV with RF Jack Only	52
TV with Audio/Video Jacks	53
TV with Audio/Video Jacks and Cable Box to Unscramble Pay Channels Only	54
TV with RF Jack and Satellite Receiver	55
TV with Audio/Video Jacks and Satellite Receiver	56
Appendix A: Reference	57
Front Panel	58
Display Panel	59
Back Panel	60
Troubleshooting Tips	61
Specifications	64
Cleaning the VCR	64
Limited Warranty	65
Index	66

FIRST THINGS FIRST

HI, MY NAME IS ROGER...

and I wrote this User's Guide. It's my job to see that you have a rewarding user manual experience. And, I think you'll be pleased with the features that can be accessed through the on-screen menus.

READ THE FIRST THREE SECTIONS

The first three sections of the manual introduce you to your VCR, and show you how to set the VCR up and use the on-screen menus. Reading these sections gives you the basic information you need to use your VCR.

WHAT'S LEFT?

The rest of the book highlights playback and recording information, contains a detailed connections section, and a reference section that includes troubleshooting tips, limited warranty, and index.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

READ ME!

These note boxes give you tips for your new video cassette recorder.

FIRST THINGS FIRST

STEP 1: UNPACK THE BOX

The following items come packed in the box:

- VCR
- Remote control
- RF coaxial cable

STEP 2: INSTALL BATTERIES IN THE REMOTE CONTROL


Follow these steps whenever you need to install or change the batteries in your VCR remote.

1. Remove the cover of the battery compartment.
2. Place batteries in the remote, matching the + and – ends of each battery to the diagram inside the compartment.
3. Replace the cover.

STEP 3: CONNECT YOUR VCR

If you connect your VCR to your home antenna or cable system and then to your TV, use the VCR's IN FROM ANT and OUT TO TV jacks for a good signal as shown.


If you have a TV with AUDIO/VIDEO jacks, use the jacks for a better connection. Refer to the *Connections* section, toward the back of the manual.

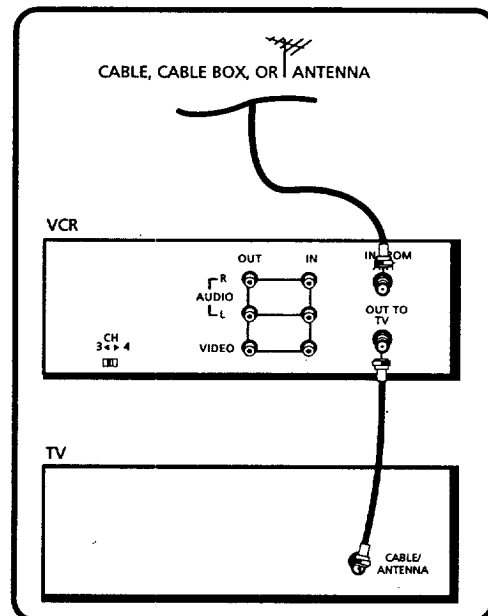

FIRST THINGS FIRST

STEP 4: PLUG IN THE VCR

Match the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

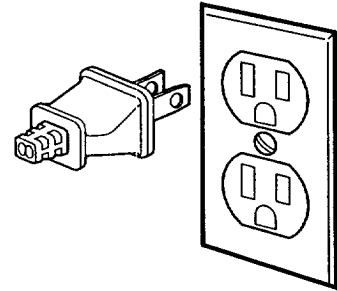

STEP 5: TUNE THE TV

Tune the TV to the VCR viewing channel. The VCR viewing channel is channel 3 or 4 or the TV's video input, depending on the connection you've chosen.

- If you connect your VCR using the ANTENNA connectors with RF coaxial cable, set the 3CH4 switch to channel 3 or channel 4--the channel you want to use on your TV.
- If you connect your VCR using the AUDIO/VIDEO jacks with audio/video cables, select the TV's video input to see the signal. See the *TV Owner's Manual*.

STEP 6: TURN ON THE VCR

Press POWER on the VCR's front panel, or VCR on the remote to turn on the VCR. To set up the VCR, you will need to understand how to move through and change items in the on-screen menus.

STEP 7: ACCESS THE MENUS

The MENU•PROG and number buttons let you access, select and change menu items. For example, to change the AUTO PLAY setting, you would do the following:

VCR Viewing Channel

When using the IN FROM ANT and OUT TO TV jacks to connect your VCR, tune your TV to channel 3 or 4.

When using the audio/video jacks to connect your VCR, tune your TV to the TV's video input.

FIRST THINGS FIRST

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 5 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play:      ON
3 Auto TV/VCR:   ON
4 Front Panel    AUTO
0 Exit
```

3. Press 2 to switch Auto Play to ON or OFF.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play:      OFF
3 Auto TV/VCR:   ON
4 Front Panel    AUTO
0 Exit
```

See *Additional Set-Up Features* for detailed information about the Auto Play feature.

STEP 8: SET UP THE VCR

Once you understand how to move around through the menus, go to the next section to set up your VCR.

SETTING UP THE VCR

SET-UP FEATURES

Below is a list of features that you may want to set up before you begin using your VCR for the first time.

- Select a Language
- Set Up a Digital Satellite System
- Set Up for a Cable Box
- Set up VCR Channel List (Auto Channel Search)
- Set Daylight-Saving Time
- Set the Time and Date
- Set up VCR Plus+ Channels
- Set the Remote VCRI/VCR2 feature
- Set the Auto Play feature
- Set the Auto TV/VCR feature
- Set the Front Panel Brightness feature

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

SETTING UP THE VCR


USING THE MENU TO SET UP FEATURES

You can set up features by using the menu system. The features you may want to set up before you begin using your VCR are explained in this section.


LANGUAGE

Select your preferred language, and the on-screen displays will appear in that language.

1. Press MENU•PROG to display the VCR MAIN MENU.

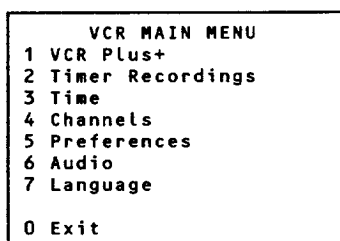

2. Press 7 to select the LANGUAGE menu.

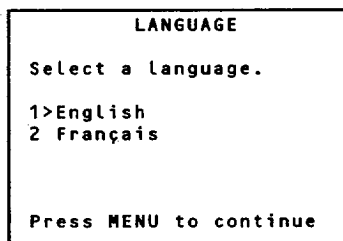

3. Select English or Français (French).

DIGITAL SATELLITE SYSTEM SETUP

With this setup, the VCR turns on an RCA, ProScan, or GE digital satellite receiver and tunes it to the desired channel at the start time of a timer recording. Position the Satellite receiver on top of the VCR as shown in the *Connections* section.

For other brands, the VCR tunes the receiver to the desired channel only if the receiver is turned on.

1. Press MENU•PROG to display the VCR MAIN MENU

On-Screen Menus

Not all the VCR screens are shown in this manual when explaining the features.

SETTING UP THE VCR

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
6 DSS Setup
0 Exit
```

3. Press 6 to select DSS SETUP.

```
DSS SETUP
On what channel does
the VCR receive signals
from the DSS receiver?
--
Enter 01-125 or INPUT
Press MENU to cancel
```

4. Enter the output channel of your satellite receiver, usually 03, 04, or video line input and press MENU•PROG. The VCR confirms that it receives all DSS® signals on the specified channel.

```
DSS SETUP
The VCR will now
receive all signals
from the DSS receiver
on channel 03.
Press MENU to continue
```

5. Press MENU•PROG and enter the code for your Digital Satellite Receiver from the Satellite Receiver Code List.

```
DSS SETUP
Enter the code for your
DSS receiver from the
list in your User's
Manual
00
Press MENU to cancel
```

Satellite Receiver Codes

GE	00
Panasonic.....	01
ProScan	00
RCA	00
Toshiba	02
Sony	03

The VCR may not be able to control all models of the brands listed.

SETTING UP THE VCR

6. Turn on your satellite receiver and tune it to channel 100 and then press MENU•PROG. Follow the on-screen directions.

```
DSS SETUP

Please turn on your
DSS Receiver and tune
it to channel 100.

Press MENU to continue
```

Once you have completed the setup, the VCR confirms the DSS Setup is completed or canceled.

CABLE BOX SETUP

This setup applies only when all channels are received through the cable box. There are two options:

- The first sets up the VCR for the output channel of the cable box signal.
- The second sets up the VCR for remote-controllable cable boxes so it can control the cable box by changing channels for timer or VCR Plus+ recordings. Position the remote-controllable cable box on top of the VCR as shown in *the Connections* section.

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
6 DSS Setup
0 Exit
```

SETTING UP THE VCR

3. Press 5 to display CABLE BOX SETUP. Then select one of the three choices.

```
CABLE BOX SETUP
Do you use your cable
box to receive ALL
channels or only SOME
Channels?

1 ALL channels
2 Only SOME channels
3 Cancel setup
```

4. If you selected ALL channels, enter the output channel of your cable box, usually 03, 04, or video line input and press MENU.

```
CABLE BOX SETUP
On what channel does
the VCR receive signals
from the cable box?
(usually 3, 4, or Video)

--

Enter 01-13 or INPUT
Press MENU to cancel
```

Once you complete the setup, the VCR confirms that the VCR will now receive all signals on the designated channel.

5. Press MENU•PROG and select whether your cable box is remote controllable.

```
CABLE BOX SETUP
Can your cable box be
operated with a remote
control?

1 Yes
2 No
```

6. If your cable box is remote-controllable, turn it on and tune it to channel 2. Press MENU•PROG to continue.

```
CABLE BOX SETUP
Please turn on your
Cable Box and tune
it to channel 2.

Press MENU to continue
```

Cable Box Setup

ALL channels: enter two numbers for output channel of your cable box or press INPUT.

Only SOME channels: if you only use the cable box to tune premium channels.

Cancel setup: select to cancel.

SETTING UP THE VCR

7. Enter the code for your cable box from the cable box code list.

CABLE BOX SETUP

Enter the code for your cable box from the list in your User's Manual.

--

Press MENU to cancel

8. Select one of the choices and follow the on-screen instructions.

CABLE BOX SETUP

Did the cable box tune to channel 9?

1 Yes, setup is complete
2 No, try another code
3 No, cancel setup

Once you have completed the setup, the VCR confirms the CABLE BOX SETUP is completed or canceled.

CABLE BOX SETUP

The VCR will now receive all signals from the cable box on channel 04.

Press MENU to continue

VCR CHANNELS LIST

If you use a cable box for *all channels*, this step is not necessary. Your VCR may come with a channel list preset at the factory. Even though your VCR may come with a list, it's possible that you may want to add or eliminate some channels depending on whether they are active.

Cable Box Codes

ABC	22, 46, 53, 54
Anvision	07, 08
Cablestar	07, 08
Eagle	07, 08
Eastern International	02
General Instrument	04, 05, 15, 23, 24, 25, 30, 36, 46
Hamlin	12, 13, 34, 48
Hitachi	37, 43, 46
Jerrold	04, 05, 15, 23, 24, 25, 30, 36, 45, 46, 47
Macom	37, 43
Magnavox	07, 08, 19, 21, 26, 28, 29, 32, 33, 40, 41
NSC	09
Oak	01, 16, 38
Oak Sigma	16
Panasonic	03, 27, 39
Philips	07, 08, 19, 21, 26, 28, 29, 32, 33, 40, 41
Pioneer	18, 20, 44
Randtek	07, 08
RCA	00, 27
Regal	12, 13
Regency	02, 33
Samsung	44
Scientific Atlanta	03, 22, 35
Stargate Atlanta	58
Signature	46
Sylvania	11, 59
Teknika	06
Texscan	10, 11, 59
Tocom	17, 21, 49, 50, 55
Unika	31, 32, 41
Viewstar	07, 08, 19, 21, 26, 28, 29, 32, 33, 40, 41
Warner Amex	44
Zenith	14, 42, 57

The VCR may not be able to control all models of the brands listed.

SETTING UP THE VCR

To Auto Channel Search

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
6 DSS Setup
0 Exit
```

3. Press 1 to display the AUTO CHANNEL SEARCH menu.

```
AUTO CHANNEL SEARCH
What type of signal
are you using?
1 Cable TV
2 Antenna
3>Detect Automatically
0 Cancel
```

4. Select one of the three AUTO CHANNEL SEARCH options.

Choices one and two are self-explanatory. If you choose Detect Automatically, the VCR automatically detects which signal system you have attached to your VCR.

```
AUTO CHANNEL SEARCH
Now scanning channel 14
Press any key to cancel
```

The VCR begins scanning for the available channels--this takes about one to two minutes. The lowest channel is tuned once the search is complete. Now pressing CHANNEL up or down should only select the active channels.

Detect Automatically

A strong cable or antenna signal in your area may cause Auto Detect to mis-detect. If this should happen, select 1 or 2 for the system you have.

Auto Channel Search

Use the Auto Channel Search feature to place all available channels in memory.

If you ever change cable or antenna signals, you may need to Auto Channel Search again.

SETTING UP THE VCR

To Change the Signal Type

1. Press MENU•PROG to display the VCR MAIN MENU.
2. Press 4 to display the CHANNELS menu.
3. Press 3 to change the Signal Type between CABLE and ANTENNA.

To Add or Remove Channels

You may want to add or remove channels after you Auto Channel Search, especially if some of the channels have weak signals or you don't want to watch them.

1. Press MENU•PROG to display the VCR MAIN MENU.
2. Press 4 to display the CHANNELS menu.
3. Press 2 to display the ADD/REMOVE CHANNELS screen. Use CHANNEL up or down or number buttons to go to the channels you want to remove or add.

```
ADD/REMOVE CHANNELS

Channel 115
is presently ADDED

Press CLEAR to remove
Press MENU to exit
```

```
ADD/REMOVE CHANNELS

Channel 115
is presently REMOVED

Press INFO to add
Press MENU to exit
```

TIME AND DATE

Before you set the time and date, set the Auto DST (Daylight-Saving Time) feature to ON or OFF for your area.

Set Daylight-Saving Time

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```


Selecting Channels

The CHANNEL up and down buttons access those channels active in your VCR channel list.

You can still access channels not in the channel list by using the number buttons on the remote.

SETTING UP THE VCR


2. Press 3 to display the TIME menu.

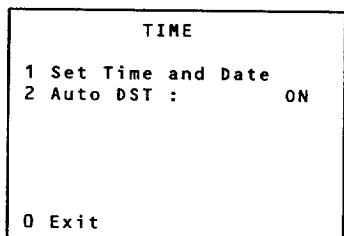


3. Press 2 to turn Auto DST: ON or OFF.
- Select ON if you want the VCR's clock to automatically adjust for daylight-saving time.
 - Select OFF if you do not want the VCR's clock to adjust for daylight-saving time.

Set the Time and Date

1. Press MENU•PROG to display the VCR MAIN MENU.
2. Press 3 to display the TIME menu.
3. Press 1 to display the SET TIME AND DATE menu.

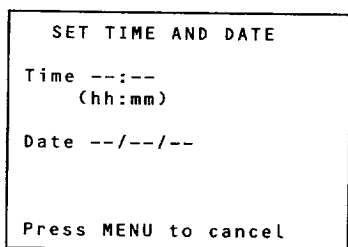

4. Enter the data using the number buttons. Press 0 before single-digit numbers and follow the on-screen directions.

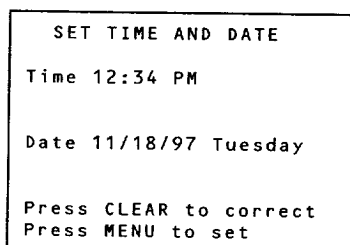

Spring forward; Fall backward

In the Spring, daylight-saving time begins on the first Sunday in April. Because the clock automatically changes from 2:00 AM to 3:00 AM (forward one hour), remember to include the extra hour for timer recording falling within this time frame.

In the Autumn, daylight-saving time ends on the last Sunday in October. The VCR clock automatically changes from 2:00 AM to 1:00 AM (back one hour). Therefore, it can affect your recording length.

Time/Date Display

Pressing INFO on the remote displays the time and date on the screen.

SETTING UP THE VCR

VCR PLUS+ CHANNELS

Using VCR Plus+ can make programming timer recordings for cable or off-air antenna easier, but you have to put in a little time right now to set up a channel list. A worksheet and abbreviated codes for typical cable services in the U.S. and Canada are provided.

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 4 to display the CHANNELS menu.

```
CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List
5 Cable Box Setup
6 DSS Setup
0 Exit
```

3. Press 4 to display the VCR Plus+ Channel List screen.

```
VCR+ Channel My Channel
5          --
4          --
3 -> -> -> --
2          --
1          --

Use CH+/- to select
Press 0-9 to change
Press MENU to exit
```

4. Enter the data following the on-screen directions using your worksheet.

```
VCR+ Channel My Channel
5          46
4          --
3 -> -> -> 23
2          --
1          --

Use CH+/- to select
Press 0-9 to change
Press MENU to save
```

Screen is for an example only.

Two-Digit VCR Plus+ Channel Numbers for Cable TV (USA List)

35	American Movie Classics
39	Arts &-Entertainment
57	Black Entertainment
54	Bravo
42	Cable News Network
45	Cinemax
98	Cinemax 2
37	The Discovery Channel
53	The Disney Channel
63	Entertainment Television
34	ESPN Sports Network
47	The Family Channel
33	Home Box Office
95	Home Box Office 2
96	Home Box Office 3
51	The Learning Channel
46	Lifetime
58	The Movie Channel
48	Music Television
49	The Nashville Network
38	Nickelodeon
64	Nostalgia Television
99	Quality Value Cable
41	Showtime
97	Showtime 2
59	Sports Channel
52	Turner Network Television
44	USA-Network
62	Video Hits 1
93	Viewer's Choice 1
94	Viewer's Choice 2
55	WGN Chicago
43	WTBS Atlanta
60	WWOR-New York

See next page for Canadian List

VCR Plus+ Channel List

Refer to your local television list for a complete VCR Plus+ channel list for your viewing area or contact your cable company. Using the list may save you some time.

SETTING UP THE VCR

ADDITIONAL SET-UP FEATURES IN THE PREFERENCES MENU

The features in this section are all accessed through the PREFERENCES menu.

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 5 to display the PREFERENCES menu.

```
PREFERENCES
1 Remote Control: VCR1
2 Auto Play: ON
3 Auto TV/VCR: ON
4 Front Panel AUTO
0 Exit
```

Now you are ready to select an item from the menu to set up.

REMOTE VCR1/VCR2 OPTION

If you own a compatible RCA, GE, or ProScan remote that has a VCR2, VCR2•LD, or VCR2•DVD button, this feature allows you to set this VCR to respond to that button.

Press 1 to select the Remote Control item. Then press the VCR2, VCR2•LD, or VCR2•DVD button to change.

```
PREFERENCES
(PRESS VCR2 TO CHANGE)
2 Auto Play: ON
3 Auto TV/VCR: ON
4 Front Panel AUTO
0 Exit
```

```
PREFERENCES
1 Remote Control: VCR2
2 Auto Play: ON
3 Auto TV/VCR: ON
4 Front Panel AUTO
0 Exit
```

Remote Control Option

Changing the remote option to VCR2 disables the remote that came with your VCR.

SETTING UP THE VCR

The VCR will only respond to the compatible remote's VCR2, VCR2•LD, or VCR2•DVD button. If you change the remote setting to VCR2, the remote that came with your VCR will no longer control it.

Use the compatible remote to change the remote setting back to VCR1. Display the PREFERENCES menu, press 1, and then press VCR on the VCR's remote.

AUTO PLAY

This feature allows the VCR to automatically start playing when you insert a tape with the safety tab removed. Press 2 to switch between ON or OFF.

- Select ON if you want a tape with its safety tab removed to start playing automatically when the tape is inserted.
- Select OFF if you *do not* want a tape with its safety tab removed to start playing automatically.

AUTO TV/VCR

This feature controls whether the TV/VCR switch changes automatically to the VCR mode, when the VCR is turned on. Press 3 to switch between ON and OFF.

- Select ON if you want the VCR to switch to the VCR mode when the VCR is turned on or a cassette is inserted. *This only applies if you connect the IN FROM ANT and OUT TO TV jacks of your VCR and TV and watch your VCR on channel 3 or 4 of your TV.*
- Select OFF if you want the VCR to remain in the TV mode. This is useful if you watch your VCR on the TV's video input and you don't want your antenna/cable signal interrupted by the VCR.

Auto TV/VCR

Pressing TV•VCR will still switch between the VCR and TV mode.

VCR mode: VCR indicator in the display panel lights.

TV mode: VCR indicator turns off.

SETTING UP THE VCR

FRONT PANEL (VCR DISPLAY)

You can change the brightness level of the fluorescent display panel on the front of the VCR. Press 4 to switch between the options.

- AUTO brightens the display when the VCR is on and dims the display when the VCR is off.
- BRIGHT keeps the display bright.
- DIM keeps the display at a low brightness level.

VCR BASICS

LEARN THE BASICS TO GET YOU STARTED

These VCR basics should be enough for you to begin enjoying your VCR. Learning the remote control functions, playing a recorded tape, and recording a program should do just that.

However, there are other features that enhance the enjoyment of your VCR, but they aren't necessary to get you started. If you want to learn more about your VCR, just keep reading.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

VCR Basics tells you what you need to know in order to watch a movie or tape your favorite show.

VCR BASICS

REMOTE BUTTONS

Your backlit remote has a light button (💡) that glows in the dark. Press this button to light the buttons on the remote. The remote buttons remain lit when they are pressed within a few seconds of each other. When you finish, the light turns off automatically to conserve battery power.

The remote control is capable of controlling your VCR and many additional components. Compatible RCA, ProScan, and GE components work automatically. Other brands may require you to program the remote.

COMPONENT BUTTONS

AUX Used with PWR button to turn on a compatible RCA audio component.

PWR Turns off VCR when remote is set to control the VCR. Also turns some compatible components on and off.

SAT•CABLE Turns on a compatible RCA, ProScan, or GE digital satellite receiver. Can be programmed to control different brands of receivers. Used with the PWR button to turn on a compatible cable box (if programmed) and sets the remote to control the TV.

TV Turns on a compatible RCA, ProScan, or GE TV and sets the remote to control the TV. Also used with the OFF button to turn on a different brand of TV (if programmed) and sets the remote to control the TV.

VCR1 Turns on a compatible RCA, ProScan, or GE VCR and sets the remote to control the VCR.


VCR2•DVD Turns on a second compatible RCA, ProScan, or GE VCR and sets remote to control the VCR. The remote must be programmed to control other brands of VCRs. Also turns on and controls compatible laser disc and DVD players.

VCR FUNCTION BUTTONS

CHAN Up or Down Selects next higher or lower channel in the VCR's channel memory.

CLEAR Resets time counter to 0:00:00. Allows you to change entries when setting the clock or a timer recording.

EDIT Signals two properly connected compatible VCRs to begin copying a tape.

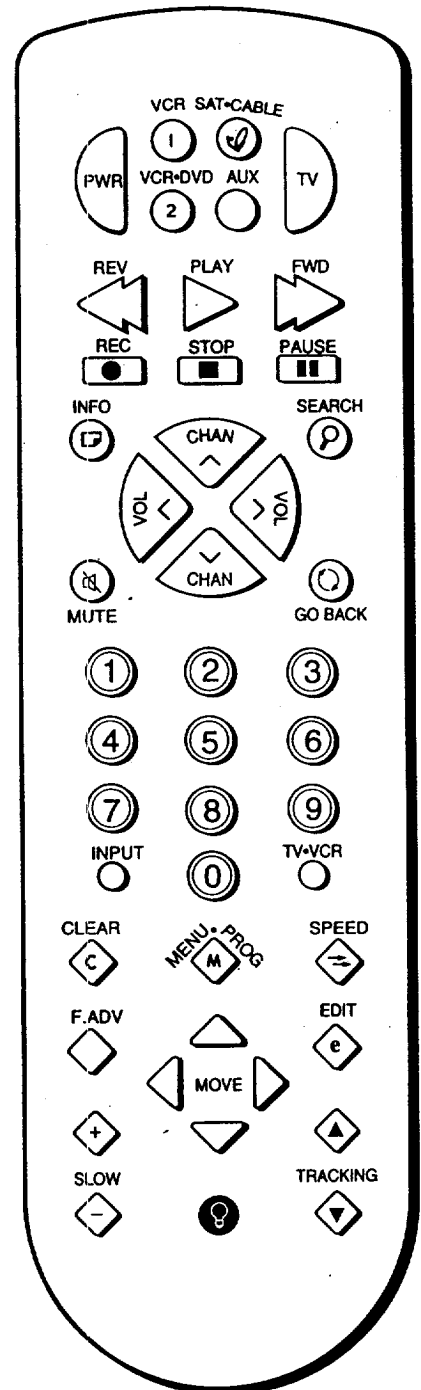

VCR BASICS

F.ADV (Frame Advance) Lets you view one frame with each press of the button when tape is in pause.

FWD (Foward) Fast forwards the tape when the VCR is stopped. Searches forward through a tape during playback. Starts slow-motion during play-pause and increases slow-motion speed.

GO BACK Switches between two channels. Select one channel and then select another using the number buttons. Press GO BACK to switch between the two channels. In menu mode, press to go back to previous menu.

INFO Shows the status displays on the TV screen.

INPUT Selects between the line input and the VCR's tuner. Line input refers to the signal coming from the component connected to the audio/video input jacks on the back of the VCR.

MENU•PROG Displays VCR MAIN MENU on the TV screen. Used to select a menu item or exit a menu.

MOVE (Arrow Buttons) Allow you to move through the menus, enter data, and change settings of selected features.

Numbers (0 through 9) Select a channel up to 99 by pressing two numbers. Select a cable channel over 99 by pressing and holding 1 until 1 -- appears on the screen. Then press the other two numbers.

PAUSE Pauses playback or recording. Press PAUSE again to return to playback or recording.

PLAY Plays a tape.

PWR Turns off the VCR when the remote is set to control the VCR.

REC Starts VCR recording. Also used for express recording.

REV Rewinds the tape when the VCR is stopped. Searches backward through a tape during playback. Starts slow-motion playback when tape is paused and decreases speed of slow-motion playback.

SEARCH Displays Index and Go-To Search menus on TV screen when VCR is stopped. Advances the tape 30 seconds of recorded material during playback.

SLOW + AND - Used for slow-motion playback. Press + to increase the speed or - to decrease the speed.

SPEED Selects a recording speed (SP or SLP).

TV Buttons

The TV buttons may not control all features of all models of RCA, ProScan, and GE TVs.

VCR BASICS

STOP Stops the current VCR function such as record, playback, rewind, or fast forward.

TRACKING Up or Down Lets you manually reduce the streaks that may appear on the picture during play, slow motion, or pause. Reduces picture "jitter" during stop-action playback.

TV•VCR Switches the picture signal so that it either comes from the VCR or cable/antenna system.

TV FUNCTION BUTTONS

CHAN Up or Down Selects next higher or lower channel in the TV's channel memory.

CLEAR Removes menus or status displays from the screen.

GO BACK Switches between two channels. Select one channel and then select another using the number buttons. Press GO BACK to switch between the two channels.

INFO Shows the TV's status displays on the TV screen.

MUTE Reduces volume to minimum level.

Numbers (0 through 9) Select a channel up to 99 by pressing two numbers. Select a cable channel over 99 by pressing and holding 1 until 1 -- appears on the screen. Then press the other two numbers.



PWR Turns the TV off.

SLOW + and - Used with some TV menus to select and adjust features.

VOL Up and Down Raises and lowers sound of TV.

PLAYING A TAPE

1. Tune the TV to your VCR viewing channel (3, 4, or TV's video input).
2. Insert a tape in the VCR.

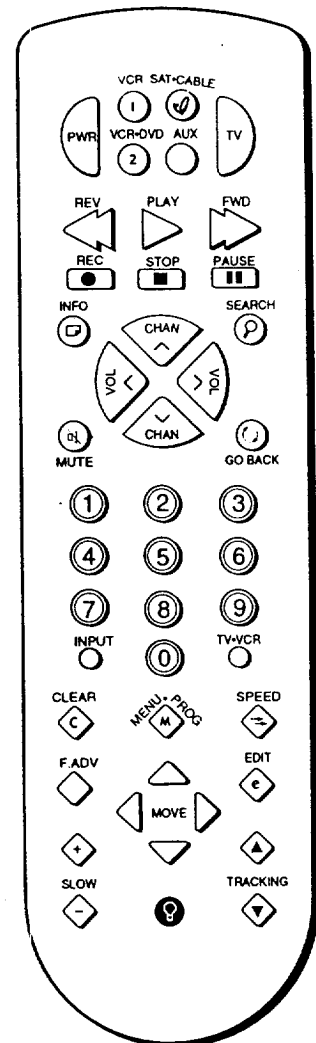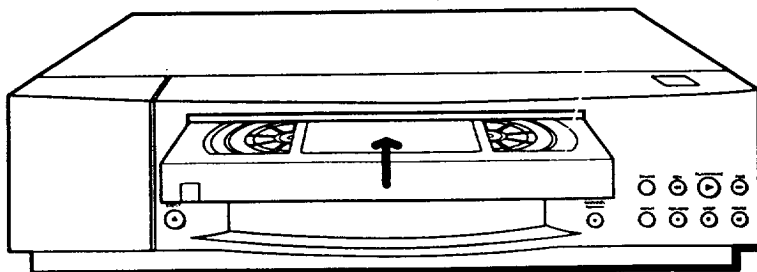

Automatic Tracking

The VCR has automatic tracking which adjusts the picture when playing back a tape recorded on another VCR. Automatic tracking is turned on whenever a tape is inserted or the VCR's power is turned on.

VCR BASICS

If the Auto Play feature is set to ON, the tape automatically begins playback (if the safety tab on the cassette is removed).

- Press FWD or REV to position the tape.
- Press PLAY (if necessary) to begin tape play.
- Press PAUSE for stop action.
- Press TRACKING up or down to remove any streaks from the picture, if necessary.
- Press STOP to stop playback.

AUTOMATIC REWIND

The VCR automatically rewinds the tape if it reaches the end of the tape during playback. While rewinding, you can press POWER on the VCR (OFF on the remote) and the VCR will turn off after rewinding.

TAPE EJECT

Press EJECT on the VCR when it is stopped to eject the tape.

RECORDING

If you want to record something that you're watching, you can use basic recording.

1. Set the tape speed by pressing the SPEED button on the remote (see margin note for information about tape speed settings).
2. Press the RECORD button to begin recording.
3. Press STOP to stop recording.

If you just want to pause the recording for a short time (during a commercial, for instance), press PAUSE instead of STOP.

Pause

If you pause, the VCR automatically switches from pause to stop after a few minutes to reduce tape wear.

Tape Speeds

SP (Standard Play)

Gives the best quality recording, but fewer programs can be recorded on the tape. Special effects such as pause, slow motion, picture search, and frame advance work well when you play back tapes recorded in this speed.

LP (Long Play)

Your VCR is capable of playing back tapes recorded in LP. You cannot record in the LP speed.

SLP (Super Long Play)


Gives three times the recording time of tapes recorded in SP. Special effects such as pause, slow motion, picture search, and frame advance work well when you play back tapes recorded in this speed.

Cassette	Recording Time	
	SP	SLP
T-120	2Hr	6Hr
T-160	2Hr 40Min	8Hr

VCR BASICS

CHECK THE SAFETY TAB

 No matter which recording option you use, you need to make sure there is a tape in the VCR, and that the tape's safety tab is in place. You cannot record on a tape with the safety tab removed.

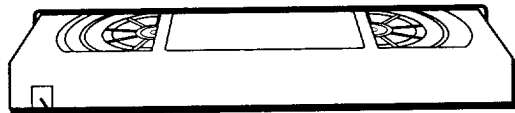

Safety Tab

If the safety tab is removed and you want to record over the tape, simply cover the hole with vinyl tape.

RECORDING

SEVERAL RECORDING OPTIONS

Now that you've gone through the necessary steps to operate your VCR, I'll explain the different recording features that are available to suit your needs.

Recording Features:

- Recording (explained in *VCR Basics* section)
- Express Recording
- Timer Recording
- Timer Recording with VCR Plus+
- Broadcast Stereo or Second Audio Program (SAP)
- Audio Only Recording
- Copying and Editing Tapes

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

RECORDING

RECORDING FEATURES



There are four ways to record programs:

- **Recording** lets you press one button to start recording a program. (See *VCR Basics* section.)
- **Express Recording** lets you start recording a program you are watching, and then set the VCR to automatically stop recording after a designated period of time.
- **Timer Recording** lets you program the VCR to automatically start and stop recording at a predetermined time.
- **Timer Recording with VCR Plus+** lets you program the VCR just by entering a PlusCode number found in some TV guides.

EXPRESS RECORDING (XPR)

Use express recording when you want to quickly record the remaining portion of the program you are watching.

1. Set the tape speed by pressing the SPEED button on the remote.
2. Press the RECORD button to begin recording.
3. Repeatedly press the RECORD button to set up the recording duration.

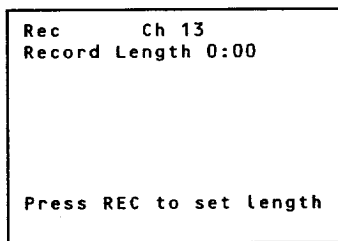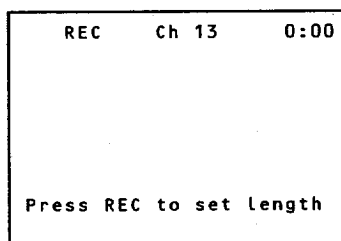

Each time you press the RECORD button, you increase the recording time (up to 4 hours).

The VCR continues to record for the amount of time you indicate, and then automatically turns off.

Express Recording

Express recording is a great way to tape the last quarter of the game, or the last part of a movie when you have to leave.

To stop an express recording, press and hold STOP for a few seconds.

RECORDING

TIMER RECORDING

You can set up as many as eight timer recording programs.

1. Press MENU•PROG to display the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

2. Press 2 to display the TIMER RECORDINGS menu.

```
TIMER RECORDINGS
1 Create a New Program
2 Review Existing Progs.
3 Use VCR Plus+ Code
0 Exit
```

3. Press 1 to Create a New Program.

```
How often should this
program record?
1 One Time
2 Daily (every day)
3 Weekdays (M-F)
4 Weekly (Once per week)
0 Cancel
```

4. Select how often you want the program to record.

```
Program 1 (One Time)
Channel  --
Start Time ---:--
End Time  ---:--
Start Date --/--/--
Tape Speed SLP
Press MENU to cancel
```

5. Enter the data for the program with the number buttons.

The data includes the channel number (press INPUT to select the line input), start time including AM or PM, and end time. The start date is automatically entered based on the VCR clock. Both the date and speed can be changed.

Timer Recording Information

Clock must be set correctly.

Insert a tape with the safety tab in place and enough tape to record the program.

The output of your cable box appears in the Channel item of the timer recording menu if you've set up the VCR for a cable box for all channels.

PROGRAMS OVERLAP appears if you have entered two programs where the times overlap.

The TIMER indicator appears in the display when you turn off the VCR and a timer recording has been set. It flashes if there is no tape in the VCR.

For cable box or satellite receiver the VCR can control, turn it on before the recording is to begin. Enter the cable or satellite channel number to be recorded in the Channel item of the timer recording menu.

For cable box or satellite receiver the VCR cannot control, turn it on and tune it to the channel you want to record before the recording is to begin.

RECORDING

- Review the information to make sure it is correct, and then press MENU•PROG to save.

```
Program 1 (One Time)
Channel    03 Cable
Start Time 08:00 PM
End Time   09:30 PM
Start Date 10/24/97 FRI
Tape Speed SLP
           1=SP 2=SLP
Press CLEAR to correct
Press MENU to save
```

```
Program 1 has been saved
Remember to insert a
recordable tape and
turn the VCR off before
the program start time.
Press MENU to continue
```

TIMER RECORDING WITH VCR PLUS+

You can use VCR Plus+ to simplify timer programming if you have cable TV and don't receive all channels through a cable box, have a cable box the VCR can control, or if you get your TV signal off-air.

Setting Up the Channel List

If you did not set up the VCR Plus+ channel list, you can do it now.

- Display the CHANNELS menu from the VCR MAIN MENU.
- Display the VCR Plus+ Channel List menu.
- Go to *Setting Up Your VCR* if you need more information on setting up your VCR Plus+ channel list.

Using VCR Plus+

- Press MENU•PROG to bring up the VCR MAIN MENU.

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels
5 Preferences
6 Audio
7 Language
0 Exit
```

- Press 1 to display the VCR PLUS+ menu.

```
VCR PLUS+
Enter PlusCode number
(from TV listing)
-
Press MENU to cancel
```

```
VCR MAIN MENU
1 VCR Plus+
2 Timer Recordings
3 Time
4 Channels

CHANNELS
1 Auto Channel Search
2 Add/Remove Channels
3 Signal Type: CABLE
4 VCR Plus+ Channel List

VCR+ Channel My Channel
5          46
4          --
3 -> -> -> 23
2          --
1          --

Use CH+/- to select
Press 0-9 to change
Press MENU to save
```

VCR Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation.

RECORDING

3. Enter the VCR PlusCode shown in your local television programming guide.

```
VCR PLUS+
Enter PlusCode Number
  (from TV listing)
  12876

Press CLEAR to correct
Press MENU when done
```

4. Press MENU•PROG to enter the VCR PlusCode number.

```
How often should this
program record?

1 One Time
2 Daily (every day)
3 Weekdays (M-F)
4 Weekly (Once per week)

0 Cancel
```

5. Indicate how often you want the program to be recorded.

```
Program 1 (One Time)

Channel    03 CABLE
Start Time 08:00 PM
End Time   09:30 PM
Start Date 10/24/97 Fri
Tape Speed SLP

Press CLEAR to correct
Press MENU to save
```

6. Change the speed with the SPEED button on the remote or the program end time with the CLEAR button on the remote (if necessary).

Changing the end time comes in handy when you are recording a program such as a sporting event that may exceed the scheduled broadcast time.

7. Press MENU•PROG to save the program.

```
Program 1 has been saved

Remember to insert a
recordable tape and
turn the VCR off before
the program start time.

Press MENU to continue
```

VCR Plus+ Recording

Clock must be set correctly.

Insert a tape with the safety tab in place and enough tape to record the program.

The output of your cable box appears in the Channel item of the timer recording menu if you've set up the VCR for a cable box for all channels. The correct channel and start & stop time will also appear if the VCR is set up to control the cable box.

UNRECOGNIZED NUMBER... PLEASE RE-ENTER appears when the VCR does not recognize the PlusCode number.

PROGRAMS OVERLAP appears if you have entered two programs where the times overlap.

The **TIMER** indicator appears in the display when you turn off the VCR and a timer recording has been set. It flashes if there is no tape in the VCR.

For a cable box the VCR can control, turn it on before the recording is to begin.

For a cable box the VCR cannot control, turn it on and tune it to the channel you want to record before the recording is to begin.

RECORDING

STOPPING A TIMER RECORDING

To stop or cancel a timer recording in progress (even an express recording):

- Press and hold the STOP button for a few seconds.

REVIEWING AND CLEARING PROGRAMS

To review programs that you have already set up:

1. Press 2 when the VCR MAIN MENU is displayed to display the TIMER RECORDINGS menu.

```
TIMER RECORDINGS
1 Create a New Program
2 Review Existing Progs.
3 Use VCR Plus+ Code

0 Exit
```

2. Press 2 to display the Review Existing Progs. screen.

```
Program 1 (One Time)
Channel 104 CABLE
Start Time 12:00 AM
End Time 01:30 AM
Start Date 10/24/97 Fri
Tape Speed SLP

Press CLEAR to erase
Press MENU for next prog
```

3. Press CLEAR to erase or MENU•PROG to see the next program.


RECORDING BROADCAST STEREO TV OR SAP (SECOND AUDIO PROGRAM)

Some TV programs are broadcast with stereo audio or SAP (Second Audio Program).

1. Turn on the TV and tune it to the VCR viewing channel (either 3, 4, or TV's video input).
2. Insert a tape with safety tab in place.

RECORDING

3. If your VCR viewing channel is 3 or 4, make sure the VCR indicator appears in the VCR's display panel. If not, press TV•VCR to turn it on.
4. Use the SPEED button on the remote to select a recording speed. The tape speed indicator appears on the TV screen.
5. Select the channel or line input to be recorded.
6. Set the Reception: STEREO/MONO/SAP feature for the type of audio you want to record. See *Other Features* section.

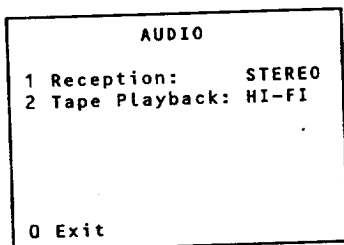

7. Press RECORD to start recording.
8. Press STOP when you are finished.


RECORDING AUDIO ONLY

You can record audio only from another audio source connected to the AUDIO IN (R and L) jacks on the back of the VCR.

1. Press the INPUT button on the remote to select the line input (LINE).
The VCR will record audio from the audio equipment connected to the AUDIO IN jacks.
2. Use SPEED on the remote to select the recording speed.
3. Start audio source playing and press RECORD to begin recording.
4. Press STOP when you are finished.

Playing Back Audio Only

To get stereo sound, connect the AUDIO OUT jacks of the VCR to the appropriate input on your amplifier or receiver. Do not use the phono input. Refer to your amplifier or receiver user's guide.

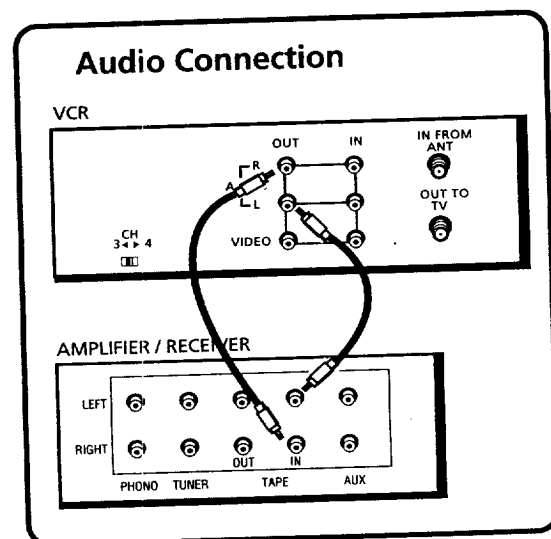

RECORDING

USING TWO VCERS FOR COPYING AND EDITING TAPES

Use one VCR as the *playback VCR* and the other as the *recording VCR*.

1. Turn on the TV and VCRs.
2. Tune the TV to the VCR viewing channel (either 3, 4, or TV's video input).
3. If you connected your VCR using the IN FROM ANT and OUT TO TV jacks, tune *recording VCR* to channel 3 or 4--the one selected on the back of the *playback VCR*.


If you have connected your VCR using the audio/video jacks, make sure you select the line input on the *recording VCR*.

4. Insert the tape you want to copy into the *playback VCR*. Insert a blank tape with safety tab in place into the *recording VCR*.
5. Press PLAY on the *playback VCR* to begin playback. When you reach the point on the tape or program where you want to begin copying, press PAUSE again. You may need to adjust the tracking.
6. Press the RECORD button, then press PAUSE, on the *recording VCR*.
7. Press the PAUSE buttons on *both VCRs* at the same time to begin copying the tape.
8. To edit segments that you do not want to copy:
 - Press PAUSE on *recording VCR* to pause copying.
 - Locate the next segment you want to copy on *playback VCR* by using FWD, REV, and PLAY, and then press PAUSE.
 - Press PAUSE on *both VCRs* at the same time to resume copying.
9. Press STOP on *both VCRs* when you are finished.

Caution:

The unauthorized recording of television programs or other materials may infringe the rights of others.

Two VCR Connection

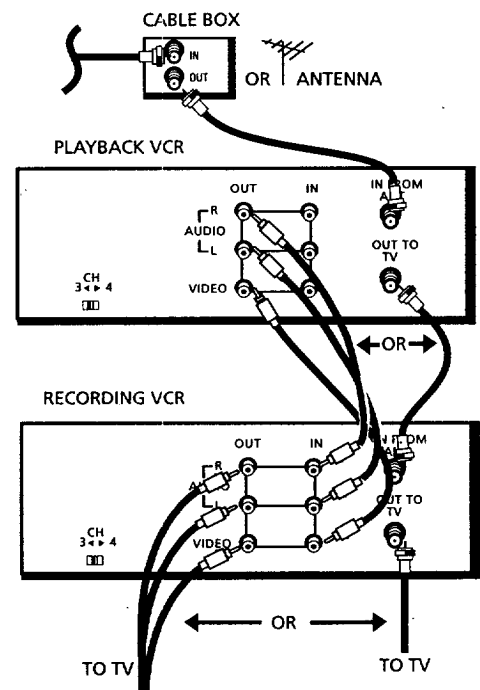

PROGRAMMING THE REMOTE

CONTROL YOUR OTHER COMPONENTS...

The remote can be programmed to control several components, such as a television, digital satellite receiver, cable box, laser disc player, DVD player, or RCA audio component.

Initially, the remote is programmed to control an RCA, GE, or ProScan TV or digital satellite receiver. You will need to program other manufacturer's brands.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

PROGRAMMING THE REMOTE

ABOUT PROGRAMMING THE REMOTE

The remote is already programmed to operate most RCA, ProScan, and GE TVs. You may program the remote to control other manufacturers' brands.

PROGRAMMING THE REMOTE TO CONTROL A TV

If the TV does not turn on when you press the TV button, the remote needs to be programmed.

Follow these steps to program the remote to control your particular TV:

1. Turn on the TV.
2. Find your TV brand and code number(s) on the code list.
3. Press and hold the TV button on the remote.
4. Enter the code from the code list.
5. Release TV, and then press CHAN up or down. If the TV responds to the remote commands, the remote is programmed.
6. If the TV does not respond, repeat these steps using the next code in the list.

OPERATE THE TV

After you set up the remote, see which buttons operate your TV.

1. Point the remote at the TV, and press the TV button.
If the TV does not turn on, press the TV button and then press the OFF button.
2. You may want to experiment to see which buttons operate your TV. Try pressing buttons, such as VOL and MUTE. See "TV Function Buttons" in the *VCR Basic Section* for details.

This remote may not operate all models of the brands that are shown. Note the difference between the TV and VCR on-screen displays to see which one the remote is operating.

PROGRAMMING THE REMOTE

TV Codes

Brand	Code	Brand	Code
A-Mark	102	Mitsubishi	006,011,014,019,022, 027,041,055,056,061,068,108
Admiral	005,114	MTC	011,019,027
Amtron	064	Multivision	081
Akai	002,103	NAD	018,023
Anam	104,105	NEC	011,014,019,027,038,084
Anam National	038,106	Panasonic	012,013,038,086,111
AOC	011,019,027,088,107	Philco	006,007,010,011,013,016,019, 027,033,035,037,038,043,087,089
Bell & Howell	005,013	Philips	002,006,007,010,011,013, 016,033,035,037,038,043,066,073
Candle	011,027,033	Pioneer	011,027,045,062,093,113
Citizen	011,027,033,064	Portland	011,019,027,037
Colortyme	011,027,084	ProScan	000
Concerto	011,027	Proton	011,027,037,072
Contec/Cony	036,037,040,042,064	Quasar	012,038,092,111
Craig	064	Radio Shack	000,021,025,036,037, 059,064,078
Curtis Mathes	000,011, 015,027,037	RCA	000,006,011,019,027, 034,038,044,046,088,100,101,109
CXC	064	Realistic	021
Daewoo	011,019,027,112,116	Sampo	011,027
Daytron	011,027	Samsung	006,011,014,015,019, 027,036,037,077,110
Dimensia	000	Sanyo	017,021,039,056,057,058
Electrohome	006,011,014,027 038,061,068	Scott	028,037,064
Emerson	011,026,027,028,029,030,031, 032,037,042,053,064,065,067, 075,076,078,079,094,095,096	Sears	000,006,011,014,017,018,021, 023,027,039,040,041,051,071,083,095
Envision	011,027	Sharp	011,020,025,027,037, 052,053,059,060,108
Fisher	017,021,039,041	Signature	005,094,108
Funai	064	Sony	002
GE	000,008,009,011,012, 027,038,068,086,089,091,116	Soundesign	011,027,033
Goldstar	003,004,006,011,019, 027,037,050	Sylvania	006,007,010,011,013,016, 027,033,035,043,049,066,087,089
Hallmark	011,027	Symphonic	064,076,115
Hitachi	009,011,027,036,037,040, 047,048,063,080,094,097,098	Tatung	038
Infinity	013	Technics	012
JBL	013	Techwood	011,027
JC Penney	000,008,011,019, 027,040,068,077,086,088	Teknika	011,019,027,033,036, 037,040,066
Jensen	011,027	Telecaption	090
JVC	012,024,036,037,040, 048,051,074	TMK	011,027
Kawasho	002,011,027	Toshiba	018,021,023,027,040, 071,077,085,090
Kenwood	006,011,014,027	Universal	008,009
Kloss Novabeam	035,043	Victor	051
KTV	078	Vidtech	019,027
Loewe	013	Wards	000,005,006,007,008 009,010,011,013,019,025,027,028, 035,043,059,066,076,082,089
Luxman	011,027	Yamaha	006,014,019,027
LXI	000,013,018,021,023,054	Zenith	001,099,114
Magnavox	006,007,010,011,013,016, 027,033,035,043,049,066,087,089		
Marantz	011,013,027,069		
Memorex	005		
MGA	006,011,014,019,022, 027,041,056,061,068		

PROGRAMMING THE REMOTE

PROGRAMMING THE REMOTE TO CONTROL AN AUXILIARY COMPONENT

Your remote can be programmed to operate RCA, ProScan, and Dimensia brand auxiliary equipment, such as a radio, CD player, tape player, turntable, amplifier, digital satellite receiver, or DVD player.

1. Turn on the component to be programmed.
2. Look up your component's code number on the code list.
3. Press and hold the AUX button.
4. Enter the code from the code list.
5. Release the AUX button and press PWR or CHAN up or down to see if the audio component responds to the remote commands.

OPERATING THE AUXILIARY COMPONENT

After you have programmed your remote, see which buttons will operate your component.

1. Point the remote at the component and press AUX. If it does not turn on, press AUX and then PWR.
2. You may want to experiment to see which buttons will operate your component. Try pressing buttons, such as PLAY, REV, and FWD.

Audio/Video Codes

RCA/ProScan/Dimensia	
AM/FM	03
Auxiliary Component	04
CD	07
DVD	10
Phono	05
Digital Satellite Receiver	08
Tape 1	06
Tape 2	09

This remote may not operate all models of the brands that are shown.

PROGRAMMING THE REMOTE

PROGRAMMING THE REMOTE TO CONTROL A LASER DISC PLAYER OR DVD COMPONENT

The VCR2•DVD button on the remote is programmed to control a VCR set to respond to the VCR2 button or an RCA, ProScan, or GE laser disc player.

If you have an RCA DVD component, you can program the VCR2•DVD button to operate it.

1. Turn on the component.
2. Look up your component and its code number in the code list on the right.
3. Press and hold the VCR2•DVD button on the remote.
4. Enter the three-digit code from the code list.
5. Release the VCR2•DVD button, and press PWR. If the component turns off, setup is complete.

OPERATE THE COMPONENT

After you have set up your remote, see which button will operate it.

1. Point the remote at the component, and press VCR2•DVD. If it does not turn on, press VCR2•DVD and then PWR.
2. You may want to experiment to see which buttons will operate your component. Try pressing buttons, such as CHAN up or down.

RCA, ProScan, and GE Codes

VCR	37
Laser Disc Player	37
DVD Player	78

This remote may not operate all models of the brands that are shown.

PROGRAMMING THE REMOTE

PROGRAMMING THE REMOTE TO CONTROL A DIGITAL SATELLITE RECEIVER OR CABLE BOX

The remote is programmed to control an RCA, GE, or ProScan digital satellite receiver.

If you have another brand of cable box or digital satellite receiver with its own remote, you may be able to use the VCR's remote to operate it.

1. Turn on the cable box or digital satellite receiver.
2. Look up the brand and its code number(s) in the code list on the right.
3. Press the SAT•CABLE button on the remote.
4. Enter the three digit code from the code list.
5. Release the SAT•CABLE button and press PWR or CHAN up or down to see if the cable box or receiver responds to the remote commands.

OPERATE THE CABLE BOX OR DIGITAL SATELLITE RECEIVER

After you have set up your remote, see which buttons will operate your cable box or digital satellite receiver.

1. Point the remote at the box or digital receiver, and press SAT•CABLE and then PWR.
2. You may want to experiment to see which buttons will operate your cable box or digital satellite receiver. Try pressing buttons, such as CHAN up or down.

OTHER FEATURES

FEATURES TO ENHANCE VCR OPERATION

- **Picture Search Options**
- **Tracking**
- **Time Counter**
- **On-Screen Displays**
- **Audio Reception**
- **Audio Tape Playback**

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

OTHER FEATURES

PICTURE SEARCH OPTIONS

The most basic way to search during playback is using the FORWARD (FWD) and REVERSE (REV) buttons. This section contains several other options available for searching a tape.

FORWARD AND REVERSE SEARCH

You can search a tape during playback. Sound is turned off during picture search. Search works best for tapes recorded at the SP or SLP speed.

1. Press FORWARD (FWD) to search forward or REVERSE (REV) to search in reverse.
2. Press FORWARD or REVERSE again or press PLAY to return to normal playback.

SLOW MOTION

You can view a tape in slow motion from the play-pause mode. Slow motion works best for tapes recorded at the SP or SLP speed.

1. Press PAUSE to "freeze" the action. Then press FORWARD (FWD) or REVERSE (REV) to begin slow-motion playback.
2. Press FORWARD to increase or REVERSE to decrease the speed of the slow-motion playback.
3. Use TRACKING up or down to remove any streaks from the picture.
4. Press PLAY to return to normal playback.

The VCR switches automatically from slow-motion playback to stop after a few minutes.

COMMERCIAL SCAN (SEARCH BUTTON)

This is useful for skipping commercials or short program segments.

- Press SEARCH once during playback to advance the tape approximately 30 seconds of recorded material.
- Press SEARCH to cancel commercial scan and return to normal playback.

Insert Tape

Don't forget to insert a recorded tape when using the search features.

OTHER FEATURES

FRAME ADVANCE

Frame advance lets you view one-stop action frame after another during playback. Frame advance works best for tapes recorded at the SP or SLP speed.

1. Press PAUSE to "freeze" the action.
2. Press F.ADV each time you want to view a frame of the scene.
3. Press PAUSE or PLAY to return to normal playback.

INDEX SEARCH

The VCR has a "VHS Index Search System" that automatically records an index mark on the tape every time you start a recording. During playback you can locate the program you want to play by the number of index marks or by scanning. The VCR will search forward or reverse from the location you are on the tape.

To Search:

1. Press STOP.
2. Press SEARCH on the remote until the INDEX SEARCH menu appears on the TV screen.
3. If you want to search through a certain number of index marks, press two number buttons to enter the number of marks you want to search. Press CLEAR on the remote to correct an entry.
4. Press FORWARD (FWD) to search forward or REVERSE (REV) to search in reverse. The VCR will locate your index mark and begin playback. If you did not enter a specific index number, the VCR will locate the next index mark and begin playback.
5. Press STOP to stop index searching.

Some index marks may be missed by the VCR:

- A mark too close to your location on the tape.
- The mark at the beginning of a recorded segment of five minutes or less.
- The first index mark on the tape when you start at the beginning of the tape.

```
INDEX SEARCH
Press REV OR FWD
to begin scanning
OR
enter a specific
index number
--
Press SEARCH to exit
```

```
INDEX SEARCH
Searching for
index number 12...
Press STOP to cancel
```

```
INDEX SEARCH
Searching for
index marks...
Press STOP to cancel
```

OTHER FEATURES

GO-TO SEARCH

The Go-To search feature enables the VCR to quickly locate a counter reading anywhere on the tape. When the VCR locates the counter reading, it will begin playback.

1. Press STOP.
2. Press SEARCH on the remote until the GO-TO SEARCH menu appears on the screen.
3. Press number buttons to enter the hour(s) and/or minutes of the counter reading you want the VCR to "go to". Press CLEAR on the remote to correct an entry.
4. Press FORWARD (FWD) to search forward or REVERSE (REV) to search in reverse.
5. Press STOP to stop Go-To searching.

```
GO-TO SEARCH
Current tape counter is
  2:17:25
Press REV or FWD
to go to --:--:00
Press SEARCH to exit
```

```
GO-TO SEARCH
Searching for
0:00:00...
Press SEARCH to exit
```

TRACKING

Your VCR has automatic tracking which removes the streaks or snow from the picture. Automatic tracking is activated when you insert a tape or turn on the VCR. Occasionally you may need to manually adjust tracking, especially if the tape was recorded on a different VCR. Just use the TRACKING buttons to remove the streaks or snow. You can also use tracking when you pause a tape to reduce jittering of the picture.

When you manually adjust the picture, automatic tracking is turned off. To turn automatic tracking back on, press both TRACKING buttons on the VCR at the same time, or eject the tape and re-insert it.

Tracking only effects playback—not recording.


TIME COUNTER

The time counter shows the actual time it takes to record a program or play back a segment of a recorded tape. It helps locate the beginning or end of programs you taped. The time counter resets to 0:00:00 whenever the tape is ejected from the VCR.

OTHER FEATURES

For example, if you record a 30-minute program at the beginning of the tape and you want to go to the end of that program to begin another recording, you would:


1. Press INFO **twice** on the remote to display the time counter.
2. Press CLEAR to reset the time counter to 0:00:00.
3. Press FORWARD (FWD) to forward the tape until the time counter reads 0:30:00.
4. Press STOP. This is the approximate end of the program. (You may want to press PLAY to verify.) Now, you can begin recording at this spot.
5. Press INFO to remove the time counter from the screen and return to the normal display mode.

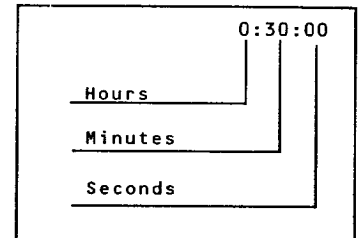


ON-SCREEN DISPLAYS

The INFO button shows the status of the VCR (STOP, PLAY, RECORD, etc.), channel number, time counter, date, time, and tape speed on the TV screen. The date and time must be set before they can be displayed.


1. Press INFO to see all of the on-screen displays. These will automatically time out after a few seconds
2. Press INFO again to have only the time counter remain on the screen. This display does not time out automatically.
3. Pressing INFO a third time disables the on-screen displays. This feature prevents you from accidentally recording on-screen displays while copying tapes.
4. Press INFO to see all of the on-screen displays again.

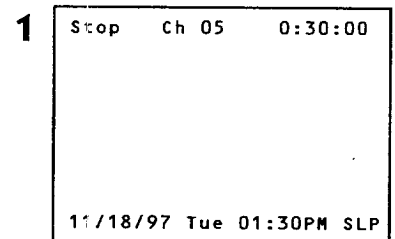

*On-screen display
(times out)*

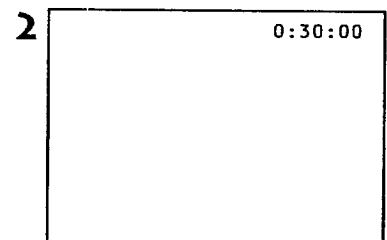

*Time counter only
(does not time out)*

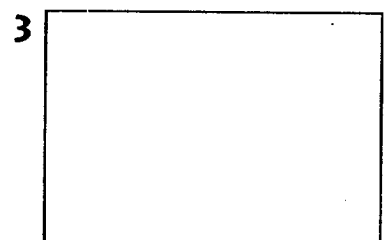


On-screen display off

OTHER FEATURES


AUDIO SET-UP FEATURES

The audio set-up features enhance your tape playback and recordings. The features in this section are accessed through the AUDIO menu and are shown in the displays below.

1. Press MENU•PROG to display the VCR MAIN MENU.

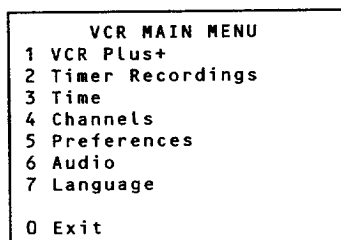

2. Press 6 to display the AUDIO menu.

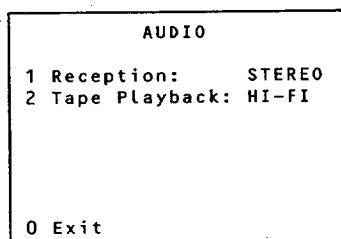

Now you are ready to select an item from the menu to set up.

RECEPTION

Some TV programs are broadcast with stereo audio or a second audio program (SAP) which offers a second language. The Reception feature lets you select the type of audio you want to record. Press 1 to switch between Reception: STEREO, MONO, and SAP.

- Select STEREO for normal or stereo broadcast TV recording. STEREO indicator appears on the TV screen when the station you are tuned to is broadcasting stereo.
- Select MONO if the stereo signal is weak and the sound is too noisy.

OTHER FEATURES

- Select SAP to record a second audio program instead of the normal audio on both the hi-fi and linear tracks. The SAP indicator appears on the TV screen when the station you are tuned to is broadcasting SAP.

TAPE PLAYBACK

The VCR records the same audio on both the Hi-Fi and linear tracks on the tape. Hi-Fi sound is recorded on separate left and right stereo channels. Monaural sound is recorded on the linear track. Press 2 to switch between Tape Playback: HI-FI, LINEAR, and MIX.

To enjoy Hi-Fi sound, connect your VCR to a stereo television or amplifier/receiver using the audio/video jacks. The Tape Playback feature lets you select which audio you play back.

- Select HI-FI to play back sound recorded on the Hi-Fi track and for normal use.
- Select LINEAR to play back the sound recorded on the linear monaural track, such as a second audio program, (SAP) or a dubbed voice-over.
- Select MIX to play back the sound recorded on both the linear track and the Hi-Fi track, sound-on-sound.

CONNECTIONS

THINGS TO KNOW BEFORE CONNECTING COMPONENTS

Protect Your Components from Power Surges

- Connect all components before plugging any power cords into the wall outlet.
- Always turn off the TV and other components before you connect or disconnect any cables.

Position Cables Correctly to Avoid Audio Hum or Interference

- Insert all cable plugs firmly into their jacks.
- Place the audio/video cables to the sides of the TV's back panel instead of straight down the middle after you connect your components.
- Try not to coil any twin-lead cables and keep them away from the audio/video cables as much as possible.
- Make sure all antennas and cables are properly grounded. Refer to the Safety Tips sheet packed with your unit.

Protect Your Components from Overheating

- Do not block ventilation holes in any of the components. Arrange the components so that air can circulate freely.
- Do not stack components.
- Allow adequate ventilation when placing your components in a stand.
- Place an amplifier or satellite receiver on the top shelf of the stand so heated air rising from it will not flow around other components.

1 FIRST THINGS FIRST



2 SETTING UP THE VCR



3 VCR BASICS



4 RECORDING



5 PROGRAMMING THE REMOTE



6 OTHER FEATURES



7 CONNECTIONS

CONNECTIONS

CONNECTING YOUR VCR

Refer to these pages to help you connect your VCR.

JACKS AND CABLES


RF Jacks and Coaxial Cables (F-type)

The RF jacks provide good picture and mono sound quality, and must be used if audio/video connections are not available for your TV.

These jacks are required for antenna or cable-TV connections. The RF jacks on the VCR are labeled IN FROM ANT and OUT TO TV. The coaxial cable supplied with your VCR is used to connect the VCR's OUT TO TV jack and your TV's antenna input.



RF Jack

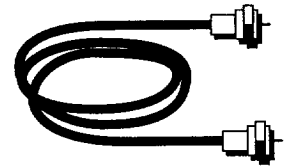


Audio/Video Jacks and Cables (RCA-type)

The audio/video jacks provide very good picture and sound quality, and can be used if your TV has audio/video input jacks.

These jacks must be used for stereo sound. The VCR audio/video jacks are color coded (yellow for video, red for right audio, and white for left audio). If your TV has only one input for audio (mono), you may need a Y-adaptor to hear sound from both channels.



Audio/Video Jack

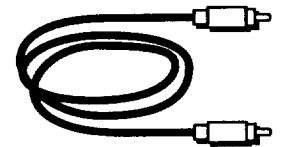

CONNECTIONS

CHOOSING A VCR CONNECTION

There are several different ways to connect your VCR, depending on whether or not you have cable service, and if you have a cable box, and whether some of the channels are scrambled, and maybe you have a satellite receiver along with cable (but no cable box), or a satellite receiver and no cable or...well, you get the picture.

Five connections are described in this section and one of them should provide you with a VCR connection that works.

- TV with RF jack only
- TV with audio/video jacks
- TV with audio/video jacks and cable box to unscramble pay channels only
- TV with RF jack and satellite receiver
- TV with audio/video jacks and satellite receiver

If you need to connect additional components not shown in the diagrams here (and are unsure of how to connect them), refer to the instruction manual that came with that particular component.

ADVANTAGES OF AUDIO/VIDEO CABLE CONNECTIONS

Using a simple coaxial cable connection gives you good picture quality. If your television has audio/video jacks, I highly recommend using them to get even better picture quality and stereo sound when recording and playing back videotapes. These connections give you more convenient operation by not having to share the TV's antenna signal.

DON'T FORGET ABOUT THE AUTO TV/VCR FEATURE

The TV/VCR switch controls whether the picture signal is coming from the VCR or the TV.

You can change the setting manually by using the TV•VCR button on the remote or you can set the Auto TV/VCR feature to ON when using only IN FROM ANT and OUT TO TV jacks and OFF when using the AUDIO/VIDEO output jacks--so your TV signal is not interrupted when the VCR is turned on.

CONNECTIONS

TV WITH RF JACK ONLY

This connection assumes:

- You are connecting antenna, cable, or cable box system.
- Your television has only an RF input jack.

This connection provides:

- Mono sound playback from VCR.
- Record one channel while watching another (except when using a cable box for all channels).

To use this connection, you must have:

- (1) coaxial cable for cable or antenna connection; (2) for cable box

If your cable box is remote controllable:

- Position it on top of the VCR as shown. Make sure not to block any of the VCR's ventilation holes.

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

Using This Connection

Tune your TV to channel 3 or 4, whichever one you selected with the 3CH4 switch on the back of the VCR.

Auto TV/VCR Setting:



- Set the Auto TV/VCR feature to ON.

To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record one program and watch another:

1. Begin recording a program using one of the recording features.
2. Press the TV•VCR button, and select a different channel on the TV.

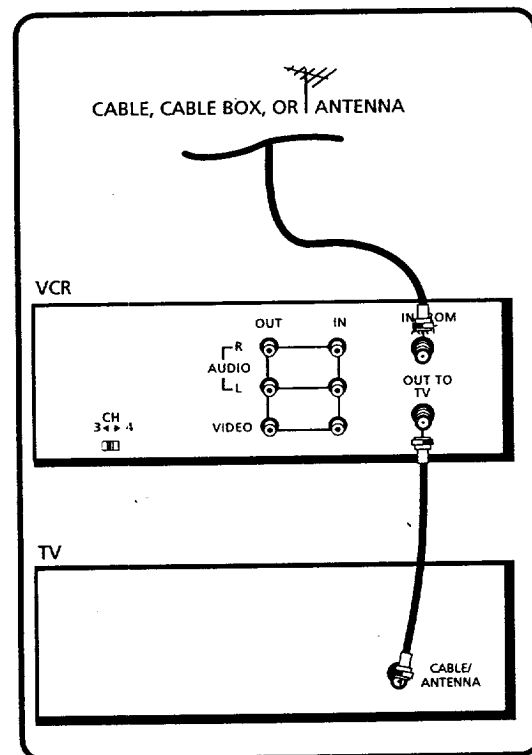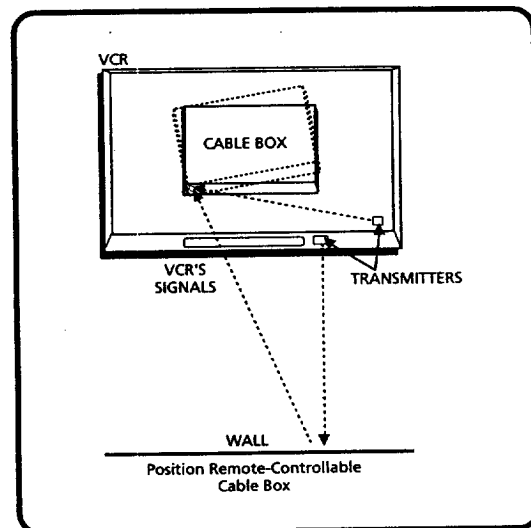

CONNECTIONS

TV WITH AUDIO/VIDEO JACKS

This connection assumes:

- You are connecting an antenna, cable, or cable box system.
- Your television has audio/video jacks.

This connection provides:

- Stereo sound playback from VCR.
- Record one channel while watching another (except when using a cable box for all channels).

To use this connection, you must have:

- (1) coaxial cable for cable/antenna connection; (2) for cable box
- (3) audio/video cables

If your cable box is remote controllable:

- Position it on top of the VCR as shown. Make sure not to block any of the VCR's ventilation holes.

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

Using This Connection

Tune your TV to its video input channel. Use of TV•VCR button is not required.

Auto TV/VCR Setting:



- Set the Auto TV/VCR feature to OFF.

To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.

To record one program and watch another:

1. Begin recording a program using one of the recording features.
2. Select a different channel on the TV.

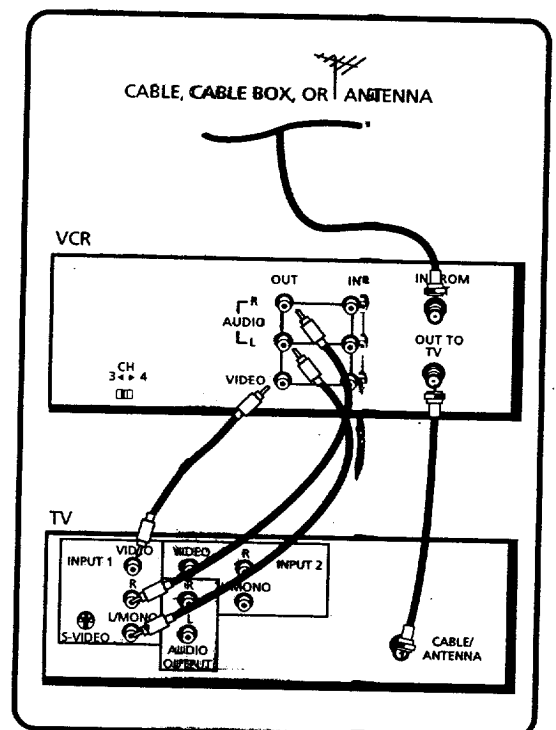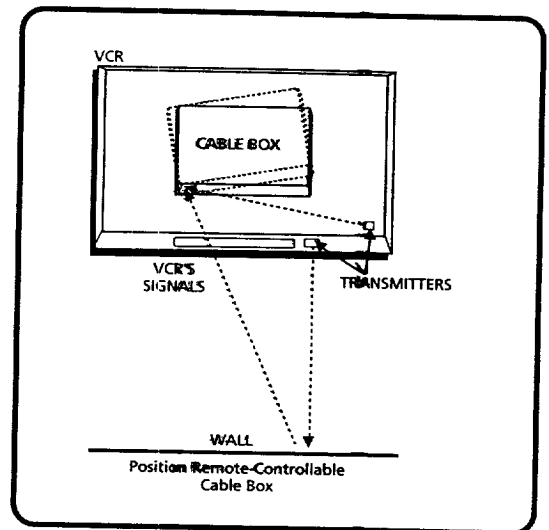

CONNECTIONS

TV WITH AUDIO/VIDEO JACKS AND CABLE BOX TO UNSCRAMBLE PAY CHANNELS ONLY

This connection assumes:

- You are using a cable box only to unscramble premium channels.
- Your TV has audio/video input jacks.

This connection provides:

- Stereo sound playback from VCR.
- Recording a scrambled or unscrambled channel through the cable box while watching an unscrambled channel.

To use this connection, you must have:

- (3) coaxial cables
- (3) audio/video cables
- (1) splitter

If your cable box is remote controllable:

- Position it on top of the VCR as shown. Make sure not to block any of the VCR's ventilation holes.

To connect:

1. Connect cables as shown.
2. Return to *First Things First*, then follow the steps.

Using This Connection

Tune your TV to its video input channel. Use of TV•VCR button is not required.

Auto TV/VCR Setting:


- Set the Auto TV/VCR feature to OFF.

To play a tape:

1. Insert a tape.
2. If necessary, press PLAY.


To record a scrambled or unscrambled program and watch another unscrambled program:

1. Begin recording a scrambled or unscrambled program through the cable box using one of the recording features.
2. Select an unscrambled channel on the TV.

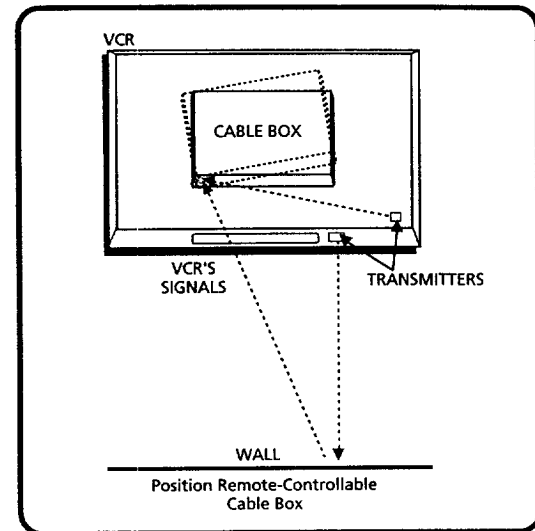

All scrambled channels must be viewed through the VCR.

For Cable Box Setup, select ALL channels. See page 11.

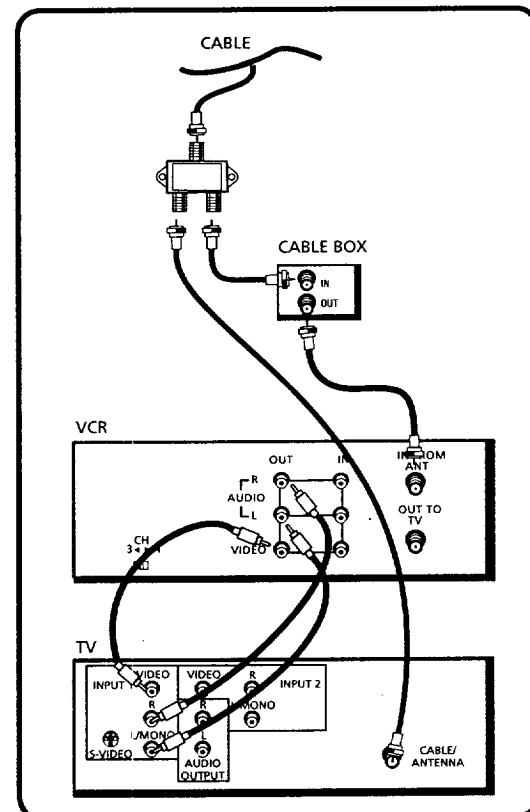

CONNECTIONS

TV WITH RF JACK AND SATELLITE RECEIVER

This connection assumes:

- You have a basic satellite system.
- Your TV does not have audio/video input jacks.

This connection provides:

- Mono sound playback from VCR.
- Recording from a satellite receiver.
- Recording one off-air or cable channel while watching another.

If your digital satellite receiver is remote controllable:

- Position it on top of the VCR as shown. Make sure not to block any of the VCR's ventilation holes.

To use this connection, you must have:

- (4) coaxial cables and (3) audio/video cables

To connect:

1. Connect cables as shown.
2. Return to the *First Things First Section*, then follow the steps.

Using This Connection

- Tune your TV to channel 3 or 4, whichever one you selected with the 3CH/4 switch on the back of the VCR.
- To record and watch off-air or cable, tune your VCR to channel 3 or 4 whichever one you selected with the CH3/CH4 switch on the back of the receiver. Turn off receiver.
- To watch and/or record from the satellite receiver, tune your VCR to its line input (LINE appears in display).

Auto TV/VCR Setting:

- Set the Auto TV/VCR feature to ON.

To play a tape:


1. Insert a tape.
2. If necessary, press VCR and then PLAY.

To record one off-air or cable program and watch another:

1. Turn off the satellite receiver and begin recording a program using a recording feature.
2. Press TV•VCR and select a different channel on the TV.


To record a satellite receiver program:

1. Turn on the satellite receiver, tune the VCR to its line input, and begin recording a program using a recording feature.

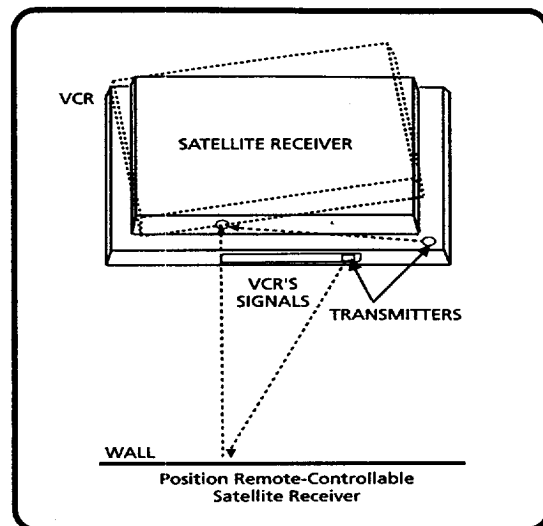

Caution

The unauthorized recording of satellite broadcasts, television programs, or other materials may infringe the rights of others.

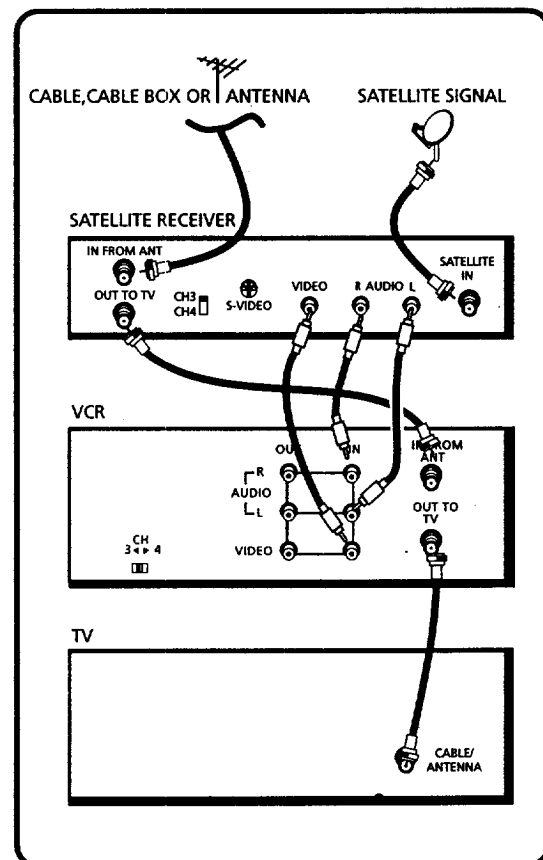

CONNECTIONS

TV WITH AUDIO/VIDEO JACKS AND SATELLITE RECEIVER

This connection assumes:

- You have an advanced satellite system.
- Your TV has audio/video input jacks.

This connection provides:

- Stereo sound playback from VCR.
- Recording from receiver while watching cable or off-air channel.
- Recording one cable or off-air channel while watching another.

If your digital satellite receiver is remote controllable:

- Position it on top of the VCR as shown. Make sure not to block any of the VCR's ventilation holes.

To use this connection, you must have:

- (3) coaxial cables and (6) audio/video cables

To connect:

1. Connect cables as shown.
2. Return to the *First Things First*, then follow the steps.

Using This Connection

- To record from the satellite receiver, tune your VCR to its line input (LINE appears in display).
- Tune your TV to its video input to watch the VCR or satellite receiver.

Auto TV/VCR Setting:

- Set the Auto TV/VCR feature to OFF. Use of TV•VCR button is not required.

To play a tape:



1. Insert a tape
2. If necessary, press VCR and then PLAY.

To record one off-air or cable program and watch another:

1. Begin recording a program using a recording feature.
2. Select a different channel on the TV.

To record a satellite receiver program and watch a cable or off-air channel:

1. Turn on satellite receiver, tune the VCR to its line input, and begin recording a program using a recording feature.
2. Select a different channel on the TV.

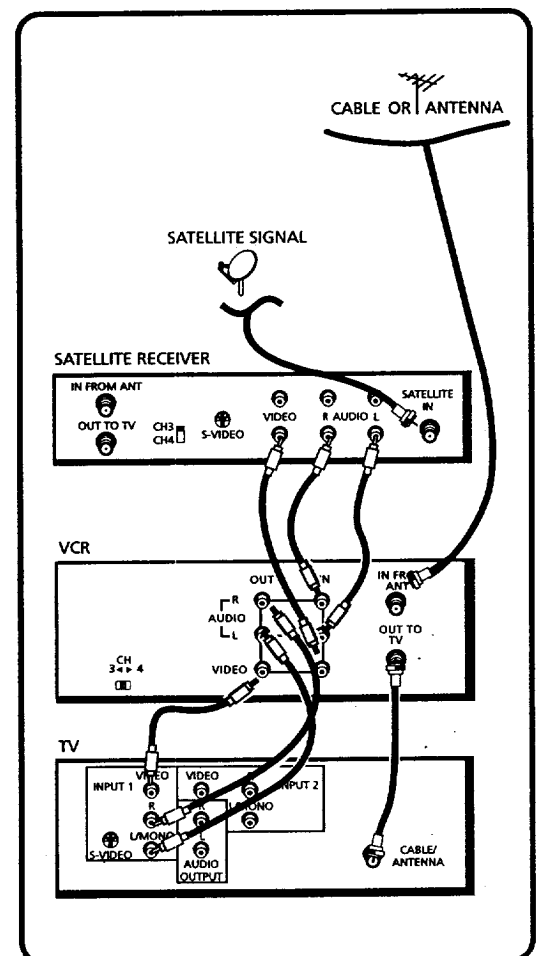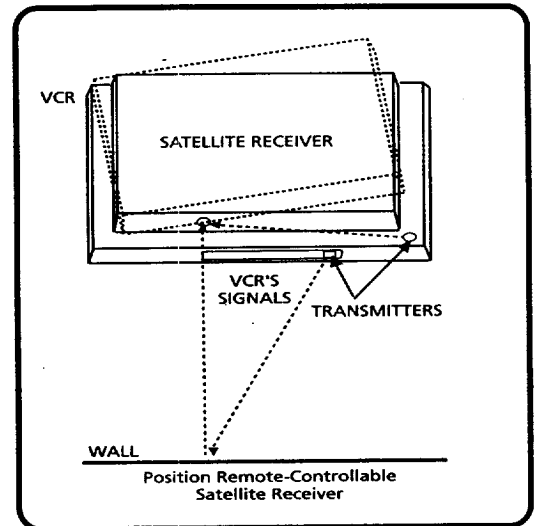

APPENDIX A: REFERENCE


This section gives you some additional information about the VCR, including a description of the unit's controls and display.

You also will find a Troubleshooting Tips section in this Appendix, which might help to resolve some of those simple problems.

Finally, this section contains your warranty information.

APPENDIX A: REFERENCE

FRONT PANEL

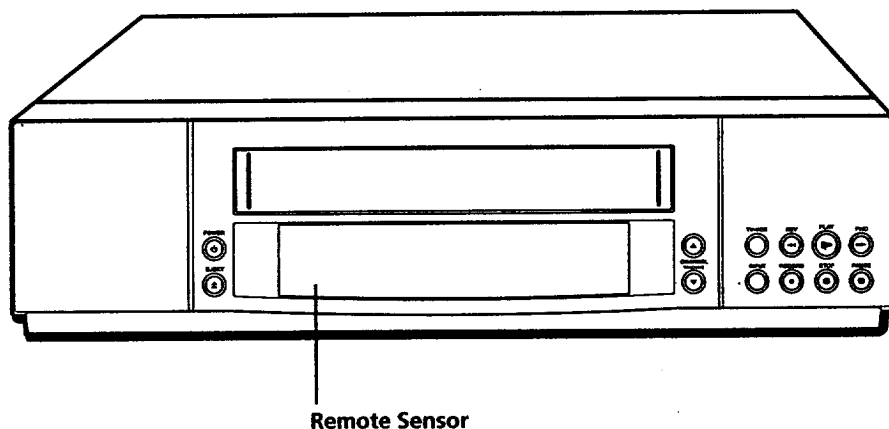

CHANNEL•TRACKING Up or Down Selects next higher or lower channel in the VCR's channel memory. Adjusts tracking when a tape is playing.

EJECT Ejects the tape when the VCR is stopped.

FWD Forwards the tape when the VCR is stopped. Searches the picture forward during playback. Starts slow-motion playback during play-pause and increases slow-motion speed.

INPUT Selects between the line input and VCR's tuner. Line input refers to the signal coming from the component connected to the audio/video input jacks on the back of the VCR.

PAUSE Pauses action for viewing during playback. Pauses recording to prevent recording of unwanted scenes.

PLAY Plays a tape.

POWER Turns the VCR on or off.

RECORD Starts VCR recording. Used for express recording.

Remote Sensor Receives signals from the remote control. Aim the remote at this sensor.


REV Rewinds the tape when the VCR is stopped. Searches the picture in reverse during playback. Starts slow-motion playback during play-pause and decreases slow-motion speed.

STOP Stops the normal functions such as record, playback, rewind, fast-forward, or pause.

TV•VCR Switches the picture signal so that it either comes from the VCR or the TV.

APPENDIX A: REFERENCE

DISPLAY PANEL

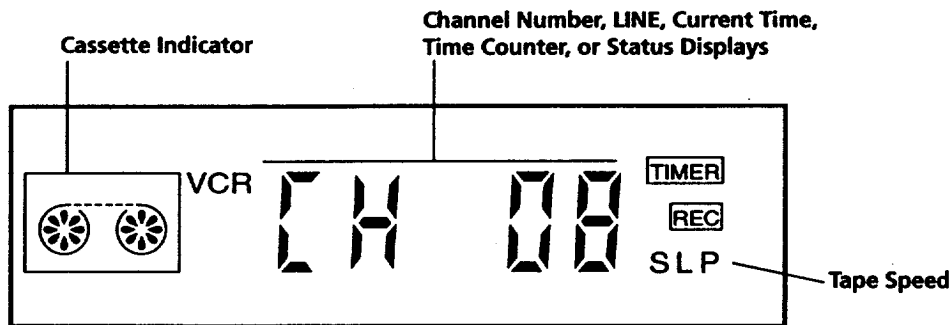

Cassette Indicator Shows when a cassette is inserted and displays direction tape is moving.

Time, Time Counter, Channel Number, Line Input Indicator (LINE), or Status Displays

Time or Time Counter Press INFO to switch between the current time and time counter.

Channel Number or Line Input Indicator The channel number appears when the VCR is tuned to a channel. The line indicator (LINE) appears when the line input is selected.

Status Indicators Show what the VCR is doing.

- **EJECT** Ejecting tape
- **F-FWD** Fast forward
- **PLAY** Playback
- **REC** Record
- **REW** Rewind
- **SLOW** Slow motion
- **SEARCH + or -** Forward or reverse search
- **STILL** Play pause and frame advance
- **STOP** VCR stopped
- **X-REC** Express recording

TIMER Indicator Lights when VCR is turned off and set for timer recording. Flashes when timer recording is set and there is no cassette in the VCR.


VCR Indicator (Applies only if the VCR Viewing Channel is 3 or 4). Press the TV-VCR button to turn on or off.

- VCR indicator on: Picture from VCR.
- VCR indicator off: Picture from TV channel.

APPENDIX A: REFERENCE

BACK PANEL

VCR

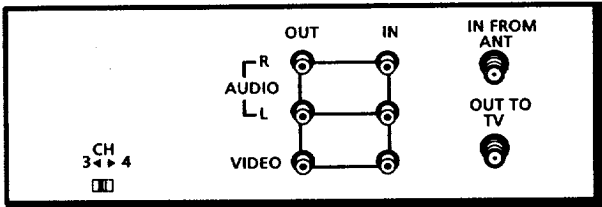

3CH4 Switch Selects the channel to which you will tune the TV to see the VCR picture if you connect the VCR using one of the basic hookups.

AUDIO (R and L) and VIDEO IN Jacks Receives signals from another component, like a VCR or camcorder, when it is connected to these jacks. Use INPUT on the remote to select LINE to record from these jacks.

AUDIO (R and L) and VIDEO OUT Jacks Sends signals from VCR to another component, like a TV or VCR, when it is connected to these jacks.

IN FROM ANT Jack Receives a signal from an antenna or cable system when attached.

OUT TO TV Jack Passes signal to TV using the cable supplied.

APPENDIX A: REFERENCE

TROUBLESHOOTING TIPS

No power

- Check to make sure it is plugged into an operating outlet.
- Check to make sure your connections are correct.

VCR does not respond to remote

- Press VCR to set remote to control the VCR.
- Check to make sure there are no objects between the VCR and remote.
- The batteries may need changing.
- Make sure the Remote VCR1/VCR2 setting is set to VCR1 so the remote that came packed with your VCR can operate it.
- Remove batteries and hold number button 1 for at least 60 seconds to drain the microprocessor inside the remote. Release number 1 and replace the batteries.
- Remove all batteries for approximately 12 hours. Then replace batteries.

Remote no longer controls an RCA, ProScan, or GE TV

- Press TV to set remote to control a compatible TV.
- Check to make sure the remote is programmed to control an RCA, ProScan, or GE TV.

Remote no longer controls a compatible TV

- Press TV to set remote to control the compatible TV.
- Check to make sure there are no objects between the component and remote.
- The batteries may need changing.
- Reprogram remote after batteries have been changed.
- Remove batteries and hold number button 1 for at least 60 seconds to drain the microprocessor inside the remote. Release number 1, replace the batteries, and (if necessary) reprogram the remote.
- Remove all batteries for approximately 12 hours. Then replace batteries and (if necessary) reprogram the remote.

Poor or no picture for normal TV viewing

- Check to make sure the VCR indicator is off.
- Check to make sure the TV is switched to an active channel.
- Check to make sure the antenna connections are secure and correct.

Snowy or no picture during playback

- Press TV•VCR to turn VCR indicator on.
- Check TV channel selected (3 or 4) to make sure it matches the channel selected with 3CH4 switch on back of VCR.
- Check to make sure the TV's fine tuning is correct for the channel you have selected.
- Check video cable connections between VCR and TV monitor.
- Check to make sure the TV monitor is set to video input.

APPENDIX A: REFERENCE

- Try another tape.
- Some snow/streaks are normal during search, stop action, frame advance, and slow-motion playback.

Streaks in picture during normal playback

- Press one of the TRACKING buttons to move streaks up or down for the best picture.
- Check to make sure the tape is of good quality and not worn out.

Time counter not working or time counter not working in search modes

- The time counter does not advance during unrecorded portions of tape. When an unrecorded segment of tape is encountered, the time counter will hold its count until recorded material is detected again.
- A minus (-) will appear in front of the time if you rewind the tape farther back than a counter reading of 0:00:00.

Will not record or play

- Check to make sure there is a tape in the VCR.
- Try ejecting and reinserting the cassette.
- Check to make sure the tape is not broken.
- Check to make sure the VCR is not in pause mode. Press PAUSE or PLAY to return to normal playback.

Will not record

- Check to make sure the safety tab is intact.
- Check to make sure the VCR is not in the line mode. Press INPUT.

Rewind does not operate

- Check to make sure the tape is not already rewound.

VCR Plus+ or timer recording not made or wrong program recorded

- Check to make sure the correct VCR PlusCode is entered.
- Check to make sure the cable box was turned on when recording was to begin.
- Check to make sure the program was entered correctly (wrong channel or times).
- VCR cannot control cable box or satellite receiver. Check to make sure VCR was set up for cable box or DSS control or try repositioning the cable box.
- Power interruption. Reset the clock.
- Check to see if time and date are correct—including AM/PM.
- Check to make sure the program did not exceed the tape's length or the tape was not rewound beforehand.
- Check to make sure the VCR was turned off at the time recording was to start.
- Check to make sure there was a tape in the VCR and the cassette's safety tab was intact.
- VCR ejects cassette when the end of the tape is reached during a timer recording.
- Check to make sure VCR Plus+ channel setup was completed correctly.

APPENDIX A: REFERENCE

Clock shows incorrect time or date

- Power interruption.
- Check to make sure the clock is set accurately (check AM/PM and date).
- Check Daylight-Saving setting. The clock may have adjusted for daylight-saving time.

VCR makes noise when stopped

- VCR is removing tape from heads. This is normal. The head cylinder inside the VCR will continue to rotate for a few minutes after you put the VCR in the stop mode.

Will not Auto Channel Search active channels correctly

- Check to make sure the antenna connections are secure and correct.
- Check to make sure the Signal Type: CABLE/ANTENNA feature is set correctly.
- If Detect Automatically was selected for the Signal Type in the Auto Channel Search menu, try using either CABLE TV or ANTENNA instead.

Tape plays back in slow motion

- Press PLAY to return to normal playback.

Cannot select channels over 69

- Cable channels over 69 can only be selected if Signal Type: CABLE/ANTENNA feature is set to CABLE.

Cassette with safety tab removed does not start to play automatically

- Check to make sure the Auto Play ON/OFF feature is set to ON.

TIMER Indicator flashes in display

- Check to make sure there is a cassette in the VCR when a timer recording is set.

Time counter disappears during searching

- This is normal.

On-screen menus appear in English or French

- Check Language feature.

No stereo sound during playback

- Check to make sure the Playback: HI-FI/LINEAR/MIX feature is set to HI-FI to hear stereo sound during playback.
- Must use the AUDIO/VIDEO jacks on the back of the VCR to hear stereo sound.

Stereo audio too noisy

- Stereo signal is weak. Set Reception: STEREO/MONO/SAP feature to MONO.
- Press one of the TRACKING up or down buttons to minimize the noise.

APPENDIX A: REFERENCE

SPECIFICATIONS

Format:	VHS
Record/Playback System:	Video: 4-head Audio: 2 Hi-Fi record/playback system
Video Signal System:	EIA standard: NTSC color
Antenna:	75-ohm external VHF/UHF combined antenna terminal
Tuner:	USA: 181 channels capability* (125 cable channels) Canada: 178 channels capability* (122 cable channels)
Type:	AutoProgramming frequency synthesis
Power Requirement:	120V AC, 60 Hz
Power Consumption:	18 watts
Dimensions:	3.6 inches high (92.5 mm) 15 inches wide (380 mm) 12.4 inches deep (313.5 mm)
Weight:	9.2 pounds (4.2 kg)
Storage Temperature Range:	- 22°F to +149°F (-30°C to +65°C)
Operating Temperature Range:	+41°F to +104°F (+5°C to +40°C)

*Check your cable company's compatibility requirements.

CLEANING THE VCR

Use a soft cloth or dusting attachment of your vacuum cleaner to dust your VCR. Remove dust from the ventilation holes on the top, back, sides, and bottom of the cabinet.

Plastic surfaces are easily scratched and can be marred by alcohol and various solvents. Avoid excessive use of oil-based furniture polishes since the materials used in the cabinet will accumulate more dust. We recommend using a nonabrasive, antistatic cleaner and polisher.

Specifications are subject to change.

APPENDIX A: REFERENCE

LIMITED WARRANTY

What your warranty covers:

- Any defect in material or workmanship.

For how long after your purchase:

- Ninety days for labor charges.
- One year for parts.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA VCR Servicenter the labor charges to repair your VCR.
- Pay any Authorized RCA VCR Servicenter for the new or, at our option, refurbished replacement parts required to repair your VCR.

How you get service:

- Take your VCR to any Authorized RCA VCR Servicenter. To identify your nearest Authorized RCA VCR Servicenter, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the service technician your evidence of purchase date.
- Pick up your VCR when repairs are completed.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your VCR. Any additional information should be obtained from your Dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your VCR.
- Damage from misuse or neglect.
- Cleaning of video/audio heads.
- Remote control batteries.
- A VCR that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A VCR purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your VCR. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your VCR outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

INDEX

3CH4 switch 52, 55, 60

A

Accessing menus 5

Add or remove channels 14

ADD/REMOVE CHANNELS screen 14

Audio

 playback type 46

 selecting 46

Audio features, set up 46

AUDIO menu 46

Audio only

 playing back 33

 recording 33

Audio/Video jacks 33

Audio/video jacks 33, 51, 53, 54, 56, 60

Auto channel search 13

AUTO CHANNEL SEARCH menu 13

Auto play feature 19, 25

Auto TV/VCR feature 19, 51, 52, 53, 54, 55, 56

Automatic rewind 25

Automatic tracking 24

B

Back panel 60

Basic recording 25

Basics, learn the 21

Batteries, installing in the remote 4

Broadcast stereo TV recording 32

C

Cable box codes 12

Cable box setup 10

CABLE BOX SETUP menu 11

Cables

 positioning 49

 types of 50

Cassette indicator 59

CHAN buttons 22, 24, 36

CHANNEL buttons 58

Channel number display 59

Channel, viewing 5

Channels, add or remove 14

Channels list, VCR 12

CHANNELS menu 9, 10, 13, 14, 16, 30

Choosing a VCR connection 51

Cleaning the VCR 64

CLEAR button 22, 31, 32, 43, 44, 45

Clearing programs 32

Commercial scan feature 42

Connections 49

 choosing 51

 TV with audio/video jacks 53

 TV with audio/video jacks and cable box to unscram
 54

 TV with audio/video jacks and satellite receiver 56

 TV with RF jack and satellite receiver 55

 TV with RF jack only 52

 two VCRs 34

 using audio/video cables 51

Contents 1

Controls

 back panel 60

 front panel 58

Copying and editing tapes 34

D

Date and time setting 14

Digital satellite system setup 8

Displays

 on-screen 45, 59

DSS SETUP menu 9

E

EJECT button 25, 58

Eject, tape 25

Express recording 28

INDEX

F

F.ADV button 23, 43
First setup 3
First things first 3
FORWARD button 25, 42, 43, 44, 45
Frame advance 43
Front panel controls 58
Front panel display feature 20
FWD button 34, 42, 43, 44, 45, 58

G

GO BACK button 23, 24
Go-to search feature 44
GO-TO SEARCH menu 44

I

Important information 2
IN FROM ANT jack 19, 51, 52, 55, 60
Index search feature 43
INDEX SEARCH menu 43
INFO button 23, 24, 45, 59
INPUT button 23, 29, 33, 58

J

Jacks, types of 50

L

Language feature 8
LANGUAGE menu 8
Limited warranty 65
LINE indicator 33, 55, 59

M

MENU•PROG button
6, 8, 9, 10, 11, 13, 14, 15, 16, 18, 23, 29, 30, 31, 32, 46
Menus, accessing 5
MUTE button 24

N

Number buttons 15, 23, 24

O

OFF button 25, 36
On-screen displays 45
OUT TO TV jack 19, 51, 52, 55, 60
Overheating 49

P

PAUSE button 23, 25, 34, 42, 43, 58
Picture search options 42
PLAY button
23, 25, 34, 42, 43, 45, 52, 53, 54, 55, 56, 58
Playing a tape 24
POWER button 25, 58
Power surges 49
PREFERENCES menu 6, 18, 19
Problem solving 61
Programming the remote
to operate TVs 36
PROGRAMS OVERLAP message 29, 31

R

Reception: STEREO/MONO/SAP 33
Reception: STEREO/MONO/SAP feature 46
RECORD button 23, 25, 28, 33, 34, 58
Recording
audio only 33
basic 25

INDEX

- broadcast stereo TV 32
- copying and editing tapes 34
- express 28
- features 28
- SAP 32
- speeds 25
- timer 29
- VCR plus+ 30

Remote

- buttons 22
- component buttons 22
- installing batteries 4
- TV function buttons 24
- VCR function buttons 22–24

Remote VCR1/VCR2 option 18

Remove or add channels 14

REV button 34, 42, 43, 44, 58

REVERSE button 23, 25, 42, 43, 44

Review programs screen 32

Reviewing programs 32

Rewind, automatic 25

S

- Safety tab 26
- SAP, recording 32
- Satellite receiver code list. 9
- Search
 - commercial scan 42
 - forward 42
 - frame advance 43
 - go-to 44
 - index 43
 - reverse 42
 - slow motion 42
- SEARCH button 23, 42, 43, 44
- Sensor, remote 58
- Set time and date manually 15
- SET TIME AND DATE menu 15
- Set up
 - audio features 46

- cable box 10
- digital satellite system 8
- first 3
- language 8
- using the menus 8

Signal type

- changing 14
- selecting 14

Slow motion playback 42

Solving problems 61

Specifications 64

Speed

- LP 25
- SLP 25
- SP 25

SPEED button 23, 25, 28, 31, 33

Speeds, recording 25

Status indicators

- EJECT 59
- F-FWD 59
- PLAY 59
- REC 59
- REW 59
- SEARCH + and - 59
- STILL 59
- STOP 59
- X-REC 59

STEREO indicator 46

STOP button 24, 25, 28, 32, 33, 34, 43, 44, 45, 58

Stopping a timer recording 32

T

- Tab, safety 26
- Table of contents 1
- Tape eject 25
- Tape playback 47
- Tape playback: HIFI, LINEAR and MIX 47
- Tape, playing a 24
- Tape speeds 25
- Time and date setting 14

INDEX

Time counter 44
Time counter display 59
Time display 59
TIME menu 15
TIMER indicator 29, 31, 59
Timer recording 29
Timer recording, stopping 32
TIMER RECORDINGS menu 29, 32
Tips, troubleshooting 61
TRACKING buttons 24, 25, 42, 44, 58
Tracking feature 44
Troubleshooting tips 61
TV button 22, 36
TV, programming the remote to control 36
TV•VCR button 19, 24, 33, 51, 52, 53, 55, 56, 58

V

VCR button 19, 22
VCR channels list 12
VCR, cleaning 64
VCR indicator 33, 59
VCR MAIN MENU
 6, 8, 10, 13, 14, 15, 16, 18, 23, 29, 30, 32, 46
VCR Plus+
 channel list 30
 channel list menu 16, 30
 menu 30
 PlusCode number 31
 setting up channels 16
 using 30
 worksheet for channels 16
Viewing channel 5
VOL buttons 24

W

Warranty, limited 65

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>