


**PRO-31 PORTABLE SCANNER  
FM Monitor Receiver  
VHF: 30 - 54 MHz / 138 - 174 MHz  
UHF: 380 - 512 MHz**

PLEASE READ BEFORE USING THIS EQUIPMENT

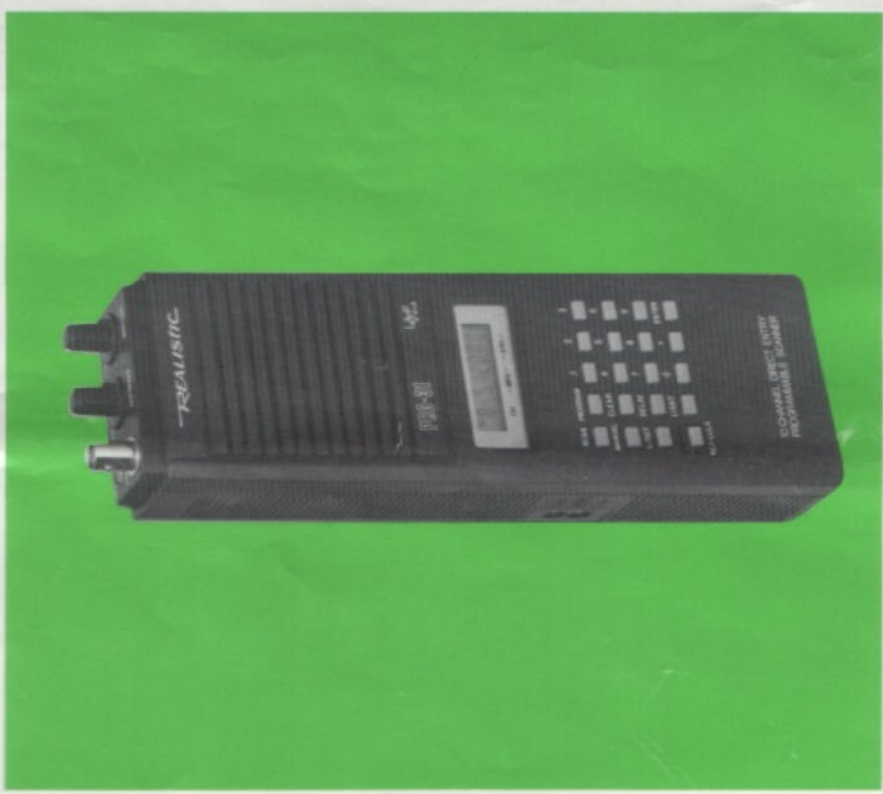

**REALISTIC®**

**RADIO SHACK LIMITED WARRANTY**

This product is warranted against defects for 1 year from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply bring your Radio Shack sales slip as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.  
EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.  
This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**We Service What We Sell**

- U.S. PATENT NOS.**  
3,794,925  
3,801,914  
3,961,261  
3,962,644  
4,027,251  
4,092,594  
4,123,715  
4,245,348

**CUSTOM MANUFACTURED FOR RADIO SHACK  
A DIVISION OF TANDY CORPORATION**

**U.S.A.: FORT WORTH, TEXAS 76102  
CANADA: BARRIE, ONTARIO L4M 4W5**

**TANDY CORPORATION**

AUSTRALIA	BELGIUM	U. K.
91 KURRAJONG AVENUE MOUNT DRUTT, N.S.W. 2770	PARC INDUSTRIEL 5140 MANINNE (NAMUR)	BILSTON ROAD WEDNESBURY WEST MIDLANDS WS10 7JN

## CONTENTS

A Quick Look at your PRO-31 .....	4-5
Getting Started .....	6-7
Operating Your PRO-31 .....	7
Receiver Operations Display .....	8
Programming Frequencies .....	8
Using The Scanning Function .....	9
Delay Function .....	10
Lockout Function .....	10
Display Light .....	10
Low Battery .....	10
Birdies .....	10-11
Earphone Listening .....	11
Before You Call for Help .....	12
Specifications .....	13
Frequency Log .....	14
Block Diagram .....	15

You'll hear all the action with your new **programmable PRO-31** Programmable Scanning Receiver! You have direct access to over 22,300 frequencies in nine action radio bands including police, ham radio and emergency transportation services! And your PRO-31 scans up to 10 channels of your choice so you won't miss any of your favorite transmissions.

The secret to PRO-31's versatility and high performance is a custom-designed microprocessor. This tiny computer is built into a micro-chip in the heart of your

scanner. Using the keyboard the microprocessor lets you easily enter and change frequencies whenever you wish. The microprocessor also gives you special functions not found on other portable scanning receivers, like channel lockout and scan delay. Your PRO-31 achieves superior performance with the very latest in solid-state technology including a phase-locked loop (PLL) IC, 2 CMOS ICs including microprocessors, 2 integrated circuits, 30 transistors, 40 diodes and a Liquid Crystal Display.

For your protection, please record your scanner's serial number in the box below. You'll find the serial number on the back of the unit.

Serial Number


Copyright 1985, Tandy Corporation.

## FEATURES

Your PRO-31 Portable Scanner:

- Covers 30 - 50 MHz (VHF Lo), 50 - 54 MHz (ham radio 6m), 138 - 144 MHz (government), 144 - 148 MHz (ham radio 2m), 148 - 174 MHz (VHF Hi), 380 - 450 MHz (ham radio and government), 460 - 470 MHz (UHF Lo) and 470 - 512 MHz (UHF Hi) - over 22,300 channels!
- Scans up to 10 channels continuously.
- Displays channel status and frequencies being scanned, monitored or programmed on a Multi-purpose Liquid Crystal Display (LCD).
- Includes channel Lockout with built-in skipper circuit.
- Provides an optional two-second scan delay to eliminate missed replies.
- Sharpens reception with a crystal filter for 1st IF (10.7 MHz) and a ceramic filter for 2nd IF (455 kHz).
- Holds memorized frequencies with battery backup.

## A QUICK LOOK AT YOUR PRO-31

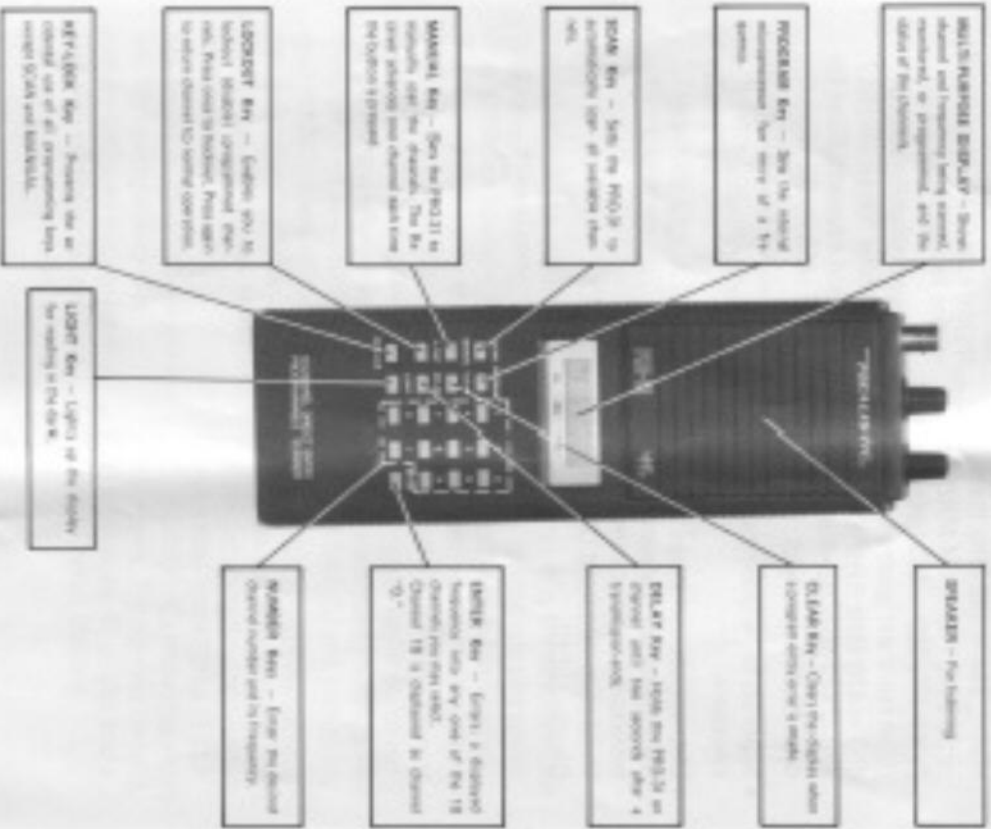

**RECHARGE JACK** - Connects to a ground (not ground) connection with the unit. Not intended for use as a power source.

**OPERATIONAL CAMERA** - For use with the camera for further operation and channel selection.

**External Ant** - For connecting an external antenna to the scanner. The built-in antenna is also available.

**ANTENNA JACK** - Connect the built-in antenna to the unit.



### The Battery Compartment holds 6 AA type batteries.

The External power Jack (PWR) lets you connect an external 9-volt DC power source (negative ground) for operation without batteries. Use Radio Shack no. 273-1455 for 120V AC, or no. 1-8448 for 12V Car operation. (Mobile use of scanners may be unhelpful or require a permit in some areas. Check with local authorities.)


The PWR jack may be used at any time, with or without batteries installed.

To recharge nickel cadmium batteries in the receiver, simply plug an external 9A volt DC power source (Radio Shack 273-1455) into the recharge (CHG) jack. To fully charge nickel cadmium, leave the external power connected for 10-18 hours.

### NOTE

- The recharge (CHG) jack is to be used only when nickel-cadmium batteries are installed. The unit can operate while nickel cadmium batteries are being charged.
- Never connect external power to the charge jack when regular or alkaline batteries are installed, because charging can cause these batteries to explode.
- Remove external power from the CHG jack during a power failure.

## GETTING STARTED

To install batteries, position the Receiver as illustrated, press the  mark, and slide the battery compartment cover off. Take out the battery holder.


Put six fresh AA batteries in the battery holder, making sure to match polarity markings inside the holder with markings on the batteries (+ to + and - to -). Replace the battery holder and the battery compartment cover.

We recommend that you use rechargeable nickel-cadmium AA batteries, catalog number 23-125, or AA alkaline ENERCELLs, catalog number 23-552.

Low battery indicator appears when the battery is low. Replace or recharge the batteries.

### ANTENNA

Attach the flexible antenna to ANT connector. Rotate the metal portion clockwise (locking from top) to secure.

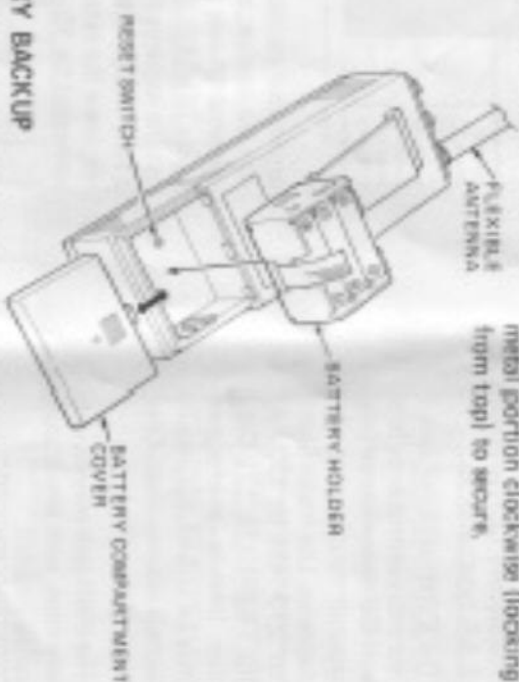

### MEMORY BACKUP

Memory back-up starts functioning the second you supply power to your PRO-31 (with batteries or external power,) and continues even when the power switch is turned "OFF."

Even after removing the batteries or external power, the memory will be backed up for approximately one hour.

When the Batteries are low (low battery indicator on), the

memory back-up will operate for up to three months. However, since weak batteries can leak, you should replace them and avoid damage to your scanner.

### RESET SWITCH

If the LCD fails to work properly just after you connect new batteries or external power to your PRO-31, use the Reset Switch.

Remove the batteries and all external power. Then use a ball point pen, etc. to push the Reset switch through the hole on the bottom of the Battery compartment.

When the reset switch is pushed, all frequencies will be cleared to "000,000," requiring you to re-enter your desired frequencies. Insert the battery holder and return to normal operation.

## OPERATING YOUR PRO-31

You can use your PRO-31 with an external mobile antenna or outdoor base antenna by using the BNC connector, after you remove the flexible antenna.



### Understanding the Display

The liquid crystal display (LCD) on your PRO-31 can display the channel number, the frequency being received, and the status of different functions. Here's a brief rundown on what the LCD symbols mean when receiving stations.

Turn on your PRO-31 by rotating VOLUME clockwise.

(When first turned on, your PRO-31 might start scanning.)

Rotate SQUELCH fully counter-clockwise. You'll hear a rubbing noise from the speaker. Slowly rotate SQUELCH clockwise until the noise stops. You're now ready to start entering frequencies!

## RECEIVER OPERATIONS DISPLAY



### Programming Frequencies

Press numeric keys to program the desired frequency, and press **ENTER**.

Make a mistake while entering a frequency? Just press **CLEAR** to clear it.

If you enter a frequency that is outside a PRD-31 band range, "Error" (Error) will be displayed.

Press **CLEAR** and select another frequency.

Any frequency within a PRD-31 band range will be accepted.

When you press **ENTER**, the scanner will automatically round off any slightly inaccurate entry to the closest "correct" frequency.

In case you're wondering . . . .

... The tuning range of your PRD-31 is permanently stored in the microprocessor chip. There's no way it can be extended or altered — even by a skilled electronics technician. So if you try to enter a frequency not in the PRD-31's tuning ranges, you'll get an error message every time!

When you program: will show:

Low and High Band (5 kHz step)

XXX.XX0 MHz

to XXX.XX4 MHz

XXX.XX5 MHz

to XXX.XX9 MHz

UHF Band (12.5 kHz step)

XXX.X00 MHz

to XXX.XX9 MHz

XXX.X10 MHz

to XXX.X18 MHz

XXX.X20 MHz

to XXX.X29 MHz

XXX.X30 MHz

to XXX.X49 MHz

XXX.X50 MHz

to XXX.X59 MHz

XXX.X62 MHz

to XXX.X62 MHz

XXX.X62 MHz

to XXX.X75 MHz

XXX.X79 MHz

to XXX.X87 MHz

XXX.X80 MHz

to XXX.X87 MHz

XXX.X87 MHz

to XXX.X99 MHz

XXX.X99 MHz

XXX.X60 MHz } XXX.X62 MHz  
to XXX.X69 MHz } (actually XXX.X62 MHz)  
XXX.X70 MHz }  
to XXX.X79 MHz } XXX.X75 MHz  
XXX.X80 MHz } XXX.X87 MHz  
to XXX.X89 MHz } (actually XXX.X87 MHz)  
XXX.X99 MHz } XXX.X875 MHz

Note: Figures below four decimal places are not displayed, but are automatically rounded and entered.

Before programming frequencies, make sure your PRD-31 is turned ON.

Suppose you want to program channel 1 to receive 162.55 MHz. Here's how you would do it:

1. Be sure the keylock indicator is off.
2. Press **MANUAL** and select channel 1. You can do this in two ways: press **MANUAL** continuously until the display indicates channel 1, or by pressing **1**.
3. Press **PROGRAM**.
4. Press **1** **6** **2** **5** **5**.  
Check the display to make sure the frequency it shows is the one you want to program. If it is, press **ENTER**.

5. To add more frequencies, press **PROGRAM** to advance to the next channel and follow the steps above.
6. If you ever want to change the frequency entered for a specific channel, enter the new frequency over the old one, using steps 2, 3, and 4.

After entering your desired frequencies, you may wish to press the **KEY-LOCK** key and prevent accidental changes to your program. When the keylock indicator is on, the PRD-31 will ignore all keys pressed, except **SCAN** and **MANUAL**.

### Using the Scanning Function

Your PRD-31 will automatically scan all the channels you've programmed and stop whenever it finds a signal. To scan channels, press **SCAN**.

To stop scanning, press **MANUAL**; then you can select specific channels you want to listen to.

Important! Your PRD-31 won't scan unless **SOUELCH** is set to the point where no sound is heard between transmissions (i.e. no "this" sound).

### Delay Function

When your PRO-31 is scanning, it will stop whenever it finds a channel with a signal. As soon as the signal ends, it immediately begins scanning other channels. Most transmissions are part of a two-way communication. To make sure you don't miss any replies, press **DELAY**. Your PRO-31 will then hold the channel at least two seconds after each transmission, giving you time to hear replies. The delay indicator will show on the display when the delay function is used. To release the delay function, press **DELAY** again.

### Lockout Function

You might want your PRO-31 to skip certain frequencies while it's scanning (such as continuously transmitted weather broadcasts). To lock out such channels, follow these steps:

1. Press **MANUAL** to stop scanning.
2. Continue pressing **MANUAL** until you reach to the channel you want to lock out.
3. Press **LOCKOUT**. The display will show "L" indicating this channel will be skipped during scanning.

To release the lockout function:

1. Press **MANUAL** to stop scanning.
2. Advance to channel that is locked out.
3. Press **LOCKOUT** again. "L" will disappear from the display.

You can lockout up to 9 channels.

### Display Light

Push **LIGHT** to illuminate the display in the dark.

### Low Battery

Low battery indicator: Three dots will appear on the right of display when the battery is low. Replace or recharge the batteries.

### Birdies

"Birdies" are the products of internally generated signals that make some frequencies difficult or impossible to receive. If you program one of these, the Scanner locks up and you'll hear only noise on that frequency.

If the interference is not severe, you might be able to rotate **SQUELCH** clockwise to cut out the "birdy".

The most common "birdies" to watch out for are listed below.

30.740 MHz	48.320 MHz
31.990 MHz	47.300 MHz
TO	TO
32.105 MHz	140.800 MHz
32.700 MHz	147.200 MHz
TO	147.500 MHz
32.800 MHz	TO
34.940 MHz	147.900 MHz
TO	149.300 MHz
35.000 MHz	TO
38.400 MHz	149.550 MHz
40.980 MHz	153.800 MHz
41.950 MHz	160.000 MHz
TO	168.400 MHz
42.030 MHz	421.200 MHz
TO	TO
44.800 MHz	422.000 MHz

Even with the **SQUELCH** control set to maximum (fully clockwise), scanning may stop on or around some of these frequencies. If the signal is strong enough (above 10  $\mu$ V in technical terms) you can listen for transmissions on the channel. But the receiver will have to be **MANUALLY** moved off the troublesome frequency.

### Earphone Listening

If you're having difficulty hearing in a noisy area or if you don't want your scanner to bother other people, plug an earphone into the Earphone Jack (EARJ) for private listening. This will automatically disconnect the built-in speaker.

Note: For greater clarity in noisy locations, we suggest using an extension speaker assembly, Cat. No. 21-549. You will also require a subminiature adapter, 274-327, for connection.

## BEFORE YOU CALL FOR HELP

The PRO-31 is ruggedly built with all parts conservatively rated. However, you should treat it with care. For long life, don't subject it to excessively rough handling, and keep it free from dirt and excessive humidity.

If you have Problems . . . . . We hope you don't — but here are some suggestions:

Problem	Possible Cause	Remedy
SCANNING is totally inoperative	No power	Check to see that batteries are good and are properly installed.
Scanner is on, but will not scan	1) Channels are locked out. 2) Squelch control is not adjusted correctly.	1) Press <b>MANUAL</b> , then release each channel from lockout one-by-one. 2) Adjust <b>SQUELCH</b> clockwise.
Scan locks on frequencies having no clear transmissions.	"Blindies"	Avoid programming frequencies listed on page 11, or only listen to them manually.
Your PRO-31 locks up or you want to completely clear all memories.		Remove battery holder and external power, and press the reset button with a pen or pencil.

If none of these suggested remedies solves the problem, return your set to your nearby Radio Shack for repair by a qualified technician.

## SPECIFICATIONS

### FREQUENCY COVERAGE:

- VHF-L0  
30 — 54 MHz (in 5 kHz steps)
- Government
- 138 — 144 MHz (in 5 kHz steps)
- Ham
- 144 — 148 MHz (in 5 kHz steps)
- VHF-HI  
148 — 174 MHz (in 5 kHz steps)
- Ham/Gov<sup>1</sup>
- 390 — 450 MHz (in 12.5 kHz steps)
- UHF-L0  
450 — 470 MHz (in 12.5 kHz steps)
- UHF-HI ("TV")  
470 — 512 MHz (in 12.5 kHz steps)

### CHANNELS OF OPERATION:

Any 10 channels in any band combinations.

### SENSITIVITY:

20 dB Signal-to-Noise ratio at 3 kHz Deviation:

- 30 — 54 MHz 0.6  $\mu$ V
- 138 — 174 MHz 1.0  $\mu$ V
- 390 — 512 MHz 1.0  $\mu$ V

### SPIRIOUS REJECTION:

- 30 — 54 MHz 50 dB at 40 MHz
- 138 — 174 MHz 50 dB at 150 MHz
- 390 — 512 MHz Not specified

### SELECTIVITY:

- 49 kHz, —6 dB
- ± 15 kHz, —50 dB

### IF REJECTION:

- 10.7 MHz 50 dB at 154 MHz

### SCANNING RATE:

8 channels/sec.

### DELAY TIME:

2 seconds

### MODULATION ACCEPTANCE:

±5 kHz

### IF FREQUENCIES:

10.7 MHz and 455 kHz

### FILTERS:

1 crystal filter, 1 ceramic filter

### SQUELCH SENSITIVITY:

Threshold Less than 1.0  $\mu$ V  
Tight (S+N)/N 15 dB

### ANTENNA IMPEDANCE:

50 ohms

### AUDIO POWER:

300mW nominal

### BUILT-IN SPEAKER:

2" (5cm) 8 ohm, dynamic type

### POWER REQUIREMENTS:

+9V DC, 5 AA batteries, or a suitable adapter (negative ground only)  
Current drain:  
60 mA (Squelched)  
160 mA (full volume unsquelched)

### DIMENSIONS:

187 (7 3/8") x 74 (2 15/16")  
x 42 (1 10/16")mm HWD

### WEIGHT:

1.1 lbs (500g)





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>