


Robic SC-502T Countdown Timer Operating Instructions

THANK YOU for buying the SC-502T Countdown Timer. Your purchase brings you an easy-to-use, World-Class Timer perfect for keeping track of time remaining in any game, event or activity up to 100 minutes.

Your Countdown Timer was developed to count down from any preset time to completion, silently or with an Audible Beep Confirmation, and includes a Pause function for time-outs and a Lock Function to protect current readings. In order to ensure that you receive the maximum enjoyment from your Countdown Timer, BEFORE USING, PLEASE TAKE A MOMENT TO REVIEW THIS OPERATION GUIDE TO FULLY UNDERSTAND HOW YOUR TIMER WORKS.

Counts down from any time you enter.
Shows time remaining. May be Stopped and Re-Started.
Operates Silently or with an Audible Beep Confirmation.

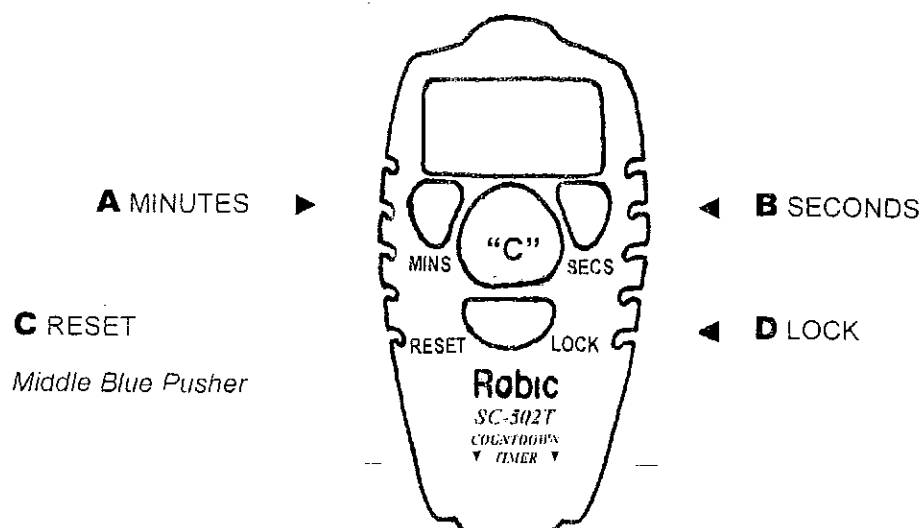

Pusher A: Set MINUTES
Pusher B: Set SECONDS
Pusher C: Start/Stop Timer; Silent or Audible Beep Confirmation
Pusher D: Lock/Unlock Timer; RESET

To Operate:

Press or Hold "A" to set Minutes
Press or Hold "B" to set Seconds
Press "C" to start the time counting down.

You may Stop and Restart the timer as necessary by pressing "C"

When the countdown time expires (display shows 00:00), the alarm will sound. Pressing any Pusher will silence the Alarm and Reset the timer to the Preset time.

Press D while the timer is stopped will Reset to the Preset Time. Pressing D again will Reset the SC-502T to 00:00.

LOCK feature: The SC-502T will "Lock" a time into place at anytime by pressing D > 3 seconds. The "lock" icon appears in the display. Locking the timer prevents all operation and accidentally resetting the time.

Silent Operation: You may select Silent or Audible Operation at any time by pressing and holding "C" > 3 seconds. The Sound Wave symbol in the left most portion of the display will appear when Audible option is active and disappear when the Silent Option is on.

STOP symbol in the right most portion of the display indicates the status of the Countdown: Preset Time loaded: STOP Flashes; Time Counting Down: STOP Disappears; Countdown Time Stopped (Paused): STOP appears.

LIMITED WARRANTY OUR BASIC POLICY

Marshall –Browning International Corporation (MBI Corp.) warrants to the original owner, this timepiece (excluding battery, lanyard, clip, band or strap) for the period of one year from the original purchase date. This limited warranty is given by MBI Corp. and not by the dealer from whom the timepiece was purchased.

THE WARRANTY PROCESS – WHAT IS COVERED BY THE WARRANTY

If the timepiece develops a manufacturing defect within the one year limited warranty period, it will be either repaired or replaced (at MBI Corp.'s option) with a timepiece of equal value, providing the original owner submits the following:

1. Proof of purchase, i.e. a validated store receipt showing date of purchase.
2. A check or money order (no cash, please) in the amount of \$7.50 to cover the cost of shipping and handling

WHAT IS NOT COVERED BY THE WARRANTY

- A. MBI Corp. will not repair defects of damages caused by or showing evidence of:
 1. Improper or unauthorized service.
 2. Misuse, tampering, abuse or mistreatment of the timepiece.
 3. Damage to the case or viable cracking of the lens.
 4. Moisture damage, if the product is a non-water-resistant timepiece.
- B. If we find that the battery is the cause of the defect, MBI Corp. reserves the right to charge your (\$7.50) for a new replacement.

MBI Corp. is not liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

YOUR RIGHTS UNDER IMPLIED WARRANTIES AND STATE LAW.

MBI Corp. limits the duration of any warrant implied by state law, including the implied warrant of merchantability, to one year from the date of original purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CARING FOR YOUR TIMEPIECE SC-502T

Proper care of your timepiece will provide many years of enjoyment. We recommend that:

1. The battery be replaced at once when it becomes depleted. Please ask your local retailer to replace the battery for you using **LR44 or equivalent**.
2. The lens be replaced immediately if it becomes damaged, as contamination from dust, moisture, and other foreign substances will damage the module.
3. If the timepiece is not marked "water-resistant," avoid immersing or exposing it to water, steam, or other forms of moisture.

WHEN YOU REQUIRE SERVICE

If your timepiece ever requires factory servicing, you can send it directly to:

MBI CORP, 115 HURLEY RD, BLDG 1-A, OXFORD, CT 06478

We strongly recommend that when sending it through the mail, you send the product insured, return receipt requested, so that if a problem in shipping arises, you can trace it through the originating post office. You will be billed for all services deemed out of warranty; and since we reserve the right to substitute with a replacement product of equal or greater value, NEVER include a personal item, such as a watchband, with the repair request.

Robic...Timers & pedometers for champions at every level! Please call (203) 264-2702 for a free catalog.

www.RobicTimers.com

6-15-09

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>