

Congratulations on your purchase of a Rocketfish Wii starter kit. This kit includes 7 essential accessories to help you get the most out of your Wii and is designed to give you years of trouble-free performance.

Package contents

- Wii dual-remote charging station with blue indicator lights includes:
 - o Ni-MH batteries (2)
 - o AC power adapter (1)
 - o Wii remote silicon skins (2)
 - o Wii power cable (1)
 - o Component cable (8 feet/2.4 meters)
- WirelessWii sensor bar includes:
 - o AA batteries (4)

Features

Charging station

- Silicon skins protect your Wii remotes and provide better grip during game play
- Charger lets you charge two Wii remotes or battery packs at the same time
- Two battery packs can be charged even after you detach them from the Wii remote
- Pulse charging protects batteries from overcharging
- Short circuit protection

Wireless Wii sensor bar

- Easy and convenient to use
- Power switch and power indicator LED
- Power-saving mode that extends game play
- Lets you place the Wii console anywhere
- Use wirelessly
- 12-foot (3.6 meter) wireless operating range

Components

Charging station



AC adapter




Battery pack



Wii power cable


Front

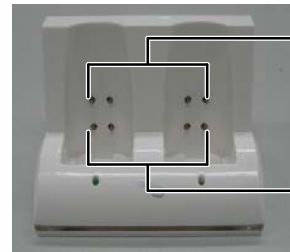

Charge contacts for battery packs when the battery packs are installed in the Wii remote

Charge contacts for battery packs after you detach the battery packs from the Wii remote

Back

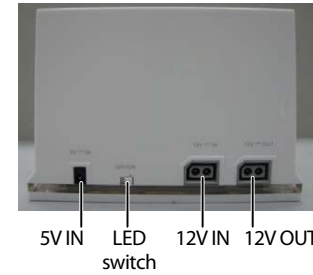

Wireless Wii sensor bar

Top



SELECT button
POWER button

Front



Low Battery Indicator / Timer Indicator (1H)
Timer Indicator (2H)

Using the charger stand

- 1 Plug the AC adapter into **5V IN** jack on the back of the charging station. You can also plug the Wii adapter supplied with your Wii Console into **12V IN** on the back of the charging station.



- 2 Place the Wii remotes or battery packs on the charging station.



Charging indicators

The charging indicators light while the charging station is charging the remote or battery pack. When charging is complete, the charging indicators will flash slowly.

Note: If you place the Wii remotes or battery packs incorrectly on the charging station, the charging indicators flash rapidly and charging stops. This is a safety feature. Remove the Wii remote or battery pack, the LED recharge indicators will turn off.

- 3 If you want to power the charging station and the Wii console at the same time using the AC power adaptor for your Nintendo Wii, you will need to connect the cord from the Wii console power adaptor to the **12V IN** connector on the back of the charging station. Then connect one end of the supplied Wii power cord into the **12V OUT** connector on the back of the charging station and the other end into the power connector on your Wii console.

- 4 If you want to turn off the decorative LED, slide the **LED** switch to the **OFF** position.

Using the wireless sensor bar

- 1 Insert four AA batteries into the battery compartment located on the bottom of the sensor bar. Make sure that the + and - symbols on the batteries align with the + and - symbols in the battery compartment.

Bottom



Battery compartment

- 2 Press the **POWER** button to turn on the sensor bar.
- 3 Press the **SELECT** button once for one hour of operating time, or press the **SELECT** button twice for two hours of operating time. The 1H (one hour) or 2H (two hours) timer indicator lights come on. When the time is up, the sensor bar turns off automatically. One minute before the time is up, the timer indicator begins to flash. To extend the time, repeat Step 3.

Low battery warning

When the batteries need to be replaced, the 1H timer indicator will begin to flash. Turn off the sensor bar and replace the batteries.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003 Information

This Class B digital apparatus complies with Canadian ICES-003.

One-Year Limited Warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:
For customer service please call
1-800-620-2790
www.rocketfishproducts.com
Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, Minnesota, U.S.A.
55423-3645
© 2009 BBY Solutions, Inc., All Rights Reserved
ROCKETFISH is a trademark of BBY Solutions, Inc.
Registered in some countries. All other products and brand names are trademarks of their respective owners.
Wii is a trademark of Nintendo of America, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>