

displayed.

- To enable the setting you have chosen, press the STORE button.
- To return to programming the Program Numbers, press the UP or DOWN buttons until the Program Numbers are again displayed.

RESTORING DEFAULT SETTINGS

- To restore the factory presets, press and hold Switch 1 and Switch 2 simultaneously for 5 seconds. The display will show FP during the reset operation. The RP93s will remain in Learn Mode after the default settings have been restored.

RETURNING TO OPERATING MODE

- To return to normal operation mode, press and hold the UP and DOWN buttons again (same as entering Learn Mode) for 5 seconds. *Note: Any settings that have not been stored will be lost.*

RFX MIDI PHANTOM POWER

Inspired by an article in the December 1989 issue of Electronic Musician (by Craig Anderton), we decided to emulate their MIDI phantom power model for RFX equipment. MIDI receivers supply 12 VDC on pins 1 and 3, and transmitters receive power on those same pins. Many MIDI devices can be modified to supply power down the cable, but of course RFX makes no warranty to anyone as to the applicability of this modification or any damage that might be done as a result thereof. We supply this note for those adventurous people who may want to give it a try.

Connect pin 1 to circuit ground, and pin 3 to +9 - +15 VDC of the receiving unit.

MIDI TEST MODE

The RP93s has the ability to display the MIDI information present at the MIDI IN jack.

- To enter Test Mode, first make sure the RP93s power is off. Hold the UP and DOWN buttons while switching the power on. Table 3 shows which MIDI commands and their status.

TABLE 3 TEST MODE COMMANDS AND DISPLAY

| LED | MIDI COMMAND | 1st Display | 2nd Display |
|----------|---------------|----------------|------------------------|
| Loop 1 | Note Off | Channel Number | Note Number |
| Loop 2 | Note On | Channel Number | Note Number Key |
| Loop 3 | Pressure | Channel Number | Note Number Control |
| Loop 4 | Change | Channel Number | Control Number Program |
| Switch 4 | Change | Channel Number | Program Number Channel |
| Switch 3 | Pressure | Channel Number | Pressure Value |
| Switch 2 | Pitch Wheel | Channel Number | Not Used |
| Switch 1 | System Messge | SE or SC or RT | Not Used |

RFX
Salt Lake City, UT




RP93s PATCHWORK MIDI CONTROLLED AUDIO SWITCHER



Thank you for your purchase of the RP93s Patchwork. This unit is designed as a MIDI Controllable audio and signal switcher. Please take a moment to read this Owner's Manual carefully. It will provide you with all the information you need to operate this device properly.

SPECIFICATIONS

| | |
|--------------------------|---|
| Jacks: | 14; 1/4" phone TRS jacks |
| MIDI ports: | 5-pin DIN IN and Through jacks |
| Display: | 2-digit high efficiency red .56" |
| Phantom Power: | +12 VDC on pins 1 and 3 of MIDI IN jack |
| MIDI signals recognized: | Program Change with MIDI Channel |
| Size: | 17" x 1.75" x 6" |
| Power: | 120 VAC 15 VA 50/60 Hz |

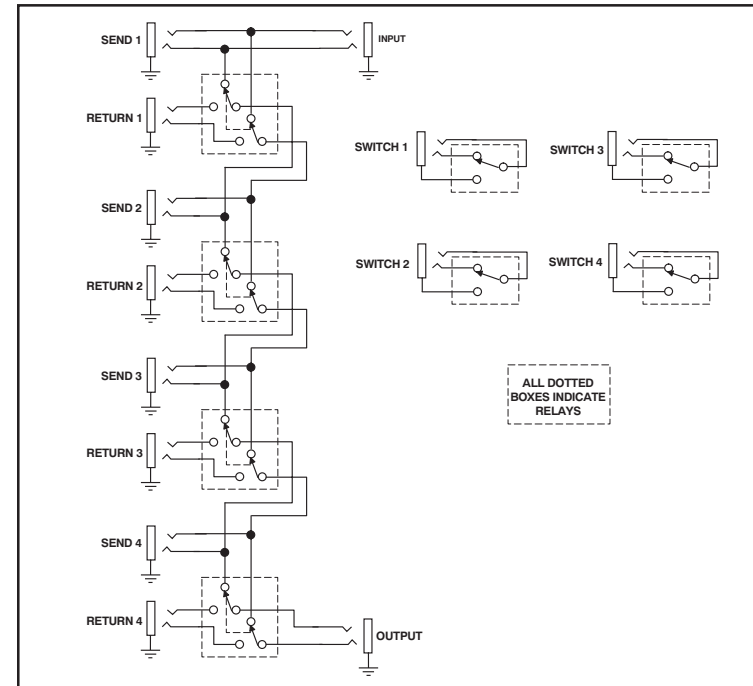

OWNERS MANUAL

INTRODUCTION

The RFX RP93s Patchwork is a MIDI control device that provides control of 4 switch and a 4 stereo FX loop devices. Up to 128 control combinations can be programmed into the RP93s and are retrieved through MIDI Program Change commands or button selection. The Program Change command that retrieves programmed control information from the RP93s can also be selected for one or all channels.

DESCRIPTION

FRONT PANEL



FX LOOP 1 - 4: When pressed and the LED is lit, the corresponding FX Loop jacks are enabled. Used for programming presets.

SWITCH 1 - 4: Identical function to that of the FX LOOP switches except that these enable the Switch 1 - 4 jacks on the rear panel.

STORE: Used to store presets when making changes in Learn Mode.

 
DOWN: Decrements presets, program numbers and MIDI channels.

UP: Increments presets, program numbers and MIDI channels.

LED Display: Shows the current program number, or the information to be displayed while in Learn Mode.

Power Switch: Applies power to the RP93 when the unit is connected to an AC outlet.

REAR PANEL



MIDI IN: For connection to the device that is sending the MIDI information to the RP93.

MIDI THRU: This jack is used to directly pass the MIDI information that is present at the MIDI IN jack.

SWITCHES 1 - 4: 1/4" jacks used to devices that require a "tip to sleeve" switching activation. The tip of the jack is alternately connected to the sleeve or open depending on the status of the corresponding front panel switch.

OUT: 1/4" TRS jack containing the signal(s) from the IN and the four FX Loop jacks.

RETURN/SEND jacks 1 - 4: 1/4" TRS jacks used to send stereo signals from the IN jacks out to signal processing devices, and return them back to the OUT jacks.

IN: 1/4" TRS jack for connection to the device with the signal to be processed in the FX Loop jacks.

OPERATION

Operating Mode

The RP93s switch settings, once pre-programmed, are recalled via MIDI Program Change information and are then shown on the front panel display. The Program Change information must be sent on a MIDI Channel that matches the Channel of the RP93s.

- The factory setting for the MIDI Channel Number is "omni" or channels 1 - 16.
- The factory setting for all RP93s presets is all Switches and FX Loops OFF.

• While in Programmed Operation mode, pressing the UP or DOWN button will increment or decrement the display and the switch setting presets. Pressing and holding the UP or DOWN button will cause the display to increment rapidly, but the switch and FX loop settings will not change until the button is released. Pressing a SWITCH or LOOP button

will alternate the on or off state of the associated switch or FX loop port. Changing the state of a port in this way does not affect the programmed setting for the displayed Program Number.

The 8 front panel LEDs always show the current state of the switch and FX loop ports.

Program Numbers 100 - 128 will show a 00 - 28 along with a dot in the lower right of the tens digit to indicate the 100s. There is no program number 0, and 1 - 9 are displayed as single digits.

DEVICE CONNECTION

The FX loops have an input, 4 sets of sends and returns and an output. These may be used to control the presence of foot pedals, rack processors, other instruments, etc. in the signal path. These may also be used as a 4-way A/B box by connecting to the FX returns only and using the Main Out as the output.

Since the RP93s is passive in its signal path (all switching is done with relays), the signal may go either way. This means the RP93s may also send a single signal to up to 4 different amplifiers.

There is no change of interference or crosstalk because the switches are contact closure between the tip and sleeve of the 1/4" connectors. There is no connection between the different switches.

LEARN MODE

Changes to the Switch and FX Loop settings for each Program Number settings are all made and stored in Learn Mode. Setting the MIDI Channel, and utilizing the RFX MIDI Test Mode are also done in Learn Mode.

ENTERING LEARN MODE

- The RP93 enters Learn Mode by pressing both UP and DOWN buttons simultaneously, and holding them down for approximately 5 seconds.

When in Learn Mode, the numeric display blinks. Please note that in Learn Mode, no MIDI data is processed by the RP93s but data will continue to pass to the MIDI Through port.

MODIFYING PRESETS

- Pressing the UP and DOWN buttons will increment and decrement the display of the Program Number. As in Operating Mode, changing the Program Number with the UP and DOWN buttons will cause the stored switch and FX loop settings to be engaged.
- Pressing a switch or LOOP button will alternate the on or off state of the associated switch or FX loop port. Changing the state of a port in this way does not affect the programmed setting for the displayed Program Number (until the STORE button is pressed). The state of a switch or FX loop port is indicated by the LEDs.
- When the desired setting is shown on the LEDs, press STORE. This will save the current setting of the switch and FX loop ports for the displayed Program Number. The display will blank momentarily during the storing operation.

CHANGING THE MIDI CHANNEL

In order for a Program Change command to affect the switch and FX loop settings, the proper MIDI channel must be set.

- To set the MIDI Channel, enter Learn Mode. Press the DOWN button until 01 is displayed, then press once more - an oF appears in the display. To set a specific MIDI Channel, press the DOWN button until the desired channel is displayed. For Omni mode, continue pressing the DOWN button until "on" is displayed, for all off mode, leave "oF"

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>