



5.1 Channel c-media PCI Sound Card

RC-701

User Manual

Features

- Full-duplex playback and recording. Built-in 16-bit CODEC
- Support Microsoft® DirectSound™. Also support earphones, 2/4/6 channel speaker mode
- Downloadable Wave Table Synthesizer, supporting Direct Music®
- PCI Rev. 2.2 compliant with bus mastering modes
- ACPI compliant power down management
- Support Windows® 2000, XP/2003/Vista/7 (32/64 bit)

System Requirements

- Pentium-class computer with one available PCI slot
- Windows® 2000, XP/2003/Vista/7 (32/64 bit)
- DirectX 8.1 above is required

Package Contents

- 1 x C-Media CMI8738 5.1 Channel PCI Sound Card
- 1 x Driver CD
- 1 x User Manual

Hardware Installation

It is recommended that you remove any previously installed sound card and drivers prior to installing this 5.1 Channel PCI Sound Card to avoid any conflicts. If previously installed drivers are not removed, this 5.1 Channel PCI Sound Card perhaps not function properly. (**Note:** If your computer has on-board sound you will need to disable it on the motherboard. For more information please see your computer's documentation or contact your computer's manufacturer.)


Driver Installation

For Windows® 2000, XP/2003/Vista/7 (32/64 bit)

Place the Driver CD into the CD-ROM drive. Click the **Start** button on the taskbar and click **Run**. Type "**D:\RC-701\Setup.exe**". (Assuming you have placed the CD in CD-ROM drive labeled as D).

1. Follow any on-screen instructions to complete the software installation.
2. Restart your system.
3. Once you have rebooted the computer, this 5.1 Channel PCI Sound card is ready to be used.

Physical Connections

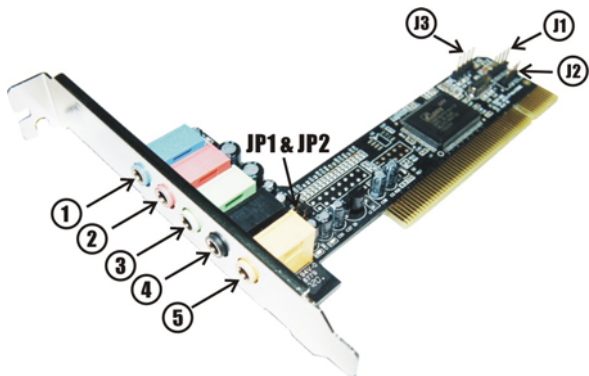

The rear panel of this 5.1 Channel PCI Sound Card has the following jacks:

1. **Line In (blue)** – Connect to tape/CD/DVD player, or other audio sources for output mixing and/or recording
2. **Mic In (pink)** – Connect to microphone
3. **Front-Speaker (green)** – Output to speakers with amplifier or earphones or audio-in of home stereo
4. **Rear-Speaker (black)** – Connect to the rear speakers while four/six channel speakers mode is enabled
5. **Center/Sub-woofer (orange)** – Connect to the center speaker and sub-woofer while six channel speakers mode is enabled

This 5.1 Channel PCI Sound Card also has the following internal connection and jumpers:

	The Function	
J1	Analog CD/IN Port(Signals: L-G-G-R)	
J2	Analog CD/IN Port(Signals: G-R-G-L)	
J3	Aux-in	
JP1&JP2	1-2 close	Center/Bass channel in normal mode
	2-3 close	Center/Bass channel in inverse mode

Thank you for purchasing a quality Rosewill Product.
Please register your product at : www.rosewill.com for complete warranty information and future support for your product.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>