

 
Rosewill[®]

Digital frame RDF-670B
User Manual


Positioning Your Frame

Adjustable Stand


Rotate the stand to position the frame vertically or horizontally.

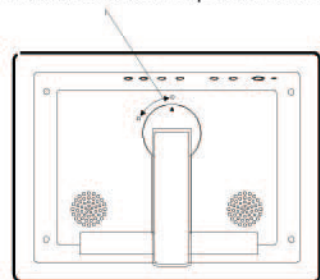

 
Keep the player away from strong magnets, heat sources, direct sunlight, or excessive dust.

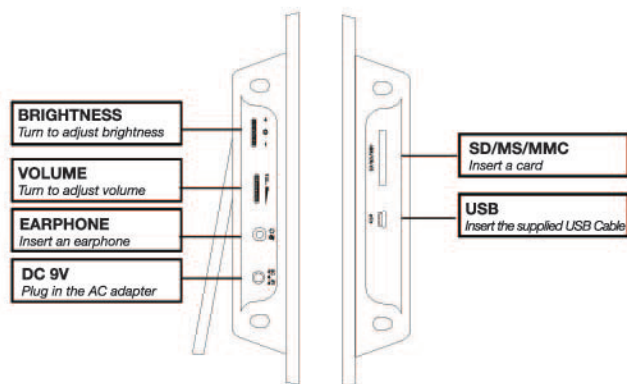

Using Your Frame

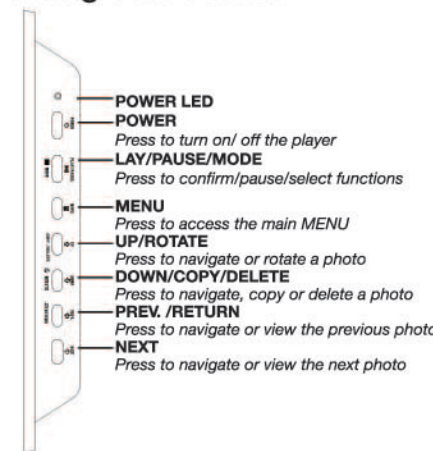 

Remote Control

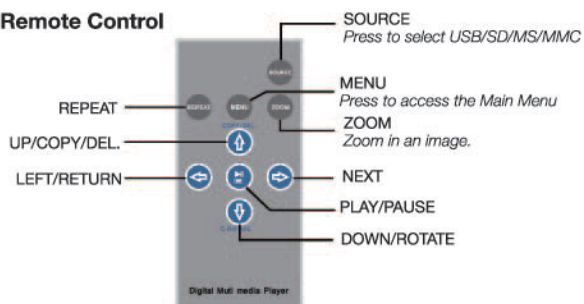 

Turning on Your Player

Press **POWER**, **PHOTO**, **AUDIO** and **SETTING** appear on the main menu display. Select any mode by using **NEXT** and **PREV**.

PHOTO

Your player automatically displays saved photos when you turn it on. To view photos from an SD/MS/MMC card or USB disc, insert the card into the **SD/MS/MMC** slot or using supplied USB Cable. Press **PLAY/PAUSE/MODE** once to enter Slide Show mode, the photos transition based on the frame settings. Press **PLAY/PAUSE/MODE** again to enter Browse mode. The player displays a single image. You can use the **PREV** and **NEXT** button to select a photo.

If the card or **USB** disc is present, press **PLAY/PAUSE/MODE** again to enter Digest mode. Thumbnail images of the photos appear in a table. Use the **PREV**, **NEXT**, **UP** and **DOWN** button to navigate through the thumbnails. Press **MENU** to access the player's main menu.

Copying Photos to Your Player

To copy photos from a photo card to your player, locate the photo and press **UP/COPY/DELETE**. The player asks if you want to copy the photo. Select **YES**, and press **PLAY/PAUSE/MODE**, the player can copy about 20 photos to the player's memory.

Note: You can rotate photos clockwise by pressing **ROTATE** repeatedly while the photo is on screen. Rotated photos are copied in the rotated position.

Deleting Photos

Note: please check no card and USB disc in the player while deleting. To delete a photo from your player's memory, located the photo and press **UP/COPY/DELETE**.

The player asks if you want to delete the photo. Select **YES**, and press **PLAY/PAUSE/MODE**. The player deletes the photo from the player's memory.

Note: The delete function only deletes photos from the player's memory, not from a storage card.

Player Settings

1. Press **MENU** the main menu appears.
2. Select **SETTING** and press **PLAY/PAUSE/MODE**. The Setup Menu Page appears.
3. Use the **PREV**, **NEXT**, **UP** and **DOWN** buttons to highlight a setting and option.
4. Press **PLAY/PAUSE/MODE** to select the highlighted option. You can select one of the following options:

*BRIGHTNESS: -20 to +20

*SLIDE SHOW TIME: 5-, 10, or 30-second display time for each photo.

*SLIDE SHOW WITH MP3

*OSD LANG: The default language is ENGLISH.

*EXIT SETUP: Return to the main menu.

AUDIO

Press **PLAY/PAUSE/MODE** to access **AUDIO** mode to enjoy the music saved in the SD/MS/MMC card or USB disc.

Repeat Function

Press **REPEAT** button on the Remote Control to select **RANDOM/REPEAT ONE/REPEAT ALL/ REPEAT OFF**.

CAUTION Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or after the appliance been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.

Your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling. For more information, please contact the local authority or your retailer where you purchased the product.

SPECIFICATIONS

Power source: DC 9V

Operating temperature: 5~35C

Weight: 0.491 kg

Dimensions (W x D x H): 240 x 172 x 38mm

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>