



**MICRO COMPONENT
SYSTEM
CD-R/RW PLAYBACK
MM-B3/B4**

Instruction Manual



Safety Warnings

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTER LOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.



CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE REAR COVER.
NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE
PERSONNEL.



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

Wiring the Mains Power Supply Plug(UK Only)

IMPORTANT NOTICE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover omitted. If the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do NOT connect the plug to a mains socket as there is a risk of shock hazard from the bared flexible cord.


IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:-

BLUE = NEUTRAL BROWN = LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:-

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL  , OR COLOURED GREEN OR GREEN AND YELLOW.

Contents

Thank you for buying this
SAMSUNG micro-component system.

Please take time to read these instructions.
They will allow you to operate your
system with ease and take full advantage
of its features.

 
GB

◆ SAFETY WARNINGS	2
◆ INSTALLING YOUR MICRO-COMPONENT SYSTEM	
■ Front Panel View	4
■ Remote Control	5
■ Rear Panel View	6
■ Where to Install Your Micro-Component System	7
■ Connecting your System to the Power Supply	7
■ Inserting Remote Control Batteries	7
■ Connecting to an External Source	8
■ Speaker Connection	8
■ Connecting the AM (MW)/LW Aerial	9
■ Connecting the FM Aerial	9
■ Setting the Clock	10
◆ CD-PLAYER	
■ Listening to a Compact Disc	10
■ Selecting a Track	10
■ Searching for a Specific Music Passage on a CD	10
■ CD Repeat Function	11
■ Repeat A ↔ B Function	11
■ Programming the Order of Playback	11
■ Regarding the playback of CD-R/RW	11
■ Checking or Changing Programmed Tracks	12
◆ TUNER	
■ Searching for and Storing the Radio Stations	12
■ Selecting a Stored Station	13
■ Improving Radio Reception	13
◆ TAPE DECK	
■ Listening to a Cassette	14
■ Selecting the Cassette Playback Mode (Option)	14
■ Tape Counter	14
■ Recording a Compact Disc	15
■ Recording a Radio Program	15
◆ OTHER FUNCTIONS	
■ Mute Function	15
■ Timer Function	16
■ Canceling the Timer	16
■ Power sound function	17
■ Sleep Timer	17
■ S.Bass (Super Bass) Function	17
■ Selecting an Equalizer Preset	17
■ Microphone Function (Option)	18
■ Connecting Headphones	18
◆ RECOMMENDATIONS FOR USE	
■ Safety Precautions	19
■ Cleaning Your Micro-Component System	19
■ Precautions When Using Compact Discs	20
■ Precautions When Using Audio Cassettes	20
■ Before Contacting the After-Sales Service	20
■ Technical Specifications	21

Symbols




Front Panel View

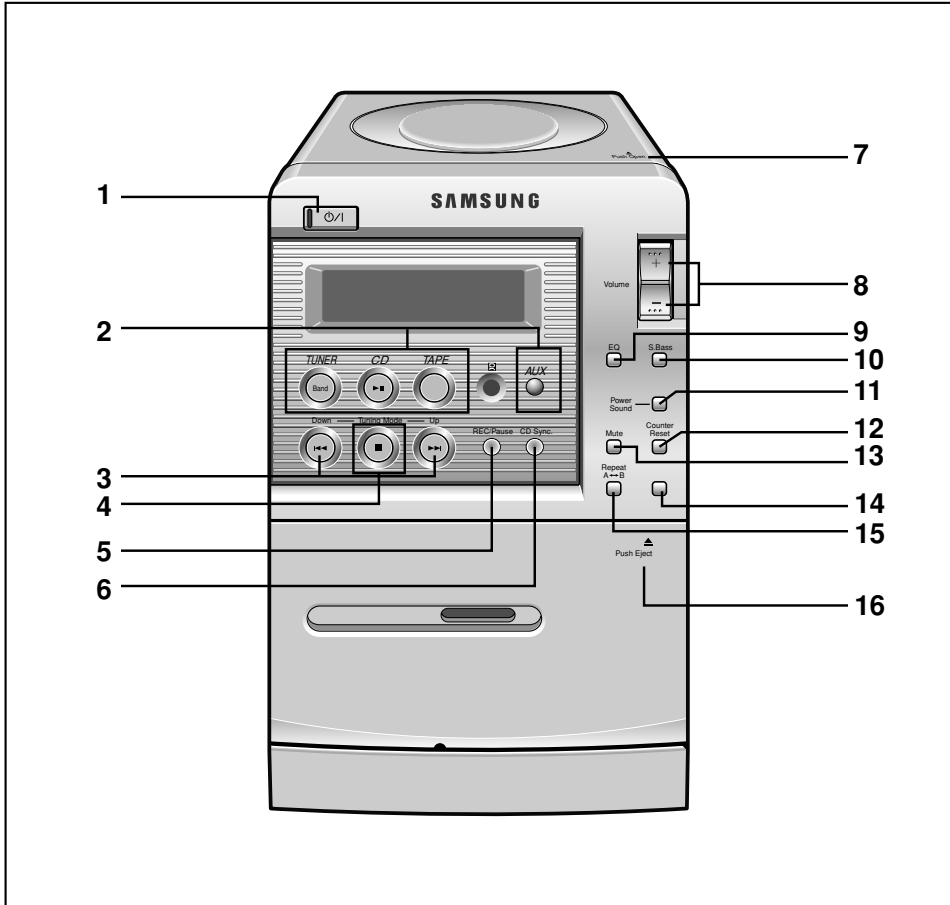


- | | |
|--------------------------------------------|-------------------------------------------|
| 1. On/Standby | 9. EQ |
| 2. Function selection (TUNER/CD/ TAPE/AUX) | 10. S. Bass |
| 3. Skip or Search | 11. Power Sound |
| 4. Stop | 12. Counter Reset |
| 5. REC/Pause | 13. Mute |
| 6. CD Sync. | 14. CD Repeat/REV. Mode(OPTION) |
| 7. CD Push Open | 15. TAPE/CD Repeat A ↔ B |
| 8. Volume control | 16. Push Eject (Cassette Door Open/Close) |

 Remote Control

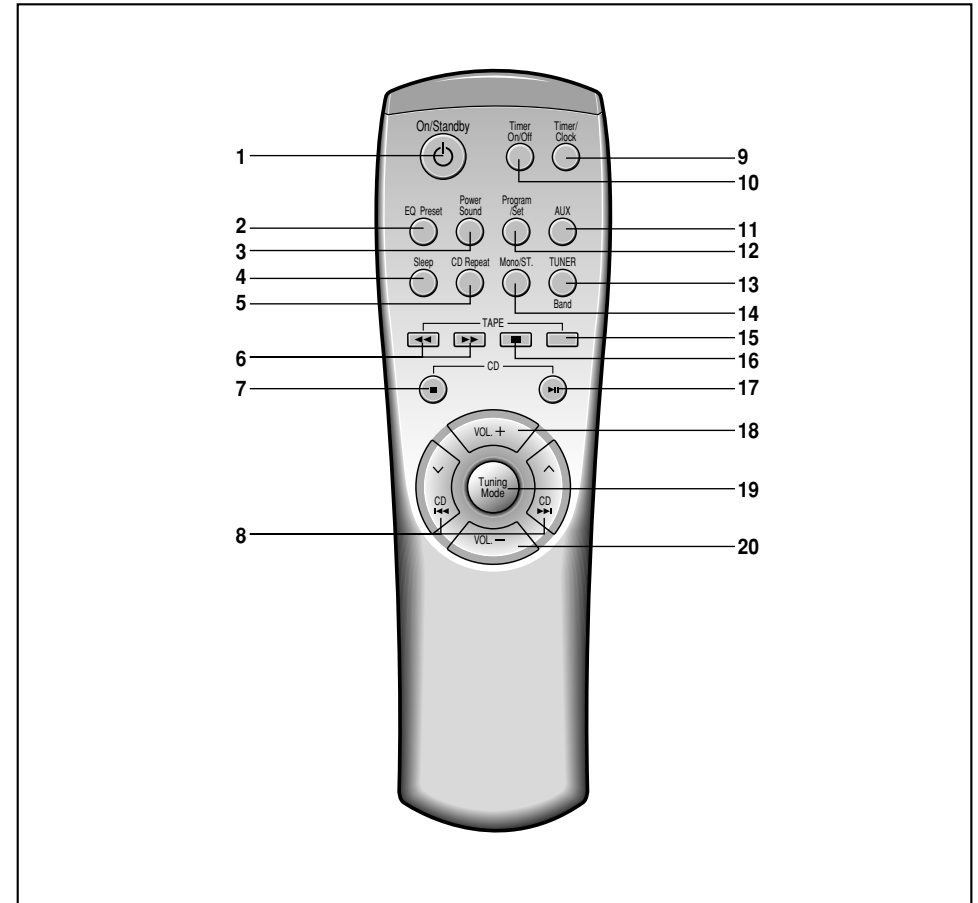

- | | |
|---------------------------------|---------------------|
| 1. On/Standby | 11. AUX |
| 2. EQ Preset | 12. Program/Set |
| 3. Power Sound | 13. TUNER/Band |
| 4. Sleep | 14. Mono/Stereo |
| 5. CD Repeat | 15. Tape Play |
| 6. Tape rewind and fast-forward | 16. Tape Stop |
| 7. CD Stop | 17. CD Play |
| 8. Skip or Search | 18. Volume increase |
| 9. Timer/Clock | 19. Tuning Mode |
| 10. Timer on/off | 20. Volume decrease |

 Rear Panel View

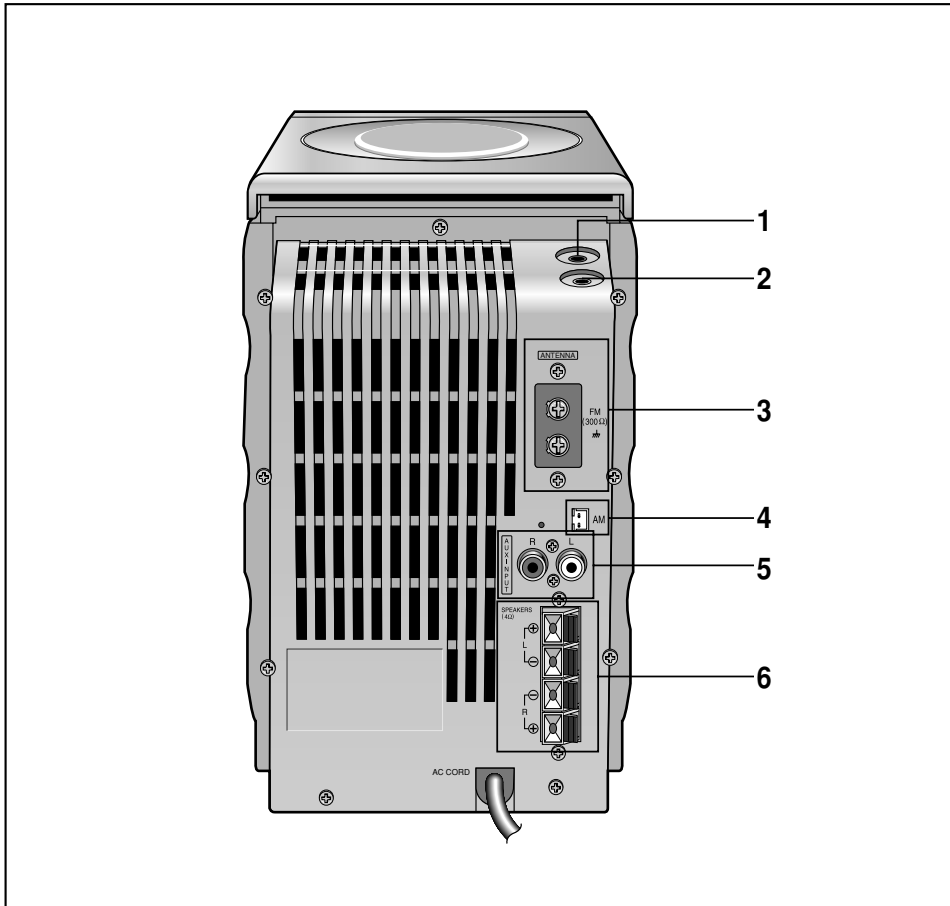

1. MIC Jack Connector(optional)
2. Headphone Jack Connector
3. FM Aerial Connector Terminal
4. AM Aerial Connector Terminal
5. AUX-Input
6. Loudspeakers Connector Terminals

Where to Install Your Micro-Component System

To take full advantage of your new micro-component system, follow these installation instructions before connecting the unit.

- ◆ Install the system on a flat, stable surface.
- ◆ Never place this unit on carpeting.
- ◆ Never place this unit in an outdoor area.
- ◆ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ◆ Make sure that you have enough room to open the compact disc compartment easily.
- ◆ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ◆ Direct the loudspeakers towards the listening area.
- ◆ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

 
 


Connecting your System to the Power Supply

The main lead must be plugged into an appropriate socket.

- ☛ Before plugging your system into a main socket, you must check the voltage.

- 1 Check the position of the voltage selector on the bottom of the system (OPTION).
- 2 Plug the main lead (marked **AC Cord** on the rear of the system) into an appropriate socket.
- 3 Press the **On/Standby** button to switch your micro-component system on.

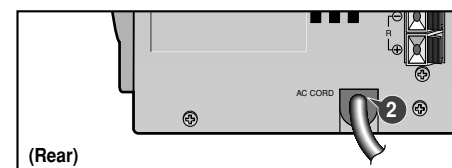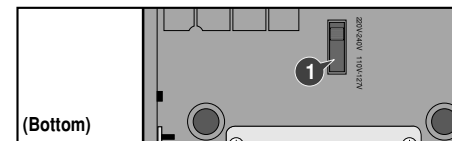

Inserting Remote Control Batteries

 
GB

Insert or replace remote control batteries when you:

- ◆ Purchase the micro-component system
 - ◆ Find that the remote control is no longer operating correctly
- ☛ When replacing the batteries, use a new set of batteries and never mix alkaline and manganese batteries.

- 1 Place your thumb on the position marked "⬇️" on the battery compartment cover (rear of the remote control) and push the cover in the direction of the arrow.
- 2 Insert two AAA, LR03 or equivalent batteries, taking care to respect the polarities:
 - ◆ + on the battery against + in the battery compartment
 - ◆ - on the battery against - in the battery compartment
- 3 Replace the cover by sliding it back until it clicks into position.

- If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.

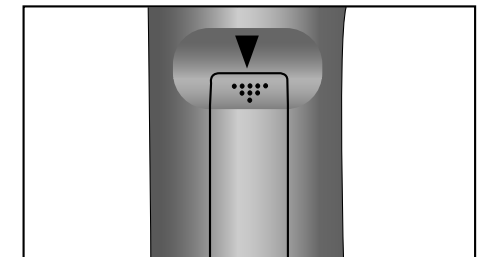

Connecting to an External Source

The auxiliary input can be used to take advantage of the sound quality of your micro-component system when listening to other sources.

- Examples:
- ◆ A television
 - ◆ A video disc player
 - ◆ A Hi-Fi stereo video cassette recorder


➤ To connect the external source, the source must have an audio output. In addition, you need an RCA connection cable.

- 1 Set the system to standby mode and disconnect it and the external source from the main.
- 2 Connect the audio cable to the rear of the micro-component system.

Connect the...	To the connector marked...
Red jack	R (right)
White jack	L (left)

➤ For optimum sound quality, do not invert the right and left channels.
- 3 Plug the system back into the main socket and press **On/Standby** (⏻/⏻) to switch it on.
- 4 Select the AUX source by pressing **AUX**.
Result: AUX is displayed.
- 5 Switch the external source on.
- 6 Adjust the volume and balance as required:
◆ Volume ◆ Equalizer

 Example: You can watch a film and take advantage of stereo sound provided that the original sound track is in stereo (as if you were in a cinema).

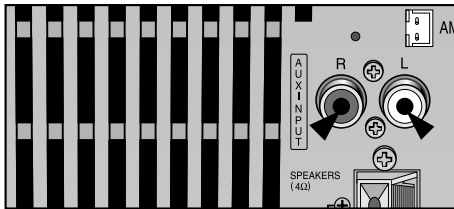

Speaker Connection

 
The loudspeaker connector terminals are located on the rear of the system (red and black tabs).

There are four terminals on the system:

- ◆ Two for the left speaker (marked L)
- ◆ Two for the right speaker (marked R)

To achieve the correct sound quality, connect the:

- ◆ Red wire to the + terminals
- ◆ Black wire to the - terminals

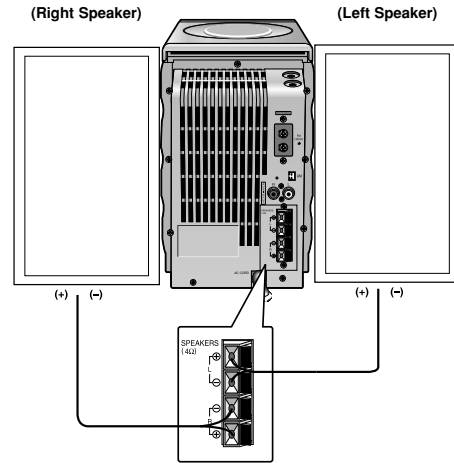

Directions in Installing Speaker

- ◆ Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- ◆ Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- ◆ Do not take the speaker apart from TV or computer monitor. The speaker near the TV or computer monitor may influence the quality of the screen display.

 
Connecting the AM (MW)/LW Aerial

The AM aerial (for long and medium waves) can be:

- ◆ Placed on a stable surface
- ◆ Fixed to the wall (you must first remove the base)

The AM aerial connector terminals are located on the rear of the system and are marked AM.

- To avoid noise interference, check that the loudspeaker wires do not run close to the aerial wires. Always keep them at least 2 inches (5 cm) away.

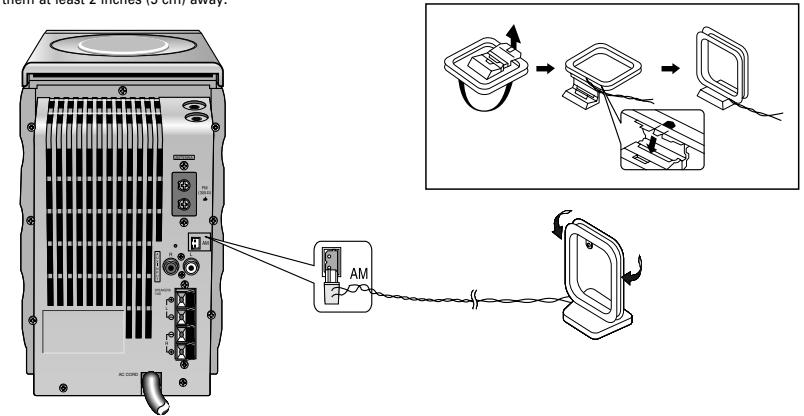


Connecting the FM Aerial

There are two types of aerials, follow the instructions below (depending on option chosen).



1 How to connect a SCREW TYPE wire aerial.

 - ◆ The FM aerial connector terminals are located on the rear of the system and marked FM(300Ω).
- ◆ Spread the T-form FM aerial out and attach the ends to a wall, in the position providing the best reception.

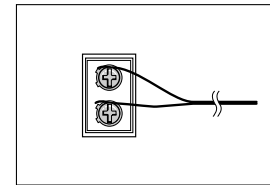

2 How to connect a COAXIAL TYPE aerial(OPTION).

  - ◆ Connect a 75Ω antenna to the FM aerial terminal.
- ◆ Plug the connector on the FM aerial supplied into the coaxial socket (75Ω) marked FM (75Ω) on the rear of the system.
- ◆ Follow the instructions given on Page 13 to tune into a radio station, and determine the best position for the aerial.
- ◆ If reception is poor, you may need to install an outdoor aerial.
To do so, connect an outdoor FM aerial to the FM socket on the rear of the system, using a 75Ω coaxial cable (not supplied).

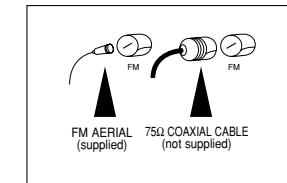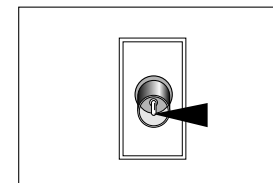

Setting the Clock

Your system is equipped with a clock which allows you to turn your system on and off automatically.

You should set the clock:

- ◆ When you first purchase the micro-component system
- ◆ After a power failure
- ◆ After unplugging the unit

◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

1 Switch the system on by pressing **On/Standby** (⏻ / I) .

2 Press **Timer/Clock** twice.
Result: CLOCK is displayed.

3 Press **Program/Set**.
Result: The hour flashes.


To...	Press...
Increase the hours	⬆
Decrease the hours	⬇

5 When the correct hour is displayed, press **Program/Set**.
Result: The minutes flash.

To...	Press...
Increase the minutes	⬆
Decrease the minutes	⬇

7 When the correct time is displayed, press **Program/Set**.
Result: The clock starts and is displayed, even when the system is in standby mode.

 ➤ ◆ You can display the time, even when you are using another function, by pressing **Timer/Clock** once.

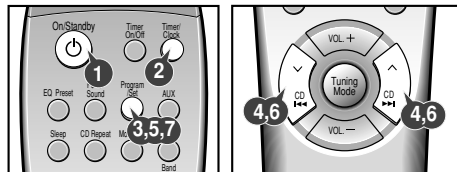

Listening to a Compact Disc

◆ Do not use CDs of irregular shapes like heart or octagon shapes. The performance of the player may be degraded.

1 Press the **CD(▶▶)** button on the main unit and select CD.

2 Open the CD door by pushing on the top of the main unit marked **Push Open** (▲).
Result: The CD door is opened.

3 Place the CD on the compartment so that the CD label faces upward.

4 Close the CD door.
Result: Number of tracks and the total playback time are shown on the display.

 
5 Press the **CD(▶▶)** button for playback.

6 Adjust the volume according to needs with the following procedures.
◆ Press the **VOL. +** or **-** button.

7 If it is desired to pause while the playback is processing, press the **CD(▶▶)** button.

➤ Press the **CD(▶▶)** button once again to play back again.


8 To stop playback, press the **Stop** (■) button.

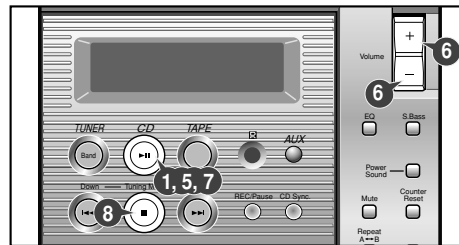

Selecting a Track

You can select the track you wish to listen to, either when the compact disc player is stopped or when a disc is playing.

To start playback at the beginning of the...	Press...
Next track	▶▶ once
Current track	◀◀ once
Previous track	◀◀ twice
Track of your choice	◀◀ or ▶▶ the appropriate number of times.

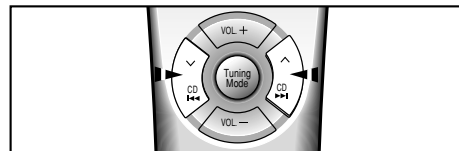 


Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

To search through the tracks...	Press and hold down...
Forwards	▶▶ for at least one second
Backwards	◀◀ for at least one second

 ➤ It is recommended that you turn the volume down before using this function.

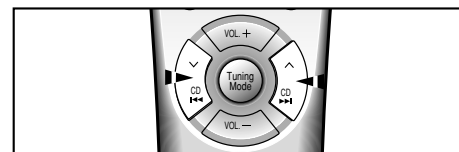

CD Repeat Function


You can repeat:

- ◆ A specific track on a compact disc
- ◆ All tracks on the compact disc

1 Press the **CD Repeat** button.

To repeat the...	Press CD Repeat...
Current track indefinitely	Once (REP. 1 is displayed)
Disc	Twice (REP. ALL is displayed)

 2 When you wish to stop the Repeat function, press CD Repeat a third time.
Result: REP is no longer displayed and the function is cancelled.

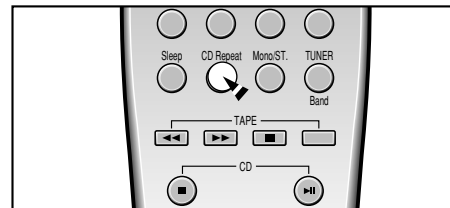

Repeat A ↔ B Function

 
When you select **CD(TAPE) Repeat A ↔ B** playback, the music passages to which you were listening are repeated 3 times.

1 Press **CD(▶▶)** or **TAPE** button.
Result: The CD(TAPE) player starts playing.

2 Press **Repeat A ↔ B** button.
Result: The indications appear: **START**
The flashes appear: **A ↔ B**
◆ A Time is memorized.

3 Press **Repeat A ↔ B** button.
Result: The indications appear: **END**
◆ B Time is memorized.
◆ Your selected passages are repeated 3 times.

4 When you have finished the Repeat playback, Press **Repeat A ↔ B**.

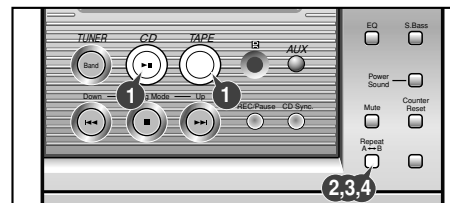

Programming the Order of Playback

You can decide for yourself:

- ◆ The order in which you listen to the tracks
- ◆ The tracks to which you do not wish to listen

➤ This feature can be combined with the CD Repeat function.

1 If necessary, stop the player by pressing **Stop** (■).

2 Press **Program/Set**.
Result: P -- 01 -- is displayed.

 
 
3 Select the required track by pressing the SKIP buttons:
◆ ▶▶ to move backwards through the tracks
◆ ◀◀ to move forwards through the tracks

4 Press **Program/Set**.
Result: P -- 02 -- is displayed.

5 To select other tracks, repeat Steps 3 and 4.
➤ You can programme up to 24 tracks.

6 When you have finished selecting the tracks, press **CD(▶▶)** to start listening to the selection, in the order in which the tracks were programmed.

7 Press **Stop** (■) twice to cancel the selection when the disc is playing.

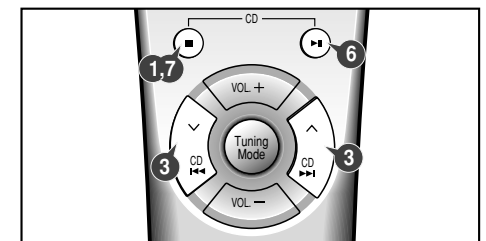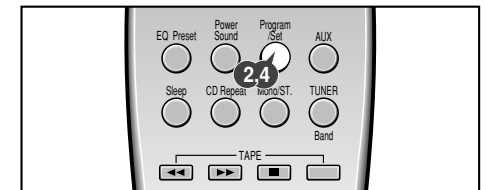

Regarding the playback of CD-R/RW

◆ In the case of an original CD-R(Recordable) recorded in audio CD format, CD-RW(Rewritable) and editing by the user, playback is processed on the respective completed status. (The player may not be played back according to the characteristics of the CD or recorded status.)

◆ The CD-RW is comparably less reflexive than CD which causes more time delay to read.

Checking and Changing Programmed Tracks


You can check and change your selection of tracks at any time.

You must have selected at least one track.

- 1 Press **Stop** (■) once if you have started listening to the selection.
- 2 Press **Program/Set**.
 - Each time you press Program/Set, the next selection is displayed.
- 3 Press **Program/Set** one or more times until the track to be changed is displayed.
- 4 Press **⏮** or **⏭** to select the new track.
- 5 Press **Program/Set**.
- 6 Press **CD** (▶||) to start listening to the selection.

Result: The first track selected is played.

 ➤ You can change one or more tracks in your initial selection.

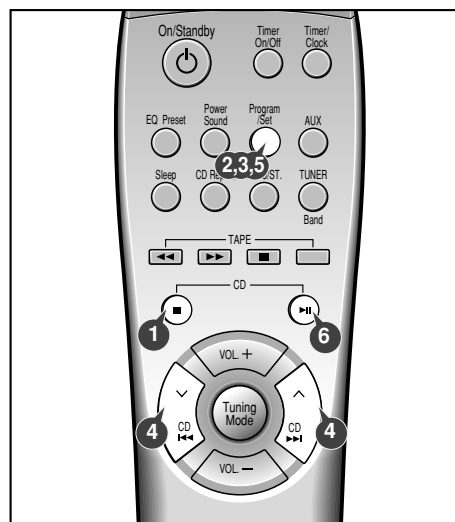

Searching for and Storing the Radio Stations

You can store up to:

- ◆ 15 FM stations
 - ◆ 8 MW station(OPTION)
 - ◆ 7 LW station(OPTION)
 - ◆ 5 MW station(OPTION)
 - ◆ 5 SW1 station(OPTION)
 - ◆ 5 SW2 station(OPTION)
- 15 AM stations(option)
- 15 AM stations(option)

- 1 Switch the system on by pressing **On/Standby** (⏻ / I).
- 2 Select the **TUNER** function by pressing **TUNER/Band** on the front panel.
- 3 Select the required frequency band by pressing **TUNER/Band** again.

Result:The appropriate indication is displayed:

 - ◆ **FM** Frequency Modulation
 - ◆ **AM(MW)** Medium Wave
 - ◆ **LW**(Option) Long Wave
 - ◆ **SW1,SW2**(Option) Short Wave
- 4 Press **Tuning Mode** one or more times until **MANUAL** is displayed.

Automatic tuning

 - ◆ Press and hold **∇** or **∧** on the remote control.
 - ◆ Press and hold **⏮**, **⏭** on the main unit.

 
Result: Automatically scans and tunes to the next available station.

Manual tuning

 - ◆ Press **∇** or **∧** on the remote control.
 - ◆ Press **⏮** or **⏭** on the main unit.

Result: Press the button repeatedly to tune in the desired station manually.

 - ◆ **PRESET** function is explained in detail in the section "Selecting a Stored Station" on.
- 5 Select the station to be stored by pressing **⏮**, **⏭** to increase or decrease the frequency respectively.
 - ◆ To scroll through the frequencies faster when searching manually, hold down the **⏮**, **⏭**.
 - ◆ The automatic search procedure may stop on a frequency that does not correspond to a radio station. If this happens, use the manual search mode.

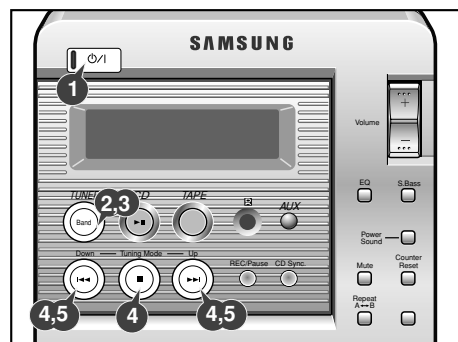

Searching for and Storing the Radio Stations(continued)

- 6 If you do not want to store the radio station found, revert to Step 4 and search for another station.

 
 
Otherwise:

 - a Press **Program/Set**.

Result: The program number is displayed for a few seconds.
 - b Press **Tuning** **∇** and **∧** to assign a program number between 1 and 15.
 - c Press **Program/Set** to store the radio station.

Result: The program number is no longer displayed and the station is stored.
- 7 To store any other radio frequencies required, repeat Steps 3 to 6.

➤ The **PROGRAM** function can be used to assign a new station to an existing program number.

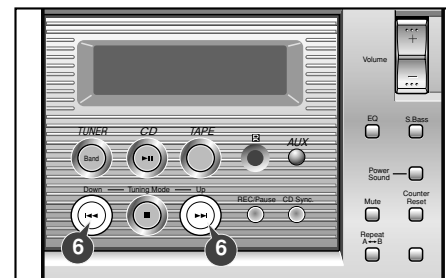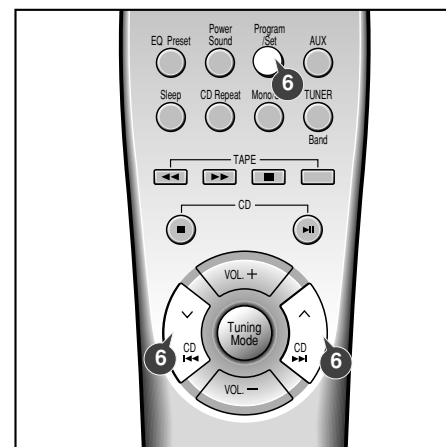


Selecting a Stored Station

You can listen to a stored radio station as follows:

- 1 Switch the system on by pressing **On/Standby** (⏻ / I).
- 2 Select the **TUNER** function by pressing **TUNER/Band** on the front panel.
- 3 Select the required frequency band by pressing **TUNER/Band**.
- 4 Select the radio station as follows.

To listen to ...	Press ...
A stored station	a Press the Tuning Mode button until "PRESET" is displayed.
	b Tuning ∇ and ∧ to select the required station.

 
➤ Press **Tuning Mode** again to exit the stored station selection function.

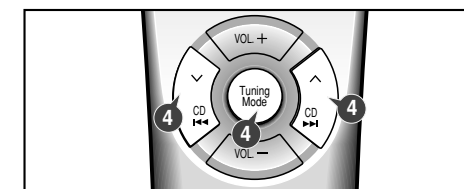

Improving Radio Reception

You can improve the quality of radio reception by:

 - ◆ **Rotating the FM or AM(MW) aerial**
 - ◆ **Testing the positions of the FM and AM(MW) aerials before fixing them permanently**
- If reception from a specific FM radio station is poor, press **Mono/ST** to switch from stereo mode to mono. The quality of the sound will be improved.

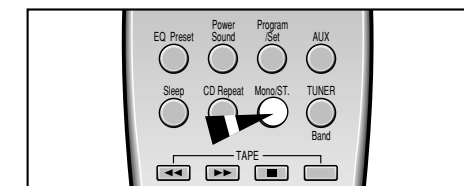

Listening to a Cassette

- 1 Switch the system on by pressing **On/Standby** (⏻/⏷).
- 2 Select the **TAPE** function by pressing **TAPE** on the front panel.
- 3 Open the cassette deck by pushing on the corner of the cover marked **Push Eject** until you hear a click and then releasing it.
- 4 Insert the pre-recorded cassette with the open edge of the tape facing downwards.
- 5 Close the deck by pushing on it until it clicks into place.
- 6 Press the **TAPE** button.
Result: The cassette starts playing.
- 7 Press any of the following buttons during playback, as required.

To...	Press...
Listen to the same track again	◀ once
Listen to the next track	▶ once
Listen to the previous track	◀ twice
Listen to the track of your choice	◀ or ▶ the appropriate number of times
Listen to the other side of the cassette	▶ / ◀ once (option)



➤ If there are very quiet passages on a track, the automatic search function may stop before the end of the track. Also, a very short silence between two tracks may not be detected.

- 8 When the cassette is stopped, select one of the following functions as required.

To...	Press...
Rewind the cassette	◀◀
Fast-forward the cassette	▶▶

➤ The cassette player stops automatically when the beginning or end of the cassette is reached.

  - 9 To stop the playback or search, press **Stop** (■) button.

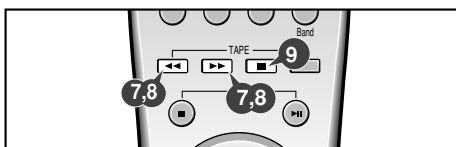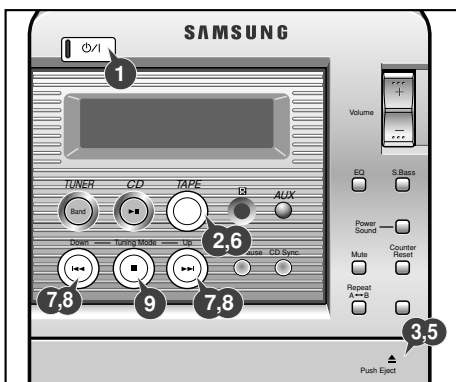


Selecting the Cassette Playback Mode (OPTION)

Your micro-component system has three cassette playback modes which enable you to listen to both sides of a cassette automatically.
Press REV.Mode until the appropriate symbol is displayed.

When the display indicates... The micro-component system plays back...

 - One side of the selected cassette and then stops.
- One side of the cassette. The other side of the cassette and then stops.
- Both sides of the cassette indefinitely until you press stop.

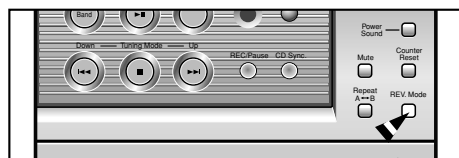


Tape Counter

When playing a cassette, a counter is displayed to enable you to take note of the counter value at the start of each track and thus start playback at the beginning of the track to which you wish to listen.

➤ The counter is only displayed when a cassette is being played.

 Before starting to record a cassette for which you wish to take note of the counter values at the beginning of each track, reset the counter by pressing **Counter Reset**.

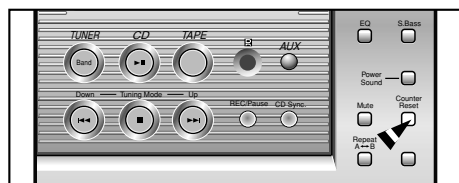

Recording a Compact Disc

 
You can record a compact disc on a cassette in two different ways:

- ◆ Synchronised recording
- ◆ Direct recording

Synchronised recording

This feature enables you to synchronise the start of the recording with the start of the disc or track of your choice.
◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch the system on by pressing **On/Standby** (⏻/⏷).
- 2 Insert a blank cassette in Deck.
- 3 Load a compact disc.
- 4 Press the **CD** (▶▶) button.
◆ Use the CD selection (◀◀, ▶▶) buttons to select the desired song.
- 5 Press the **CD Sync.** button on the front panel.
◆ When stopped, press the button to start the recording from the first piece of music.
- 6 To stop recording, press **Stop** (■) button.

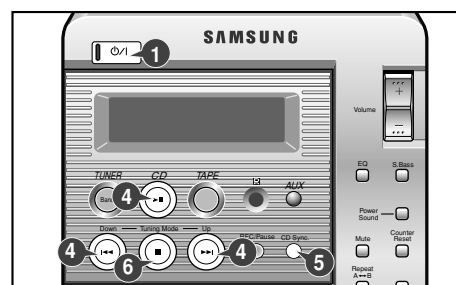


Direct recording

The direct recording mode enables you to start recording with any track on the compact disc.

◆ You do not need to adjust the volume, as it has no effect on the recording.

 - 1 Switch your system on by pressing **On/Standby** (⏻/⏷).
- 2 Insert a blank cassette in Deck.
- 3 Load a compact disc.
- 4 Press the **CD** (▶▶) button.
◆ Use the CD selection (◀◀, ▶▶) buttons to select the desired song.
- 5 Press the **REC/Pause** button.
Result: Recording will begin.
- 6 To stop recording, press **Stop** (■) button.

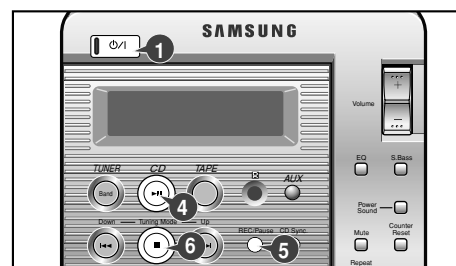

Recording a Radio Program

You can record a radio program of your choice.

◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch the system on by pressing **On/Standby** (⏻/⏷).
- 2 Insert a blank cassette in Deck.
- 3 Select the **TUNER** function by pressing **TUNER/Band**.
- 4 Select the radio station that you wish to record by pressing **◀◀** or **▶▶** button.
- 5 Press **REC/Pause**.
Result: REC is displayed and recording starts.
- 6 To stop recording, press **Stop** (■) button.



Mute Function

You can turn the sound off temporarily on your system.

Example: You wish to answer a telephone call.

- 1 Press the **Mute** button.
Result: MUTE is displayed and the sound is switched off.
- 2 To switch the sound back on at the same volume as before, press **Mute** again.



Timer Function

The timer enables you to switch the system on or off at specific times.
Example: You wish to wake up to music every morning.

- If you no longer want the system to be switched on or off automatically, you must cancel the timer.
- ◆ Before setting the timer, check that the current time is correct.
- ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1** Switch the system on by pressing **On/Standby** (⏻ / I).
- 2** Press **Timer/Clock** until **TIMER** is displayed.
- 3** Press **Program/Set**.
Result: **ON TIME** is displayed for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.
- 4** Set the timer switch-on time.
a Set the hour by pressing **Tuning** ∨ and ∧.
b Press **Program/Set**.
Result: The minutes flash.
c Set the minutes by pressing **Tuning** ∨ and ∧.
d Press **Program/Set**.
Result: **OFF TIME** is displayed for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.
- 5** Set the timer switch-off time.
a Set the hour by pressing **Tuning** ∨ and ∧.
b Press **Program/Set**.
Result: The minutes flash.
c Set the minutes by pressing **Tuning** ∨ and ∧.
d Press **Program/Set**.
Result: **VOL 10** is displayed, where **10** corresponds to the volume already set.
- 6** Press **Tuning** ∨ and ∧ to adjust the volume level and press **Program/Set**.
Result: The source to be selected is displayed.
- 7** Press **Tuning** ∨ and ∧ to select the source to be played when the system switches on.


If you select... You must also...

- | | |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TAPE (cassette) | Insert a recorded cassette in the deck. |
| TUNER (radio) | <ol style="list-style-type: none"> a Select the FM or AM frequency band by pressing Tuning ∨ and ∧. b Press Program/Set. c Select a preset station by pressing Tuning ∨ and ∧. |

CD (compact disc) Load compact disc.
 Press **Program/Set** to confirm the timer.

- 8** Press **On/Standby** to set the system to standby mode.
Result: ⏻ is displayed to the middle right of the time, indicating that the timer has been set. The system will switch on and off automatically at the required times.

 - If the timer switch on and off times are identical, the word **ERROR** is displayed.

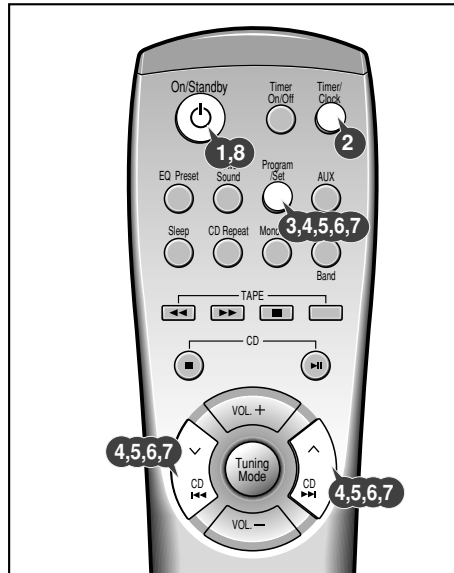


Cancelling the Timer

After having set the timer, it will start automatically as shown by the ⏻ indication on the display. If you no longer wish to use the timer, you must cancel it.

- You can stop the timer at any time (system on or in standby mode).


To...	Press Timer On/Off
Cancel the timer	Once. Result: ⏻ is no longer displayed.
Restart the timer	Twice. Result: ⏻ is displayed again.

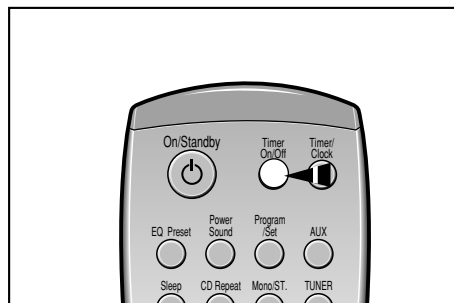 

Power sound function

This machine is equipped with the function of **POWER SOUND**, which amplifies bass treble output to twice as much for powerful real surround-sound.

 - 1** Press the **Power Sound** button on the front panel.
Result:
 - ◆ **P. SOUND** is displayed for a few seconds.
 - ◆ A more powerful resonant sound is diffused.
- 2** To cancel this function, press **Power Sound** again.
Result:
 - ◆ **OFF** is displayed for a few seconds.

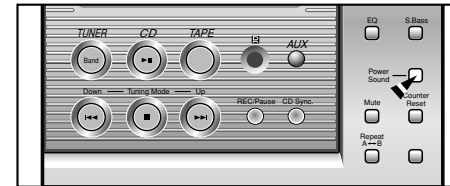


Sleep Timer

You can set the system to switch off automatically.
Example: You wish to fall a sleep to music.

- 1** Press **Sleep** on the remote control.
Result: The following indications are displayed:

 90 MIN
SLEEP
- 2** Press **Sleep** one or more times to indicate how long the system should continue playing before it switches off:



- At any time, you can:
 - ◆ Check the remaining time by pressing **Sleep**
 - ◆ Change the remaining time by repeating Steps 1 and 2

 
- 3** To cancel the sleep timer function, press **Sleep** one or more times until **OFF** is displayed and the word **SLEEP** disappears.



S.Bass (Super Bass) Function

Your Micro Component system has a bass amplification function called **S.Bass**.
 This function makes the sound more powerful and real.

- 1** Press the **S. Bass** button on the front panel.
Result: **S. BASS** is displayed.
- 2** To cancel this function, press **S. Bass** button again.

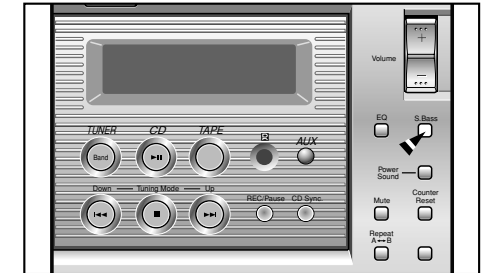


Selecting an Equalizer Preset

Your micro-component system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

Press **EQ** on the front panel or **EQ Preset** on the remote control until the required option is selected.

 - Press the button repeatedly to select "POP → ROCK → CLASSIC → PASS"

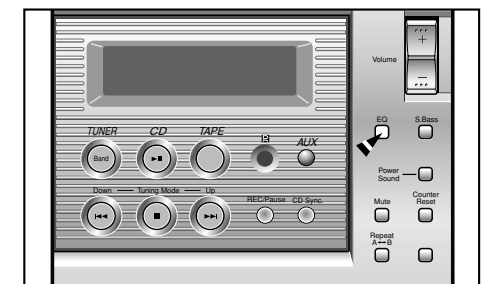


Microphone Function (option)

The microphone enables the user to mix in his or her vocals to sing-along with the music.

Preparation

 Plug the microphone with a 3.5mm mic jack into microphone terminal.

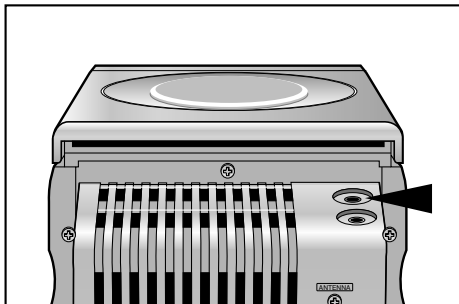


Connecting Headphones

You can connect a set of headphones to your micro component system so that you can listen to music or radio programs without disturbing other people in the room. The headphones must have a 3.5 mm connector or appropriate adapter.

Connect the headphones to the Phones connector on the rear panel (or top right corner).


Result: The loudspeakers are no longer used for sound output.

 Prolonged use of headphones at a high volume may damage your hearing.

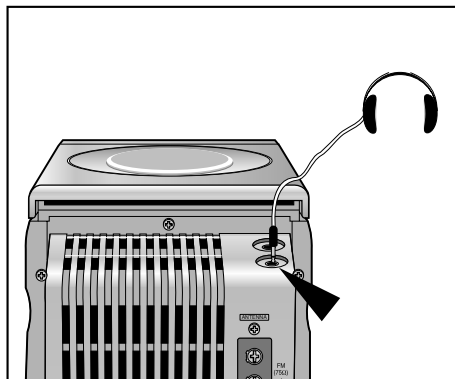


Safety Precautions


The following diagrams illustrate the precautions to be taken when using or moving your micro-component system.

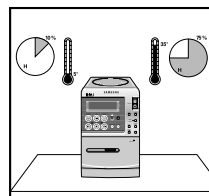 

 
Ambient operating conditions:
Ambient temperature 5°C-35°C
Humidity 10-75%

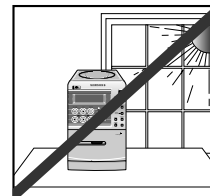

 
Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

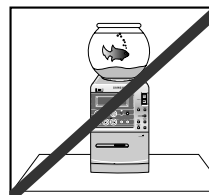

 
Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

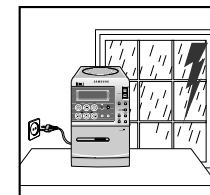

 
During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

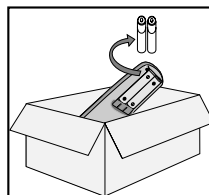

 
Remove the batteries from the remote control, if not used for any extended period. Leaking batteries can cause serious damage to the remote control.

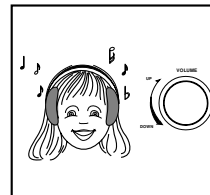

 When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

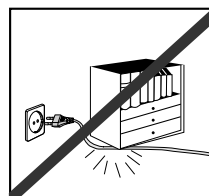

 Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

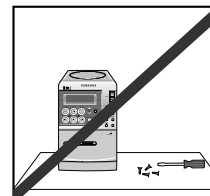

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

Cleaning Your Micro-Component System

To obtain the best possible results from your micro-component system, you must clean the following elements regularly:

- ◆ The outer casing
- ◆ The compact disc player
- ◆ The cassette players (heads, rollers and drive capstans)
- Always unplug the system from the wall outlet:
 - ◆ Before cleaning it
 - ◆ If you are not going to be using it for a long time

Outer Casing

 
Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

Compact Disc Player

- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
- 2 Regularly clean the player with a special cleaning disc (available from your local dealer).


Tape Decks


- 1 Press Push Eject (▲) to open the cassette deck.
- 2 Use a cotton bud and a special cassette cleaning agent to clean the:
 - ◆ Head (1)
 - ◆ Rollers (2)
 - ◆ Drive capstans (3)

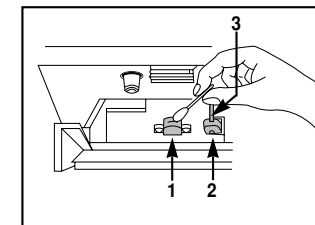

- ◆ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
- ◆ If the unit emits an unpleasant odor when in use, unplug it from the main supply and contact the after-sales service.




Precautions When Using Compact Discs

 - ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked .

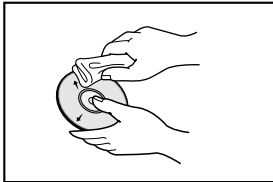

Precautions When Using Audio Cassettes

   - ◆ Check that the tape in the cassette is sufficiently taut.
- ◆ To prevent erasing a cassette that you wish to keep, remove the safety tab on the upper edge of the cassette. To record a cassette, where the tab has been broken, simply cover the opening with adhesive tape.
- ◆ When you have finished playing a cassette, always put it back in its case.
- ◆ Store your cassettes in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Avoid using 120-minute cassettes as they place unnecessary strain on the tape mechanism.

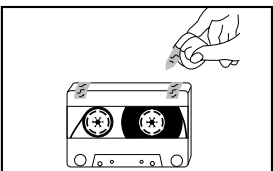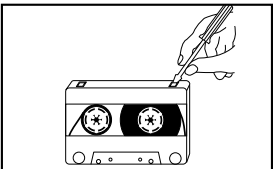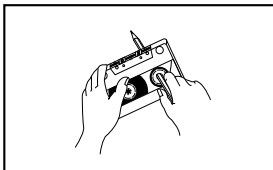

Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

Problem	Checks/Explanation
The system does not work	<ul style="list-style-type: none"> • The main lead is not correctly plugged into a wall socket or the wall socket is not switched on. • The remote control batteries need replacing or the polarity has not been respected. • The On/Standby button has not been pressed.
There is no sound	<p>G E N E R A L</p> <ul style="list-style-type: none"> • The volume has been completely turned down. • The correct function (TUNER, CD, TAPE, AUX) has not been selected. • You have connected a set of earphones. • The loudspeaker wires have been disconnected. • The Mute button has been pressed.
The Timer does not work	<ul style="list-style-type: none"> • The timer has been stopped by pressing Timer On/Off.
In case it does not work, even the action is taken as above.	<ul style="list-style-type: none"> • Press the S.Bass button for 5 seconds in power OFF (standby), then it is returned the original position (RESET)
The compact disc player does not start playing	<p>C D</p> <ul style="list-style-type: none"> • The CD function has not been selected. • The disc has been inserted face down or is either dirty or scratched. • The laser sensor is dirty or dusty. • The system has not been installed on a flat, horizontal surface. • Condensation has formed in the player: leave the system in a warm, airy room for at least one hour.
The tape does not start playing	<p>C A S S E T T E S</p> <ul style="list-style-type: none"> • The TAPE function has not been selected. • The cassette has not been inserted correctly. • The cassette player has not been closed. • The tape is either slack or broken.
The volume falls off The cassette is not erased correctly There is excessive wow and flutter	<ul style="list-style-type: none"> • The audio heads are dirty. • The rollers or drive capstans are dirty. • The tape is worn.
Reception is poor or no radio stations are received at all	<p>R A D I O</p> <ul style="list-style-type: none"> • The TUNER function has not been selected. • The radio frequency has not been correctly selected. • The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation. • You are in a building that blocks radio waves; you must use an outside aerial.

If the above guidelines do not allow you to solve the problem, take a note of:

- ◆ The model and serial numbers, normally printed on the rear of the system
 - ◆ Your warranty details
 - ◆ A clear description of the problem
- Then contact your local dealer or SAMSUNG after-sales service.

Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

RADIO

AM (MW)

Signal/noise ratio	40 dB
Usable sensitivity	56 dB
Total harmonic distortion	2 %

FM

Signal/noise ratio	54 dB
Usable sensitivity	16 dB
Total harmonic distortion	0.5 %

COMPACT DISC PLAYER

Frequency range	20 Hz - 20 KHz
Signal/noise ratio	80 dB (at 1 KHz) with filter
Distortion	0.1 % (at 1 KHz)
Channel separation	75 dB
Disc sizes	Diameter: 120 or 80 mm. Thickness: 1.2 mm

TAPE DECK

Frequency range	125 Hz ~ 8 KHz
Signal/noise ratio	40 dB
Channel separation	30 dB
Erasing effect	50 dB

AMPLIFIER

Output power	2 X 7.5 Watts RMS (total harmonic distortion : 10%)
Channel separation	40 dB
Signal/noise ratio	70 dB

GENERAL

Dimensions	150(W) x 235 (H) x 270(D) mm
------------	------------------------------

THIS APPLIANCE IS MANUFACTURED BY:



AH68-01205B

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>