



SCH-850 Series

**C D M A
D I G I T A L
C E L L U L A R
T E L E P H O N E**

User Guide

Please read this manual before operating your phone, and keep it for future reference.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to SAMSUNG and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

SAMSUNG TELECOMMUNICATIONS AMERICA, INC.

Headquarters:

1130 E. Arapaho Road
Richardson, TX 75081
Tel: 972.761.7000
Fax: 972.761.7001

Customer Care Center:

1601 E. Plano Parkway, Suite 150
Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)
Fax: 972.761.7501

Internet Address: <http://www.samsungtelecom.com>

An electronic version of this user guide can be downloaded at www.samsungtelecom.com

© 2000 Samsung Telecommunications America, Inc. All rights reserved. No reproduction in whole or in part allowed without prior written approval. Samsung Telecommunications America, Inc. is a trademark of Samsung Electronics Corporation, Ltd.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

T9[®] is a registered Trademark of Tegic Communications, Inc. and is licensed under U.S. Patent 8, 792, 969.

Phone.com[®] is a registered Trademark of Phone.com, Inc.

RSA[®] is a registered Trademark RSA Security, Inc.

GH68-00755A e-VERSION 3.0
Printed in South Korea

DISCLAIMER OF WARRANTIES; EXCLUSION OF LIABILITY
EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Introduction To Your Samsung 850 Series Phone

Congratulations on the purchase of your Samsung 850 Series Phone. Using the latest digital technology, the Samsung 850 Series Phone operates similar to other wireless phones, while providing superior resonance and tone quality. Your Samsung 850 Phone operates in both 800 MHz analog and 800 MHz digital CDMA networks.

Your Samsung 850 phone is packed with productive features that are easy to use. Here are some of them:

- ◆ Answer and hang up calls just by opening the phone
- ◆ Large, easy-to-use Phone Book with 229 memory locations
- ◆ Turbo Dialing
- ◆ Voice Dialing - 20 memory locations with one-touch access
- ◆ Event Scheduler, to-do list, world clock, and calculator
- ◆ Web Browser
- ◆ Data and Fax call capable
- ◆ Short Message Services (SMS) and Voicemail
- ◆ Fast Ringer Mute during incoming calls
- ◆ 9 ring tones, 4 melodies, or Vibrate alert
- ◆ 10 Incoming and 10 Outgoing Call Logs with Caller ID
- ◆ Pause Dialing for tele-services
- ◆ Security features including Call Restriction
- ◆ Alarm Clock
- ◆ Dynamic Character Display
- ◆ Hearing Aid Neutral
- ◆ Display quickly changes to Spanish or English
- ◆ Interactive manual available at samsungtelecom.com

How To Use This Manual

Your Samsung 850 Series Phone user guide explains your phone's operations through easy-to-follow instructions. You'll find everything you need to know about using your new Samsung 850 Series Phone right here.

We've included some important safety information that you should know before using your phone. You'll find this information in "Usage Guidelines: All about Performance and Safety" on page 107.

If you still have questions, we'll be happy to answer them. Just call our Samsung Customer Care Center toll-free at 1.888.987.HELP (4357).

We hope you enjoy using your new Samsung 850 Series Phone, and thanks for choosing Samsung.

Table of Contents

Your Consumer Package 1

Getting to Know Your Phone 2

Turning your Samsung Phone On and Off 10

To Turn it On 10

To Turn it Off 10

The Top Line of the Display 11

Using the Battery 13

Installing the Battery 13

Removing the Battery 13

Charging the Battery 14

Charging with the Dual-Slot Desktop Charger 14

Your Phone's Modes 16

Standby Mode 16

Conversation Mode 16

Power Save Mode 17

Basic Voice Call Functions 18

Making a Voice Call 18

Redialing Calls 18

Correcting Dialing Mistakes 19

Ending a Call 19

Incoming Call Notification 19

Answering a Call 20

Adjusting Ring Volume 20

Silencing the Ringer on an Incoming Call 21

Setting the Ringer Type 21

To Mute the Microphone During a Call 21

Adjusting Voice Volume 22

Using Caller ID 22

Three-Way Calling 23

Call Forwarding 23

Call Waiting 24

Answering a Call Waiting Call 24

Basic Voice Call Functions (continued)

Disabling Call Waiting 25

Missed Calls 25

Dropped Calls 25

Failed Calls 25

Prepend Dialing 26

Analog Call 26

Emergency Dialing 27

Pause Dialing 28

Storing Pauses in a Phone Book Entry 28

Pause Dialing From a Stored Phone Book Entry 29

Manual Pause Dialing 29

Basic Setup of Your Phone 30

Automatic Retry 30

Automatic Answer 30

Automatic Hyphenation 31

Answer Options 31

Tone Length Setting 32

Setting the Time 32

Setting Your NAM 33

System Selection 34

How to Setup For a Voice, Data, or Fax Call 35

Setting up a Forced Analog Call 36

How to Setup the MiniBrowser Prompts 36

Audible Alerts 37

Minute Beep 37

Service Alert 37

Connect Alert 38

Disconnect Alert 38

Display Options 40

- Backlight Control 40
- Personal Greeting 41
- Animation Display 41
- Displaying your own Phone Number 42
- Setting the Language of the Display 42
- Displaying your Phone's Hardware and Software Version 43

Alarm 44

- Setting the Alarm 44
- To Change the Alarm Setting 45
- To Cancel the Alarm 45

Sounds 46

- Key Beep Volume Setting 46

Ringer Options 47

- One-Touch Vibrate Ringer 47
- Fast Ringer Mute 47
- Ring Type Setting for Voice and Message Calls 47
- Ring type setting for Data and Fax Calls 48
- Ring Volume Setting for all Incoming Calls 48
- Differential Ring 50

Voice Memo 51

- Reviewing a Voice Memo 52

Voice-Activated Dialing 53

- Tips on Recording Names 53
- Program the Phone for Voice-Activated Dialing 54
- Voice Dialing Activation 55
- Placing a Call using Voice Dialing 56
- Reviewing Voice Dialing Entries 56
- Erasing Voice Dialing Entries 57

Message Services 58

- Incoming Messages 58
- Incoming Message Memory Capacity 58
- Reviewing Incoming Page, Text, or Browser Messages 59
- Incoming Message Ringer 59
- Incoming Messages and Lock Mode 60
- Options when Reviewing Incoming Messages 60
- Erasing Inbox Messages 61

Voicemail 62

- Setting up your Voicemail 62
- Reviewing Voicemail Messages 62

The Phone Book 63

- Viewing Stored Entries 63
- Storing Phone Numbers and Names 65
- Storing phone numbers shortcuts 66
- Storing phone numbers at the end of a call 66
- Prepend a Phone Number 67
- Adding a Name Ringer 68

Changing Your Phone Book 69

- Editing Phone Book numbers 69
- Secret Phone Book numbers 69
- Erasing Phone Book Entries 70
- Erasing the Phone Book 70
- Set Speed Dial 70

Dialing numbers from your Phone Book 71

- Memory Dialing Shortcuts 71

Your Phone's Security Features 72

- Lock Mode 72
- Dialing in Lock Mode 72
- Locking the Phone 73
- Unlocking the Phone 74
- Call Restriction Options 74
- Lock Code Setting 75
- Priority Numbers 75

- Storing a Priority Number 76
- Dialing Priority Numbers in Lock Mode 77
- Personal Identification Number (PIN) 77
- Erasing Your Phone Book (Clear Memory) 78
- Hiding your Phone Number 78
- Resetting Your Phone 79

Keeping Track of Your Calls 80

- Displaying Your Call Logs 80
- Erasing Call Logs 81
- Reviewing Airtime 82

Scheduler 84

- Today 84
- View Month 86
- Jump To Date 87
- To Do List 88
- Count Down 89
- World Time 91
- Calculator 92

Fax and Data Calls 93

- Receiving a Fax 93
- Receiving a Data File 94
- Sending a Fax or Data File 95

The MiniBrowser 96

- To Setup the MiniBrowser Prompts 96
- Launching the MiniBrowser 97
- To exit the MiniBrowser 98
- The MiniBrowser Soft Keys 98
- Navigating the MiniBrowser 99
- Entering text, numbers, or symbols 101
- Using Links 102
- Initiating a Phone Call during a MiniBrowser Session 102
- Receiving a phone call while in the MiniBrowser 102
- Using Bookmarks 103
- To Create a Bookmark 103
- Finding a Bookmark 104

Menus 105

- Main Menu 105
- In Use Menu 105
- Navigating Menus 105

Your Phone's Main Menu 106

Usage Guidelines:

All about Performance and Safety 107

- Understanding Signal Strength 107
- Understanding Power Save Mode 107
- Understanding How Your Phone Operates 107
- Specifications Subject to Change 107
- Radio Frequency Safety 108
- Emergency Calls 108
- Maintaining Your Phone's Peak Performance 109
- Protecting Your Battery 109
- Battery Disposal and Recycling 110
- Samsung 850 Phone and Battery Specifications 111
- Operating a Motor Vehicle 111
- Following Safety Guidelines 112
- Turn Off Your Phone Before Flying 112
- Restricting Children's Access to Your Phone 112
- Cautions 112
- FCC Notice 112
- Storing Your Phone 112
- Using Your Phone Near Other Electronic Devices 113
- FCC Compliance Information 113
- Liquefied Petroleum Gas 114
- Turn Off Your Phone in Dangerous Areas or Posted Areas 114
- Your Phone as a Network Device 114
- Information To User 115


LIMITED WARRANTY 116

Index 118

Your Consumer Package

Your consumer package contains the following items:

- ◆ Samsung SCH-850 Phone with Hand Strap
- ◆ Standard Lithium-Ion Battery
- ◆ Dual-Slot Desktop Charger
- ◆ User Guide, Quick Reference Card (QRC), and Accessory Card

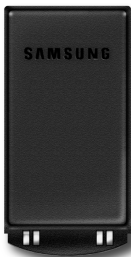


Getting to Know Your Phone

Note: Items 1 through 17 in the picture below are explained on pages 3 through 9.



Getting to Know Your Phone (continued)

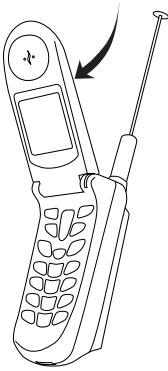

- 1. Active Folding Phone:** Closing the phone will always end your call and turn off the backlight.

There are several options you can set to happen when you open the phone. When opening the phone you can:


- ◆ answer an incoming call. To set this option see “Answering a Call” on page 20.
- ◆ voice dial someone. To set this option see “Voice Dialing Activation” on page 55.
- ◆ control the backlight. To set this option see “Backlight Control” on page 40.



- 2. Backlit Display Screen:** The Display screen is divided into two functional areas:


- ◆ The top line displays icons that indicate your phone’s operating mode (see “The Top Line of the Display” on page 11).
- ◆ The lower area displays in-use information such as the call timer, the name and number of the other party (if available), Mute, Call Waiting, etc. All of your menus also display in the lower area.

Getting to Know Your Phone (continued)

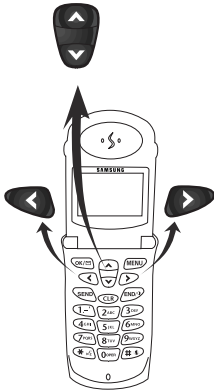

3. Navigation Keys: These keys allow you to scroll when viewing menus, the phonebook, browser, etc., and to move the cursor when editing any option. Also, each navigation key has a one-touch special function that it performs. Here are the one-touch special functions:


- ◆ In Standby or Conversation mode, press the up key to view your Phone Book (in numerical order).
- ◆ In Standby or Conversation mode, press the down key to view your Phone Book (in alphabetical order).
- ◆ In Standby mode, press the right arrow key to launch the web browser.
- ◆ In Standby mode, press the left arrow key to launch the Scheduler.

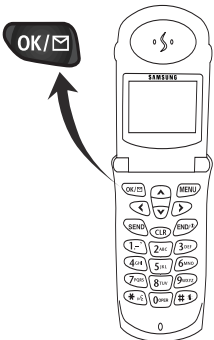


4. OK / Messages Key: This key performs several useful functions:

- ◆ From Standby or Conversation mode, press it briefly to access the Messages Menu.
- ◆ When entering a phone number, press it once to save the number to the Phone Book (then follow a few prompts).
- ◆ When navigating a menu, press it to select the highlighted item.
- ◆ When the alarm goes off, press it to silence the alarm.

Getting to Know Your Phone (continued)

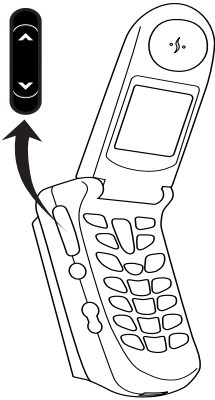


- 5. Volume/Scroll Key:** This key is actually two keys (one up and one down) that are used to:
- ◆ Adjust voice volume during conversation.
 - ◆ Adjust ringer volume in Standby mode.
 - ◆ Mute the ringer during an incoming call.
 - ◆ Scroll through menu options.
 - ◆ Select AM / PM when setting clock, scheduler event times, and alarms.

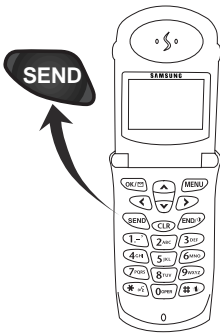


- 6. SEND Key:** This key performs several useful functions.
- ◆ Press it to answer calls.
 - ◆ Dial a number and press it to connect.
 - ◆ During a conversation, press it to initiate Three-Way calling.
 - ◆ During a conversation, press it to answer a Call Waiting call.
 - ◆ Press it once in Standby mode to quickly access your Call Logs.
 - ◆ Press it twice in Standby mode to redial the last outgoing number.


Getting to Know Your Phone (continued)

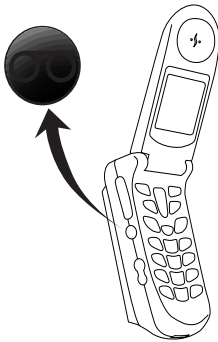

- 7. Voice Memo Key:** From Standby mode;
- ◆ Press and hold it to record up to 60 seconds of audio.
 - ◆ Press briefly to view the Voice Memo menu.
 - ◆ A total of 5 minutes of audio can be recorded in 5 separate Voice Memos. Each Voice Memo is non-volatile and can be stored indefinitely or erased.

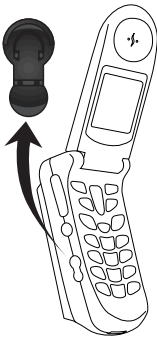

- 8. Headset connector:** This is where you connect the optional headset.
- The headset includes an earpiece and microphone in a convenient, lightweight unit so you can converse without using your hands.
- ◆ What you see in the illustration to the left is really the cover for the headset connector. Gently pry off the top of the cover to expose the headset connector.

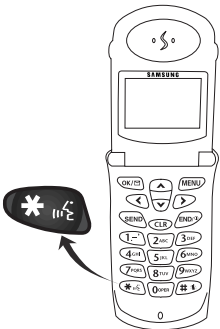


- 9. * / Voice Dial key:** This key has several functions:
- ◆ press for special star calling features.
 - ◆ press and hold to initiate a voice dial call.
 - ◆ When entering text, this key selects capital or lowercase letters (see “Entering text, numbers, or symbols” on page 101).

Getting to Know Your Phone (continued)




- 10. Microphone:** Your typical voice microphone for conversation, but also accepts your voice commands for Voice-Activating Dialing. You can also mute the microphone during conversation by simply pressing **MENU** **1.-** or **MENU** **OK/**.

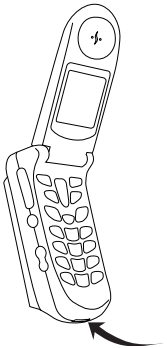

- 11. Accessories Connector:** This is where you connect your charging device. It can also be used to connect optional accessories (sold separately). Accessories available for your phone include:

- ◆ Travel or CLA charger.
- ◆ Wireless data device.
- ◆ hands-free car kit.

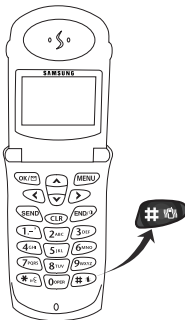

- 12. # / Vibrate key:** This key has two functions:
- ◆ This is the pound key. It's used at various times when you dial especially when using tele-services.
 - ◆ When you are in Standby mode, you can press and hold **#** to turn the vibrate alert on or off (see "One-Touch Vibrate Ringer" on page 47).


Getting to Know Your Phone (continued)



- 13. CLR Key:** This key is used to erase numbers or characters you may have entered incorrectly, or to return to a previous menu or MiniBrowser screen.
- ◆ To erase one character from the display screen, briefly press it once.
 - ◆ To erase all characters, hold it down for one second.
 - ◆ To back up one menu or MiniBrowser level, press it once.
 - ◆ To return to Standby mode or your MiniBrowser home page, press and hold it for one second.



- 14. END/ Power Key:** This key performs several important functions:
- ◆ Press to turn on your phone.
 - ◆ Press and hold to turn off your phone.
 - ◆ Press this key to return to Standby mode when ending a call, ending a MiniBrowser session, or from any menu.
 - ◆ If the phone is already open, and you receive an incoming call, you can mute the ringer by pressing once.

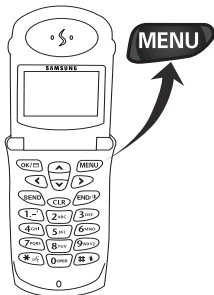


- 15. MENU Key:** When in Standby or Conversation mode, press this key to access menu items, and continue pressing it to scan menu items. When you reach the menu item you want, press **OK/Ⓜ**.
- ◆ When dialing numbers, this key is used to enter a pause (see “Pause Dialing” on page 28).

Getting to Know Your Phone (continued)



16. LED Indicator: Flashes to indicate an incoming call or message. When you have the phone closed and the ringer set to off, the LED indicator will notify you that you have an incoming call or message.

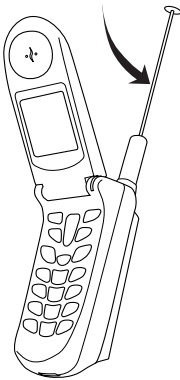

- ◆ The LED also lights up (flashes) for a few seconds when you turn on the phone.




17. Antenna: Makes the call sound clearest when it's fully extended. Your antenna is easily replaced by just screwing in a new one.


Turning your Samsung Phone On and Off

To Turn it On

When you're ready to turn your phone on, fully extend the antenna for best reception. Simply press  and three things happen; the LED comes on, the phone beeps, and the startup graphics begin to play. The phone will search for a signal; when a signal is found, the  icon appears and the phone enters Standby mode. You can make and receive calls now.


To Turn it Off


To turn your phone off, press and hold  until the power off graphics begin to play; then, the power off sound plays, and the display goes blank. Notice that when the phone is off, nothing is displayed on the screen.


Note: If  is pressed for less than one second, the phone will not turn off. This helps keep your phone from being turned off accidentally.


The Top Line of the Display

Display indicators (or icons) appear across the top of your phone's display screen. The Signal Strength and Battery Strength icons always appear, other icons appear based on your phone's operating mode.

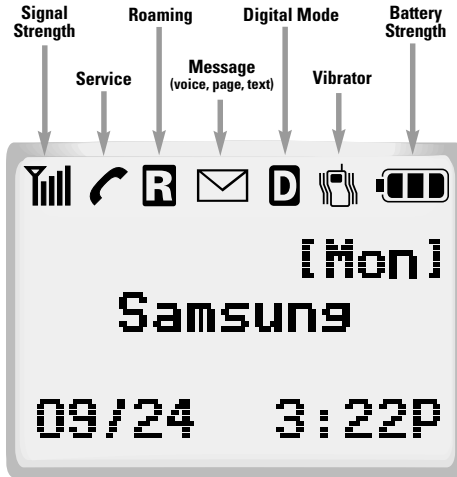

 **Signal Strength:** This icon always appears when your phone is on and shows your current signal strength. More lines indicate greater signal strength. Four lines indicate maximum strength, and one line indicates least strength.



 **Service Indicator:** This icon indicates a call is in progress. If there is trouble with signal strength, this indicator will have a diagonal line through it. See below under “No service indicator” for a description of this situation.

 **No Service Indicator:** This icon indicates your phone cannot find a signal because you're outside a service area. When this is displayed, you cannot make or receive calls. Wait a little while for a signal or move into an open area.


Note: The no service indicator will always appears when you turn on your phone. This is not a problem. It just indicates that your phone is searching for service. As soon as service is found, the indicator will disappear.



R **Roaming:** Displays when the phone is outside the home service area but within the network. If you are:

- ◆ in your home network this indicator does not display.
- ◆ in a preferred roaming area, this indicator will be on but, not flashing.
- ◆ in a non-preferred roaming area, this indicator will flash once every second.

 **Message Indicator:** This icon indicates you have message(s) waiting. These message(s) can be voicemail notification (VMN), page, text, or MiniBrowser message(s). Press  to see the message menu. See “Message Services” on page 58 for more information.

D **Digital:** Indicates that the phone is in Digital mode. For Data/Fax calls, Web Browser calls, and Voice Dialing, the phone must be in digital mode.

 **Vibrator on:** This icon indicates that an incoming call will vibrate the phone rather than ring it. This feature can be used for quiet situations where you don't want your ringer to disturb others or for loud situations where the ringer cannot be heard.

 **Battery Strength:** This icon shows the level of your battery charge. The more black bars you see, the greater the charge. When the battery becomes very low, an empty box  appears and the phone sounds an alert tone; this indicates that your phone is about to turn itself off.


Using the Battery

Your Samsung Phone comes with a partially charged, rechargeable Lithium Ion (LiIon) Battery so that you can use your phone immediately after it is activated.

Installing the Battery


To attach the battery to your Samsung Phone:

1. Hold the battery so that the metal contacts on the base of the battery line up with the metal contacts on the base of the phone. See the illustration.
2. Place the battery on the back of the phone with the top of the battery about 1/4' to 1/2' from the latch.
3. Gently push the battery toward the top of the phone until it snaps into place.

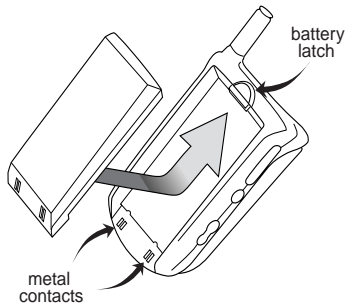



Removing the Battery

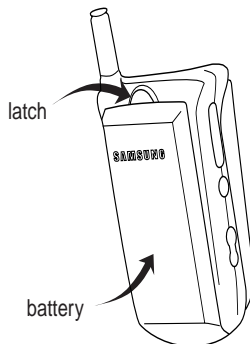This is really easy. First, turn the phone off. Then just press the battery latch (see illustration) and slide the battery away from the latch. You're done.



Charging the Battery

You can easily tell if your battery needs to be recharged by checking the  indicator in the upper-right corner of your phone's display. The presence of all three bars indicates a full charge, two bars indicates a smaller charge, and one bar indicates an even smaller charge. No bars (the battery icon is empty) means your battery must be charged.

When the battery charge level gets low, the battery sensor blinks an empty battery icon () and sounds a tone. If the battery level gets too low, the phone will turn off automatically. Unfortunately, if this happens you'll lose whatever you are doing, including dropping your call. Watch the battery strength icon and make sure your battery is adequately charged.

Charging with the Dual-Slot Desktop Charger

Use only Samsung-approved chargers with your Samsung Phone. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if the accessories cause damage or a defect to the phone.

To charge the battery using the Dual-Slot Desktop Charger:

1. Plug the power cord of the charger into a wall outlet.
2. Select one of the following three charging configurations:
 - ◆ Insert the entire phone (with battery attached) into the front compartment of the charger.
 - ◆ Insert a single battery (alone, not attached to the phone) into the rear compartment of the charger.
 - ◆ insert a single battery into the rear compartment and a phone (with battery attached) into the front compartment.

Things to remember about the Dual-Slot Charger

- ◆ To get the quickest charge for any battery do these three things:
 1. Turn the phone off.
 2. Put the phone, with battery attached, into the front slot.
 3. Do not put a battery in the rear slot.
- ◆ When two batteries are in the charger, they both charge simultaneously, but charging time increases for both batteries.
- ◆ Leaving a battery in the charger once it is fully charged does not harm the battery.
- ◆ The LEDs on the front of the battery charger work like this:
 - ◆ Red indicates that the battery is charging.
 - ◆ Green indicates that the battery is fully charged.
 - ◆ Yellow indicates that the battery is operating at a temperature that is too high or too low, or that something is not plugged in correctly. Please check the charger and battery for proper connections.

Your Phone's Modes

Standby Mode

Standby is the ready state of your Samsung Phone. The phone goes into Standby mode soon after you turn it on, or whenever you briefly press **END/⓪** at any time. When your phone is in Standby mode, you will see the greeting (that's the message displayed when you turn on your phone). If you enter a phone number, you can press **SEND** to dial it, or press **OK/☑** to save it in the Phone Book.

Press **END/⓪** at any time to return to Standby mode. Be careful; if you're on a call when you press **END/⓪**, you'll return to Standby mode, but it also disconnects the call. Press **CLR** several times or hold it down to return to Standby mode without ending the call.

The Main Menu is accessed when you are in Standby mode. See "Your Phone's Main Menu" on page 106 for a listing of the Main Menu.

Conversation Mode

You can place and answer calls only when your Samsung Phone is powered on. During a call, the phone is in Conversation mode.

Power Save Mode



Your Samsung Phone comes with a Power Save feature that will automatically be activated if your phone is unable to find a signal after 10 minutes of searching. While this feature is active, the phone's battery charge is conserved. After the phone enters Power Save mode, it will automatically recheck for a signal about every three minutes. A message on the display will let you know when your phone is operating in Power Save mode.

Basic Voice Call Functions

Making a Voice Call

Note: Your phone makes several kinds of calls (voice, fax, data, and MiniBrowser). This section explains voice calling only. For Fax or Data calls see “Fax and Data Calls” on page 93. For web browser calls see “The MiniBrowser” on page 96.


To place a voice call:

1. Press  to power on your Samsung Phone. If you see indicators on the display, this indicates your phone is on. Note that you will not hear a dial tone.
2. Enter the phone number (up to 32 digits) by pressing the digit keys. The phone number displays from right to left.
3. Press . The phone places the call to the entered phone number (if service is available).

You can also make voice calls;

- ◆ from your Phone Book (see “Dialing numbers from your Phone Book” on page 71).
- ◆ from your Call Logs list (see “Displaying Your Call Logs” on page 80).
- ◆ by using Turbo Dialing (see “Memory Dialing Shortcuts” on page 71).
- ◆ by using Voice Dialing (see “Placing a Call using Voice Dialing” on page 56).

Redialing Calls

To redial the last call you made, press  twice quickly. You can also redial any of your last 10 incoming or outgoing

calls by accessing the Call Logs listings (see “Keeping Track of Your Calls” on page 80).

Correcting Dialing Mistakes

To correct a misdialed digit(s):

- ◆ Press **CLR** to erase one digit at a time.
- ◆ You can erase all the digits at once by pressing **CLR** and holding it down for one second. This returns your phone to Standby mode where you can try your call again.

Ending a Call

To end a call, close the phone or press **END/⓪**. If you press **END/⓪**, the call time (length of the call) flashes briefly, and the phone returns to Standby mode automatically after a few seconds.

Incoming Call Notification

Your Samsung Phone signals an incoming call or message in the following ways:

- ◆ The backlight illuminates.
- ◆ The red LED flashes.
- ◆ The ringer sounds (unless the ringer is set to Vibrate or Off).

Incoming call notification continues until one of the following occurs:

- ◆ You answer the call.
- ◆ You press **END/⓪**, or silence the ringer before answering the call.
- ◆ The calling party ends the call.
- ◆ The call is sent to your voicemail.

Answering a Call

There are four ways to answer an incoming call!

Don't worry - they're all easy. You can answer a call by:

- ◆ pressing **SEND** if the phone is already open.
- ◆ opening the phone (if set in the Main Menu).
- ◆ pressing any key except **END/Ⓜ**, when the Any Key Answer option is selected in the Main Menu.
- ◆ using Auto Answer. See “Automatic Answer” on page 30.

Your phone is preset to answer when you press the **SEND** key. You can easily change how your phone answers by setting the Answer Mode feature (press **MENU** **8TUV** **4GHI**) and make your selection. For more information on this feature see “Answer Options” on page 31.

Adjusting Ring Volume

In Standby mode, you can quickly adjust the ringer volume by pressing the volume key (**< >**) on the side of the phone. There are eight levels and a zero or “Ringer Off” level.



You'll see a graphical indication as you change the volume.



The illustration shown here is the maximum volume setting.

- ◆ the up key turns it up and the down key turns it down. Press and hold to continuously move up or down.
- ◆ Turning it all the way down is a quick way to mute the ringer for those important times when you want your phone quiet. When you do this, “Ringer Off” will display in Standby mode.
- ◆ You can also save the settings for the ringer volume using the Main Menu (see “Ringer Options” on page 47).

Silencing the Ringer on an Incoming Call

When your Samsung Phone rings, press  or  to silence the ringer. You can also set the ringer to remain off by using the Main Menu (see “Ring Volume Setting for all Incoming Calls” on page 48).



Setting the Ringer Type

Your phone has numerous options for how it rings. To set these options, see “Ringer Options” on page 47. You can even set different rings for up to five people who call you often (see “Differential Ring” on page 50).


To Mute the Microphone During a Call

You can mute the microphone during conversation by selecting the Mute option from the In Use Menu. When active, “MUTE” displays, and the other party cannot hear conversation at your end of the call. The phone resets this condition to the default Unmute setting at the end of your call.

To mute the microphone during a call:

1. During conversation, press  to display the In Use Menu.
2. Press  to mute the microphone. You will hear the other party’s conversation, but they will not hear anything on your end of the call. “MUTE” displays on the screen.
3. To “unmute” the microphone during the same conversation, repeat steps 1 and 2.

Adjusting Voice Volume

 You can adjust the earpiece volume during a call using the volume keys on the side of your phone. Briefly press the volume key once to display your current earpiece volume. Repeatedly press the volume key to adjust to one of eight levels or off.

You'll see a graphical indication as you change the volume.



The illustration shown here is the maximum volume setting.

Using Caller ID

Note: See your service provider about activating Caller ID service.

This feature tells you who is calling you by displaying the caller's number when the phone rings. If a caller's name and number are stored in your Phone Book, the corresponding name is also displayed. If you call someone who has this feature, your phone number will be displayed on their phone.

To block your phone number from being displayed for a particular outgoing call, just follow these steps:

1. Press   .
2. Enter the phone number, and then press .

You can activate Block Own Number permanently by contacting your service provider.

To temporarily unblock the number:




1. Press , , .
2. Enter the phone number, and then press .

Three-Way Calling

Note: See your service provider about activating Three-Way Calling service.

Three-Way Calling lets you conduct conference calls with two different parties at the same time. The phone records each party into the Outgoing Calls Log.

To place a three-way call:

1. During a conversation, simply press . The phone places the other party on hold.
2. Enter the number for the third party, and press . The phone dials the third party.
3. When you're connected to the third party, press  again to begin your three-way call.




If one of the callers (not you) hangs up, you and the remaining caller stay connected. If you initiated the call and you hang up first, all three parties are disconnected.


Call Forwarding





Note: See your service provider about activating Call Forwarding service.

With Call Forwarding, you can have all of your incoming calls forwarded to another phone number — even if your phone is turned off. When Call Forwarding is activated, you can still make calls from your phone.

To activate Call Forwarding:

1. Press   .
2. Enter the phone number to which your calls should be forwarded.

3. Press  . You will hear a tone that confirms you've activated Call Forwarding.

Press      to deactivate Call Forwarding. Once again, you'll hear a tone confirming the deactivation.

Call Waiting



Note: See your service provider about activating Call Waiting service.

Call Waiting lets you receive a second call during conversation. Your phone notifies you of a call waiting by beeping and displaying "Call Waiting".

Your phone provides the option of turning the Call Waiting feature on and off (if you have subscribed to the service). Call Waiting is on by default in the phone. If you choose to have an undisturbed conversation, simply turn off the feature for the current call. For more information on turning call waiting off see "Disabling Call Waiting" on page 25.

Answering a Call Waiting Call




To answer a Call Waiting call:

1. Press  . The phone connects the calling party and places the current party on hold.
2. Press  again to switch between the two parties.

Note: If you do not respond to a Call Waiting notification, the phone will forward the call to voicemail or another number that you have setup. Contact your service provider for information on voicemail and other available options and services.

Disabling Call Waiting

To turn off Call Waiting on your next call:

- ◆ Press , ,  before dialing the number. When you complete your call and hang up, the Call Waiting feature is automatically turned back on.

To permanently turn off Call Waiting, contact your service provider.


Missed Calls

Your phone notifies you of calls that were not answered. The phone indicates a missed call by displaying a text notification on the screen. When available caller identification displays for missed calls.

Dropped Calls

A dropped call can occur during conversation in response to a signal fade. In this case, the call ends and “Call Dropped” or “Signal Faded” displays.

Press  to clear the message and return to Standby mode.

If the dropped call was an outgoing call from your phone, you can redial the number automatically by pressing  twice.

Failed Calls

A failed call can occur if your phone is out of calling range or the network is temporarily busy. Your phone responds to a failed call by displaying an appropriate text message: “Call Failed. Out of Range.” or “Call Failed. Network Busy.” or “Signal Faded”.

When you receive a failed call alert, cancel the call attempt and return to Standby mode by pressing **END/Ⓢ** or **CLR** , and then try the call again later.

Prepend Dialing

The Prepend option lets you add digits such as area codes, long distance access codes (for example 1 or 011), and network feature activation codes to a phone number that is in your Phone Book or Call Logs. This is a useful feature when you go out of town and want to call back home; just prepend the number you want to call with your home area code and press **SEND** . You can prepend a number with up to 10 additional digits.

To prepend existing phone numbers in the Phone Book or Call Logs:

1. Access the phone number (either from your Phone Book or your Call Logs).
2. Press **OK/☑** to display the phone number's information.
3. Press **MENU** for more options.
4. Press:
 - ◆ **3_{DEF}** to Prepend a call log or
 - ◆ **4_{CH}** to Prepend a Phone Book entry.
5. Enter the area code or feature activation code by pressing the digit keys. For feature calls, press ***☎** before dialing the feature code.
6. Press **SEND** to call the prepended number.

Analog Call

In the event that you cannot place a call in digital mode, your phone allows you to try placing the call in Analog mode. See “Setting up a Forced Analog Call” on page 36.

Emergency Dialing

You can place calls to 911 even if your phone is locked or outgoing calls are restricted (see “Lock Mode” on page 72).

To call 911:

1. Dial    .
2. Press  .

IMPORTANT NOTICE! PLEASE READ !

Because of various transmission methods, network parameters, and user settings used to complete a call from your wireless phone, a connection cannot always be guaranteed.

Therefore, emergency calling may not be available on all wireless networks at all times.


DO NOT depend on this phone as a primary method of dialing 911 or any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

Pause Dialing

When you call an automated system (like a bank or voicemail “teleservice”), you are usually required to enter a password or account number. Instead of entering the numbers manually each time, you can store the numbers in your Phone Book, separated by special characters called pauses.


Here is the definition of how a pause works on your phone:

- ◆ A digit that stops the dialing sequence until you press the  button.


Your phone has two pause dialing methods: pause dialing from the Phone Book (see “Pause Dialing From a Stored Phone Book Entry” on page 29) and manual pause dialing (see “Manual Pause Dialing” on page 29).

Storing Pauses in a Phone Book Entry

To store a number in your Phone Book that contains pauses:


1. Enter the phone number you want to connect to (such as the bank’s teleservice phone number).
2. Press  to insert a pause. The letter “p” displays in the number, meaning that a hard pause will occur at that point in the dialing sequence.

Note: The digits before the “p” dial the tele-service. The “p” stops the dialing and waits for the teleservice to prompt you for a number. The number following the “p” is your account number, PIN, etc.

3. Enter the digits that need to follow the pause (such as your account number).
4. Store the number as you normally would by pressing the  key and entering a name.

Pause Dialing From a Stored Phone Book Entry




Pause dialing from your Phone Book is easy:

1. Dial the teleservice number from your phone book in the way you prefer (use the turbo dial or scroll to it method).
2. Wait to be prompted by the teleservice for the number (credit card number, bank account number, etc.).
3. When prompted, press  to send the DTMF number that follows your pause. "SENDING DTMF" flashes on the screen, and the transmitted tones are audible.

Manual Pause Dialing

Pauses are entered manually using the Digit Entry Menu during the dialing process.

To manually dial a number using a pause(s):

1. Enter the phone number of the service you want to connect to (such as the bank's teleservice phone number). For example, your bank's teleservice phone number might be a 1.800 number.
2. Press  to insert a pause. The screen displays a "p" indicating a pause. Enter the number to be sent after the pause by pressing the digit keys, and then press .
3. After connecting, wait for the prompt from the teleservice. After the prompt, press  again to transmit the additional number.

Basic Setup of Your Phone

Automatic Retry

This feature allows you to continue trying numbers that you don't reach successfully. The phone will automatically redial a failed call until it connects. This feature is preset to "OFF" on your phone.

To set the Automatic Retry feature:

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **1⁻** for Auto Retry.
4. Press the scroll keys to select On or Off.
5. When the desired option displays, press **OK/☐** to save the setting.

Automatic Answer

When this feature is set to on, the phone will automatically answer the call after two rings (notice that when this feature is on that there is no way to stop your phone from answering a call). The message "AutoAnswer" appears on the display when this feature is set to on. This feature is preset to "OFF" on your phone.

To set the Automatic Answer feature:

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **2^{ABC}** for Auto Answer.
4. Press the scroll keys to select On or Off.
5. When the desired option displays, press **OK/☐** to save the setting.

Automatic Hyphenation

When you dial a number, hyphenation is performed automatically by the phone. The automatic hyphenation follows the North American Numbering Plan, which hyphenates numbers as follows:

◆ 800-555-1234

Digits following a pause are not hyphenated (see “Pause Dialing” on page 28).

It’s easy to turn off this hyphenation if you want to. Here it is:

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **3^{DEF}** for Auto Hyphen.
4. Press the scroll keys to select On or Off.
5. When the desired option displays, press **OK/☐** to save the setting.

Answer Options

Your phone is preset to answer a call when you press the **SEND** key. You can easily change your phone to answer a call when you open the phone, or when you press “Any Key”. Here’s how to do it:

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **4^{GHI}** for Answer Mode.
4. Press the navigation keys to view the available options (By SEND, By Opening, By Anykey).
5. When the desired option displays, press **OK/☐** to save the setting.

Tone Length Setting

The tone length setting enables you to select short or long DTMF (dual-tone multi-frequency) tones. When you use a teleservice (such as your bank account or voicemail service) and press the keys to enter numbers into the teleservice, you are sending DTMF tones. The system used by the bank or other service determines if you need short or long DTMF tones. If the service is digital (which most are these days) short DTMF will almost always work. However, some new systems and almost all older (analog) systems require you to use long DTMF tones. Many home answering machines require long DTMF tones.




To set the DTMF tone length:

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **5^{JKL}** for Tone Length.
4. Press the scroll keys to toggle between Short and Long.
5. When the desired option displays, press **OK/☑** to save the setting.

Setting the Time

The clock is set and maintained automatically when your phone is in digital mode. When you turn on your phone in analog mode you must set the time and date for your Scheduler and Alarm. Here's how to set the time and date.

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **6^{MNO}** for Set Time.





4. Type in the current month, day, year, hour, and minute. Use the left scroll key to backup to an incorrect entry if you need to. When you get to the AM/PM setting, use the volume key to select AM or PM, or press  for AM or  for PM.
5. Press  to save the setting and return to Standby mode. The correct date and time will appear across the bottom of the display, and the correct day will appear under the battery charge icon.

Setting Your NAM

Your Samsung phone can store two NAMs (NAM stands for numerical assignment module - essentially your telephone number). This means you can have two phone numbers on your phone, and you can quickly and easily switch your service back and forth between the two numbers.

Note: Each NAM has an associated set of System Selection settings (see “System Selection” on page 34).

Here’s how you select the NAM you want to use:





1. Press  to display the Main Menu.
2. Press  for Setup.
3. Press  for Set NAM.
4. Press the scroll keys to select NAM-1 or NAM-2.
5. When the desired NAM displays, press  to save the setting. If you change the NAM, the phone will reboot and acquire service using the new NAM setting.

System Selection

The system selection feature of your phone enables you to choose how your phone will roam. There are four choices, and they will affect your charges, so contact your service provider to determine the best roaming methods for you. The four choices are:

- ◆ Standard - with this setting, your phone will always try your calls using your home system, but if that doesn't work, then it will use the preferred roaming system.
- ◆ Home Only - with this setting, you cannot roam. If your home system is not available then your call will not be connected and the No Service indicator (✕) is displayed. In some service areas an operator may come on line asking you how you would like to pay for the call.
- ◆ A Only - In a wireless service area, there are usually two service providers which are referred to as A and B. Your service provider will provide you information about this when you setup service. With this setting, you will only be able to roam in the "A" network or system.
- ◆ B Only - This works just like the "A Only" setting except you will only be able to roam in the "B" network or system.

To select the system:

1. Press  to display the Main Menu.
2. Press  for Setup.
3. Press  for System Sel.
4. Press the scroll keys to select the desired system. Choices are Standard, Home Only, A Only, or B Only.
5. When the desired option displays, press  to save the setting.

How to Setup For a Voice, Data, or Fax Call





When you want to receive a data or fax call, you must set the phone to do this. When you are done with your data or fax call, you must change this setting back to voice to receive voice calls again. It's easy. Here's how to do it:

1. Press **MENU** to display the Main Menu.
2. Press **8^{TUV}** for Setup.
3. Press **9^{WXYZ}** for Data / Fax.
4. Press the scroll keys to select Incoming Data Only, Incoming Fax Only, or Off: Voice Call Only.
5. When the desired option displays, press **OK/☐** to save the setting. If you have chosen to receive fax or data, then the phone will first display "No incoming voice calls can be received", and then return to Standby mode with the words "Data Only" or "Fax Only" displayed under the banner.

Setting up a Forced Analog Call

If you cannot place a call in digital mode due to weak coverage, then this feature allows you to try placing the call in analog mode.

To make a call in analog mode:

1. Press  to display the Main Menu.
2. Press  for Setup.
3. Press  for Analog Call.
4. Press  to set the phone to analog mode.
5. When you have ended the analog call, or if you do not make a call within ten minutes, the phone returns to digital mode automatically (if digital service can be attained).

How to Setup the MiniBrowser Prompts

Your phone has the capability to inform you when you start and end a MiniBrowser session. See “To Setup the MiniBrowser Prompts” on page 96 to set this option.

Audible Alerts

Your phone gives audible alerts (beeps) at certain times to inform you that certain things have happened. There are four of these beep alerts and they only occur in your earpiece so the other party does not hear them. You can turn each of these alerts off if you like. The alerts are: Minute Beep, Service Alert, Connect Alert, and Disconnect Alert. Following is a description of each beep and a simple procedure to turn it on or off.

Minute Beep

When you are on a call, the Minute Beep sounds an alert 10 seconds before each elapsed minute. This beep can help you keep track of the length of your calls. To turn the Minute Beep on or off:

1. Press **MENU** to display the Main Menu.
2. Press **5** for Sounds.
3. Press **3** for Alerts.
4. Press **1** for Minute Beep.
5. Press the scroll keys to select On or Off.
6. When the desired option displays, press **OK** to save the setting.

Service Alert

The Service Alert beep occurs when you leave a service area and when you enter a service area. To turn the Service Alert beep on or off:

1. Press **MENU** to display the Main Menu in Standby mode before placing the call.

2. Press **5_{JKL}** for Sounds.
3. Press **3_{DEF}** for Alerts.
4. Press **2_{ABC}** for SVC Alert.
5. Press the scroll keys to select On or Off.
6. When the desired option displays, press **OK/☑** to save the setting.

Connect Alert



The Connect Alert tone sounds when your outgoing call is connected to the system. To turn the Connect Alert tone on or off:

1. Press **MENU** to display the Main Menu in Standby mode before placing the call.
2. Press **5_{JKL}** for Sounds.
3. Press **3_{DEF}** for Alerts.
4. Press **3_{DEF}** for Connect.
5. Press the scroll keys to select On or Off.
6. When the desired option displays, press **OK/☑** to save the setting.

Disconnect Alert

The Disconnect Alert tone sounds when your call is disconnected from the network. To turn the Disconnect Alert tone on or off:

1. Press **MENU** to display the Main Menu in Standby Mode before placing the call.
2. Press **5_{JKL}** for Sounds.
3. Press **3_{DEF}** for Alerts.

4. Press  for Disconnect.
5. Press the scroll keys to select On or Off.
6. When the desired option displays, press  to save the setting.





Display Options

Your Samsung Phone provides the following display options:

Backlight Control

You have several options for setting how the LCD backlight operates. When the phone is closed, the backlight remains off thus conserving battery power. When the phone is open, the length of time that the backlight remains on can be set as explained below. Remember that backlight use drains your battery faster.

To select backlight options:

1. Press  to display the Main Menu.
2. Press  for Display.
3. Press  for BackLight.
4. Press the scroll keys to scan the options:
Folder Open, 10 (after last keypress), 30 Seconds (after last keypress), or Off.
5. When the desired option displays, press  to save the setting.

Note: When the phone is attached to the optional Hands-Free Car Kit, the backlight remains on (when the phone is on and opened). Closing the phone while it is attached to the hands-free kit turns the backlight off.

Personal Greeting

You can create and display a 12-character personal greeting that displays in Standby mode and when you turn on the phone.

To create a personal greeting:

1. Press **MENU** to display the Main Menu.
2. Press **6MNO** for Display.
3. Press **2ABC** for Greeting. The current greeting is displayed.

Note: The text entry on your greeting screen defaults to T9 as shown in the lower right of the display. Press **MENU** to view your text input modes. Select one of the other three options (Alpha, Symbol, or Number) or leave it in T9 input mode. For a description of T9, see “T9® Text Input” on page 101.

4. Enter your personal greeting by pressing the alphanumeric keys on the keypad.
5. Press **OK/☐** to save the setting.

Animation Display

Your phone displays graphics images when it is turned on or off. This setting is just for fun and grins so have fun with it. You have a few graphics to select from for these power on and off images. Here's how to do it:

1. Press **MENU** to display the Main Menu.
2. Press **6MNO** for Display.
3. Press **3DEF** for Animation.
4. Press **1.-** for the power on image or **2ABC** for the power off image.

5. Use the scroll keys to select the image. Power on images can be “Flawless”, “Space”, or Earth Spin”. Power off images can be “Wink” or “ByeBye”.
6. Press **OK/☒** to save the setting.

Displaying your own Phone Number

Your phone number displays every time you turn on the phone (unless you set it to hide; see “Hiding your Phone Number” on page 78). From Standby mode, or when you are on the phone, you can display your phone number from the Main Menu.

To view your phone number from Standby mode:

1. Press **MENU** to display the Main Menu.
2. Press **6MNO** for Display.
3. Press **4GHI** for My Phone #. Your phone number and the NAM you are currently using display.
4. Press **OK/☒** to return to the previous screen.

To view your phone number while using the phone:

1. Press **MENU** **6MNO** .

Setting the Language of the Display

You can set your phone to display in English or Spanish. It’s quick and easy and very convenient for bi-lingual families or friends. Here’s how to do it:

1. Press **MENU** to display the Main Menu.
2. Press **6MNO** for Display.
3. Press **5JKL** for Language.
4. Use the scroll keys to select English or Spanish.

5. Press **OK/☑** to save the setting. The change is immediate and affects all menus and screens.

Displaying your Phone's Hardware and Software Version

You can view the software and hardware versions of your phone during conversation or in Standby mode. This feature is helpful if you have to call customer care.

To view the versions in Standby mode:

1. Press **MENU** to display the Main Menu.
2. Press **6^{MNO}** for Display.
3. Press **6^{MNO}** for Version. Information about your phone's hardware and software displays.
4. Press **CLR** to return to the previous screen.

To view the versions in Conversation mode:

1. Press **MENU** **7^{PQRS}** .

Alarm








Your Samsung Phone has an alarm clock inside of it. In addition to functioning as a normal alarm clock, the alarm can also be used to remind you to call a certain person or phone number. Keep in mind that if your phone is off at the alarm set time, the alarm will not sound.


Note: Analog service areas can cause problems with your clock which can cause problems with your alarm. When you are in an analog service area and you want the alarm to work, make sure that the time is properly set. The time should appear on your display; if it does not, then see “Setting the Time” on page 32.

Setting the Alarm

The alarm can be set to go off daily or one time.







To set the alarm:

1. Press  to display the Main Menu.
2. Press  for Sounds.
3. Press  for Alarm.
4. Press  for Set.
5. Use the scroll keys to select “Daily” or “One Time” and press .
6. For a “One Time” alarm, enter the time date and time by pressing the digit keys; for a “Daily” alarm you must only enter the amount of time until the alarm sounds. To correct a digit entered incorrectly, press  to go back, and then enter the correct digit.
7. Press  to save the setting. The phone returns to Standby mode with “Alarm On” in the display.

- At the appointed time, the alarm sounds (a classical music melody) and the LED flashes.
- ◆ To silence the alarm and return to Standby mode, press  .






To Change the Alarm Setting

You can change the alarm easily. Here it is:

- Press  to display the Main Menu.
- Press  for Sounds.
- Press  for Alarm.
- Press  for Set.
- Use the scroll keys to select “Daily” or “One Time” and press  .
 - ◆ If “Daily” was selected then the current date and time display along with the current alarm time.
 - ◆ If “One Time” was selected then the date and time display along with the current alarm date and time.
- Simply type over the alarm time settings as you desire and press  . The phone returns to Standby mode with “Alarm On” in the display.

To Cancel the Alarm

You can cancel the alarm at any time. It’s easy. Here it is:

- Press  to display the Main Menu.
- Press  for Sounds.
- Press  for Alarm.
- Press  for Release.
- Press  to “release” or cancel the alarm.

Sounds

Your phone makes many different sounds at different times. These sounds include:

- ◆ Ringer settings; see “Ringer Options” on page 47.
- ◆ Alerts settings; see “Audible Alerts” on page 37.
- ◆ a built in Alarm; see “Alarm” on page 44.
- ◆ a differential ring feature; see “Differential Ring” on page 50.

In addition to the above “Sound” features, your phone allows you to set the loudness that the keys beep when you press them. Here’s how to do it.

Key Beep Volume Setting

The keys on your phone beep when they are pressed. The volume of the beeps can be easily set to one of eight levels. If you don’t want the keys to beep at all, you can turn them off.

To set the key beep volume:

1. Press **MENU** to display the Main Menu.
2. Press **5 JKL** for Sounds.
3. Press **2 ABC** for Key Volume.





4. Repeatedly press the volume keys or scroll keys to adjust to one of eight levels. You’ll see a graphical indication as you change it and you will hear the actual beep and how loud it will be. The illustration shows all eight bars (the loudest setting). No bars indicates the key beeps are turned off.
5. When the desired volume level sounds, press **OK/☑** to save the setting or do nothing and your phone will automatically save it.


Ringer Options

Your Samsung phone provides a variety of ringer options. These ringer options allow you to customize the type of ring (vibrate, bell, or lamp) and the volume of the selected ring type. Also, the Differential Ring feature allows you to know when someone important is calling you.

One-Touch Vibrate Ringer

You can quickly set your phone to vibrate instead of ring when an incoming call or message arrives. When in Standby mode, press and hold the  to turn the vibrate ringer on or off. When vibrate ring is on, the  icon appears in the top line of the display and the message “-Vibrate-” displays. When turned off neither of these indicators display.





Fast Ringer Mute


Mute the ringer during an incoming call by pressing the volume key () once. At the end of your call, your saved ring volume setting is automatically restored.

Ring Type Setting for Voice and Message Calls

This option enables you to set a unique ring type for incoming voice and message calls.

To set the ring type for voice calls:





1. Press  to display the Main Menu.
2. Press  for Sounds.
3. Press  for Ring.
4. Press  for Ring Type.

5. Press the scroll keys to scan the available options (BELL, LAMP, VIBRATE, and VIB+BELL).
6. When the desired ring type sounds, press  to save the setting. If you chose VIBRATE or VIB+BELL, the phone vibrates and returns to Standby mode. Otherwise it just returns to Standby mode.

Ring type setting for Data and Fax Calls

This option enables you to set a unique ring type for incoming data and fax calls.

To set the ring type for data and fax calls:

1. Press  to display the Main Menu.
2. Press  for Sounds.
3. Press  for Data/Fax Alert. The current setting sounds.
4. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
5. When the desired ring type sounds, press  to save the setting.

Ring Volume Setting for all Incoming Calls

The volume of your ring will be the same whether you receive a voice, message, or data/fax call. There are nine volume levels for the ringer including off. You can set the ring volume from Standby mode or in the Main Menu.

◆ From Standby mode,

1. Repeatedly press the volume keys or scroll keys to adjust to one of nine levels.

You'll see the graphical indication





(shown here) as you change the volume level, but you



won't hear the ringer - this is so you can avoid disturbing people when you are in a quiet area. The illustration shows all eight bars (the loudest setting). No bars indicates the ringer is turned off.

2. When the desired ring volume setting displays, stop pushing and the phone returns to Standby mode automatically.

◆ In the Main Menu:

1. Press  to display the Main Menu.
2. Press  for Sounds.
3. Press  for Ring.
4. Press  for Ring Vol.
5. Press either the scroll or volume keys until the desired volume level is reached. You'll see the graphical indication (shown here) as you change the volume level, and the ringer auditions each volume level for you.
6. When the desired ring volume setting displays, stop pushing and the phone returns to Standby mode automatically.









Note: When the ringer is set to off, there are no audible tones to indicate incoming calls or messages.

Differential Ring

This feature enables you to set a unique ring type for up to 5 different callers. When set, if you receive a call from a number identified in Differential Ring, the tone or melody associated with that phone number rings.










To set the ring type for voice calls:

1. Press  to display the Main Menu.
2. Press  for Sounds.
3. Press  for Differential Ring.
4. Press  for Ring Type.
5. Press the corresponding digit key (1~5) to select the desired storage location.
6. Enter the phone number of the desired party by pressing the digit keys.
7. To store the number, press  .
8. Press the navigate keys to audition the list of ring tones and melody tones. Each tone sounds as you scroll the options.
9. When the desired tone or melody sounds, press  to save the setting.

Voice Memo










Your Samsung phone can record five Voice Memos when in digital mode. Each voice memo can be up to one minute in length. When recording, a 60-second timer displays and an alert sounds to indicate when recording time expires.

To record a voice memo in Standby mode:

1. Press and hold . The message “Recording” displays, along with the timer.
2. Record the voice memo by speaking into the microphone.
3. To stop recording, release the  button. A menu for the current voice memo becomes available.
4. To save the voice memo with the default date / time stamp, press  or do nothing. Your phone will automatically save the voice memo stamped with the date and time after about one minute. For other options on the voice memo press:
 - ◆  for Add Label. The screen labels the Voice Memo with the date / time stamp. You can now create your own label using the alphanumeric keys. Just start entering the label and press  when you are ready to save it.
 - ◆  for Continue. Press and hold  to continue recording.
 - ◆  for Erase. Press and hold  to erase the Voice Memo.

Reviewing a Voice Memo

To review a voice memo:

1. Press  to display the Voice Memo menu.
2. Press  for Review. The phone displays the label for Voice Memo 1, begins to play Voice Memo 1, and displays a list of reviewing options. All voice memos will play in order until you press , , or select one of the following options:
 - ◆ Press  to Replay the voice memo.
 - ◆ Press  to Erase the voice memo.
 - ◆ Press  to listen to the Next voice memo.
 - ◆ Press  to listen to the Previous voice memo.
3. After reviewing the voice memos, press  to return to Standby mode.

Voice-Activated Dialing

Your phone features Voice-Activated Dialing. When your phone is in digital mode, you can call up to 20 stored entries by speaking the name into the microphone. Using the Voice-Activated Dialing option requires that you first train the phone to recognize the name of the person you are calling.





Note: Voice-Activated Dialing does not work when your phone is in analog mode.

Tips on Recording Names

- ◆ Avoid recording similar names phonetically. If you record a similar name to one that is already in memory, the phone requests another name.
- ◆ Avoid recording in a noisy place.
- ◆ Speak clearly and naturally.
- ◆ The person who will use the phone should record the name.
- ◆ Avoid very long or very short names. Names with two to five syllables are recommended.
- ◆ If a voice dial entry does not properly connect, you may need to record the name and number again.


Program the Phone for Voice-Activated Dialing

Programming your phone for Voice-Activated Dialing is easy. The phone provides voice prompts and screen displays to guide you through the recording process. To program the phone for Voice-Activated Dialing, first make sure you are in a fairly quiet environment, then:

1. Press  to display the Main Menu.
2. Press  for Voice Dial.
3. Press  for Record. The phone will prompt you to say the name you want to program.
4. Wait for the beep and then say the name. For best results, use names with two to five syllables, or use both a first and last name. The phone stores the name as a sample first, and then prompts for the name again.
5. Respond to the prompt by repeating the name after the beep. The phone stores the name as a second sample and then requests the phone number.
6. Enter the phone number by pressing the digit keys.
7. To store the phone number, press . The name (if it is already in the Phone Book) and number display, along with the notification "Recorded". The screen then returns to the Voice Dialing menu.







Note: For Voice-Activated Dialing in Hands-Free mode, refer to the HFC850 Hands-Free Car Kit Manual.

Voice Dialing Activation

Voice dialing is always active once you have programmed the phone to accept voice dialing entries. By default, pressing and holding  will activate a voice dial call.


You can also initiate a voice dialing call by opening the phone, when you select this option through the Main Menu.

To change how a voice dialing call is activated:

1. Press  to display the Main Menu.
2. Press  for Voice Dial.
3. Press  for Set Active.
4. Press the scroll keys to toggle between options:
 - ◆ [*] Only: Enables voice dialing by pressing and holding  .
 - ◆ [*] / FOLDER: Enables voice dialing by pressing and holding  , or by opening the phone.
5. When the desired option displays, press  to save the setting.







Placing a Call using Voice Dialing

To place a call using voice dialing:

1. Press and hold , or open the phone, depending on the setting. The phone prompts you to say the name. Wait for the beep.
2. After the beep, say the name into the phone. Say the name as much like your original recording as possible.
 - ◆ The phone places the call if it recognizes the name.
 - ◆ If the phone does not recognize the name, it prompts for the name again.
 - ◆ If the phone is unable to recognize the name after two attempts, the following message displays: “Cannot recognize name. Please check name.”. The phone also says “cannot recognize name.”. Then the phone returns to Standby mode and you can try the call again later.





Reviewing Voice Dialing Entries

To review voice dialing entries:





1. Press  to display the Main Menu.
2. Press  for Voice Dial.
3. Press  for Review. A list of entries displays.
 - ◆ Press the digit key to select the desired entry, or
 - ◆ press the scroll keys to select an entry and press .
4. The recorded name plays, and if you do nothing, your entire voice dial list is scrolled and each entry played. When the last entry is played, the phone returns to Standby mode.
5. While listening, you can press  to return to the Voice Dial menu or  to return to Standby mode.

Erasing Voice Dialing Entries

To erase an *individual* voice dialing entry:

1. Press  to display the Main Menu.
2. Press  for Voice Dial.
3. Press  for Review. A list of entries displays.
4. Press the digit key to select the desired entry, or press the scroll keys to scan entries. The recorded names play audibly as you scroll through the list.
5. When the desired entry displays, press  to erase that entry.

To erase *all* Voice Dialing entries:


1. Press  to display the Main Menu.
2. Press  for Voice Dial.
3. Press  for Erase All.
4. Press  to erase all Voice Dialing entries.

Message Services

Your Samsung Phone can receive short messages. The phone can receive four kinds of messages: voicemail notification (VMN), text, numeric pages, and MiniBrowser messages.

Incoming Messages

Your phone receives incoming messages in both Standby and Conversation modes.

When your phone receives a message, an alert sounds, and the screen displays (“New Voice”, “New Text”, “New Page” or “BrowserMsg”) and the name / phone number of the caller if available. The message indicator () remains on the screen until you listen to the new voicemail message, or read the new text, numeric page, or MiniBrowser message.

Note: If you are on a conversation, and you receive an incoming message, your phone automatically mutes the ringer (this is to avoid ringing in your ear while you are trying to converse).

Incoming Message Memory Capacity

Your Samsung Phone can store up to 100 incoming messages, depending on the length of the messages. When message memory reaches 75% capacity, the screen displays “Memory is 75% full. Erase old messages.” At 100% capacity, the screen displays a text notification and rejects additional incoming messages until you erase the stored messages.

Reviewing Incoming Page, Text, or Browser Messages

You can review an incoming message upon notification, or store the message for later review. The Messages Menu provides options for reviewing the sender's name / phone number, time / date stamp and the message.

Note: To review a voicemail see “Reviewing Voicemail Messages” on page 62.






To review a numeric page, text message, or MiniBrowser message:

1. Press **OK/☑** to display the Messages Menu.
2. Press **1-*** for Inbox. The number of new messages displays next to the associated message type in the menu.
3. Press **2_{ABC}** for Page, **3_{DEF}** for Text, or **4_{GHI}** for MiniBrowser. An indexed list of messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.
4. Use the scroll keys to scan messages, or press the associated digit key to select a message by its entry number.
5. When the message displays, use the scroll keys to review and re-review the message(s).
6. Press **CLR** to return to the previous screen.

Incoming Message Ringer

Your Samsung Phone allows you to set the ring type for incoming messages (see “Ring Type Setting for Voice and Message Calls” on page 47).

You can also set how often you want to be “alerted” or “told” that you have a message. To set this option:

1. Press  to display the Messages Menu.
2. Press  for Inbox.
3. Press  for Alert.
4. Use the scroll keys to select one of the following options:
 - ◆ ONCE - when you receive a message, your phone will ring one time.
 - ◆ EVERY 2 MIN - when you receive a message, your phone will ring every two minutes until answered.
 - ◆ OFF - when you receive a message, the phone will not ring, but the  indicator will display when a message is waiting,
5. When the desired option displays, press  to save the setting.

Incoming Messages and Lock Mode

Incoming messages are received even when your phone is in Lock mode. However, the screen will not display information about the message. To access a message, or to return a call other than an emergency or special number, unlock the phone to proceed.

Options when Reviewing Incoming Messages

The Messages menu provides a number of options while you are reviewing text messages. You can return a call to the phone number in the message, save or erase the message, and scroll to the next or previous message. Here’s how to do it:

1. While reviewing a message, press **MENU** for options:
 - ◆ Press **1.-'** for Talk (to call the phone number).
 - ◆ Press **2.ABC** to Save the number (if there is no Internal Phone Book match).
 - ◆ Press **3.DEF** to Erase the message.
 - ◆ Press **4.GHI** to review the Next message.
 - ◆ Press **5.IJKL** to review the Previous message.
2. Press **CLR** to return to the previous screen.

Note: If the message you are reviewing contains a phone number that is already stored in the Phone Book, the Save option does not display, and the available menu options will be: (1) Talk, (2) Erase, (3) Next Msg, (4) Previous Msg.

Erasing Inbox Messages

You can erase an individual text message, numeric page, or browser message after reviewing it, or erase all stored messages in your Inbox at one time (this does not include voicemail messages).

To erase all messages in your Inbox:

1. Press **OK/☐** to display the Messages Menu.
2. Press **1.-'** for Inbox.
3. Press **6.MNO** for Erase All.
4. Press **OK/☐** to erase all text messages, numeric pages, and browser messages, or **CLR** to return to the Messages Menu.

To erase a message after reviewing it, refer to the previous section.

Voicemail

Setting up your Voicemail

Contact your service provider to setup your voice mail.

Reviewing Voicemail Messages

To review voicemail messages:

1. Press **OK/☑** to display the Messages Menu. The number of new messages displays next to the associated message type in the menu.
2. Press **1.-** for Inbox. An indexed list of messages displays. An exclamation point next to an entry indicates an urgent message. A check mark next to an entry indicates that you have read and stored the message.
3. Press **1.-** for Voicemail.
4. Use the scroll keys to scan messages, or press the associated digit key to select a message by its entry number.
5. When the message displays, use the scroll keys to review and re-review the message(s).
6. Press **CLR** to return to the previous screen.

The Phone Book

Your Samsung phone lets you store up to 229 locations and names in the Phone Book. Each Phone Book name entry can have up to 6 associated phone numbers. Each entry can contain up to 32 digits including hard pauses, with an associated name of up to 12 characters. Name entry is optional. Stored phone numbers can be categorized as one of six categories - Home, Work, Mobile, Pager, Fax, and No-label. You can even specify the memory location of your choice for each entry. Memory locations can be marked “Secret” preventing the unauthorized from seeing the telephone number.


One-touch, two-touch, and three-touch Turbo Dialing makes it easy to call a phone number stored in your Phone Book. See “Memory Dialing Shortcuts” on page 71.



When entering names in the Phone Book, text entry defaults to alpha initial caps (press  to select other text entry options).


Viewing Stored Entries

You can locate and view your Phone Book entries 3 different ways:






Viewing Stored Entries in One Step

The  key allows you to view your entire Phone Book in alphabetical order of the names (a-z), or by numerical order (1-229) from Standby or Conversation mode.





1. Press the upper or lower portion of the  key to access the Phone Book. Press the up key to access numerically or the down key to access alphabetically.
2. Press  to navigate through your stored entries.

- ◆ You can place a call by finding the name or number that you want to call using this One Step Phone Book access and pressing the  key.

Finding Stored Entries by Name

1. Press  to display the main menu.
 2. Press  for Phone Book.
 3. Press  for Find Name.
- ◆ Stored names display in an alphabetical list.
4. Using the alphanumeric keys enter the first character of the name that you want to find in your phone book. The phone searches for and displays the first Phone Book entry beginning with the character you entered. You can enter the second character of the name and your phone will display name entries beginning with the 2 characters you entered. You can also scroll through Phone Book entries using the navigation keys.
 5. When you find your desired entry, make sure it is highlighted, and then press  to place a call, or  to edit the entry.

Finding Stored Entries by Location

1. Press  to display the Main Menu.
2. Press  for Phone Book.
3. Press  for Find Entry.
4. Enter the location by pressing the associated digit keys, or use the navigation keys to located an entry and press  to display the selected entry.

5. When you find your desired entry, make sure it is highlighted, and then press **SEND** to place a call, or **OK/☑** to edit the entry.

Storing Phone Numbers and Names

To store phone numbers and names:

1. Press **MENU** to display the Main Menu.
2. Press **2_{ABC}** for Phone Book.
3. Press **2_{ABC}** for Add Entry. The screen prompts for the phone number. (You can enter up to 32 digits.)
4. Enter the phone number by pressing the digit keys. The number displays from left to right.
5. To store the phone number, press **OK/☑**. The screen displays Select Name. At this point you can select <New Name> to create a new Phone Book entry, you will enter the name of the Phone Book entry later, or you can associate the new number with an existing phone book entry.

To add the new phone number to an existing name

6. Use the navigation keys to select the name you want to add the new number to then press **OK/☑**.

To create a new Phone Book entry <New Name>

7. To create a new Phone Book entry press **OK/☑**.
8. Select Label for your new entry, your choices are:
 - ◆ Press **1₋** Home
 - ◆ Press **2_{ABC}** Work
 - ◆ Press **3_{DEF}** Mobile

- ◆ Press **4**_{GHT} Pager
- ◆ Press **5**_{IKL} Fax
- ◆ Press **6**_{MNO} No Label

9. To accept the displayed location, press **OK/☑** . To select another location, press the navigation keys to scroll to the desired location, or enter the location number by pressing the digit keys, and then press **OK/☑** .
10. To include a name with the phone number entry, enter the name at the screen prompt.
11. Press **OK/☑** to save the entry.

Note: If the desired memory location already contains an entry, the phone displays a message asking if you want to replace the current entry. To replace the entry, press **OK/☑** . To return to the previous screen and select another location, press **CLR** .

Storing phone numbers shortcuts

You can store a phone number quickly by entering the number, and then pressing **OK/☑** . Then follow the prompts to designate the memory location and to enter the associated name. You can quickly save a number after an incoming or outgoing call. See below in “Storing phone numbers at the end of a call” on page 66.

Storing phone numbers at the end of a call

To store a phone number after ending a call:

Note: If the call was incoming, and Caller ID information was not available, then the store option will not be available.

1. Press **END/ⓧ** to end the call. The screen displays the call time (length of call), phone number of the party (if available), and the “OK: Save” option.
2. To store the phone number, press **OK/☑**. The first available location displays.
3. To accept the location, press **OK/☑**. To select another location, press the scroll keys to scroll to the desired location, or enter the location number by pressing the digit keys, and then press **OK/☑**.
4. To include a name with the phone number entry, enter the name at the screen prompt.
5. Press **OK/☑** to save the entry.

Prepend a Phone Number

Your phone includes a Prepend feature. This feature lets you add a temporary prefix to telephone numbers stored in the Phone Book.

To Prepend a stored phone book number:

1. Press **MENU** to display the Main Menu.
2. Press **2_{ABC}** for Phone Book.
3. Find the number you want to Prepend using one of the search methods described under “Viewing Stored Entries” on page 63, and then press **OK/☑**.
4. Press **MENU** to display options.
5. Press **4_{GHI}** to Prepend the number.
6. The screen displays “Prepending”. Use the digit keys to enter the calling prefix and then press **SEND** to place the call.

Adding a Name Ringer

You can associate one of 13 different ringers (4 melodies and 9 tones) to numbers stored in your Phone Book. When you receive an incoming call from a number matching an entry in your Phone Book, your phone will sound the associated ringer to announce the call.

Note: If the Caller ID information was not available for an incoming call then the Name Ringer option will not be available.










To add a Name Ringer to a Phone Book entry:

1. Press **MENU** to display the main menu.
2. Press **2^{ABC}** for Phone Book.
3. Find the number you want to add a Name Ringer to using one of the search methods described under “Viewing Stored Entries” on page 63, and then press **OK/☐**.
4. Press **MENU** to display options.
5. Press **6^{MNO}** to add a Name Ringer.
6. Your phone will begin to play the ringer if set for the number. If a Name Ringer is not set, then “Off” displays. Use the navigation keys to listen to the ringers (you have 9 tones and 4 melodies to select from). When the desired ringer sounds, press **OK/☐** to save your selection.

Changing Your Phone Book

Editing Phone Book numbers

Once you have stored a number in the Phone Book you can easily change it. To change a Phone Book entry:

1. From Standby mode, find the number that you want to change by pressing the  key and then scrolling to the number.
2. Press the  key to display the name and number.
3. Press the  key for options.
4. Press  for Edit. Your edit options display. If the number has been designated as Secret you are prompted to enter the Lock Code.
 - ◆ Press  to change the number
 - ◆ Press  to change the name.
 - ◆ Press  to move the number to a different location.
 - ◆ Press  to make the number secret.
 - ◆ Press  to Set Speed Dial number.

Secret Phone Book numbers

Your Samsung Phone allows you to hide a confidential number so that only a person with your phone's lock code can view the number and name. To make a number secret, see the previous paragraph. When you have made the number secret, the phone will not allow anyone to view information on the number unless they enter your 4-digit lock code.

Erasing Phone Book Entries

To erase a Phone Book entry:

1. Press **MENU** to display the Main Menu.
2. Press **2^{ABC}** for Phone Book.
3. Access the desired entry using the methods described under “Viewing Stored Entries” on page 63.
4. Select the Phone Book entry to be deleted and press **OK/☐**.
5. When the Phone Book entry displays press **MENU** **5^{JKL}** **OK/☐**. The screen prompts for confirmation.
6. Press **OK/☐** to erase the displayed entry.

The “Erased” notification displays along with the name, number, and location of the erased entry.

Erasing the Phone Book

To erase the entire Phone Book:

1. Press **MENU** to display the Main Menu.
2. Press **0^{OPER}** for Security and enter the lock code.
3. Press **6^{MNO}** for Clear Memory.
 - ◆ Press **OK/☐** to Erase. In a moment the message “All Entries are Cleared” displays.
 - ◆ Press **CLR** to Cancel.



Set Speed Dial

Set 1 of the 6 possible numbers stored with a name to be the speed dial number for that person.

Dialing numbers from your Phone Book

Dialing numbers from your Phone Book is quick and easy. There are five methods explained below.


Memory Dialing Shortcuts

Scroll to the number: From Standby mode, press the  key to enter your Phone Book list. Scroll until you find the desired person or number, and then press the  key.

1-Touch Turbo Dialing: From Standby mode, press and hold the associated digit key for the location (applies to memory locations 1 through 9).

2-Touch Turbo Dialing: From Standby mode, press and release the first associated digit key, and then press and hold the second digit key (applies to memory locations 10 through 99).

3-Touch Turbo Dialing: From Standby mode, press and release the first associated digit key, then press and release the second digit key, then press and hold the third digit key (applies to memory locations 100 through 229).

Speed Dialing: From Standby mode, enter the number of the memory location, and press .

Your Phone's Security Features

Your phone provides many security options, including a user-programmable lock code and call restriction features. To access the Security menu from Standby mode, press **MENU** , **0^{OPER}** , and then enter the four-digit lock code (the lock code is set at the factory to "0000"). Press the associated digit key to access one of the following Security options:

- ◆ 1 - Lock
- ◆ 2 - Restrict
- ◆ 3 - Lock Code
- ◆ 4 - Priority #
- ◆ 5 - PIN
- ◆ 6 - Clear Memory
- ◆ 7 - Hide My #
- ◆ 0 - Reset Phone

Lock Mode

When the phone is in Lock mode, you can answer incoming calls, but you cannot place outgoing calls (except to 911, *911, and the seven user-programmable Priority numbers).

You can lock the phone manually during use, or set the phone to lock automatically when it is turned on.

Dialing in Lock Mode

You can place calls to emergency services and priority numbers while your phone is in Lock mode. To place normal outgoing calls in Lock mode, enter the lock code to unlock the phone, and then dial the phone number.

To place an outgoing call in Lock mode:

- ◆ To call an emergency or priority number, enter the number and then press **SEND** . You must dial the number exactly as it is stored or you will get an error message; “Priority # Dialing Only”.
- ◆ To place normal outgoing calls, press **MENU** to display the Lock Code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press **SEND** .

 
Locking the Phone

The Security menu allows you to lock the phone

- ◆ manually at any time, or
- ◆ automatically the next time that the phone is turned on. This setting is convenient in that you can turn your phone off at night, knowing that if someone unauthorized attempts to turn it on and use it, they will not be able to do so because the phone will power up in lock mode.

To lock the phone:

1. Press **MENU** to display the Main Menu.
2. Press **OPER** for Security and enter the lock code.
3. Press **1.-** for Lock Phone.
4. Press the navigation keys to select an option:
 - ◆ OFF: The phone unlocks immediately.
 - ◆ NOW: The phone locks immediately and stays locked until the lock code is entered.

- ◆ **ON POWER-UP:** The phone locks automatically the next time your phone is turned on and stays locked until the lock code is entered.
5. Press  to save the setting.

Unlocking the Phone







To unlock the phone, press  and enter the lock code. The phone returns to Standby mode.

Call Restriction Options

Your phone allows call restriction by three methods. You can use any of the following options alone or in any combination:

- ◆ **Phone Book** - restricts use and viewing of all phone book entries. However, note that manual keypad dialing is unlimited (even to numbers stored in the Phone Book).
- ◆ **Incoming** - restricts all incoming calls.
- ◆ **Outgoing** - restricts all outgoing calls (except to the seven priority numbers, 911, and *911 - calling to these numbers can never be restricted). See “Priority Numbers” on page 75.

To set call restriction options:

1. Press  to display the Main Menu.
2. Press  for Security and enter the Lock Code.
3. Press  for Restrict.
4. Press the associated digit key to select an option:
 - ◆ Press  for Phone Book calls.
 - ◆ Press  for Incoming calls.
 - ◆ Press  for Outgoing calls.

5. Use the navigation keys to select RESTRICT or UNRESTRICT for the option.
6. Press **OK/☑** to save the setting or **CLR** to exit without saving.

Lock Code Setting

The default lock code for your phone is 0000. You can enter a personal lock code, and then change the lock code as often as you like.

To enter a new lock code:

1. Press **MENU** to display the Main Menu.
2. Press **0 OPER** for Security and enter your current lock code.
3. Press **3 DEF** for Lock Code. The current lock code displays.
4. Enter a new, four-digit lock code by pressing the digit keys.
5. Press **OK/☑** to save the new lock code or **END/⓪** to exit.

Note: Your phone does not allow viewing of the lock code unless you know the lock code (this is for obvious security reasons). So, if you change the lock code, be sure to write down the new code and keep it for your reference.

Priority Numbers

Your phone provides the option of storing seven priority numbers. Each priority number can be up to ten digits long.







All seven priority numbers can be manually dialed at any time even when your phone is locked or all outgoing calls are restricted. This can be a useful feature for controlling what

numbers can be dialed from your phone (for instance if you only want your child to call home). The seven default priority numbers are;

- ◆ 1) 911
- ◆ 2) *611
- ◆ 3) 611
- ◆ 4) *911
- ◆ 5) *228
- ◆ 6) *2-2800
- ◆ 7) *2-2801


Storing a Priority Number

To store a priority number:

1. Press  to display the Main menu.
2. Press  for Security and enter the four-digit lock code.
3. Press  for Priority #.
4. Select one of the seven locations by pressing a digit key (1 - 7) or scrolling to the location and pressing  .
5. Enter the priority number by pressing the digit keys. Priority numbers can be up to ten digits long. If a number is already stored in the location, it is automatically deleted when you enter the new number.
6. Press  to save the priority number in the selected location.
7. Press  to return to Standby mode.

Dialing Priority Numbers in Lock Mode






To dial priority numbers in Lock mode:

1. Enter the priority number by dialing it as you normally would using the digit keys. You must dial the number exactly as it is stored or you will get an error message; “Priority # Dialing Only”.
2. Press  to place the call.




Personal Identification Number (PIN)

Note: Your service provider must enable this feature and assign you a PIN in order for this feature to work.

This feature prevents your phone from being used by unauthorized persons. Contact your service provider for complete information on this feature. Your PIN is programmable and can be up to 24 digits. To set when your PIN is sent:

1. Press  to display the Main menu.
2. Press  for Security and enter the four-digit lock code.
3. Press  for PIN.
4. Press  for Send PIN.
5. Use the scroll keys to select Prompt or Never.
6. Press  to save the setting.

To set your PIN code:

1. Press  to display the Main menu.
2. Press  for Security and enter the four-digit lock code.
3. Press  for PIN.

4. Press **2^{ABC}** for PIN Code.
5. The current PIN code displays. Enter a new PIN code by pressing the appropriate digit keys.
6. Press **OK/☑** to save the setting.

Erasing Your Phone Book (Clear Memory)

You can erase all the numbers stored in your Phone Book. This is useful if you want to give your phone to a friend or family member, or if you decide to lose all of your friend's phone numbers ! Here's how to do it:

1. Press **MENU** to display the Main menu.
2. Press **0^{OPER}** for Security and enter the four-digit lock code.
3. Press **6^{MNO}** for Clr Memory. A confirmation screen displays.
4. Press **OK/☑** to erase your Phone Book, or press **CLR** to cancel the operation.

Hiding your Phone Number

When this feature is turned on, your phone number is hidden from view in three ways:

- ◆ When you turn the phone on, your phone number will not display during the power up sequence.
- ◆ From Standby mode, when using **MENU** **6^{MNO}** **4^{GHI}** , rather than displaying your number, the phone responds “# Hidden”.
- ◆ From Conversation mode, when using **MENU** **6^{MNO}** , rather than displaying your number, the phone responds “# Hidden”.

To set this feature:

1. Press **MENU** to display the Main Menu.
2. Press **0 OPER** for Security and enter the Lock Code.
3. Press **7 PORS** for Hide My #.
4. Use the scroll keys to select ON or OFF.
5. Press **OK/☑** to save your setting.

Resetting Your Phone

Resetting the phone erases all of your saved options and returns them to the factory default settings. Resetting the phone also erases your Phone Book, Call Logs, and SMS messages.

To reset the phone:

1. Press **MENU** to display the Main Menu.
2. Press **0 OPER** for Security and enter the Lock Code.
3. Press **0 OPER** for Reset Phone. A confirmation screen displays.
4. Press **OK/☑** to reset the phone, or press **CLR** to cancel the operation.
5. The phone reboots (turns itself off then on), restores the default settings, and then returns to Standby mode.

Keeping Track of Your Calls

Your phone does a great job of telling you about its calling activity, and lets you return these calls easily.

Your phone retains in non-volatile memory two lists:


- ◆ one list for the last 10 calls placed to your phone, and
- ◆ one list for the last 10 calls placed from your phone







Each entry in the lists is referred to as a Call Log. Each log contains the name and phone number (if available), and a time/date stamp. In case of duplicate entries back-to-back, the phone consolidates those logs and stores only the most recent call from or to the same number.

You can also erase your call logs lists easily (see “Erasing Call Logs” on page 81).

In addition to the Incoming and Outgoing Call Logs lists, your phone maintains several Airtime logs. See “Reviewing Airtime” on page 82 for information on this useful feature.

Displaying Your Call Logs

When displaying a Call Log, you can conveniently press  to be immediately connected. To display your call logs:

1. Press  to display the Main Menu.
2. Press  for Call Logs.
3. Press:
 - ◆  for Outgoing calls.
 - ◆  for Incoming calls.
4. When the list of calls displays, press the scroll keys to scan the logs. You can press  to be immediately connected, or press  to view the time / date stamp

for each log, and the name (if there is a Phone Book match). If there is not a Phone Book match, only the phone number and time/date display.

- When looking at a call log, you can press **MENU** for more options. Press:
 - ◆ **1** to call the number.
 - ◆ **2^{ABC}** to show the phone book entry for the caller (if the caller is in your phone book). If the caller is not in your phone book, then this option will be “Store” and pressing it will allow you to store the number into your phone book.
 - ◆ **3^{DEF}** to Prepend the number with a feature code or area code before calling or saving the number.
- Press **CLR** to exit Call Logs and return to the previous screen or **END/0** to return to Standby mode.

Erasing Call Logs

You can erase your incoming and outgoing call lists easily. Here's how to do it:

- Press **MENU** to display the Main Menu.
- Press **1** for Call Logs.
- Press the associated digit key to select an option:
 - ◆ Press **1** for Outgoing calls.
 - ◆ Press **2^{ABC}** for Incoming calls.
 - ◆ Press **3^{DEF}** for All.
- A confirmation screen displays to make sure you want to erase. Press **OK/☑** to erase or **CLR** to cancel.

Reviewing Airtime

Your phone stores three airtime measurements:

- ◆ Last Call - the date, time, and length of your last call.
- ◆ Total - the total number of calls and total airtime. This log can easily be erased by you and is very convenient for tracking your calls on a monthly basis. You can get a good idea (although not exact) of how much airtime should appear on your monthly bill.
- ◆ Life Time - the entire airtime for your phone since it was purchased. This airtime log is kept for historical and maintenance reasons, and cannot be erased.





To review airtime:

1. Press **MENU** to display the Main Menu.
2. Press **1** for Call Logs.
3. Press **4** for Airtime.
4. Press:
 - ◆ **1** for Last Call. The screen displays the phone number of the last call, along with the airtime and the time / date stamp. Press **CLR** to return to the previous screen.
 - ◆ **2** for Total. The screen displays the total number of calls and the airtime for all calls since the last time this number was restarted (or erased). Press **CLR** to return to the previous screen.
 - ◆ **3** for Erase Total. Erasing this will cause the "Total" airtime log to be set to "0". This is a good method to measure how much airtime you log in the time frame of your choice (say a week or a month or a day). Press **OK/☑**

to erase the total airtime, or press **CLR** to cancel the operation and return to the previous screen.

- ◆ **4CH** for Life Time. The screen displays the combined airtime of every phone call that has been made on your phone.


Scheduler

Your Samsung Phone features a Scheduler to help you keep track of important dates and events, create To Do Lists, set a Count Down alarm, check the time in another part of the world and perform numerical calculations. To access your Scheduler press , or  . Press the associated digit key to access one of the Scheduler options or navigate to the option you want and press  to access that option. Scheduler has the following options:



- ◆ 1: Today
- ◆ 2: View Month
- ◆ 3: Jump To Date
- ◆ 4: To Do List
- ◆ 5: Count Down
- ◆ 6: World Time
- ◆ 7: Calculator

When entering events in the Scheduler, text entry defaults to T9® Word initial caps (press  to select other text entry options).

Today

You can schedule up to 9 events for the current day, Today, indicating each event's start and end time. You can even have your phone's Scheduler alert you before an event is to start. Events scheduled for future dates automatically appear on your Today events schedule on that day. For one key access to Today events press .

Here's how to enter an event:

1. Press  to display the Main Menu.
2. Press  for Scheduler.

3. Press **1.-** for Today.
4. Enter your event information, you can enter up to 32 characters. For more information on Text and Symbol Entry refer to “Entering text, numbers, or symbols” on page 101.
5. Press **OK/☑**.
6. Enter the Start Time and Date, and press **OK/☑**.
7. Enter the End Time and Date, and press **OK/☑**.
8. Select an alarm to notify you of your event. Your Alarm options are: 10 minutes Before, 30 minutes Before, 1 hour Before, On Time, and No Alarm.

To View an Event:

1. Press **MENU** to display the Main Menu.
2. Press **4GHI** for Scheduler.
3. Press **1.-** for Today.
4. Use the navigation keys to view all of the Event information. If you have more than one event use the navigation keys to display more events.




To Add, Edit, or Erase Events:

1. Press **MENU** to display the Main Menu.
2. Press **4GHI** for Scheduler.
3. Press **1.-** for Today.
4. To add a New Event for Today press **MENU** and **1.-**.
5. To Edit an Event, navigate to the Event to be edited and press **MENU** **2ABC**.

- To Erase an Event, navigate to the Event you want to erase and press **MENU** **3 DEF** .
- Press **MENU** **4 GHI** to Exit the Options menu.

View Month

View Month allows you to view in calendar format the current month or a past or future month. In Month View the current date is highlighted on the calendar (reverse video). Days with scheduled Events are underlined. When in month view, the scroll keys work like this:

- ◆ the up/down keys  move up or down the calendar by one week
- ◆ the right/left keys  move right or left one day
- ◆ the volume keys  move up or down one month at a time

Access View Month as follows:

- Press **MENU** to display the Main Menu.
 - Press **4 GHI** for Scheduler.
 - Press **2 ABC** for View Month.
- ◆ Remember, the current date is highlighted.
 - ◆ Use the navigation keys to select the month and day.

To View a scheduled Event, to add a New Event, or to Edit or Erase an Event on your schedule:

- Press **MENU** to display the Main Menu.
 - Press **4 GHI** for Scheduler.
 - Press **2 ABC** for View Month.
- ◆ The current date is highlighted.

- ◆ Use the navigation keys to select the month and day.
- 4. Press **OK/☑** to display Events for the selected day. If no Events are scheduled for your selected day (the date is not underlined) your phone will automatically go to the New Event function.
- ◆ Use the Navigation keys to view all events for the day you selected.
- 5. Press **OK/☑** to return to the calendar.
- 6. Press **MENU** to display the Options menu. Choose what you want to do from the Options: New Event, Edit Event, Erase Event, and Exit. All of these options work as described above.

Jump To Date

Jump To Date allows you to specify the calendar date you want to view. Once at your desired date you can Enter, Edit, and Erase events in your scheduler.

To Jump To Date enter your Scheduler:







1. Press **MENU** to display the Main Menu.
2. Press **4GHI** for Scheduler.
3. Press **3DEF** for Jump To Date.
4. Enter the date using the digit keys.
5. Press **OK/☑** to display the calendar and the date you jumped to. The date you jumped to is highlighted (reverse video).

To add, edit, or erase events refer to “View Month” on page 86.

To Do List

Your Phone's Scheduler can help you keep track of and prioritize the things you need to do, your To Do List. You can enter and prioritize up to 20 items on your to do list.

Here's how to create a To Do List:


1. Press  to display the Main Menu.
2. Press  for Scheduler.
3. Press  for To Do List.
4. Enter the item you need to do. To input text and characters refer to "Entering text, numbers, or symbols" on page 101.
5. Press .
6. Enter the time and date.
7. Press .
8. Using the navigation keys set the priority for To Do List item. Your choices are High or Low.
9. Press  to save your prioritized To Do List item.

To view, Edit, Add, or Delete To Do List items

1. Press .
2. Press  for Scheduler.
3. Press  for To Do List.

If you have more than one To Do List item use the navigation keys to navigate through your To Do List.









4. Using the navigation keys find the To Do List item you want to change and press .

5. Press the navigation keys or a digit key to select one of the available Options. Your choices are New Event, Edit Event, Erase Event and Exit.
6. Press .

Count Down

Have you ever wanted to know how much time it takes you to do something, or how many minutes, hours, days and months until a special event? Your Phone's Count Down option can help you answer these questions. You can create up to five Count Down timers using this feature.

To enter a Count Down:

1. Press  to display the Main Menu.
2. Press  for Scheduler.
3. Press  for Count Down.
- ◆ Your telephone is programmed at the factory to Count Down the time remaining until January 1, 2000, Millennium.
4. Press   or   to enter a new Count Down.
5. Enter the name of your new Count Down. To input text and characters refer to "Entering text, numbers, or symbols" on page 101.
6. Press .
7. Enter the time and date that you want to Count Down from or Count Down to. For example, if today's date is November 23, 1999 and you want to know how many months, days, and hours are left before 7:00PM

February 14, 2000 enter the time 07:00p and the date 02/14/2000.

- ◆ Press the volume key to toggle between AM and PM, or press **2**ABC for AM or **7**PQRS for PM.
 - ◆ Count Downs can be entered for dates between the years 1980 and 2099.
8. Press **OK/☒**.




To view Add, Edit, or Erase a Count Down:

1. Press **MENU** to display the Main Menu.
 2. Press **4**GHI for Scheduler.
 3. Press **5**JKL for Count Down.
- ◆ Count Down timers display in order of least amount of time passed since the Count Down was started and least amount of time remaining until the specified date.
 - ◆ Use the navigation keys to view all Count Down entries.
4. Using the navigation keys select the Count Down you want to change and press **MENU**. You can add a new Count Down by pressing **MENU** **OK/☒**.
 5. Using the navigation keys select one of the Options, New Event, Edit Event, Erase Event, or Exit and press **OK/☒**. Remember, you can also press the digit corresponding to one of the Options to select that Option.

World Time

Are you wanting to call a friend in another part of the world and wondering what time of the day it is there? To know what time it is before you call, use the World Time function of Scheduler. World Time will tell you what time it is in 24 different time zones around the world along with one or more major cities, states or countries in a time zone.

To check the current time in another city or country:

1. Press  to display the Main Menu.
2. Press  for Scheduler.
3. Press  for World Time.
4. Use the navigation keys to find the current time in one of these cities, states, countries time zone:







 
- San Francisco
- Chicago, Mexico
- Caracas
- Mid Atlantic
- London, Madrid
- Athens, Helsinki
- Abu Dabi
- Alma-ata
- Hong Kong, Beijing
- Guam, Sydney
- Wellington
- Honolulu, Hawaii
- Denver, Arizona
- New York, D.C.
- Buenos Aires
- Cape Verde
- Paris, Berlin
- Moscow
- Tashkent
- Bangkok, Jakarta
- Seoul, Tokyo
- Okhotsk
- Samoa, Midway
- Alaska

5. Press  .

Calculator

You can perform calculations including addition, subtraction, multiplication, and division on your phone.

To perform a calculation:

1. Press  to display the Main Menu.
2. Press  for Scheduler.
3. Press  for Calculator.
4. Press digit keys to enter the first number in your calculation. Numbers can be up to 9 digits in length.
 - ◆ Press  to enter a decimal point.
 - ◆ Press  to change the sign of a number to a negative (-).
5. Use the navigation keys to set the operator for your calculation, your choices are:
 - ◆ [+] addition
 - ◆ [-] subtraction
 - ◆ [x] multiplication
 - ◆ [/] division
6. Press digit keys to enter the second number of your calculation.
7. Press  to perform the calculation and see the result, or:
8. You can continue to perform calculations with the same operator or change the operator and continue your calculations. Every time that you change the operator the previous calculation is performed and the result displayed as the top number in the display.
9. Press  to perform the calculation and see the result.





Fax and Data Calls

Your Samsung phone is capable of sending and receiving digital data and fax calls when connected to a computing device (laptop, desktop, handheld, palmtop, etc.) running Windows 95, Windows 98, or Windows NT. Your Samsung phone functions just like a typical modem on your PC, enabling you to use wireless data involving a wide variety of Windows software applications.

To use digital data with your Samsung phone, you will need to obtain a digital data/fax kit from your service provider. This kit will contain the necessary cables, software, and documentation required for you to connect and use your Samsung phone with your computing device.

Note: The phone must be on a digital network to receive or send faxes and data.

Receiving a Fax

1. Ensure that your phone is connected to your PC and is powered on.
2. Press  to display the Main Menu.
3. Press  for Setup.
4. Press  for Data / Fax.
5. Use the scroll keys to select "Incoming Fax Only".
6. Press  to save the setting. The screen displays "No incoming voice calls can be received". Your phone then returns to Standby mode and displays "* Fax Only *" above the greeting.

Note: Once you have set your phone's mode to "Incoming Fax Only", you cannot receive regular voice calls until you change back to "Voice".

7. In the Fax program on your PC, setup the Answer mode. Click on "Receive" and select one of the following:

- ◆ Automatic Receive (recommended)
- ◆ Manual Receive

Your phone is now ready to receive an incoming fax.

Receiving a Data File

1. Ensure that your phone is connected to your PC and is powered on.
2. Press **MENU** to display the Main Menu.
3. Press **8 FUV** for Setup.
4. Press **9 WXYZ** for Data / Fax.
5. Use the scroll keys to select "Incoming Data Only".
6. Press **OK/☐** to save the setting. The screen displays "No incoming voice calls can be received". Your phone then returns to Standby mode and displays " * Data Only * " above the greeting.

Note: Once you have set your phone's mode to "Incoming Data Only", you cannot receive regular voice calls until you change back to "Voice".


Your phone is now ready to receive an incoming data call.

Sending a Fax or Data File

When connected to a computing device, your phone allows wireless fax and data transmissions. Your computing device software initiates the call to the destination phone number. Your Samsung phone functions as a wireless modem to send the fax or data file to the number designated by your PC software.

The MiniBrowser




The MiniBrowser allows you to access certain information such as stock quotes and weather via the Internet. Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users, and have removed most graphics.



Each time you start the MiniBrowser, the phone will connect to your browser service, and the service indicator icon () will appear on the display. Any time the service indicator icon is visible on the display, your phone is connected to the network and you will be billed accordingly. Rates will vary according to your billing plan.

The MiniBrowser will end the connection after a certain period of network inactivity and will automatically re-connect as necessary. This is normal and is designed to minimize your bill.

To Setup the MiniBrowser Prompts

Your phone can be set so that you view a prompt each time you start or end a MiniBrowser session. You have the option to change when these start and end prompts appear. The default setting is no start or end prompt. Here's how to change the settings:

1. Press  to display the Main Menu.
2. Press  for Setup.
3. Press  for MiniBrowser.
4. Use the scroll keys to select one of the four options:
 - ◆ Prompt to start. (You will see the prompt when you enter the browser, but not when you exit it.)


- ◆ Prompt to end (You will see the prompt only when you exit the browser.)
 - ◆ Prompt both (You will be prompted when you enter or exit the browser.)
 - ◆ Prompt none (The default setting. You will never see the prompt.)
5. Press  to save your setting or  to cancel.

Launching the MiniBrowser

Note: The first time you use the MiniBrowser, you will go through a security setup process that takes 3 to 5 minutes. Please follow the on-screen prompts to complete the security setup process. This initial setup process occurs only the first time you access the service.

1. Press   or  to access the Minibrowser.

Note: A reminder of the charge will appear. Using the soft keys, simply answer yes () or no ().

2. Once connected, the Home page (or the last page visited) will be displayed. To access the Home menu page from any other menu in the MiniBrowser, press and hold  . An example of a Home Page is shown below:

Home Page

1 ► Email

2 Contacts

3 Calendar

4 To Do's

5 Bookmarks





6 Web Sites

7 Settings



8 Help

3. What appears on the display when accessing the MiniBrowser is dependent on the service provider content. To view additional text, use the scroll keys.

To exit the MiniBrowser

Simply press  to exit the MiniBrowser. If the "Prompt to end" or "Prompt both" option is set in the MiniBrowser Setup (  ), you will be prompted whether you want to end the browser call.



The MiniBrowser Soft Keys

At the bottom of the MiniBrowser display is a solid bar which contains browser commands. "Soft" keys ( and ) below the solid bar are used to execute the commands. These two keys are called soft keys because their function changes depending on where you are in the MiniBrowser software.

Navigating the MiniBrowser



When you use the MiniBrowser, some keys on your phone operate differently than on a normal phone call. These keys are explained below. The MiniBrowser presents on-screen items in one of the following ways:

- ◆ text or numeric input
- ◆ links (embedded in content)
- ◆ numbered options (some options may not be numbered)
- ◆ simple text

You can act on the options or links by making use of the soft keys. The soft keys ( and ) are located below the bottom line of the display.



Here’s how the keys work in the MiniBrowser:

-  **1. Up/Down Left/Right Navigation Keys:** Use the navigation keys to scroll to and select browser options. The currently selected option is indicated by “ ► ”. You can also use the navigation keys to move the cursor when editing text.
-  **2. OK / Messages Key:** This is the left soft key. The left soft key is used primarily for selecting the highlighted item, but its function may change depending on what you are doing (see “The Mini-Browser Soft Keys” on page 98).



3. **Volume Key:** This key performs several functions:

- ◆ Allows you to scroll up or down by a page.
- ◆ Press and hold the up portion for one second to back up one level in the browser.
- ◆ Press and hold the down portion for one second to go to your home page.

SEND

4. **SEND Key:** Press this key to receive a call while in a MiniBrowser session. For more information on this feature see “Receiving a phone call while in the MiniBrowser” on page 102.

CLR

5. **CLR Key:** This key performs two functions:

- ◆ Backs you up in the browser. Pressing it once backs you up one page. Pressing and holding it backs you up to the Home page.
- ◆ Clears out entered text or numbers. When entering numbers or text, press **CLR** to clear the last number, letter, or symbol. Press and hold **CLR** to completely clear the input field.

6. **Numbered Keys 0 - 9:** If the items on a page are numbered, you can use these keys to select them.

*** inf**

7. **Asterisk Key:** This is the shift key. Press before entering text to create upper case letters.

0 OPER

8. **0 Key:** Enters a 0. Moves to the next word in T9 mode.

#

9. **Pound Key:** This is the space key. Press to insert a space.


END/Ⓜ

10. **END Key:** Exits the MiniBrowser and returns the phone to Standby mode.

MENU

11. **MENU Key:** This is the right soft key. The right soft key is used to access secondary options, or a menu of secondary options. For more info, see “The MiniBrowser Soft Keys” on page 98.

Entering text, numbers, or symbols

When you are prompted to enter text, the current text entry method will appear on the right soft key as T9word, alpha, SYM1 or NUM. To change the Input Mode, press the  soft key.




Alphabetical Text Entry

Text characters may be entered in alpha Input Mode by pressing the key corresponding to the letter that you want to enter. Press the same key repeatedly to change between the characters represented by each key.

Numbers and Symbol Entry

Numbers and symbols are entered by changing to the appropriate Input Mode and pressing the soft key for the symbol you want, or the digit key of the number you want.


T9® Text Input

T9 Text Input enables you to easily enter text. T9 (for “text on 9 keys”) requires only one key press per letter, and quickly recognizes the most commonly used word of a numeric sequence. For example, to enter the word “hello,” you can spell out the word by pressing only five keys, 4-3-5-5-6. T9 Text Input knows the most commonly used sequence for that numeric sequence is “hello”. If two or more words share the same numeric sequence, T9 software provides the most commonly used word, with the ability to scroll to the next most commonly used word by pressing the . Press  repeatedly to display all of the available words that T9 knows. When the word you want displays continue to enter text in the same way or you can change to another text or character entry mode. If the word you want to enter is not known by T9 press  to change the Input Mode.


Using Links

Links have several purposes, including jumping to a different page, jumping to a different site, or even initiating a phone call from some sites. Links are shown inside of brackets ([]), and you can normally use the left soft key to select a link when it is highlighted.

Initiating a Phone Call during a MiniBrowser Session

You may initiate a phone call from the MiniBrowser if the site you are using supports this feature (the phone number may be highlighted and the left soft key will appear as "Call."). In most cases, you can also use the  key to call the number. The browser connection will be terminated when you initiate the call. After you end the call, your phone will return to Standby mode.

Receiving a phone call while in the MiniBrowser


You can receive phone calls while in a MiniBrowser session. During a MiniBrowser session your phone and your service provider pass information back and forth in packets, this is done for efficiency and it reduces your service access cost. Your phone is connected to the service provider only during the exchange of a packet; the Service Indicator will be present when a packet is being exchanged. Your phone stores this information contained in a packet in memory for you to use. Whenever packets, or information, is not being exchanged your phone can receive calls. To answer a call while in the MiniBrowser press the  key. When you complete your call you are automatically returned to your

MiniBrowser session where you were when you answered your call.


Using Bookmarks

You can bookmark many individual pages for easy access at a later time. Bookmarks save you time by reducing the number of steps it takes to access a desired page.

To Create a Bookmark

1. Go to the page that you want to mark.
2. Press and hold  . A list of options appears.
3. Select Mark Site.
4. If the page has a title, it will be automatically used for the name of the bookmark. You can also change the bookmark name. Selecting Save will save the name and add the page to your list of bookmarks.
5. A message will appear confirming that the bookmark was added to the list. Select OK to return to the screen that you marked to resume navigation within the MiniBrowser.
6. The new bookmark is added to the bottom of your bookmark list.

Finding a Bookmark

1. From the Home Page, select Bookmarks.
2. Select the bookmark you want and press .

Or

1. From the Home Page, press and hold the number associated with the bookmark in the bookmark list.

Menus

Your phone includes both a Main Menu and an In Use Menu.

Main Menu

The Main Menu contains nine primary options, most of which contain sub-menus (see “Your Phone’s Main Menu” on page 106).



In Use Menu

The In Use Menu options are available in Conversation mode:

1. Mute / Unmute
2. Calls
3. Phone Book
4. Silent Key
5. Send Tel #
6. My Phone #
7. Version

SND: Send DTMF

Navigating Menus

To access a menu option, press  , and then press the scroll keys to scan menu options. Press the associated digit key to select the desired option. If you know the number of the option you want to select, simply press  , and then press the associated digit key to select the desired option. (You do not have to scroll through the list or display an option in order to select it.)

Note: Closing the phone will cancel any menu operation. The phone will automatically return to Standby mode from any menu if you don’t touch a key for 60 seconds.


Your Phone's Main Menu

Main Menu		Menu Level 1		Menu Level 2
1. Calls	↔	1. Outgoing 2. Incoming 3. Erase Logs 4. Air Time	↔	1. Last Call 2. Total 3. EraseTotal 4. Life Time
2. Phone Book	↔	1. Find Name 2. Add Entry 3. Find Entry		
3. Web Browser	↔	Browser contents are controlled by your service provider.		
4. Scheduler	↔	1. Today 2. View Month 3. Jump to Date 4. To Do List 5. Count Down 6. World Time 7. Calculator		
5. Sounds	↔	1. Ring	↔	1. Ring Vol 2. Ring Type 3. Ring Tone
		2. Key Volume 3. Alerts	↔	1. MinuteBeep 2. SVC Alert 3. Connect 4. Disconnect
		4. Alarm	↔	1. Set 2. Release
		5. Diff. Ring	↔	1. Caller 1 2. Caller 2 3. Caller 3 4. Caller 4 5. Caller 5
		6. Power on/off 7. Data/Fax Alert		
6. Display	↔	1. Backlight		↑ Folder Open 30 seconds 10 seconds ↓ Off
		2. Greeting 3. Animation	↔	1. Opening 2. Closing
		4. My Phone # 5. Language	↔	↑ English ↓ Spanish
		6. Version		
7. Voice Dial	↔	1. Record 2. Review 3. Erase All 4. Set Active	↔	↑ [*] only ↓ [*] / FOLDER
8. Setup	↔	1. Auto Retry 2. Auto Answer 3. Auto Hyphen 4. Answer Mode	↔	1. By Any Key 2. By SEND 3. By Opening
		5. Tone Length 6. Set Time 7. Set NAM 8. System Sel 9. Data / Fax 0. Analog Call * MiniBrowser		
0. Security	↔	1. Lock 2. Restrict	↔	1. Phone Book 2. Incoming 3. Outgoing
		3. Lock Code 4. Priority # 5. PIN 6. Clr Memory 7. Hide My # 0. Reset Phone		

Usage Guidelines: All about Performance and Safety

Understanding Signal Strength

The voice quality of your phone will always be at its best when the antenna is fully raised. If you're inside a building, reception may be better near a window.

The quality of each call you make or receive depends on the signal strength in your area. Your phone will inform you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. The signal strength indicator () displays in the upper left corner of your display.

Understanding Power Save Mode

If you're trying to use your phone in an area where the signal is too weak, the Power Save feature will automatically activate to conserve battery power when you've been unable to pick up a signal for 10 minutes. If your phone is on, it will periodically recheck service availability (about every three minutes), or you can do it yourself manually by pressing any key. A message will be displayed on the screen any time Power Save has been activated.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When your phone is in use, the system handling your call controls the power level. This product meets all FCC requirements for RF power output levels for this handset type.

Specifications Subject to Change

The information contained in this manual is believed to be correct at the time of printing, however, Samsung reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

Radio Frequency Safety

In 1991—1992, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers, and physicians from universities, government health agencies, and industry developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted a hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

The design of the phone complies with these updated standards. Of course, if you want to limit RF exposure even further than the updated standard, you can choose to control the duration of your calls and operate your phone in the most power-efficient manner.

- ◆ You should not touch the antenna unnecessarily when using the phone.
- ◆ Touching the antenna may affect the call quality and may cause the unit to operate at higher power than it would need otherwise.
- ◆ When using the handset, hold the handset just as you would hold any other telephone, and keep the antenna pointed up and over your shoulder.
- ◆ Use of hands-free devices will further limit RF exposure.

Emergency Calls

IMPORTANT NOTICE! PLEASE READ!

Because of various transmission methods, network parameters, and user settings used to complete a call from your wireless phone, a connection cannot always be guaranteed.

Therefore, emergency calling may not be available on all wireless networks at all times.

DO NOT depend on this phone as a primary method of dialing 911 or for any other essential or emergency communications.

Remember to always turn your phone on and check for adequate signal strength before placing a call.

Maintaining Your Phone's Peak Performance

To operate your phone properly — that is, to maintain safe and satisfactory service — you should follow these rules:

- ◆ For best reception, extend the antenna fully.
- ◆ Hold the phone with the antenna up and over your shoulder.
- ◆ Do not hold, bend, or twist the phone antenna at any time.
- ◆ Close the phone antenna when not on a call.
- ◆ Do not use the phone with a damaged antenna.
- ◆ Speak directly into the microphone.
- ◆ Avoid exposing your phone and accessories to rain or liquid.
- ◆ Only Samsung authorized personnel should service your phone and its accessories.

Protecting Your Battery

For best battery performance, you should follow these guidelines:

- ◆ Use your battery only for its intended purpose.
- ◆ Only use Samsung-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers will invalidate your warranty and may cause damage as well.
- ◆ You must never use a battery charger that is damaged in any way or worn out.
- ◆ To avoid damage, only charge the battery in temperatures that range from 32° F to 104° F.

- ◆ Do not use the battery charger in direct sunlight or in high humidity areas (such as a bathroom).
- ◆ When a battery charger is not in use, disconnect it from the power source.
- ◆ Never dispose of the battery by incineration (fire).
- ◆ Keep the metal contacts at the battery base clean.
- ◆ Do not attempt to disassemble or short-circuit the battery, as injuries or burns may result.
- ◆ You may need to recharge the battery if it has not been used for a long period of time.
- ◆ Replace the battery when it no longer provides acceptable performance. It can be charged hundreds of times before it will need to be replaced.
- ◆ Do not allow metal objects or liquids to contact or short-circuit the battery terminals, as injuries or burns may result.
- ◆ To avoid damage, store the battery in temperatures ranging from -4°F to 185°F , and avoid leaving the battery unused for very long periods. Follow these storage rules:
 - ◆ Less than one month:
 -4°F to 140°F (-20°C to 50°C)
 - ◆ More than one month:
 -4°F to 113°F (-20°C to 35°C)

Battery Disposal and Recycling

Please follow these guidelines when disposing of or recycling the battery:

- ◆ Do not dispose of the battery in a fire; the cell may explode. You must follow the regulations in your area regarding disposal of batteries.
- ◆ Do not open or puncture the battery; the released electrolyte is corrosive and may cause damage to the eyes and skin, and can be toxic if swallowed.
- ◆ Charge the battery in accordance with the instructions specified in this user guide (see “Charging the Battery” on page 14).

- ◆ Return unwanted Samsung Lithium Ion batteries to your nearest Samsung Service Center. (Call toll free 1-888-987-HELP (4357) in the U.S.)

Samsung 850 Phone and Battery Specifications

Dual Mode:	CDMA 800 MHz / AMPS 800 MHz
Display Screen:	Graphic LCD with up to 5 Lines of text plus a dedicated icon line at the top
Battery Type:	Standard: 1000 mAh Lithium-Ion Extended: 1600 mAh Lithium-Ion
Antenna:	retractable, user replaceable

850 Phone with:	Standard battery	Extended Battery
Dimensions (H x W x D)::	3.6 x 2.0 x 1.1 inches 88 x 52 x 27 mm	3.6 x 2.0 x 1.2 inches 88 x 52 x 31 mm
Weight:	4.4 oz. (126 g)	5.5 oz. (155 g)
Volume:	125 cc	142 cc
Talk CDMA	up to 3 hours	up to 4.5 hours
Talk AMPS	up to 2.5 hours	up to 3.5 hours
Standby CDMA	up to 100 hours	up to 130 hours
Standby AMPS	up to 16 hours	up to 26 hours

Operating a Motor Vehicle

IMPORTANT NOTICE ! PLEASE READ !

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY LEAD TO SERIOUS PERSONAL INJURY AND PROPERTY DAMAGE.

You should never use a hand-held phone while operating a motor vehicle. It may divert your attention away from driving and may be illegal in some cities and states. You should park your vehicle legally before using your hand-held phone. Remember, safety comes first.

- ◆ Your hand-held phone should be stored in a secure place so that, in the event of a sudden stop or collision with another vehicle, the phone will not damage property or injure anyone. For example, airbags inflate very quickly and with great force. Serious injury may result if you have placed your phone in the area of deployment of an air bag and the bag inflates.

Following Safety Guidelines

To operate your phone safely and efficiently, you should always follow any special guidelines in a given area, and turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Turn Off Your Phone Before Flying

You should turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Restricting Children's Access to Your Phone

Your phone should not be played with by children. They could hurt themselves and others, damage the phone, or make calls that increase your phone bill.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending, or sitting on it.

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the telephone if such interference cannot be eliminated.

Storing Your Phone

You must not store or carry your phone, its parts, or accessories in the same compartment or other area where

there flammable liquids, gases, or explosive or flammable materials.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, some electronic equipment may not be shielded, or adequately shielded, from RF signals. RF signals from wireless telephones may affect such equipment.

RF signals from your phone may affect systems in your vehicle, including improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles (such as electronic ignition systems, electronic speed control systems, electronic anti-skid or anti-lock braking systems, electronic speed control systems, and air bag systems). You should check with the manufacturer of your vehicle (and the manufacturers of any equipment added to your vehicle) to determine whether its systems are adequately shielded from external RF signals and to determine appropriate safety precautions.

You must consult the manufacturer of any personal medical devices (such as pacemakers and hearing aids) to determine if they are adequately shielded from external RF signals and the appropriate safety precautions to take with such devices. For example safety instructions for pacemakers may include minimum distances that the phone should be kept from the pacemaker, areas where the phone should not be kept (for example, the breast pocket), use of the ear opposite the pacemaker, and other such safety instructions. The advice from the manufacturers may change from time to time. If at any time you suspect any such interference, turn off your phone immediately.

Turn off the phone in healthcare facilities and request permission before using the phone near medical equipment.

FCC Compliance Information

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Liquefied Petroleum Gas

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn.: Publication Sales Division.

Turn Off Your Phone in Dangerous Areas or Posted Areas

To avoid interfering with blasting operations, you should turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews use remote-controlled RF devices to set off explosives.

Turn off your phone when you are in any area with a potentially explosive atmosphere. It is rare, but your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemical or particles such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Do not transport or store flammable gas, liquid, or explosives in the compartment of any vehicle that contains your phone or accessories.

Your Phone as a Network Device

Your telephone requires a service provider to send and receive calls. Your phone is only one part of a system or “network” of devices that makes it possible for you to send and receive calls, text messages, voice message, access the Internet using MiniBrowser and to take advantage of all of the other services and features available when your phone is used with your service provider. To make all of the features available to you, your phone is designed by Samsung and your service provider to allow your service provider to send (at any time) a variety of information and messages to your

phone. You may think of this as an over the air service to your phone. While this is taking place your phone's display reads "Programming in Progress". If you see the "Programming in Progress" message do not turn off your phone. If you turn off your phone during a download your phone or some of it's features may not work properly in the network. If this happens don't worry, contact your service provider for help in correcting the problem.

When complete your phone displays "Programming Successful". The service on your phone was successful and you can continue to use your phone as normally do.

Information To User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ 1. Reorient / Relocate the receiving antenna.
- ◆ 2. Increase the separation between the equipment and receiver.
- ◆ 3. Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.
- ◆ 4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

1. What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, INC. ("SAMSUNG") warrants the original purchaser that SAMSUNG's Phones and accessories are free from defects in material and workmanship under normal use and service for a period commencing on the date of purchase and continuing for the specified period of time after that date:

Samsung Phone	1 Year
Batteries	1 Year
Leather Cases	Defect-free at time of purchase
Other Phone Accessories	1 Year

2. What is Not Covered? This Limited Warranty is conditioned upon proper use of the product by the purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, modifications of any part of the product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) all plastic surfaces and other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of the product in conjunction with the accessories, products or ancillary or peripheral equipment not furnished by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; or (f) installation, maintenance, and service of products. This Limited Warranty covers batteries only if battery falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover battery if (i) the battery has been charged by a charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

3. What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to purchaser, any defective component part of the phone or accessory. To obtain service under this Limited Warranty, purchaser must return the product to an authorized SAMSUNG Phone service facility in an adequate container for shipping, accompanied by the purchaser's sales receipt or comparable proof of sale showing the date of purchase, the serial number of the product, and the seller's name and address. To obtain information on where to deliver the phone or accessory, call SAMSUNG Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair the defective product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product. Repaired products will be warranted for a period equal to the remainder of the original Limited Warranty on the original product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment become the property of SAMSUNG. If SAMSUNG determines that any product is not covered by this Limited Warranty, purchaser must pay all parts, shipping, and labor charges for the repair or return of such product.

4. What are the Limits on SAMSUNG's Liability? THE WARRANTIES GIVEN IN THIS LIMITED WARRANTY TOGETHER WITH ANY IMPLIED WARRANTIES COVERING THE SAMSUNG PRODUCTS, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE

DURATION OF THIS LIMITED WARRANTY, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, SAMSUNG SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR SIMILAR DAMAGES, LOSS OF PROFITS, DAMAGES TO PURCHASER'S PROPERTY, OR INJURY TO PURCHASER OR OTHER PARTIES ARISING OUT OF THE USE, MISUSE, OR UNABILITY TO USE ANY SAMSUNG PHONE OR ACCESSORY, BREACH OF WARRANTY, BREACH OF CONTRACT, OR NEGLIGENCE, INCLUDING BUT NOT LIMITED TO SAMSUNG'S PHONES AND ACCESSORIES, AND IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES THE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS WARRANT IS ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT EFFECT THE ENFORCEABILITY OF THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

This Limited Warranty allocates risk of product failure between purchaser and SAMSUNG, and SAMSUNG's product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentations, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

5. How does State Law Apply to This Warranty? SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR HOW LONG IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This Limited Warranty gives you specific legal rights. You may also have other rights which vary from one jurisdiction to another.

Samsung Telecommunications America, Inc.

1130 East Arapaho Road

Richardson, Texas 75081

1-888-987-HELP (4357)

Index

911

- 911, 27, 72, 74, 76, 108
 - Call Restriction Options, 74
 - Lock Mode, 27, 60, 72, 77
 - Priority Numbers, 74, 75, 77

A

- access a menu option, 105
- accessories, 7, 14, 109, 112,
 - 114, 116
 - Connector, 7
 - desktop charger, 109
 - Dual-Slot Desktop Charger, 4,
 - 14
 - Extended Battery, 111
 - Hand Strap, 4
 - Hands-Free Car Kit, 40, 54
 - Headset, 6
 - Leather Case, 116
- add digits, 26
- Airtime, 80, 82
 - review airtime, 82
 - Reviewing Airtime, 80, 82
- Alarm, 32, 44, 45, 46, 85
 - cancel the alarm, 45
 - silence the alarm, 4, 45
- Alerts, 37, 38, 46
 - Alerts settings, 46
 - Connect Alert, 37, 38
 - Disconnect Alert, 37, 38
 - Minute Beep, 37
 - Service Alert, 37
- Analog, 26, 36, 44
 - Analog mode, 26
- answer, 3, 5, 16, 19, 20, 24, 30,
 - 31, 72, 89, 97, 102
 - Answering a Call, 3, 20, 24
 - Any Key Answer, 20

- Antenna, 9, 10, 107-112,
 - 115-116
 - reception, 10, 107, 109
- Any Key Answer, 20
- area codes, 26
- Automatic Answer, 20, 30
- Automatic Hyphenation, 31
- Automatic Retry, 30

B

- back up one menu level, 8
- Backlight, 3, 40
 - Backlight Control, 3, 40
- Battery, 4, 11-15, 109-112, 116
 - Battery Disposal and Recycling, 110
 - battery performance,
 - 109-110
 - Charging the Battery, 14, 15,
 - 110, 116
 - Charging with the Dual-Slot Desktop Charger, 14
 - Installing the Battery, 13
 - recharge the battery, 14, 110
 - Replace the battery, 110
 - store the battery, 110
- Block Own Number, 22
- Bookmarks, 97, 103, 104
- browser commands, 98

C

- Calculator, 84, 92
- Call Dropped, 25
- Call Failed, 25
- Call Forwarding, 23, 24
 - activate Call Forwarding, 23
 - deactivate Call Forwarding,
 - 24

- call logs, 80
 - Erasing Call Logs, 80, 81
 - incoming call, 3, 5, 8, 9, 12, 19, 20, 23, 24, 47, 49, 68, 72, 74
 - Outgoing Calls Log, 23
- Call Logs, 5, 18, 19, 26, 79, 80-82
 - Erasing Call Logs, 80, 81
 - Reviewing Airtime, 80, 82
- call time, 3, 19, 67
- call waiting, 24
- Call Waiting, 3, 5, 24, 25
- caller ID
 - Using Caller ID, 22
- Caller ID, 22, 66, 68
- Cautions, 112
- Charging the Battery, 1, 4, 15, 110, 116
- Charging with the Dual-Slot Desktop Charger, 14
- Clear Key
 - back up one menu level, 8
 - correct a misdialed digit, 19
 - erase one character, 8
 - erase one digit at a time, 19
- CLR Key, 8, 100
- conference calls, 23
- confidential number, 69
- Conversation Mode, 16
 - In Use Menu, 21, 105
- correct a misdialed digit, 19
- customer service
 - Samsung Service Center, 111
- customize, 47
- D**
- Dangerous Areas, 114
- data, 7, 11, 18, 35, 48, 93-95
 - Receiving a Data File, 94
 - Sending a Fax or Data File, 95
- default, 21, 24, 51, 55, 75, 76, 79, 97
- desktop chargers, 1, 4, 109
- Dialing, 7, 18, 28, 29, 53-55, 63, 71-73, 77
 - Correcting Dialing Mistakes, 19
 - Dialing numbers from your Phone Book, 18, 71
- Digit Entry, 29
- Dimensions, 111
- direct sunlight, 110
- Display, 3, 11, 40-43, 111, 115
 - Backlight Control, 3, 40
 - Display indicators, 11
 - language, 42
- driving, 111
- DTMF, 29, 32, 105
- Dual-Slot Desktop Charger, 1, 4, 14
- E**
- earpiece volume, 22
- Editing Phone Book numbers, 69
- emergency, 60, 72, 73
- Emergency dialing, 27, 108
- Ending a Call, 19
- entering a phone number, 4
- Entering text, numbers, or symbols, 6, 85, 88, 89, 101
 - alphabetical, 101
 - numbers and symbols, 101
 - T9, 41, 100, 101
- erase
 - erase all, 8, 19, 57, 61, 78
 - erase all the digits at once, 19
 - erase an individual text message, 61
 - erase one character, 8
 - erase one digit at a time, 19

explosive atmosphere, 113, 114
Extended Battery, 111

F

failed call, 25, 26, 30
Fax, 12, 18, 35, 48, 63, 66, 93-95
FCC Notice, 112
Federal Communications (FCC), 107-109, 112, 115
Find Entry, 64

G

Greeting, 41
 Personal Greeting, 41

H

Hand Strap, 4
Hands-Free Car Kit, 40, 54
Headset, 6
Headset connector, 6
help, 37, 84, 88, 89, 108
high humidity areas, 110

I

In Use Menu, 21, 105
incoming call, 3, 5, 8, 9, 12, 19, 20, 23, 24, 47, 49, 68, 72, 74
 incoming voice calls, 35, 93, 94
interference, 112-113, 115
Internet, 96, 108

L

Leather Case, 116
LED Indicator, 9
links, 99
liquid, 109-110, 113-114
Lithium Ion batteries, 1, 13, 111

lock code, 69, 70, 72-78
 default lock code, 75
 Lock Code Setting, 75
 lock the phone, 72, 73
 Locking the Phone, 73
 new lock code, 75
Lock Mode, 27, 60, 72, 77
 place an outgoing call in
 Lock mode, 73

M

Main Menu, 106
make calls, 23, 112
manually dial a number using a pause(s), 29
melody tones, 48, 50
Memory, 18, 58, 63, 70-72, 78
Memory Dialing Shortcuts, 18, 63, 71
Menu, 16, 29, 105
 access a menu option, 105
 back up one menu level, 8
 In Use Menu, 21, 105
 see Main Menu
 navigating a menu, 4
MENU Key, 8, 100
Messages, 4, 58, 59, 60-62, 99
 erase a message after reviewing, 61
 kinds of messages, 58
 Message Memory Capacity, 58
 Message Services, 12, 58
 Messages Key, 4, 99
 Messages Menu, 4, 59-62
Microphone, 7, 21
 Mute / (Un)mute, 105
 mute during a call, 21

- MiniBrowser, 12, 18, 36, 58, 59, 96-103, 114
 - bookmarks, 97, 103, 104
 - browser commands, 98
 - exit the MiniBrowser, 98
 - Launching the MiniBrowser, 97
 - MiniBrowser Soft Keys, 98-100
 - navigating, 99
 - using links, 102
- Minute Beep, 37
- Mode, 3, 17, 20, 31, 101, 111
 - Conversation Mode, 16
 - Standby Mode, 16
- Mute Microphone
 - Mute / (Un)mute, 105
 - during conversation, 7, 21
- Mute the ringer, 47
- N**
- NAM, 33, 42
- navigating a menu, 4
- Navigation Key, 4, 99
- Network Busy, 25
- network feature activation
 - codes, 26
- No Service Indicator, 11
- North American Numbering Plan, 31
- numeric pages, 58, 61
- O**
- operating a motor vehicle, 111
- out of calling range, 25
- Out of Range, 25
- Outgoing Calls Log, 23
- P**
- Pages
 - numeric pages, 58, 61
- Pause Dialing, 8, 28, 29, 31
 - pause dialing methods, 28
- Personal Greeting, 41
- Phone and Battery
 - Specifications, 112
- Phone Book, 4, 16, 18, 22, 26, 28, 29, 54, 61-71, 74, 78-81, 105
 - Adding a Name Ringer, 68
 - Erasing Entries, 70
 - Erasing the Phone Book, 70
 - Find Entry, 64
 - make a number secret, 69
- Placing a call
 - place a three-way call, 23
 - place an outgoing call in
 - Lock mode, 73
 - using Voice Dialing, 18, 56
- Placing a Call, 18, 56
- Power Save Mode, 17, 107
- Prepend Dialing, 26
 - prepend existing phone numbers, 26
- R**
- radio frequency, see RF
- rain, 109
- reception, 10, 107, 109, 115
- recharge the battery, 14, 110
- Redialing calls
 - redial the last call, 18
- review, 52, 56, 59, 61, 62, 82
 - review airtime, 82
 - Reviewing a Voice Memo, 52
 - Reviewing Airtime, 80, 82
 - reviewing text messages, 60
 - Reviewing Voice Dialing
 - Entries, 56
- RF, 107-108, 112-115
 - RF exposure, 108
- Ringer, 7, 20, 21, 46, 47, 59, 68
 - Mute the ringer, 47
 - Ring Type Setting, 47, 59
 - silence the ringer, 19, 21
- Roaming, 12

S

- Safety Considerations
 - Cautions, 112
 - Driving, 111
 - explosive atmosphere,
 - 113, 114
 - operating a motor vehicle,
 - 111
- Samsung Service Center, 111
- Scheduler
 - Calculator, 84, 92
 - Count Down, 84, 89, 90
 - Jump To Date, 84, 87
 - To Do List, 84, 88
 - Today, 84, 85
 - View Month, 84, 86, 87
 - World Time, 84, 91
- Secret phone numbers, 69
- Security, 70-79
 - Security menu, 72, 73
- Send Tel #, 105
- Service, 11, 34, 37, 102
 - Service indicator, 34
- Silent Key, 105
- Speed Dialing, 71
- Standby Mode, 16
- Standby or Conversation, 4, 63
- storing your settings, 28, 76
 - store phone numbers and names, 65
 - Storing phone numbers at the end of a call, 66
- Storing the phone and battery, 110-112, 114

T

- temperatures, 15, 109, 110
- temporarily unblock, 22
- text messages, 61, 108
 - reviewing text messages, 60
- Three-Way Calling, 23
- Tone Length Setting, 32

V

- Version, 43, 105
- vibrate, 7, 12, 47
 - Vibrator on, 12
- Vibrate, 7, 19, 47
- view your phone number from
 - Standby mode, 42
- Viewing Stored Entries, 63, 67, 68, 70
- Voice Memo, 6, 51, 52
 - Reviewing a Voice Memo, 52
 - Voice Memo Key, 6
- Voice-Activated Dialing, 53, 54
 - erasing Voice Dialing entries, 57
 - Reviewing Voice Dialing Entries, 56
- Voice Dialing, 3, 12, 18, 54, 55, 57, 113
- Voice Dialing Activation, 3, 55
- volume key, 20, 22, 33, 46-49, 86, 90
 - earpiece volume, 22

W

- warranty, 14, 109, 112, 116
- Weight, 111

Y

- your phone as a network device, 114

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>