 




QUICK GUIDE

VMC-7314P
VMC-7321P

Colour Monitor

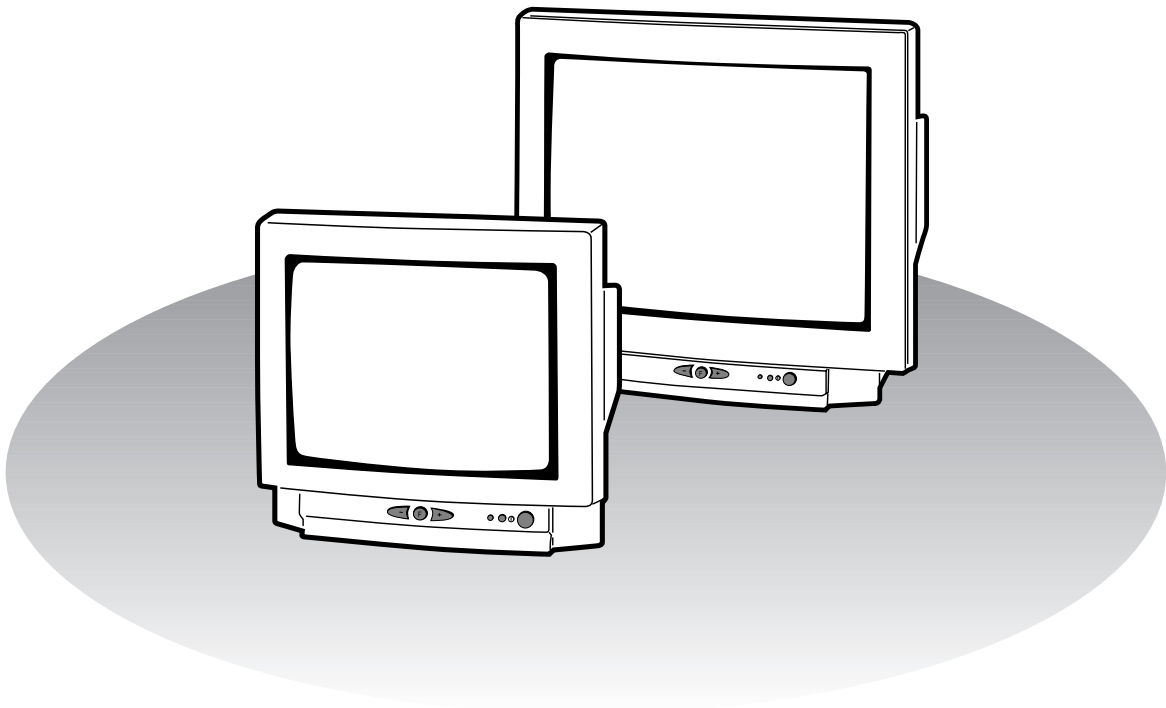

 
Please read this Instruction book before using your Monitor set.

SAFETY PRECAUTIONS


CAUTION: Please read and retain for your safety.

This colour Monitor has been engineered and manufactured to assure your personal safety. But improper use can result in potential electric shock or fire hazards. In order not to defeat the safeguards incorporated in this receiver observe the following basic rules for its installation, use and servicing.


Installation

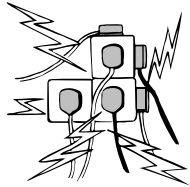

 Do not allow anything to rest on the power cord
Do not locate this colour monitor where the cord will be damaged by people walking on it.
Do not overload wall outlets and extension cords as this can result in fire or electric shock.

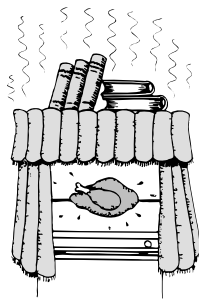


Slots and openings in the cabinet and in the back or bottom are provided for ventilation to ensure reliable operation and to protect it from overheating. These openings **must not** be blocked or covered.
 The opening should **never** be covered with a cloth or other material, and the bottom openings should not be blocked by placing the television receiver on a bed, sofa, rug, or other similar surface.

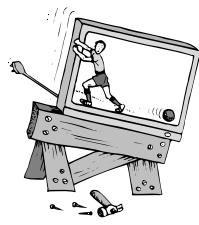 


This colour monitor should **never** be placed near or over a radiator or heater. This colour monitor should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided

 Do not place your colour monitor on an unstable stand, shelf or table. Serious injury to an individual, and damage to the monitor may result if it should fall. Your sales person can recommend approved stands or shelf and wall mounting instructions.

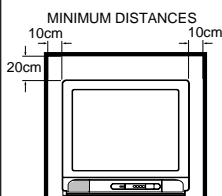

 If the monitor is to be built into a compartment or similarly enclosed, the minimum distances **must** be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

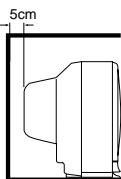

Use

 


This colour monitor should be operated only from the type of power source indicated on the monitor or as indicated in the Operating Instructions. If you are not sure of the type of power supply in your home, consult your sales person or your local power company.

Never add accessories that have not been specifically designed for this monitor.




Do not drop or push objects into the monitor cabinet slots or openings. Some internal parts carry hazardous voltages and contact may result in an electric shock hazard. **Never** spill liquids of any kind on the colour monitor. **Do not** place items such as vases containing liquid on top of the monitor.

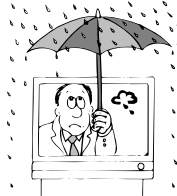


Do not expose the colour monitor to rain or use near water. For example, near a bathtub, kitchen sink, in a wet basement, etc. Before cleaning, unplug the colour monitor from the wall socket.

 
Never stand on, lean on or push the monitor or its stand. **Never** allow children to play with the monitor or its stand. Serious injury may result if it should fall.

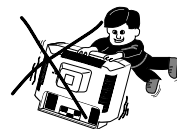

 Do not apply liquid cleaners or aerosol cleaners directly onto the colour monitor. Use a damp cloth for cleaning.



 Do not place candles or hot objects upon the monitor, next to it or behind it. Open flames must never be used near the monitor.

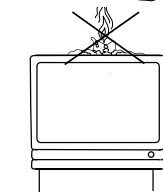

Important:

This equipment is fitted with an approved non rewirable UK mains plug.

To change a fuse in this type of plug proceed as follows:

1. Remove the fuse cover and fuse.
2. Fix a new fuse which should be a BS1362 5Amp A.S.T.A. or BSI approved type.
3. Ensure that the fuse cover is correctly refitted.

If the fuse cover is lost or damaged the plug must **NOT** be used but replaced with a serviceable plug.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a rating of 5Amp, ensure the fuse cover is correctly fitted. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5Amp.

Note: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13Amp socket elsewhere.

The wires in this mains lead are coloured in accordance with the following code:

Blue -----> Neutral

 
Brown ----> Live

1. The Blue wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The Brown wire must be connected to the terminal with the letter "L" or coloured RED.
3. **Do not** connect either wire to the earth terminal in the plug which is marked with the letter "E" or by the earth symbol or coloured GREEN or GREEN and YELLOW.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the wires.

INSTALLATION / GENERAL OPERATION

Mains Supply

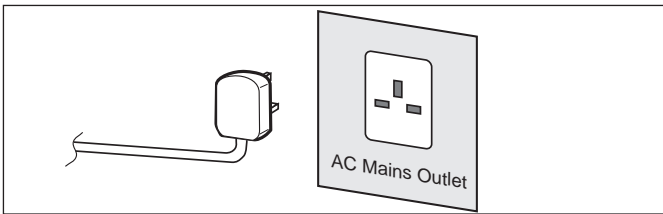


Connect the power cord of the monitor to a wall outlet.

- ✓ The monitor is prepared for a mains voltage AC220~240V, 50Hz. When the monitor is not to be used for an extended period of time, it is advisable to disconnect the power cord from the power outlet.


WARNING
High voltages are used in the operation of this set. Refer to qualified service personnel

 AV Connection

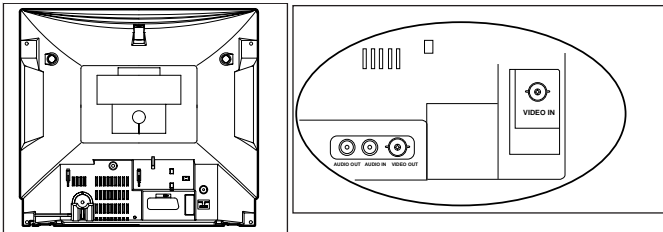


Terminal
VIDEO IN
VIDEO OUT
AUDIO IN
AUDIO OUT

 Description
BNC connector for video in.
BNC connector for video out.
BNC connector for audio in.
BNC connector for audio out.

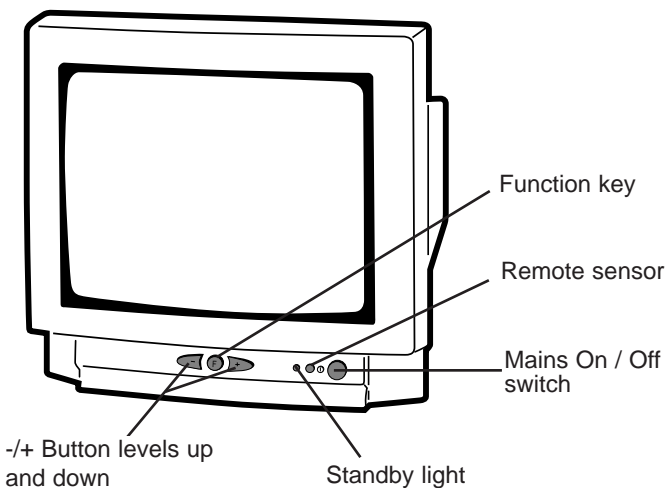

Switching-on your TV

 - To turn the monitor ON, press the **Mains ON/OFF** ⏻ switch. The power indicator illuminates to show the power is on.

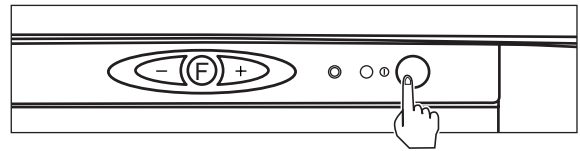

- To turn the monitor OFF, press the **Mains ON/OFF** ⏻ switch again.

Be sure to set the **Mains On/Off button** to the **OFF** position if a power failure occurs.

If you find the power indicator flashing, please turn the monitor off completely with the **Mains ON/OFF** ⏻ button and contact our service desk.

This warning is a sign to let you know that the power protection function of this monitor is now operating.

Control selection and adjustment

Press the **⊕** button repeatedly to select **Volume, Brightness, Contrast, Colour, Sharpness**. Press the **⊖** or **⊕** button to adjust the selected control. When the control menu is not displayed, the **⊖** or **⊕** button enable you to switch programme position.

Volume : To adjust the sound volume.

Brightness : To adjust the picture brightness.

Contrast : To adjust the picture contrast.

Colour : To adjust the picture colour.

Sharpness : To adjust the picture sharpness.

Tint : To adjust the colour phase. (This appears when NTSC signals are input.)

TV SPECIFICATIONS / WARRANTY TO CUSTOMER

TV specification

Monitor specification

Power source	AC 220~240V 50Hz
Colour system	PAL,NTSC
Input terminals	
Video IN	BNC connector
Audio IN	RCA connector
Output terminals	
Video OUT	BNC connector
Audio OUT	RCA connector

	<u>VMC7314P</u>	<u>VMC7321P</u>
Sound output (continuous)(watts)	1.5	1.5
Picture tube (Diagonal) (cm)	37	55
(Visible picture diagonal)	34	51
Dimensions (W x H x D mm)	370 x 336.5 x 379	514 x 466 x 482
Weight (kg)	9.0	19.0

Warranty to Customer

Sanyo U.K. Sales Ltd. (the company) warrants to the initial retail purchaser that if this equipment is or becomes defective and that, in the opinion of the Company, the defect is due to faulty material or workmanship the Company will, for a period of 12 calendar months from the date of sale to the original purchaser repair or replace, at its sole option, free of charge, any such defective component part of the equipment, always provided that:-

- 1: The equipment has at all times been used in accordance with the operating instructions issued by the Company, and has not been connected to an electrical mains supply for which it has not been adjusted.
- 2: Accidental damage or damage caused by negligence of misuse by the user, is specifically excluded.
- 3: Unauthorised repairs, or any modification to the equipment which has not been expressly approved by the Company, shall render this warranty null and void.
- 4: Failure due to fair wear and tear of any item is specifically excluded.

This warranty is not transferable and is only applicable within the United Kingdom (and the Republic of Ireland).

Nothing in this express warranty affects the statutory rights available to the purchaser of this equipment.

Note: This warranty supersedes any other form of guarantee that may inadvertently have been enclosed with or attached to the product.

Dear Customer.

Thank you for buying SANYO. This equipment should give you many years of pleasure and faithful service but in the event that a fault occurs, the following notes for your guidance may be helpful:-

- 1: PLEASE RETAIN YOUR PURCHASE RECEIPT WHICH WILL BE REQUIRED FOR SERVICE DURING WARRANTY.
- 2: If your Sanyo equipment proves faulty during the period of guarantee, take it or send it back to the dealer who originally supplied it together with this guarantee and the proof of purchase. We have made arrangements with our approved dealers under which they will carry out in guarantee service repairs on our behalf. In this way, we hope to reduce to a minimum the amount of time you will be without your equipment.
- 3: If for some reason it is impossible to return the equipment to the original supplier, please contact our Service Department at the address below for further advice.
- 4: Should the equipment require servicing after the expiry of the guarantee period, take or send it to the original supplier or any other Sanyo dealer. He will be pleased to give you a quotation for the repair.

Service Department,
Sanyo UK Sales Ltd., Sanyo House, Otterspool Way, Watford,
Hertfordshire, WD2 8JX.
Tel: 01923 246363

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>