



 
WELCOME TO THE WORLD OF SANYO

Thank you for purchasing a Sanyo Multimedia Remote Control. You made an excellent choice for Performance, Reliability, Value, and Styling.

BEFORE YOU BEGIN

Installing The Batteries

- Step 1.** Release the battery cover by pressing the tab and tilting the cover upward.
- Step 2.** Install two "AAA" batteries as shown. Be sure to match the +/- signs on the batteries with the +/- marks inside the case.

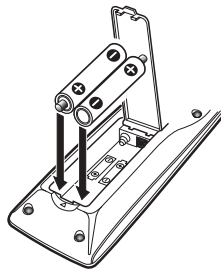


Note: **Do Not** mix new and used batteries or mix different types of batteries together.

IMPORTANT NOTE: SPENT OR DISCHARGED BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY IN COMPLIANCE WITH ALL APPLICABLE LAWS. FOR DETAILED INFORMATION, CONTACT YOUR LOCAL COUNTY SOLID WASTE AUTHORITY.

PROGRAMMING THE REMOTE CONTROL

- Step 1.** Find your equipments' codes in the charts in this instruction guide.
- Step 2.** Press and hold the **VCR**, **TV**, **Cable Box**, **DVD Player**, or **Satellite Receiver** mode key while entering a three-digit code number. Then release the key.

If the code was accepted, the **Activity Lamp** will flash 5 times after the Mode key is released. If you entered an invalid code, the **Activity Lamp** will *not* flash. Check the code number and repeat Step 2.

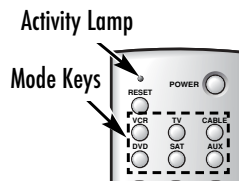

The **VCR**, **TV**, **Cable Box**, **DVD**, and **Satellite** modes will accept only each mode's specific code type.

The **AUX** mode will accept all code types, but only one at a time.

Perform Steps 1 and 2 for each piece of equipment you have. After entering each code number check the unit's operation by pressing the **Power** and/or **Channel** keys. If these keys operate your equipment, you have probably entered the correct code number for that device. If not, follow Steps 1 and 2 and enter another code, if available.

After programming the remote control and confirming its operation, enter your codes in the spaces below for easy reference.

VCR CODE	<input type="text"/>	<input type="text"/>	<input type="text"/>	SATELLITE CODE	<input type="text"/>	<input type="text"/>	<input type="text"/>
TV CODE	<input type="text"/>	<input type="text"/>	<input type="text"/>	DVD CODE	<input type="text"/>	<input type="text"/>	<input type="text"/>
CABLE BOX CODE	<input type="text"/>	<input type="text"/>	<input type="text"/>	AUX CODE	<input type="text"/>	<input type="text"/>	<input type="text"/>

OPERATING THE REMOTE CONTROL

This remote control has six operating modes. To select a mode, press and release the mode key that matches the unit you want to control, **TV**, **VCR**, **Cable Box**, **DVD Player**, or **Satellite Receiver**. (The **AUX** mode can be programmed to operate any of these devices.)

OPERATING TIPS AND TROUBLESHOOTING HINTS


- To operate each device, you must first program the remote control, then press the proper mode key. The **VCR**, **TV**, and **DVD** modes are preprogrammed with Sanyo codes.
- Some manufacturers use many different codes. If your brand of equipment has more than one code listed, try programming your remote with the different available codes until you locate the correct one for your device.
- There may be brands and models that this remote control cannot operate. Some units may operate only partially.
- The **Reset** and **Caption** keys only operate Sanyo TVs.
- Codes will remain in memory for five minutes as you replace batteries.
- Remove batteries from the remote control if it will not be used for a month or more. Weak batteries may leak and damage the remote control.
- This remote control uses an invisible (infrared) beam of light to operate the equipment. Objects between the equipment and the remote control can block the beam of light. Therefore, the remote control must be pointed directly at the equipment you want to operate.
- This remote control cannot add keys or features to your equipment.
- When switching from the **VCR** or **DVD** mode to the **TV** mode, the **VCR/DVD** specific control keys will continue to operate the last device (mode) selected. For example, when switching from **DVD** to **TV** mode, the **VCR/DVD** control keys will continue to function as **DVD** keys.
- Replace the batteries if the remote control fails to operate any of your equipment. Be sure to install batteries correctly.
- Many of the remote control keys are multi-functional. Refer to the chart on the inside of the carton for a brief description of the keys and their functions. Refer to your original operating manuals for specific feature operation.
- The keys on this remote operate functions similar to those of your original remote controls. Refer to your original instructions for specific key and features operation.

Model RMT-U340A

6-Function

Multimedia Remote Control

Owner's Manual

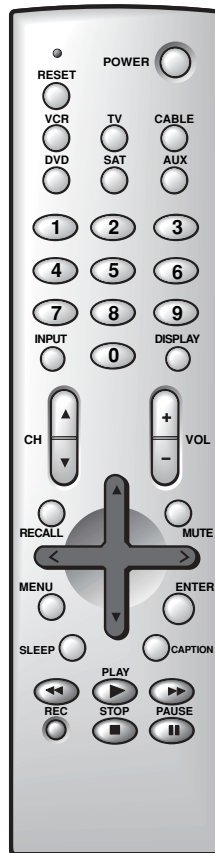

Need assistance? Visit our web site at www.sanyoctv.com.

Printed in U.S.A.: SMC, January 2005
Service Code: 610 315 0284
Part Number: 1JC6P1P0192--

90-DAY LIMITED WARRANTY

THIS LIMITED WARRANTY IS VALID ONLY ON SANYO PRODUCTS PURCHASED AND USED IN THE UNITED STATES OF AMERICA AND PUERTO RICO, HOWEVER, EXCLUDING ITS OTHER TERRITORIES AND PROTECTORATES. THIS LIMITED WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER, AND DOES NOT APPLY TO PRODUCTS USED FOR INDUSTRIAL OR COMMERCIAL PURPOSES.

FOR 90 DAYS from the date of purchase, Sanyo Manufacturing Corporation will replace any defective unit without charge to the original purchaser.

To ensure proper warranty exchange, keep the original sales receipt for evidence of purchase. Return the defective remote control along with the receipt to the retailer. The defective remote control will be exchanged for the same model, or a replacement model of equal or greater value, if necessary. Replacement model will be contingent on availability and at the sole discretion of Sanyo Manufacturing Corporation.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

OBLIGATIONS

For 90 days from the date of purchase, Sanyo Manufacturing Corporation warrants this product to be free from defects in material and workmanship under normal use and conditions. Should replacement be necessary under this warranty for any reason due to manufacturing defect or malfunction during the first 90 days from date of original purchase, Sanyo Manufacturing Corporation will provide a new remote control via exchange at the retailer at no charge.

This warranty expresses specific contractual rights; retail purchasers may have additional statutory rights which vary from state to state.



Sanyo Manufacturing Corp.
3333 Sanyo Road, Forrest City, AR 72335
(EFFECTIVE: January 1, 2002)

Television Codes

Admiral	130, 137, 138, 152, 100, 103, 105, 113, 114, 115, 118, 124, 129, 155
Aiwa	163, 100, 139
Akai	143, 101, 102, 110, 111, 122, 133
America Action	103
Anam	103
AOC	101, 102, 111, 133
Apex	159, 157
Audiovox	151, 154, 103, 105
Baysonic	103
Beaumarck	102, 114, 133
Belcar	101, 111
Bell & Howell	113, 114, 115, 129, 137
Bradford	103
Broksonic	162, 160, 152, 101, 102, 104, 111, 113, 115, 116, 133
Brokwood	101, 111
Candle	132, 136, 101, 102, 103, 111, 113, 115, 117, 121, 133, 143, 148
Carver	113, 115
Celebrity	110
Cineral	151
Citizen	101, 102, 111, 121, 133, 148
Concerto	148
Contec	103
Craig	103, 105, 117, 143
Cranivale	102, 133
Crasley	113, 115
Crown	132, 103, 111, 117, 101
Curtis Mathes	132, 137, 151, 101, 102, 105, 111, 113, 115, 118, 124, 133, 138, 143, 148
CXC	103
Daewoo	154, 150, 151, 101, 102, 107, 111, 121, 132, 133, 136, 139
Daytron	101, 111, 132, 136
Dumont	101, 114
Electroband	110
Electrohome	101, 111, 132
Emerson	104, 154, 101, 102, 103, 105, 111, 112, 116, 117, 129, 132, 133, 142, 143, 148, 150, 152
Envision	102, 133
Fisher	100
Funai	104, 103, 105
Futuretech	103
GE	126, 156, 118, 124, 125, 138, 150, 151, 132, 135, 148, 101, 103, 107, 111, 123, 143, 144
Gibraltar	101, 102, 111, 114, 133
GoldStar	132, 133, 138, 148, 101, 102, 111, 114, 155
Gradiente	121, 148
Grundy	103
Hallmark	148, 144
Harman/Kardon	113, 115
Harvard	103
Hitachi	141, 132, 135, 136, 137, 101, 102, 111, 118, 123, 124, 129, 133, 148
Infinity	113, 115
Inteq	114
JBL	102, 113, 115, 133
JCB	110
JVC	121, 123, 143
KEC	103
Kenwood	101, 102, 133, 111
Konka	158
KTV	132, 101, 102, 103, 105, 111, 133
LG	132, 133, 138, 148, 101, 102, 111, 114, 155
Logik	114, 137
Luxman	148
LXI	104, 131, 138, 148, 100, 101, 102, 111, 113, 115, 118, 124, 133
Magnasonic	131, 136, 101, 102, 111, 113, 115, 129, 133
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 111, 112, 117, 121, 123, 129
Majestic	137
Marantz	102, 113, 115, 133
Megatron	148, 144
Memorex	137, 148, 152, 100, 111, 122, 101
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 144
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
Multitech	103
NAD	131, 148, 144
NEC	101, 102, 111, 112, 133, 148
Newtech	100
Nikko	102, 133, 148
Onwa	103
Optonica	147
Orion	142, 152, 105, 116
Panasonic	139, 135, 136, 105, 107, 112, 118, 123, 124
Penny	131, 132, 138, 101, 102, 111, 118, 123, 124, 133, 143, 148, 155
Philco	113, 115, 145, 132, 133, 136, 152, 101, 102, 111, 112, 117, 121, 129
Philips	113, 115, 145, 132, 133, 101, 102, 111, 121, 129
Pilot	101, 102, 111, 133
Pioneer	135, 107, 108, 111, 112, 101
Proscan	126, 156, 118, 124, 125, 138, 102, 133, 155
Proton	132, 148, 101, 102, 111, 117, 118, 124, 133, 144
Portland	101, 111
Pulsar	101, 111, 114, 136
Quasar	139, 135, 147, 107, 112, 123
Radio Shack	100, 101, 102, 103, 105, 107, 111, 113, 115, 118, 122, 124, 130, 132, 133, 147, 148
RCA	161, 126, 156, 118, 124, 125, 138, 132, 135, 101, 102, 103, 107, 108, 111, 133, 143
Realistic	147, 148, 100, 101, 103, 111, 133
Runco	102, 114, 133
Sampo	107, 111, 135, 101
Samsung	143, 132, 148, 101, 102, 105, 111, 121, 129, 133
Samsux	111, 101
Sansui	142, 152
Sansei	151
Sanyo	100
Scimitru	101, 111
Scotch	148, 144
Scott	131, 132, 148, 101, 103, 105, 111, 113, 115, 116, 118, 124, 144
Sears	131, 138, 148, 100, 101, 102, 104, 113, 115, 124, 111, 118, 133, 155
Semivox	103
Semp	131
Sharp	130, 132, 147, 110, 111, 129, 101
Shogun	101, 111
Signature	130, 137
Simpson	149
Sony	110, 132
Soundesign	103, 148, 144
Squarview	104
SSS	101, 103, 111
Starlite	103
Supreme	110
Sylvania	104, 133, 136, 145, 101, 102, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Tandy	145
Tatung	107
Technics	135, 112, 123
Techwood	148
Teknika	132, 136, 137, 101, 102, 103, 105, 111, 113, 115, 117, 122, 133, 148
Telefunken	148
Toshiba	131, 130, 121, 143
Totevision	111, 101
TMK	148
Vector Research	102, 133
Victor	121
Vidikron	113, 115
Vidtech	141, 148, 101, 102, 111, 133
Wards	137, 145, 147, 148, 101, 102, 111, 113, 114, 115, 117, 118, 121, 124, 129, 133, 143
W. Westinghouse	151, 152, 154, 100, 103, 116
Yamaha	136, 101, 102, 112, 117, 111, 133
Zenith	114, 137, 136, 152

VCR Codes

Admiral	234, 243, 247, 224, 229, 222, 215
Adventura	228
Aiko	205
Aiwa	228, 217
Akai	209, 215
America Action	205
America High	232
Bell & Howell	201
Broksonic	234, 243, 247, 227, 204
Candle	248, 222, 204, 205, 211, 217
Canon	232
CCE	205
Cineral	205
Citizen	222, 205, 211, 217
Craig	202, 219
Craver	204
Curtis Mathes	232, 236, 238, 248, 222, 228, 209, 211, 217
Daewoo	205, 211
Daytron	205
Denon	230
Dynatech	228
Emerex	214
Emerson	251, 228, 243, 234, 236, 247, 227, 201, 204, 205, 206, 210, 211, 217
Fisher	200, 201, 202, 211
Fuji	232
Funai	228, 217
GE	222, 246, 248, 232, 236, 226, 229, 224, 212
Goldstar	253, 238, 248, 226, 206, 215, 217
Go Video	248, 249, 212, 219
Gradiente	228
Garrard	228
Harley Davidson	228
Headquarter	200
Hitachi	228, 230, 246, 226, 222, 209, 217
Hughes	230
Admiral	234, 243, 247, 224, 229, 222, 215
Amica	228
Apex	228, 217
Akai	209, 215
America Action	205
America High	232
Bell & Howell	201
Broksonic	234, 243, 247, 227, 204
Candle	248, 222, 204, 205, 211, 217
Canon	232
CCE	205
Cineral	205
Citizen	222, 205, 211, 217
Craig	202, 219
Craver	204
Curtis Mathes	232, 236, 238, 248, 222, 228, 209, 211, 217
Daewoo	205, 211
Daytron	205
Denon	230
Dynatech	228
Emerex	214
Emerson	251, 228, 243, 234, 236, 247, 227, 201, 204, 205, 206, 210, 211, 217
Fisher	200, 201, 202, 211
Fuji	232
Funai	228, 217
GE	222, 246, 248, 232, 236, 226, 229, 224, 212
Goldstar	253, 238, 248, 226, 206, 215, 217
Go Video	248, 249, 212, 219
Gradiente	228
Garrard	228
Harley Davidson	228
Headquarter	200
Hitachi	228, 230, 246, 226, 222, 209, 217
Hughes	230

VCR Codes (cont.)

JBL	237
Jensen	209
JVC	220, 238, 226, 201, 209, 230
KEC	205
Kenwood	220, 226, 238, 201, 209
Kodak	232
Lloyd's	228
Logik	219
LXI	232, 228, 230, 201, 202, 206, 211, 217
Magnasonic	205, 219
Magnavox	204, 232, 228, 211, 217, 219, 220
Marta	206
Matsushita	232
MEI	232
Memorex	227, 232, 243, 245, 224, 228, 229, 230, 200, 201, 202, 206, 215
Minolta	230
Mitsubishi	244, 224, 226, 229, 210
Motorola	232, 229, 224
MTC	228, 217, 219
Multitech	228, 217
NEC	238, 226, 201, 206, 209, 215, 217, 248
Olympus	232
Optimus	245, 248, 224, 229, 201
Orion	243, 227, 234, 205, 206, 210, 211
Panasonic	245, 232, 236, 202, 211, 219
Penny	230, 232, 248, 211, 219
Pentax	238, 230
Philco	204, 232, 243, 228, 217
Philips	204, 232, 228, 211, 217
Pioneer	242, 204, 207, 220
Proscan	222, 241, 246, 230, 236, 226
Proton	219
Pulsar	248, 205, 217
Quarter	200
Quartz	200
Quasar	245, 232, 236
Radio Shack	228, 245
RCA	250, 222, 241, 246, 248, 230, 232, 236, 224, 226, 229, 201, 207, 210
Realistic	232, 248, 224, 228, 229, 200, 201, 202, 206, 217
Samsung	248, 211, 217, 222
Samtron	248
Sansui	243, 226, 228, 209, 219, 220
Sanky	229, 224
Sanyo	200, 201, 202
Scott	234, 247, 227, 211
Sears	232, 228, 230, 200, 201, 202, 206, 211, 217
Semp	211

Gracias por comprar el Control Remoto Multimedia Sanyo. Ud. hizo una excelente selección por Funcionamiento, Confiabilidad, Precio, y Estilo.

 
Modèle RMT-U340A

6-Funciones

Control Remoto Multimedia

Manuel del Propietario

Necesita ayuda? Visite nuestro portal en Internet en www.sanyoctv.com.

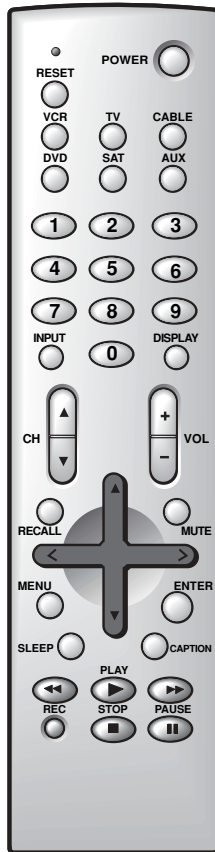

Impreso en U.S.A.: SMC, Enero 2005

Código de Service: : 610 315 0284

No. de Parte: : 1JC6P1P0192--

GARANTIA LIMITADA POR 90 DÍAS

ESTA GARANTÍA ES VÁLIDA SOLAMENTE EN PRODUCTOS SANYO COMPRADOS Y USADOS EN LOS ESTADOS UNIDOS DE AMÉRICA Y PUERTO RICO, EXCLUYENDO OTROS TERRITORIOS Y PROTECTORADOS. ESTÁ GARANTÍA LIMITADA, APLICA SOLAMENTE AL COMPRADOR ORIGINAL, Y NO APLICA A PRODUCTOS USADOS PARA PROPÓSITOS DE USO INDUSTRIAL O COMERCIAL.

POR 90 DÍAS a partir de la fecha de su compra, Sanyo Manufacturing Corporation reemplazará cualquier unidad defectuosa sin cargo al comprador original.

Para asegurar un intercambio adecuado por garantía, mantenga el recibo original de la venta como evidencia de la compra. Regrese el control remoto defectuoso junto con el recibo de compra del distribuidor. El control remoto defectuoso será cambiado por uno del mismo modelo, o un reemplazo de un modelo igual o mayor valor. El modelo de reemplazo dependerá de la disponibilidad y la voluntad de Sanyo Manufacturing Corporation.

LA SIGUIENTE GARANTIA ES EXCLUSIVA Y EN LUGAR DE OTRAS GARANTIAS DE MERCADO PARA UN PROPÓSITO PARTICULAR.

OBLIGACIONES

Por 90 días a partir de la fecha de compra, Sanyo Manufacturing Corporation, garantiza este producto de estar libre de defectos en materiales y mano de obra, bajo condiciones normales de uso. Será reemplazado de ser necesario bajo esta garantía por cualquier defecto de manufactura o de mal funcionamiento, durante los primeros 90 días a partir de la fecha original de compra, Sanyo Manufacturing Corporation proveerá de un control remoto nuevo, vía intercambio al distribuidor sin cargo.

Esta garantía expresa derechos contractuales: compradores y distribuidores pueden tener derechos que pueden variar de estado a estado.




Sanyo Manufacturing Corp.
3333 Sanyo Road, Forrest City, AR 72335

(EFFECTIVE: January 1, 2002)

ANTES DE INICIAR SU USO

Instalación de las baterías

Paso 1 – Quite la cubierta de las baterías, presionando la pestaña, e inclinando la cubierta hacia adelante.

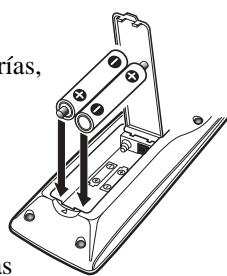

Paso 2 – Instale dos baterías tipo "AAA" como se muestra. Asegurándose que las marcas de + / - concuerden con los signos de las baterías, y con las marcas de +/- dentro de la caja del control remoto.

Nota: No mezcle baterías nuevas y usadas, o mezcle diferentes tipos de baterías al mismo tiempo.

PROGRAMANDO EL CONTROL REMOTO

Paso 1 – Localice los códigos de la marca de sus equipos en las cartas.

Paso 2 – Presione y mantenga la tecla de VCR, TV, Cable Box, DVD Player, o Satellite Receiver mientras accesa el código de tres dígitos.

Si el código fue aceptado, la luz de Actividad encenderá cinco (5) veces después que la tecla de Mode es liberada. Si se introdujo un código inválido, la luz de Actividad no encenderá. Verifique el número de código y repita el paso 2.



El modo *VCR*, *TV*, *Cable*, *DVD*, y *Satellite* aceptará únicamente códigos de tipo.

El modo *AUX* aceptará todo tipo de códigos, pero solo un código a la vez.

Ejecute los pasos 1 y 2 para cada tipo de equipo que se tenga. Después de agregar cada código, verifique la operación presionando las teclas de Encendido ó de Canales. Si esas teclas operan su equipo, entonces probablemente se ingresó el código correcto para cada aparato. Si no, siga los pasos 1 y 2 e introduzca algún otro código si esta disponible.

Después de haber programado el control remoto y confirmado su operación, escriba los códigos en los espacios que están abajo para fácil referencia.

Código TV No:	<input type="text"/>	<input type="text"/>	<input type="text"/>
Código VCR No:	<input type="text"/>	<input type="text"/>	<input type="text"/>
Código de Decodificador de Cable:	<input type="text"/>	<input type="text"/>	<input type="text"/>
Código de Reproductor de DVD:	<input type="text"/>	<input type="text"/>	<input type="text"/>
Código del Receptor de Satellite:	<input type="text"/>	<input type="text"/>	<input type="text"/>
Código del Aparato Auxiliar:	<input type="text"/>	<input type="text"/>	<input type="text"/>

Anote el aparato que corresponde Aquí.

OPERACIÓN DEL CONTROL REMOTO

Este control remoto tiene seis modos de operación. Para seleccionar un modo, presione y libere la tecla de modo (mode) que indique el aparato que se quiera controlar, TV, VCR, Decodificador de Cable, Reproductor de DVD o Receptor Via Satellite.

TIPS DE OPERACIÓN Y ANALISIS DE FALLAS

- Para operar cada equipo, Ud. debe programar primero el control remoto; y posteriormente presionar la tecla adecuada al modo seleccionado.
- Algunos fabricantes usan muchos códigos diferentes. Si la marca de su equipo tiene mas de un código listado, trate de programar su control remoto con los diferentes códigos disponibles hasta que localice el código correcto para su aparato.
- Pueden existir marcas y modelos donde este control remoto no funciona. Algunas unidades pueden operar solo parcialmente.
- Las teclas de Caption y Reset solo operan en TV's Sanyo.
- Los números de los códigos se mantendrán en memoria por cinco minutos cuando Ud. reemplace las baterías.
- Retirez les piles si vous comptez ne pas utiliser la télécommande pendant un mois ou plus. Des piles faibles peuvent fuir et causer des dommages.
- Este control remoto usa un haz infrarrojo para operar el equipo. Objetos entre el equipo y el control remoto pueden obstruir este haz. Por lo tanto, el control remoto debe de apuntarse directamente al equipo que se quiera operar.

Carta de Códigos para TV

Admiral	130, 137, 138, 152, 100, 103, 105, 113, 114, 115, 118, 124, 129, 155
Aiwa	163, 100, 139
Akai	143, 101, 102, 110, 111, 122, 133
America Action	103
Anam	103
AOC	101, 102, 111, 133
Apex	159, 157
Audiovox	151, 154, 103, 105
Baysonic	103
Beaumarck	102, 114, 133
Belcar	101, 111
Bell & Howell	113, 114, 115, 129, 137
Bradford	103
Broksonic	162, 160, 152, 101, 102, 104, 111, 113, 115, 116, 133
Brokwood	101, 111
Candle	132, 136, 101, 102, 103, 111, 113, 115, 117, 121, 133, 143, 148
Carver	113, 115
Celebrity	110
Cineral	151
Citizen	101, 102, 111, 121, 133, 148
Concerto	148
Contec	103
Craig	103, 105, 117, 143
Cranvale	102, 133
Crosley	113, 115
Crown	132, 103, 111, 117, 101
Curtis Mathes	132, 137, 151, 101, 102, 105, 111, 113, 115, 118, 124, 133, 138, 143, 148
CXC	103
Daewoo	154, 150, 151, 101, 102, 107, 111, 121, 132, 133, 136, 139
Daytron	101, 111, 132, 136
Dumont	101, 114
Electroband	110
Electrohome	101, 111, 132
Emerson	104, 154, 101, 102, 103, 105, 111, 112, 116, 117, 129, 132, 133, 142, 143, 148, 150, 152
Envision	102, 133
Fisher	100
Funai	104, 103, 105
Futuretech	103
GE	126, 156, 118, 124, 125, 138, 150, 151, 132, 135, 148, 101, 103, 107, 111, 123, 143, 144
Gibraltar	101, 102, 111, 114, 133
GoldStar	132, 133, 138, 148, 101, 102, 111, 114, 155
Gradiente	121, 148
Grundy	103
Hallmark	148, 144
Harman/Kardon	113, 115
Harvard	103
Hitachi	141, 132, 135, 136, 137, 101, 102, 111, 118, 123, 124, 129, 133, 148
Infinity	113, 115
Inteq	114
JBL	102, 113, 115, 133
JCB	110
JVC	121, 123, 143
KEC	103
Kenwood	101, 102, 133, 111
Konka	158
KTV	132, 101, 102, 103, 105, 111, 133
LG	132, 133, 138, 148, 101, 102, 111, 114, 155
Logik	114, 137
Luxman	148
LXI	104, 131, 138, 148, 100, 101, 102, 111, 113, 115, 118, 124, 133
Magnasonic	131, 136, 101, 102, 111, 113, 115, 129, 133
Magnavox	113, 115, 145, 149, 132, 133, 135, 101, 102, 104, 111, 112, 117, 121, 123, 129
Majestic	137
Marantz	102, 113, 115, 133
Megatron	148, 144
Memorex	137, 148, 152, 100, 111, 122, 101
MGA	148, 101, 102, 111, 122, 133, 144
Midland	101, 111, 114, 118, 124
Mitsubishi	122, 132, 133, 148, 101, 102, 111, 144
MTC	136, 101, 102, 111, 113, 115, 133, 143, 148
Multitech	103
NAD	131, 148, 144
NEC	101, 102, 111, 112, 133, 148
Newtech	100
Nikko	102, 133, 148
Onwa	103
Optonica	147
Orion	142, 152, 105, 116
Panasonic	139, 135, 136, 105, 107, 112, 118, 123, 124
Penny	131, 132, 138, 101, 102, 111, 118, 123, 124, 133, 143, 148, 155
Philco	113, 115, 145, 132, 133, 136, 152, 101, 102, 111, 112, 117, 121, 129
Philips	113, 115, 145, 132, 133, 101, 102, 111, 121, 129
Pilot	101, 102, 111, 133
Pioneer	135, 107, 108, 111, 112, 101
Proscan	126, 156, 118, 124, 125, 138, 102, 133, 155
Proton	132, 148, 101, 102, 111, 117, 118, 124, 133, 144
Portland	101, 111
Pulsar	101, 111, 114, 136
Quasar	139, 135, 147, 107, 112, 123
Radio Shack	100, 101, 102, 103, 105, 107, 111, 113, 115, 118, 122, 124, 130, 132, 133, 147, 148
RCA	161, 126, 156, 118, 124, 125, 138, 132, 135, 101, 102, 103, 107, 108, 111, 133, 143
Realistic	147, 148, 100, 101, 103, 111, 133
Runco	102, 114, 133
Sampo	107, 111, 135, 101
Samsung	143, 132, 148, 101, 102, 105, 111, 121, 129, 133
Samsux	111, 101
Sansui	142, 152
Sansei	151
Sanyo	100
Scimitro	101, 111
Scotch	148, 144
Scott	131, 132, 148, 101, 103, 105, 111, 113, 115, 116, 118, 124, 144
Sears	131, 138, 148, 100, 101, 102, 104, 113, 115, 124, 111, 118, 133, 155
Semivox	103
Semp	131
Sharp	130, 132, 147, 110, 111, 129, 101
Shogun	101, 111
Signature	130, 137
Simpson	149
Sony	110, 132
Soundesign	103, 148, 144
Squarview	104
SSS	101, 103, 111
Siarlite	103
Supreme	110
Sylvania	104, 133, 136, 145, 101, 102, 111, 112, 113, 115, 117, 121
Symphonic	104, 105
Tandy	145
Tatung	107
Technics	135, 112, 123
Techwood	148
Teknika	132, 136, 137, 101, 102, 103, 105, 111, 113, 115, 117, 122, 133, 148
Telefunken	148
Toshiba	131, 130, 121, 143
Totevision	111, 101
TMK	148
Vector Research	102, 133
Victor	121
Vidikron	113, 115
Vidtech	141, 148, 101, 102, 111, 133
Wards	137, 145, 147, 148, 101, 102, 111, 113, 114, 115, 117, 118, 121, 124, 129, 133, 143
W. Westinghouse	151, 152, 154, 100, 103, 116
Yamaha	136, 101, 102, 112, 117, 111, 133
Zenith	114, 137, 136, 152

Carta de Códigos para VCR

Admiral	234, 243, 247, 224, 229, 222, 215
Adventura	228
Aiko	229, 224
Aiwa	228, 217
Akai	209, 215
America Action	205
America High	232
Bell&Howell	201
Broksonic	234, 243, 247, 227, 204
Candle	248, 222, 204, 205, 211, 217
Canon	232

Carta de Códigos para VCR (continua)

CCE	205
Cineral	205
Citizen	222, 205, 211, 217
Craig	202, 219
Craver	204
Curtis Mathes	232, 236, 238, 248, 222, 228, 209, 211, 217
Daewoo	205, 211
Daytron	205
Denon	230
Dynatech	228
Emerex	214
Emerson	251, 228, 243, 234, 236, 247, 227, 201, 204, 205, 206, 210, 211, 217
Fisher	200, 201, 202, 211
Fuji	232
Funai	228, 217
GE	222, 246, 248, 232, 236, 226, 229, 224, 212
Goldstar	253, 238, 248, 226, 206, 215, 217
Go Video	248, 249, 212, 219
Gradiente	228
Garrard	228
Harley Davidson	228
Headquarter	200
Hitachi	228, 230, 246, 226, 222, 209, 217
Hughes	230
JBL	237
Jensen	209
JVC	220, 238, 226, 201, 209, 230
KEC	205
Kenwood	220, 226, 238, 201, 209
Kodak	232
Lloyd's	228
Logik	219
LXI	232, 228, 230, 201, 202, 206, 211, 217
Magnasonic	205, 219
Magnavox	204, 232, 228, 211, 217, 219, 220
Marta	206
Matsushita	232
MEI	232
Memorex	227, 232, 243, 245, 224, 228, 229, 230, 200, 201, 202, 206, 215
Minalta	230
Mitsubishi	244, 224, 226, 229, 210
Motorola	232, 229, 224
MTC	228, 217, 219
Multitech	228, 217
NEC	238, 226, 201, 206, 209, 215, 217, 248
Olympus	232
Optimus	245, 248, 224, 229, 201
Orion	243, 227, 234, 205, 206, 210, 211
Panasonic	245, 232, 236, 202, 211, 219
Penny	230, 232, 248, 211, 219
Pentax	238, 230
Philco	204, 232, 243, 228, 217
Philips	204, 232, 228, 211, 217
Pioneer	242, 204, 207, 220
Proscan	222, 241, 246, 230, 236, 226
Proton	219
Pulsar	248, 205, 217
Quarter	200
Quartz	200
Quasar	245, 232, 236
Radio Shack	228, 245
RCA	250, 222, 241, 246, 248, 230, 232, 236, 224, 226, 229, 201, 207, 210
Realistic	232, 248, 224, 228, 229, 200, 201, 202, 206, 217
Samsung	248, 211, 217, 222
Samtron	248
Sansui	243, 226, 228, 209, 219, 220
Sanky	229, 224
Sanyo	200, 201, 202
Scott	234, 247, 227, 211
Sears	232, 228, 230, 200, 201, 202, 206, 211, 217
Semp	211
Shintom	219, 227
Sharp	252, 229, 224
Signature	228, 217, 229, 224, 200
Sony	214, 218, 232, 237, 226, 228
STS	230
Sylvania	228, 232, 244, 204, 217
Symphonic	228, 217, 226, 202
Yamaha	238, 226
Tatung	226, 209
Teac	228, 209, 214, 217
Technics	232
Teknika	232, 228, 217
Toshiba	211, 244, 202, 205, 210
Tomas	228, 217
Vector	211
Video Concept	211
Wards	230, 232, 248, 224, 228, 229, 202, 204, 211, 217
W. Westinghouse	243, 205
XR-1000	228, 232
Zenith	206, 215, 237, 243, 220, 228, 222

Códigos para Decodificadores de Cable

ABC	312, 304, 306, 309, 313, 314, 318, 321, 324, 329
AIM	321
Archer	334

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>