

FUNCTION

1. **Time Mode:**
Displays Time, date(from year 2000 to year 2099),weeks,temperature;12-hours or 24-hours shift.
2. **daily Alarm Mode and snooze Mode:**
During the alarm mode, alarm time and melodies (total 8 melodies) can be selected. At the same time, snooze function can be set
3. **Birthday alarm mode:**
Birthday time and date can be set.
4. **Timer Mode:**
Countdown timer can be set. Maximum setting: 23-hour, 59-minute, 59-second
5. **Temperature:**
Indicate the temperature automatically. Under normal mode, press SET key to shift Centigrade/Fahrenheit.
6. **Music appreciation mode:**
Under normal mode, press DOWN key to enter MUSIC APPRECIATION setting mode
7. **Color Light mode:**
Press Light key will turn On/Off light circular changing.

OPERATION INSTRUCTION

- ★ To enter the normal display, you can install 3pcs AAA new batteries. One melody will be sounded.
- ★ Under normal time display, press MODE key to enter setting mode. The sequence as follows:
↳ Normal mode → 12Hr/24Hr shift → Alarm mode → Birthday alarm mode → Timer mode →
- ★ Under normal mode, when the icon of alarm is on, press UP key to turn on or turn off the icon of snooze.
- ★ Under normal mode, press Down key to turn on or turn off Birthday alarm mode ,
- ★ Under normal mode, press SET key to make a Centigrade or Fahrenheit transform.
- ★ Under normal mode, press SET key to make a Centigrade or Fahrenheit transform.
- ★ Under 12Hr/24Hr mode. Press UP/DOWN key make 12hours or 24 hours transform.
- ★ Under alarm mode ,with alarm icon, press SET key to enter time setting and melody selection complying with UP/DOWN keys, international classic melodies and 2 different BiBi for selection; Press Set key to stop the alarm clock.
- ★ Under birthday alarm mode ,press SET key to adjust the birthday date complying with UP/DOWN keys, press again to stop it.
- ★ Under timer mode, with countdown timer icon, press SET key to adjust the counter timer complying with UP/DOWN keys.
- ★ Under above modes ,it will display normal mode after setting for one minute.


1. TIME SETTING

Under normal time display, press MODE key to shift 12Hr/24Hr;press SET key to enter setting mode, press UP/DOWN KEYS to adjust setting.

Sequence as follows:

↳ Hour → minute → year → months → date → exit →

- ◆ Range of setting: Year is 2000--2099, month is 1-12, day is 1-31, hour is 1-12 or 0-23, and minute is 0-59.
 - ◆ After hour or minute setting, second will become zero automatically.
 - ◆ After date setting, date will transfer automatically ally from Mon to SUN
2. Alarm Setting:
Under alarm mode, press SET key to enter alarm setting with the sequence as follows, hour, minute, and press UP/DOWN to adjust setting:
- Hour → minute → music → escape → turn off →
- ◆ Under alarm mode without snooze, the clock will alarm for one minute. Press any key to stop
 - ◆ Under snooze mode ,it will alarm for one minute every three minutes for 4 times.
 - ◆ When it alarms under the snooze mode, press any key to stop. But the icon will still twinkle till it alarms for four times or be canceled.
 - ◆ When it doesn't alarm under the snooze mode, press MODE key to cancel snooze function(the icon will not twinkle);But press UP key stop snooze icon
 - ◆ Snooze function can work only when alarming is on.
3. Birthday alarm Setting:
Under birthday alarm mode, press SET key to enter setting mode, press UP/DOWN to adjust setting, sequence as follows:
- Hour → minute → year → month → day → exit → close →
- ◆ It will alarm for 5 minutes for best wishes as soon as it reach the time you set.
4. Timer Setting:
Under timer mode, press SET key to enter setting with the sequence ad follows: press UP/DOWN to adjust the setting
- Hour → minute → countdown → stop →
- ◆ Setting ranges: hours from 00:00 to 23:00, minutes 0 to 59.
 - ◆ after setting, the current second begin to descend, when it reach 0 second, the minute to descend, and when it reach 0, the hour begin to descend in the same way.
 - ◆ When it reach 00:00 will alarm for 1 minute (if just under the timer mode, the 00:00:00 will twinkle.)
5. Color Changing Setting
Press "light" key will send out the light of three colors with circular changing. Press one time will turn off color light.
6. Power Suply.
LED power supply by 3 pcs AAA batteries or DC4.5V adapter (optional). LCD power supply by 2 pcs AAA batteries.

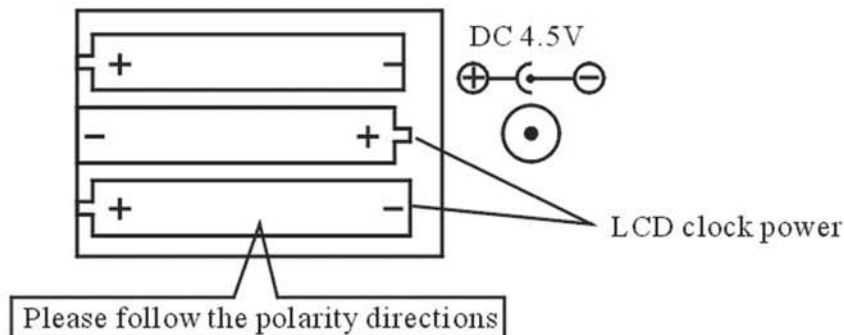

Battery Instructions

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>