 
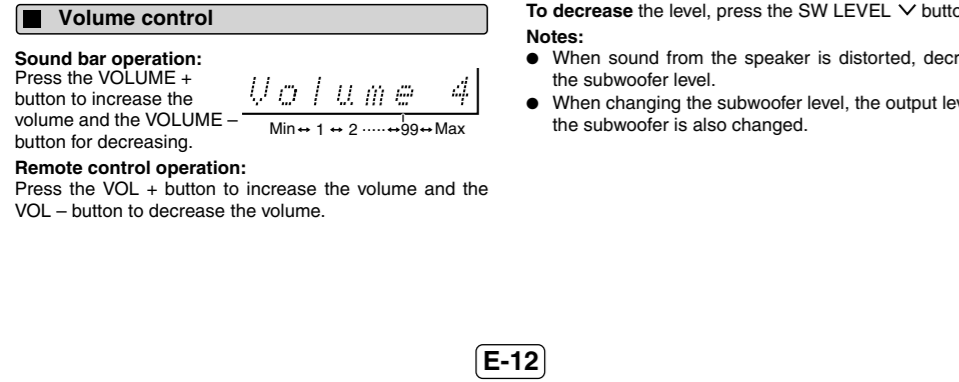 
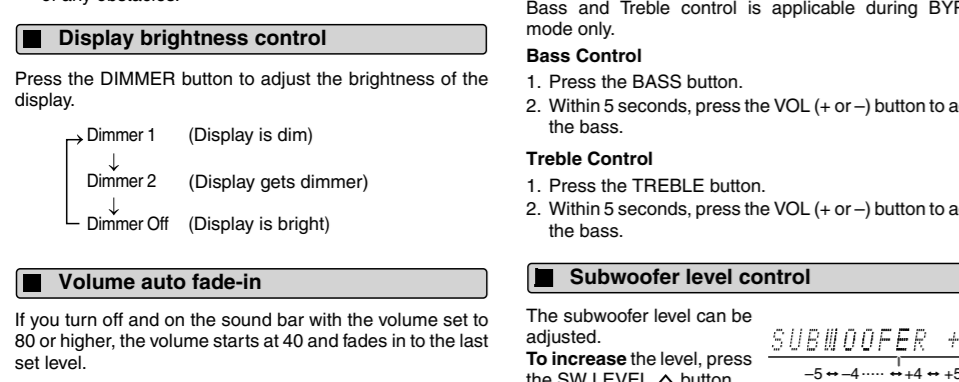 
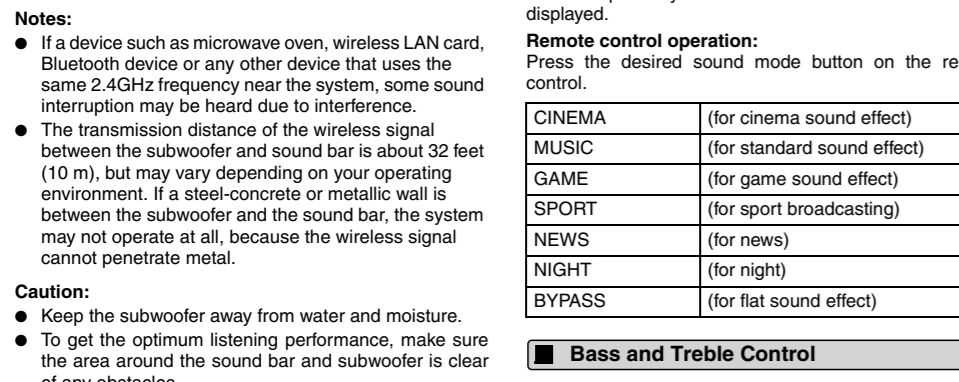 
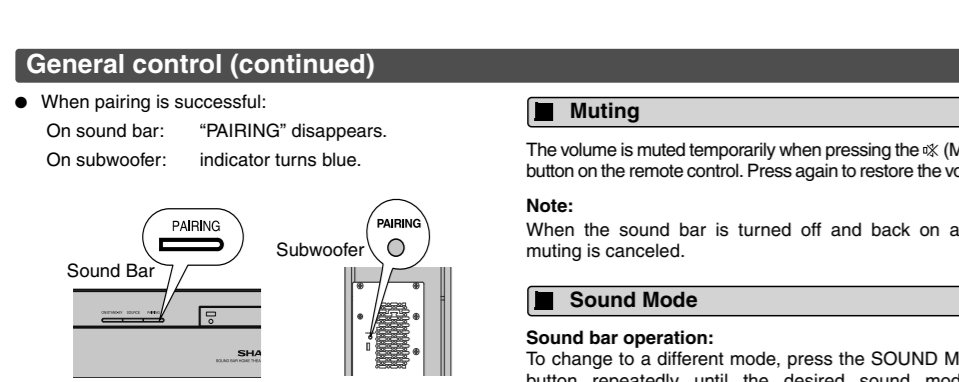 
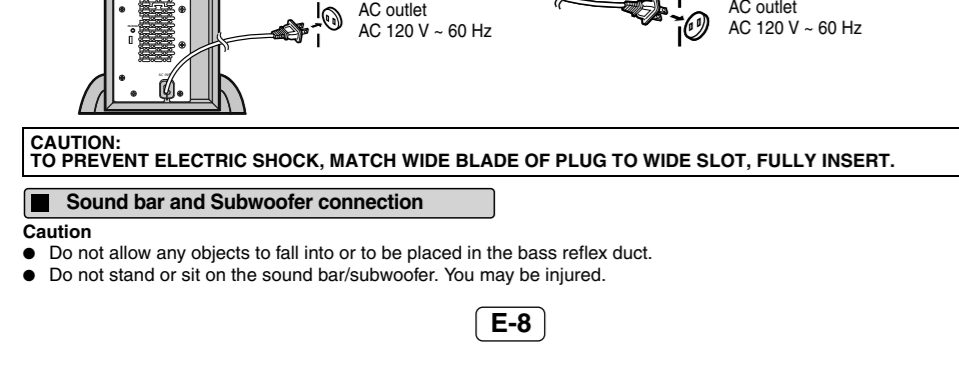 
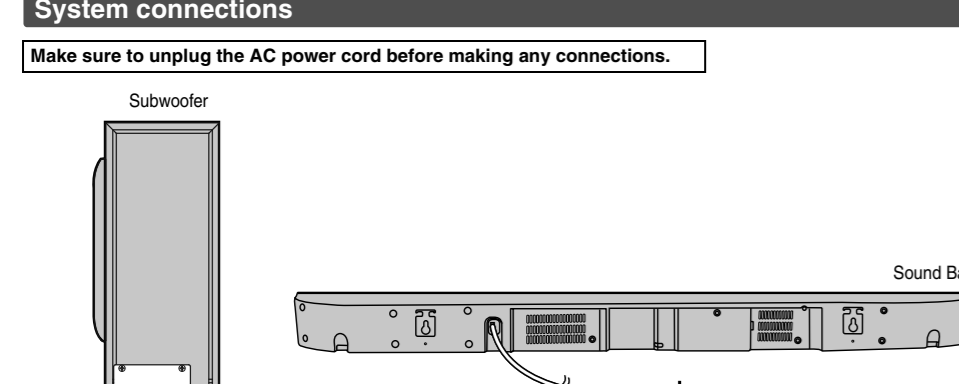 
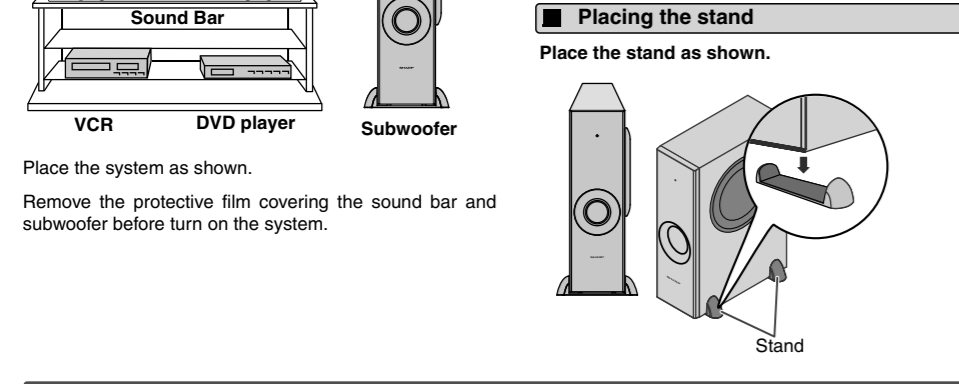 
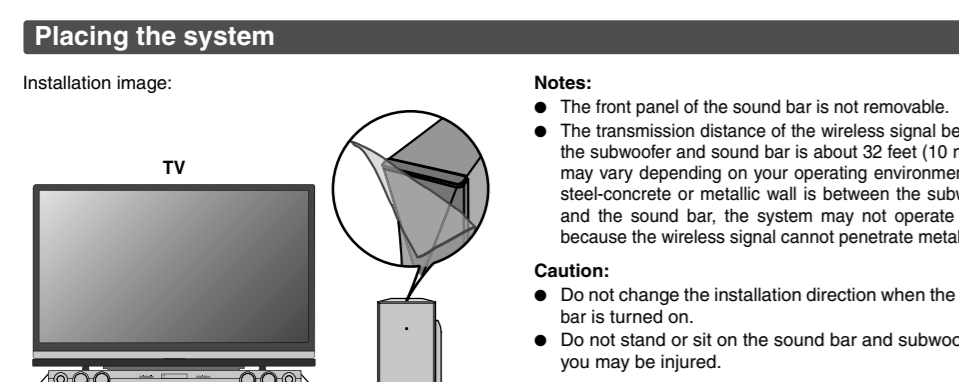 


Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in getting your SHARP product.

HT-SB40 sound bar Home Theater system consisting of HT-SB40 (sound bar system) and CP-SW40 (active subwoofer system).

- Accessories: Remote Control (TNSZB42AW3), Subwoofer Stand x 2 (GTJAU02AW1), Audio Cable x 1 (OCNWH02AW2), HDMI Cable x 1 (OCNWH02AW2), Pattern Paper (TCAUHD02AW2), Quick Start Guide (TNSZB42AW2).

Precautions: Please ensure that the equipment is positioned in a well-ventilated area and ensure that there is at least 4" (10 cm) of free space along the sides, top and back of the equipment.









 



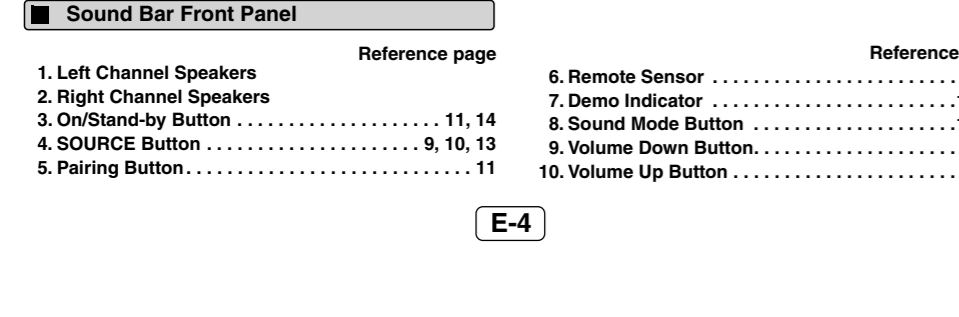


Special Notes: CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER REPAIR TO QUALIFIED SERVICE PERSONNEL.

FCR Radiation Exposure Statement: This device complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. It must not be co-located or operating in conjunction with any other equipment.

ENERGY STAR Program Information: Products that have earned the ENERGY STAR are designed to help the environment through superior energy efficiency.














Note to CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820 of the National Electrical Code which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building.

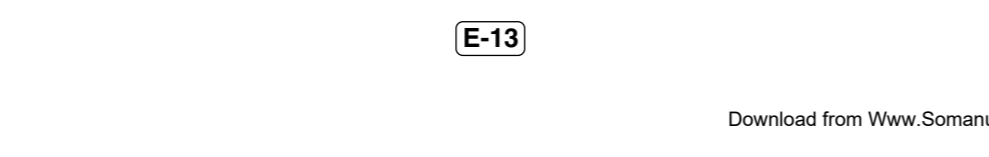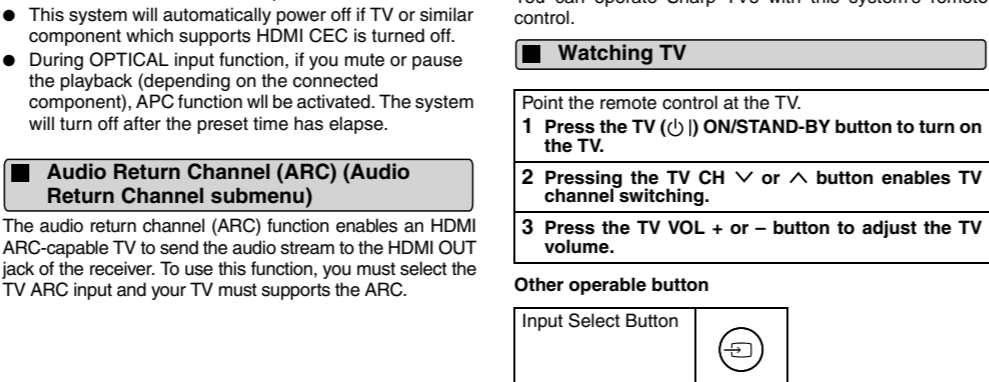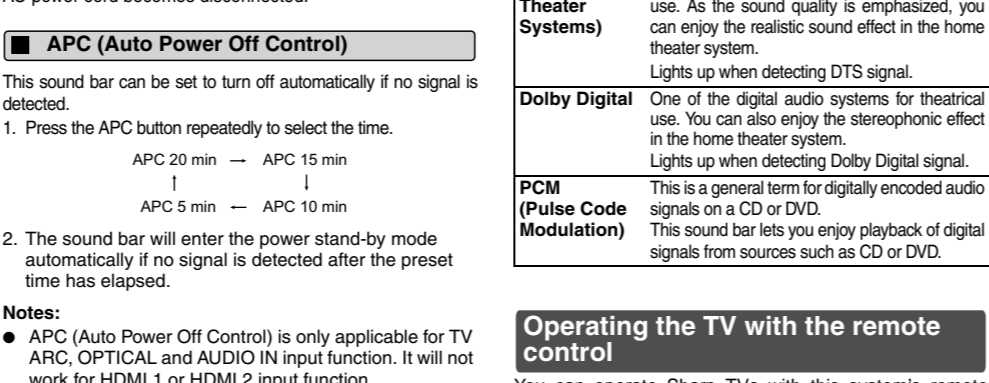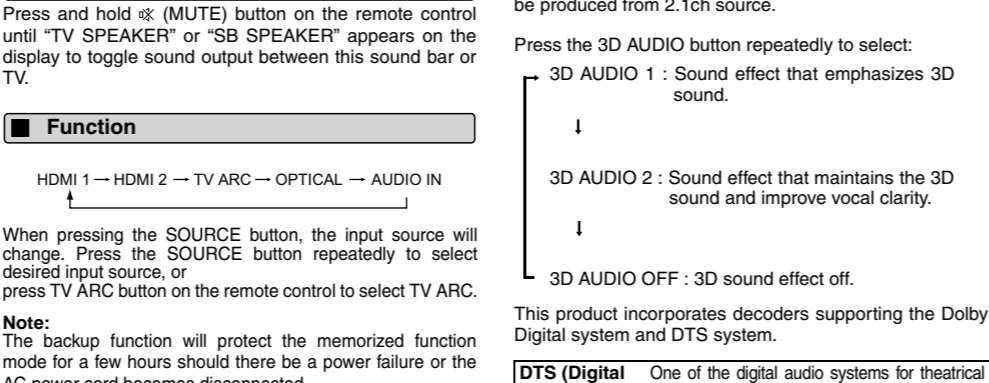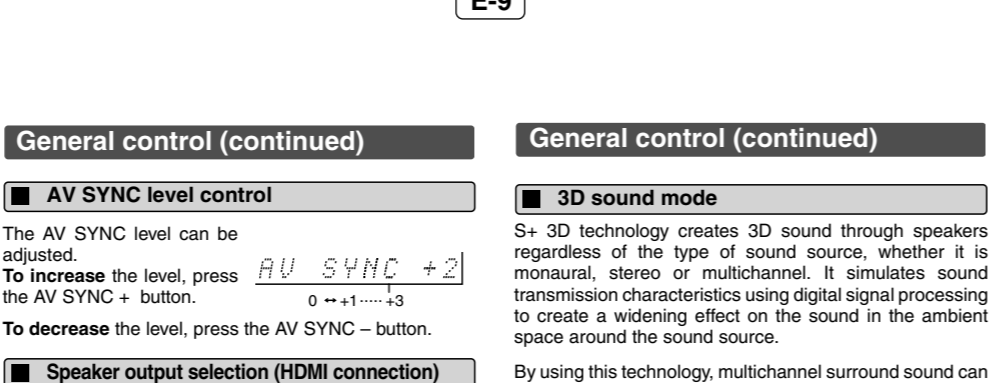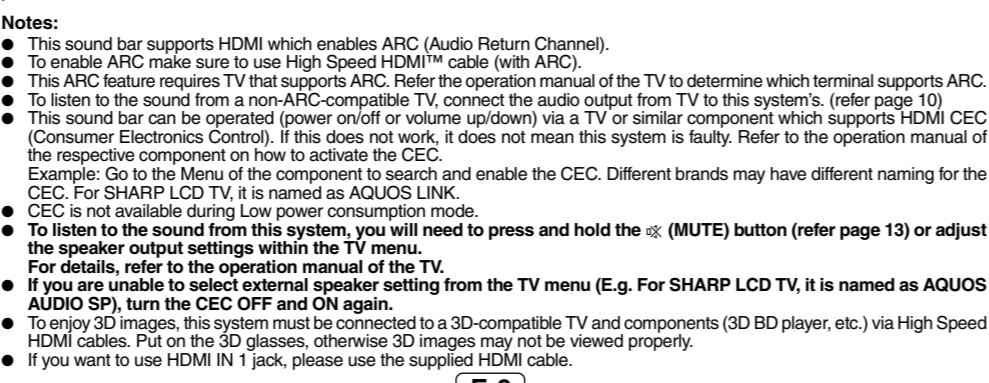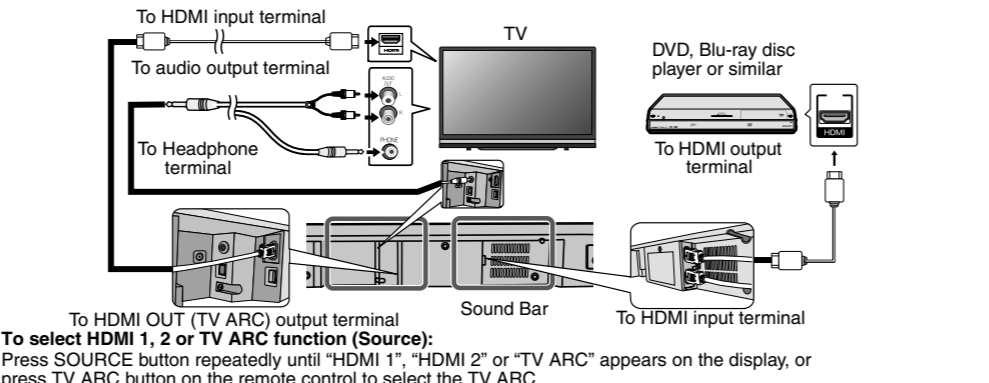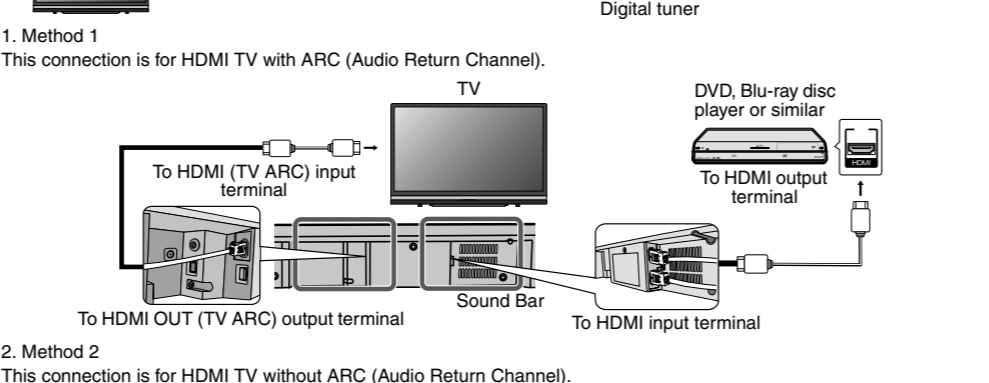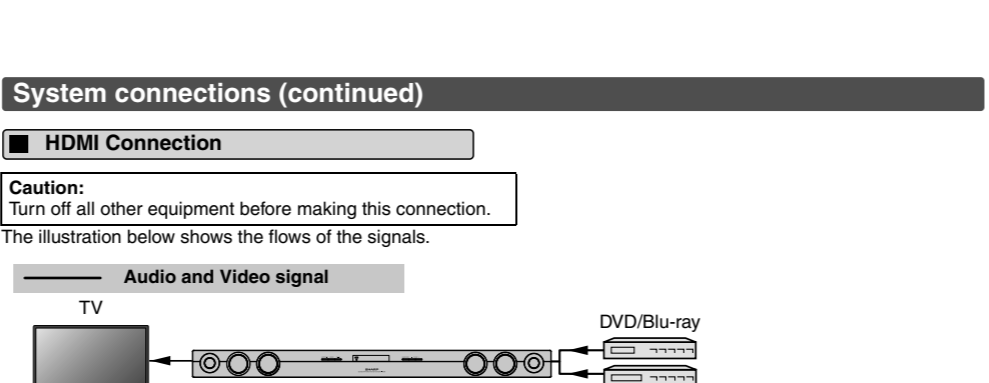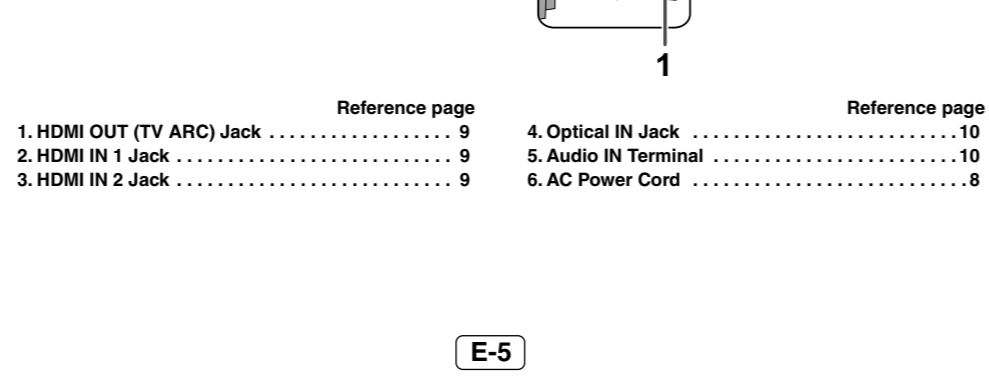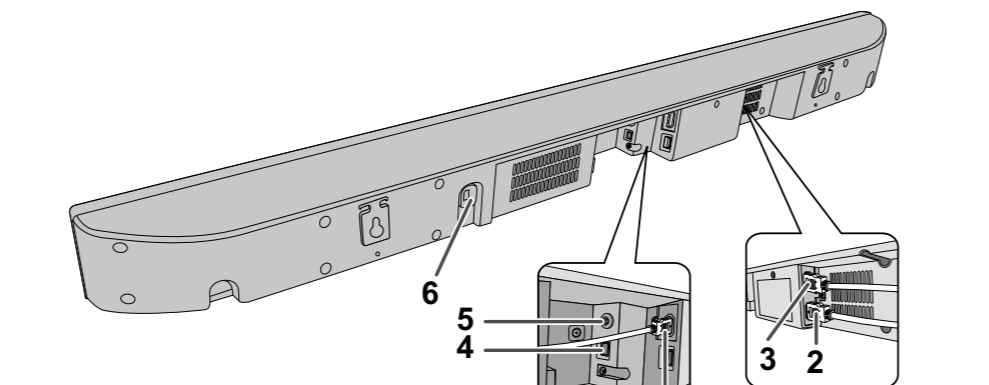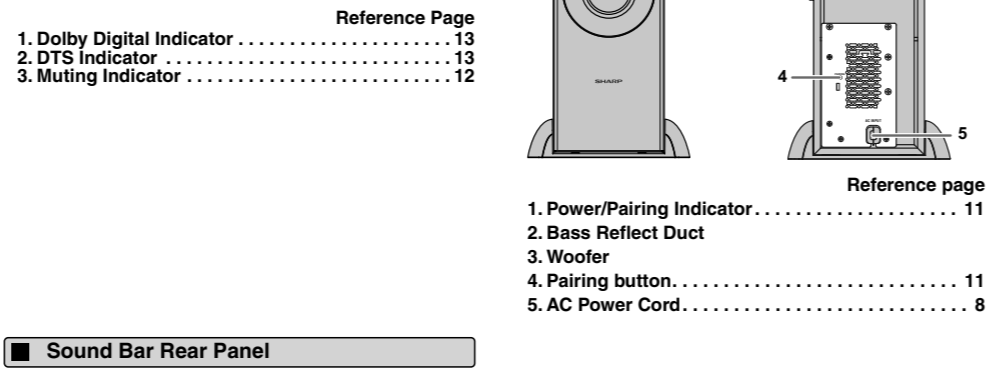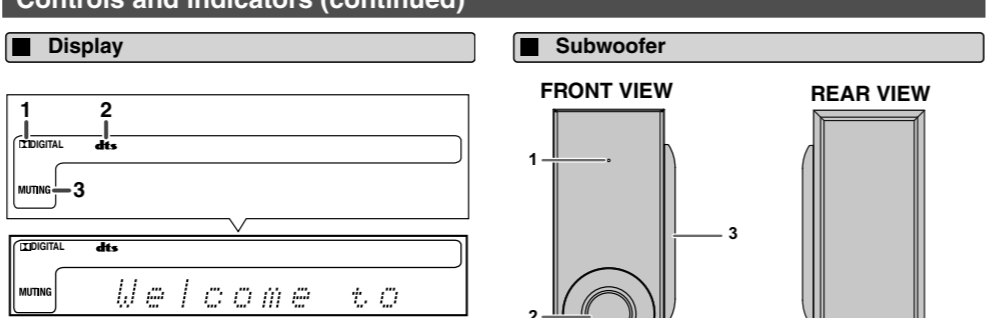

Important Safety Instructions: Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled.

Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

  Remote Control: 1. Remote Control Transmitter, 2. TV ARC Button, 3. Music (Sound Mode) Button, 4. Cinema (Sound Mode) Button, 5. Sport (Sound Mode) Button, 6. APB Button, 7. TV Operation Button, 8. BYPASS Button, 9. Bass Button, 10. SYNC Down Button, 11. Volume Up Button, 12. Subwoofer Level Up Button, 13. Demo Button, 14. On/Stand-by Button, 15. Game (Sound Mode) Button, 16. Night (Sound Mode) Button, 17. Dimmer Button, 18. Demo Button, 19. MUTE/SPEAKER OUTPUT Selection Button, 20. TV ARC Button, 21. Music (Sound Mode) Button, 22. Cinema (Sound Mode) Button, 23. Sport (Sound Mode) Button, 24. APB Button, 25. TV Operation Button.

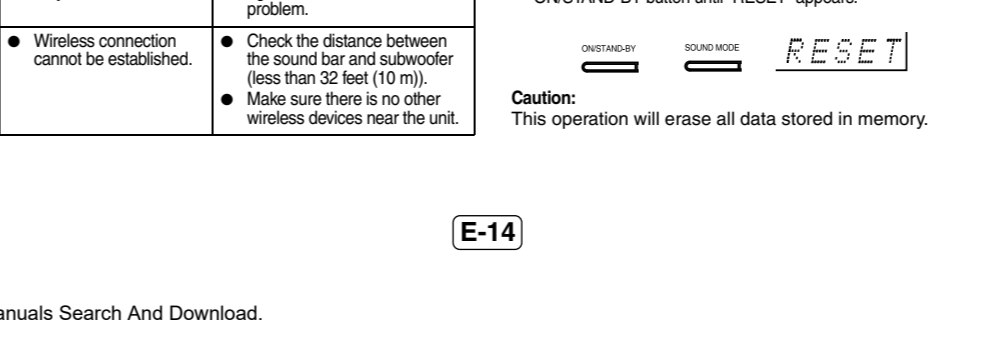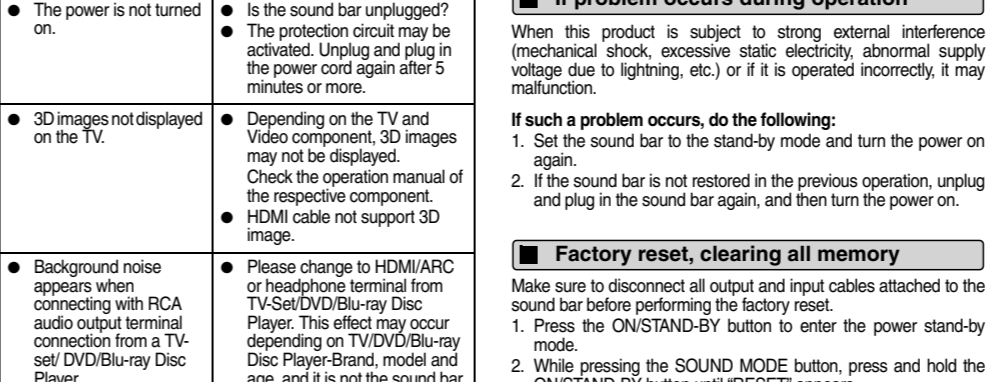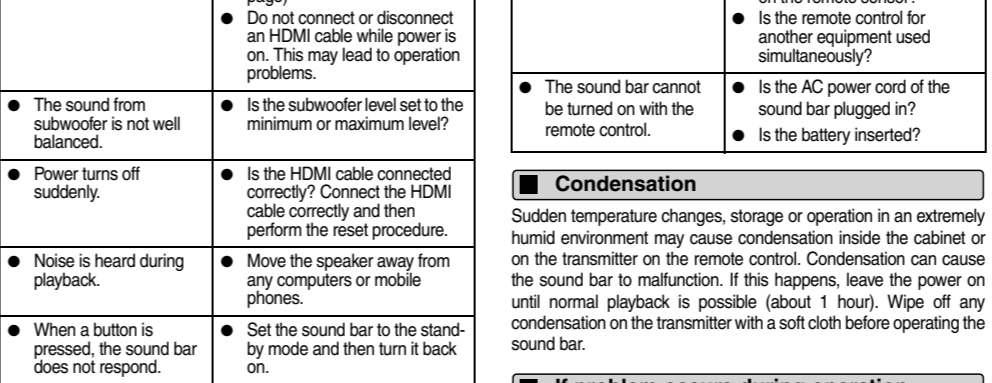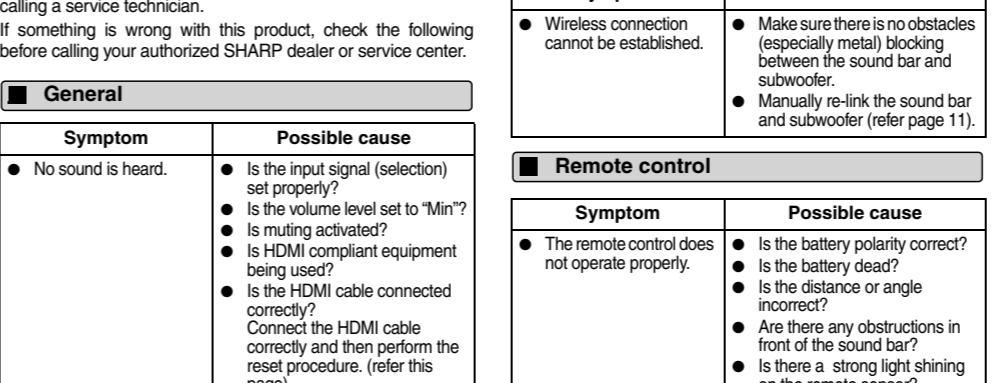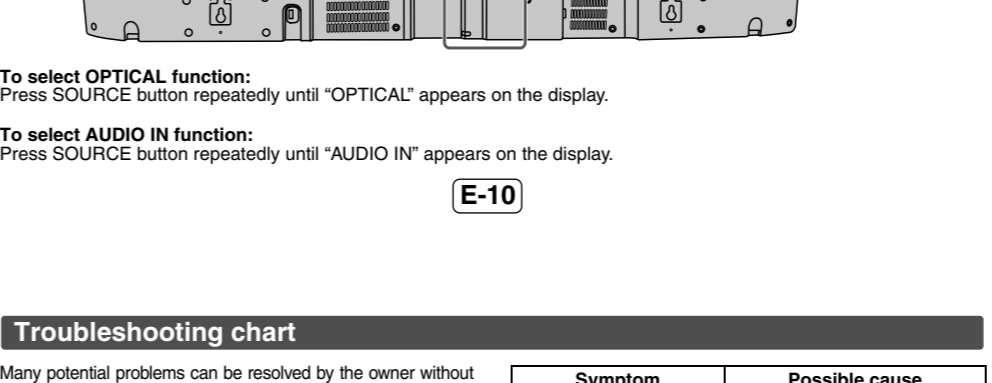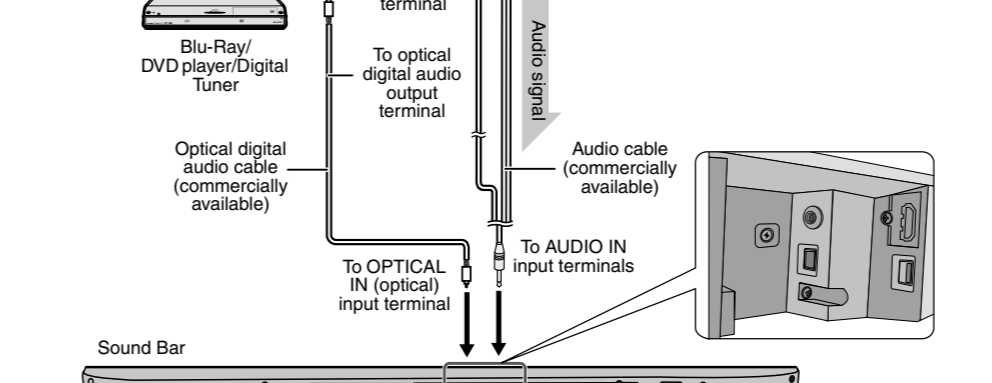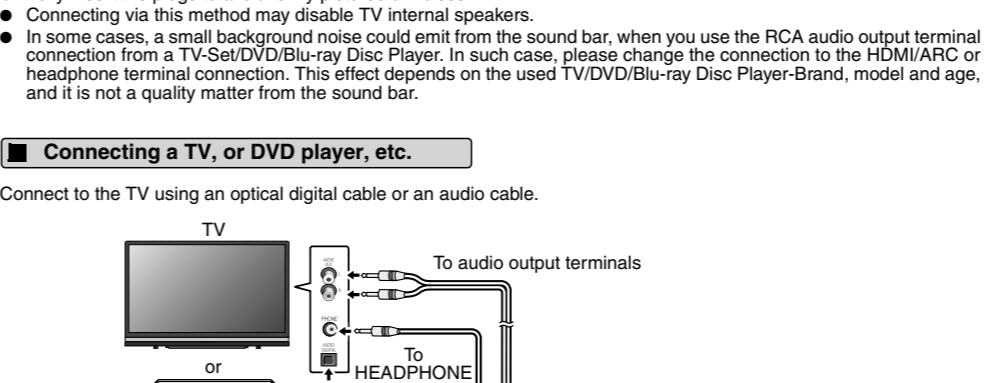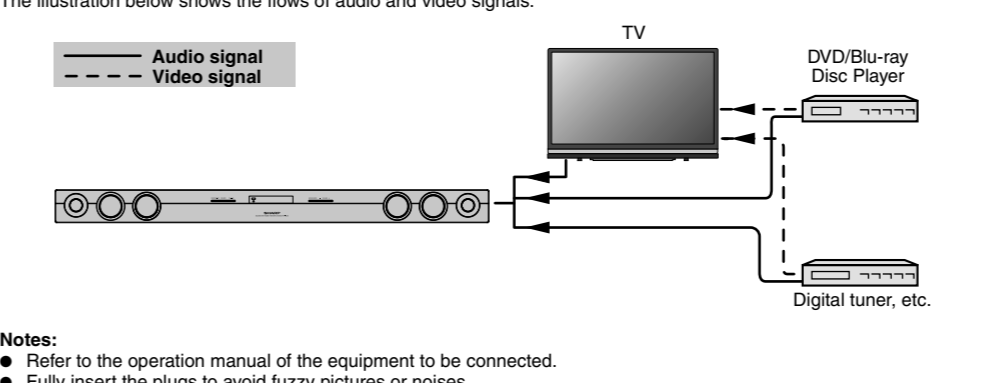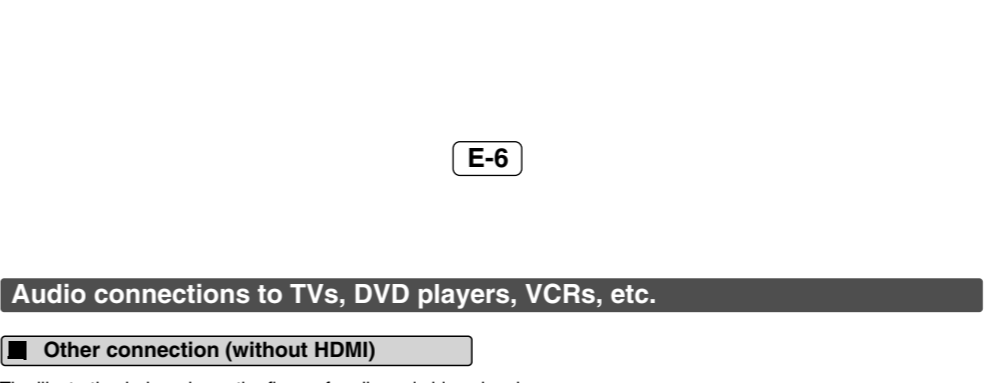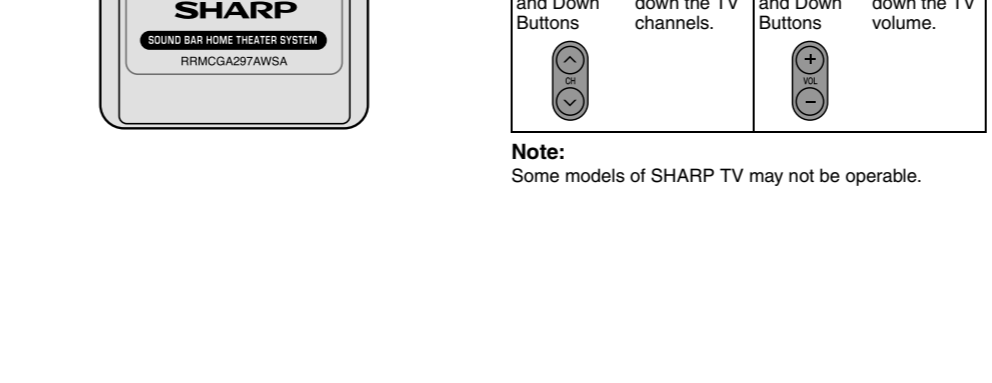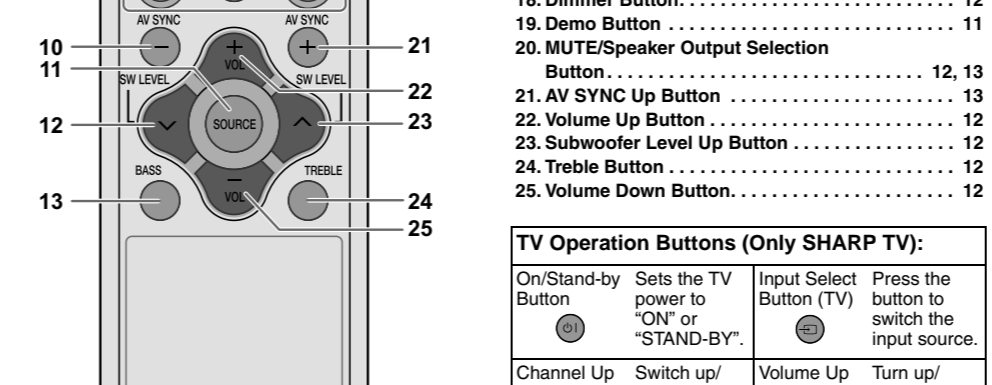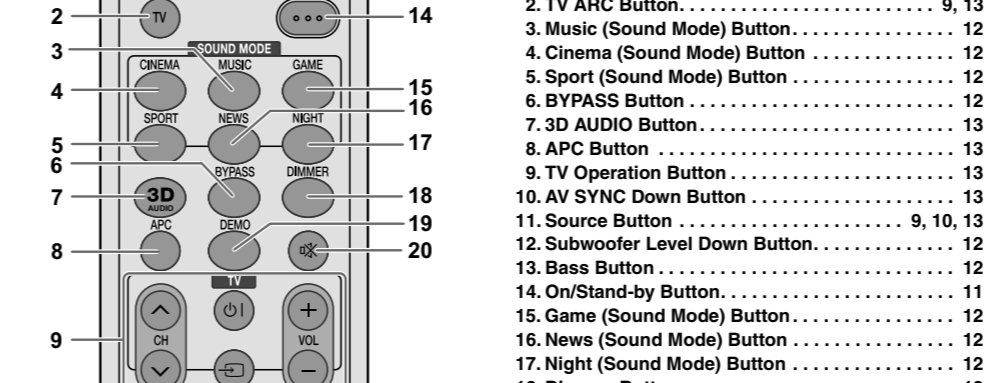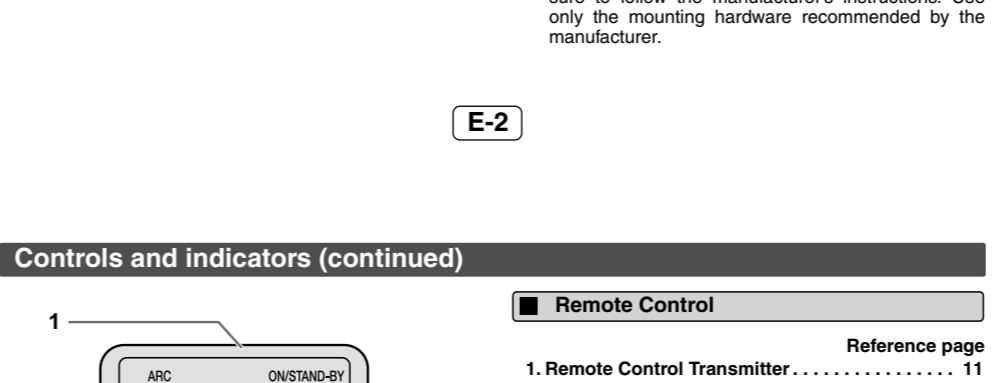

For U.S. customer only CONSUMER LIMITED WARRANTY: SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this SHARP brand product (the Product), when shipped in its original container, will be free from defects in workmanship and materials.

Model Specification: Your Product Model Number & Description: HT-SB40 Sound Bar Home Theater System (See also for this information available when you need service for your Product).

Sound bar preparation: To mount the sound bar on the wall, use a level to ensure the sound bar is mounted horizontally.

Installing the sound bar: Tighten the screws and remove the paper. Hook the speaker on the screw heads and make sure it is properly secured.

Falling prevention: Safety wires (not supplied) are useful to prevent the sound bar from falling off the table.

Wall mount set up: Safety screw (not supplied) and safety wires (not supplied) are used to secure the sound bar to the wall.

Desktop set up: Safety wires (not supplied) are used to prevent the sound bar from falling off the table.

Remote control: Battery installation: Use 1 "AA" size battery (UM-SUM-3, RP, HP-7 or similar). Batteries are not included.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.

General control: Turn the power on: Press the ON/STAND-BY button on the sound bar or the remote control.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>