 


R-959(SL)M-AA QUICK START GUIDE

⚠ WARNING:

Before starting, read carefully all the warnings given in the full operation manual for the safe use of your oven.

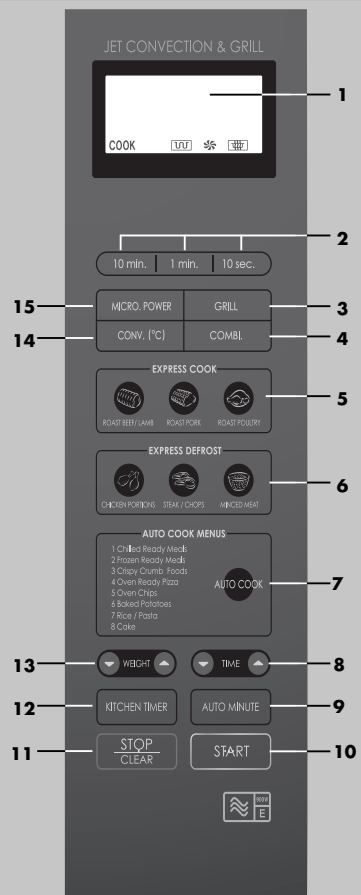

- | | |
|-------------------------|-----------------------|
| 1. DIGITAL DISPLAY | 9. AUTO MINUTE key |
| 2. TIME keys | 10. START key |
| 3. GRILL key | 11. STOP/CLEAR key |
| 4. COMBI. key | 12. KITCHEN TIMER key |
| 5. EXPRESS COOK keys | 13. WEIGHT keys |
| 6. EXPRESS DEFROST keys | 14. CONV. (°C) key |
| 7. AUTO COOK key | 15. MICRO. POWER key |
| 8. LESS/MORE keys | |

For use by vulnerable consumers:

 
Response sounds of the start key and the stop key are different from the others.
Three raised dots are on the start key and a raised dot is on the stop key.

SHARP
TINS-A855WRRZ-K31

1


INSTALLATION

- Remove all packaging and accessories from the oven, including the feature sticker if fixed to the outside of the door and the wrapping shown in the diagram. **DO NOT REMOVE THE WAVEGUIDE COVER**, this can be found on the right hand side wall, inside your microwave.

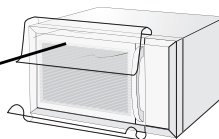


- Ensure there is at least 13cm of free space above the oven.

 - Ensure the turntable parts are assembled as shown in the diagrams opposite.

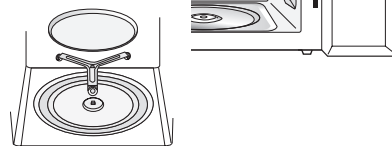

Other Accessories

 The racks can be used with "Grill", "Convection" and "Dual Cooking" modes.



The shelves can only be used with "Convection" mode.



GETTING STARTED

2

Plug in the oven. Nothing will appear in the display at this time.

ENERGY

SAVE
MODE

Open the door. The oven lamp will light while the door is open. The display will flash the message shown opposite.

Close the door. The display will show ".0".

The oven is now ready for use.

IMPORTANT

The oven has an Energy Save mode, for details refer to page 7 of your Operation Manual.

- The oven will default to Energy Save Mode after 3 minutes if not used. Whilst in Energy Save Mode the display is blank and the oven cannot be used.
- To remove Energy Save Mode, open and then close the door, ".0" will be displayed and the oven is ready for use.

IF YOU REQUIRE ASSISTANCE

If you require any advice or assistance regarding your Sharp product, please visit our Website or call our Help Line.

Website:

www.sharp.co.uk/customersupport

Help Line:

08705 274277 (U.K.)
(01) 676 0648 (Ireland)
(office hours)

MICROWAVING

To cook for 2 minutes 30 seconds on 70% microwave power.

- Enter the cooking time by pressing the **1 min.** key twice and the **10 sec.** key three times.

1 min. x2

10 sec. x3

2:30



- Select the power by pressing the **MICRO. POWER** key twice.

MICRO. POWER x2

70 %



- Press the **START** key once to start cooking.

START x1

2:30

COOK



- The display will count down through cooking time.

3

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>