

SYLVANIA

USER'S MANUAL



Digital Photo Frame

MODEL NO: SDPF733

CONTENTS

Chapter 1 Product introduction	2
1.1 Specification.....	2
1.2 Package	2
Chapter 2 Operation introduction	2
2.1 Operation of inserting the cards.....	2
2.2 Button operation introduction for main unit.....	3
2.3 Button of remote control manual.....	3
2.4 Operation guide.....	4
2.5 Selecting mode.....	4
2.5.1 auto-play mode.....	4
2.5.2 photo.....	5
2.5.3 clock and calendar display.....	5
2.5.4 time and calendar setting	6
2.5.5 menu.....	7
Chapter 3 Daily protection and maintenance.....	8
3.1 Digital photo frame protection.....	8
3.2 Panel cleanness.....	8
Chapter 4 Trouble shooting.....	8

CHAPTER 1 product introduction

1.1 Specification

support picture format: JPEG

support SD/MMC/MS cards, this machine doesn't support music

panel: 7 inch LED screen

Power: DC5V 1.5A

Operation control: button operation control and remote control

1.2 Packaging list

digital photo frame 1pc

user manual 1pc

adapter 1pc

 
warranty card 1pc

remote control with button cell battery 1pc

CHAPTER 2 Operation introduction

2.1 Operation of inserting the cards


Insert the card in correct direction like below indication:

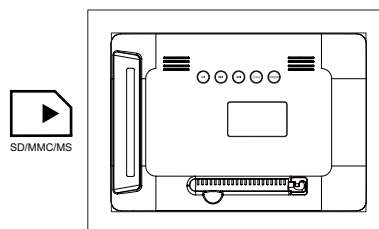

Machine will recognize the card automatically, it can insert USB and one of SD/MMC/MS card simultaneously


2.2 Button operation introduction for main unit

 This product can be operated by pressing button as below:

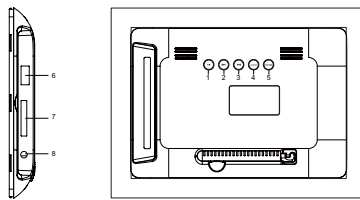

1. "ENTER" button/ playing picture mode is normal playing /pause
2. "RIGH"/ "DOWN" button
3. "LEFT"/ "UP" button
4. "EXIT" button
5. "MENU" /"SETUP" button
6. USB input jack
7. Memory card slot
8. Power input jack

 2.3 Button of remote control manual

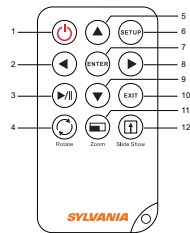

- | | |
|-------------------------------|----------------------|
| 1. "Power" button | 7. "Enter" button |
| 2. "Left" button | 8. "Right" button |
| 3. "Playing" / "Pause" button | 9. "Down" button |
| 4. "Rotate" button | 10. "Exit" button |
| 5. "UP" button | 11. "Zoom" button |
| 6. "Setup" button | 12. "Slide S" button |

2.4 Operation introduction

start up screen: power on the unit , will show the start up picture



2.5 Selecting mode

under this mode:, have four function menu for selection: PHOTO, FILE, CALENDAR, SETUP



select one function press ENTER to operate the function , press EXIT key to return to select card mode.

Press ◀/▶ to choose. Press ENTER button to select and return to MENU

2.5.1 auto-play mode



This product will play automatically once insert card, when playing, press ENTER key can pause the playing, press ◀/▶ key can browse the photo page by page, press ▲/▼ select button can rotate the photo, press ENTER again return back to play mode; press EXIT key can return to photo browsing mode, press EXIT key again can return to the main menu. Under browse photo mode, press ▲/▼/◀/▶ key to select the desired photo, press ENTER key to pause the browsing, press again ENTER key to play.

 
2.5.2 photo



9 screen image preview, select a picture after press ENTER key to full-screen preview image, long press SETUP can pop-up setup menu, you can set image display mode, the picture zoom / rotate / copy / delete (the current equipment for the Memory When not be able to choose copy) operation, the file copied to the memory inside or removed from memory. Press MENU back to the Select Mode.


2.5.3 clock and calendar display

enter to selection mode, select calendar to display the clock and calendar

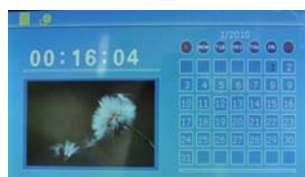

2.5.4 time and calendar setting

 
Enter the main menu, you can using ◀/▶ button to choose calendar to display the clock and calendar

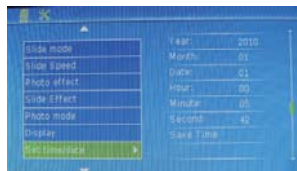

Select SETUP menu under selection mode,it will display the setup menu, press UP/DOWN key to enter to TIME/DATE menu , press ENTER key twice to highlight YEAR , then use Left /Right key to adjust the time or calendar, select save time and press ENTER key to confirm .

2.5.5 MENU

 enter to selection mode , select calendar to display the clock and calendar

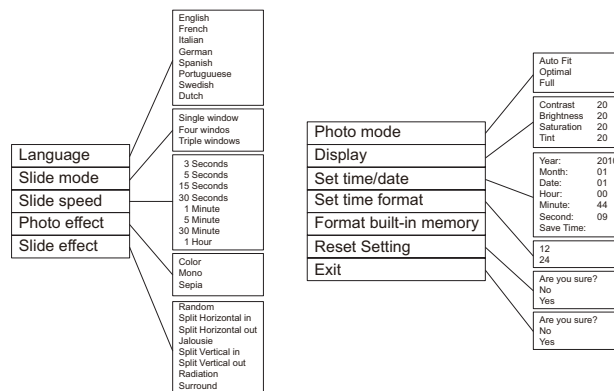

Under main menu , use UP/DOWN key to select SETUP menu , press ENTER to confirm.
 Use UP/DOWN key to select your desired setting , then press ENTER key to confirm .
 Press EXIT key on remote control to exit from setup menu .

Chapter 3 Daily protection and maintenance

3.1 Digital photo frame protection

To reduce the risk of fire or electric shock, do not expose or use this product at rainy or moisture place
Do not block the intake of the back panel
Do not place this unit under sunshine

3.2 Panel cleanness

The panel is easy to broken , please take and put it gently
If the panel 's surface is dirty, please clean it with the soft cloth ,
if necessary , can wet the cloth with little water then clean it

Chapter 4 Trooble Shooting

1. **Question:** What kind of photos does this device support?

Answer: The frame will display digital photos that are stored in the JPEG format, which is the standard format for nearly all digital cameras. Some cameras allow images to be stored as TIFF or RAW files as well as JPEG. Only the JPEG format is compatible with the frame. Photos of up to million pixels can be displayed.

2. **Question:** What should I do if the system does not respond when the power is turned on?

Answer: Please make sure the unit is properly connected to a power source. Then turn it off, re-connect the power and turn it on again.

3. **Question:** Why is the memory card not recognized?

Answer: The memory card might be inserted backwards or is not pushed far enough. After inserting the memory card in the right direction, if the still cannot be read, please turn off the unit and then power it on again.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>