

SYLVANIA

SDVD8730



USER'S MANUAL

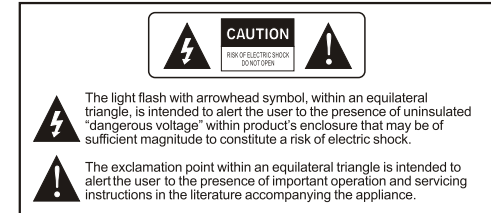 


Table Of Contents

Safety Precaution	1
Package	2
Main Features	2
Main Unit Controls	3
System Connection	4
The Remote Control	7
Basic operation	9
System Setup	14
Specification	17
Troubleshooting	18
Straps Installation Guide	19

Safety Precaution

Thank you for choosing our portable DVD player. It includes a 7" wide screen and a DVD player. The unit applies the latest state of art electronics and is designed for use at home, in hotels and in offices etc for relaxation. The compact size makes carrying easier as well as installation. Please read the manual carefully prior to use and keep it well for later consultation.



Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use this unit near water. Do not place over the unit any container with liquid inside.
- 3) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 4) Unplug this unit during lightning storms or when unused for long time.
- 5) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 6) Only use accessories specified by the manufacturer.
- 7) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
- 8) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.


Package

7" LCD Monitor & DVD Player	1
Remote Control with battery	1
Audio/Video Cable	1
AC/DC Power Adapter	1
Cigarette Lighter Adapter	1
User Manual	1
Earphone	2
DC+Audio/Video Cable	1
Carrybag	1
Mounting straps	2

Main Features


- High brightness color 7" LCD screen
- Compatible with disc of DVD, VCD, MP3, MP4, CD, JPEG, etc.
- Built-in stereo speaker
- Support PAL or NTSC system
- Support Multi-language OSD, speed forward/backward, repeat function
- Zoom in/out function

 Main Unit Controls

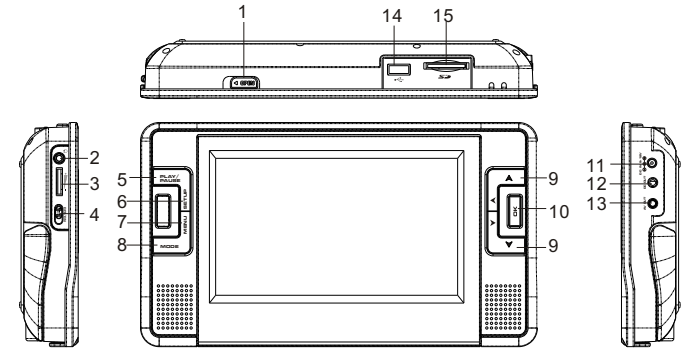

- | | |
|------------------------|------------------|
| 1. Open knob | 9. ▲▼◀▶ |
| 2. Earphone jack | 10. OK button |
| 3. Volume knob | 11. DC IN 9-12V |
| 4. Power ON/OFF switch | 12. DC OUT |
| 5. Play/Pause | 13. AV OUT |
| 6. SETUP button | 14. USB Port |
| 7. MENU button | 15. SD card slot |
| 8. MODE button | |

 Monitor View

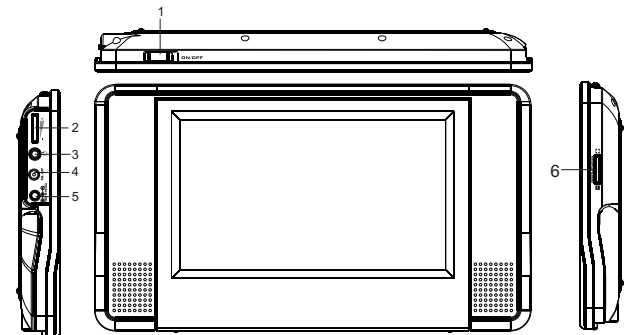


- | | |
|------------------|--------------------|
| 1. Power ON/OFF | 5. DC IN 9-12V |
| 2. Volume knob | 6. Brightness knob |
| 3. Earphone jack | |
| 4. AV in | |


System Connection

Powering and installation

 Plug one end of the AC/DC power adaptor into the DC IN 9-12V jack on the right of the machine, then plug the other end into the AC power receptacle. Please refer to the following illustration

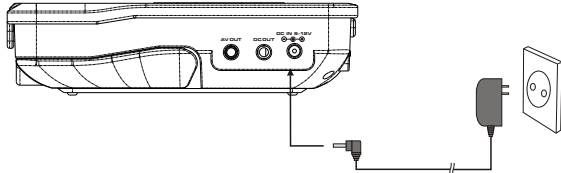

 If using car cigarette lighter adaptor to connect to the power: Plug one end of the cigarette lighter adaptor into the DC IN 9-12V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

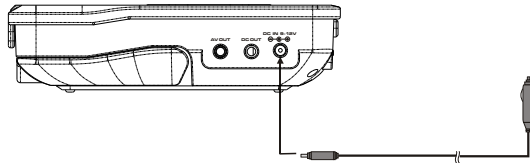


Notice:

1. Car cigarette lighter adaptor can't be used to recharge the battery.
2. Car cigarette lighter adaptor is available to use only when the car power supply is 9-12V.


Using SD/MMC card

 Upon using an SD or MMC card, insert it into the corresponding slot flatly with the label side forward until you hear a click.



Using USB

 Upon using an USB, insert it into the USB slot directly.




Connecting to the monitor

The unit can also be connected to the external LCD monitor.

Connect the unit to power by AC/DC adaptor or cigarette lighter adaptor.

Then connect the unit DC OUT jack to DC IN 9-12V Jack of the LCD Monitor by a DC/AV cable. Also use this DC/AV cable to connect the AV OUT jack of the unit to AV IN jack of the Monitor.

 
Please refer to the illustration below.

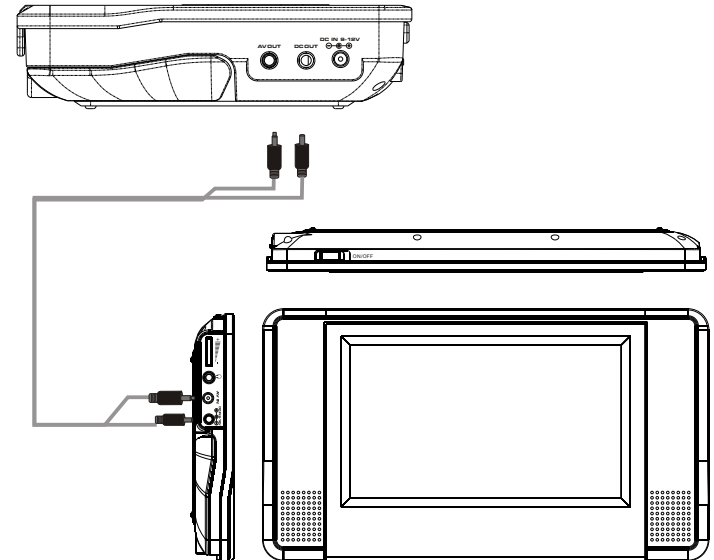


Note: You're advised to supply both units the power by the cigarette lighter adaptor only. The AC/DC adaptor is used to supply power of one unit only.

Connecting with external Speaker

 The unit can be connected with external speaker. Please see the following illustration

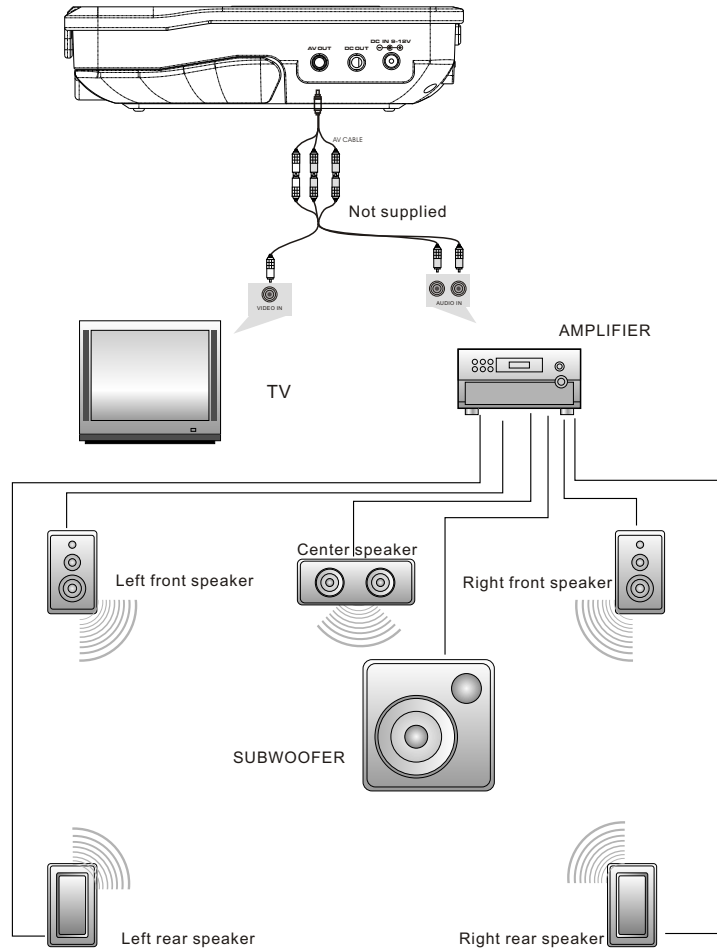


The Remote Control

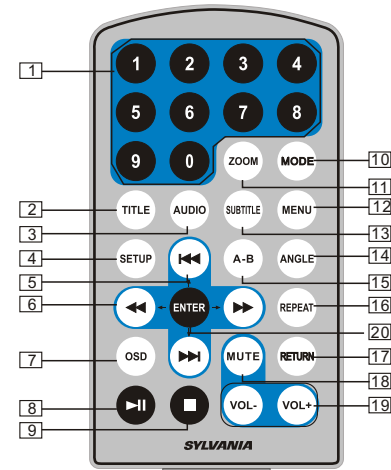 


1. Number button
2. TITLE (To display title information)
3. AUDIO (To select audio language)
4. SETUP (To go to or exit setup menu)
5. Previous/Next button (To go to previous/next chapter or scene during playing)
6. Fast forward/backward button (To scan forward/backward at 2, 4, 8, 16, or 32 times)
7. OSD (To display disc information during playing such as elapsed and remaining time)
8. Play/pause
9. Stop (press once to stop playback, then press ► to resume playback from the point where you stopped; press stop button twice to stop playback completely)
10. MODE (To select the source)
11. ZOOM (To zoom in/out the image during the playback)
12. Menu (To enter or exit menu root)
13. Subtitle (To select subtitle language when playing DVD disc)
14. Angle (To change viewing angle when playing disc with multi-angle)
15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing)
16. Repeat (To repeat playing title, chapter or track)
17. Return (To return to the main menu)
18. MUTE (To turn to mute)
19. VOL +/- (To adjust the volume)
- 20: Enter (To confirm)

The Use of Remote Control

 Please put the battery into the remote control as per below illustration

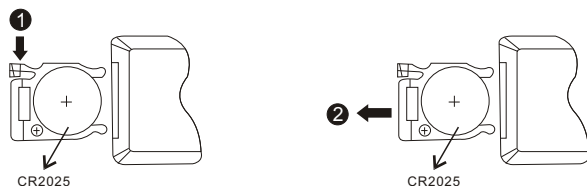

 When using remote control, make sure the infrared window is pointed to infrared receiving window of the machine. The distance between machine and remote control must be within 3 metres. Please refer to the following illustration

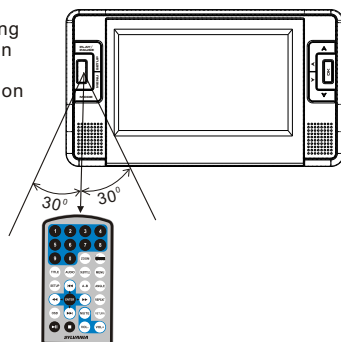

Notice

1. To avoid falling off or place near damp environment.
2. To avoid infrared receiving window of the unit being under direct sunlight
3. Please use a new battery to replace old one if the remote control doesn't work.

Basic Operation



Playing disc of DVD, MPEG4, SVCD, VCD, CD, MP3, Xvid


1. After connecting power to the unit, turn on the unit by sliding the ON/OFF switch to ON, the source menu will be displayed on the screen:

DVD
MEDIA

Press **◀▶** to enter DVD mode or Media mode and press OK button to confirm. When selecting "Media", ensure to insert USB or SD/MMC card properly

2. Open the disc door and insert a disc into the door with the label side facing up.
3. Close the disc door. The unit will load the disc and start playing.
4. Press **■** to once to stop playback; then press **▶||** to resume playback from the point where you stopped; press **■** twice to stop playback completely).
5. During playback, press **▶||** to pause; press it again to resume playback.
6. When the playing is finished, please turn off the power by sliding ON/OFF switch to OFF.
7. For some DVD disc with Title or Chapter menu, press "MENU" button to enter menu page, and use **◀▶** to select. Press ENTER to confirm.

 Note: Please do not disconnect USB devices or plug out SD/MMC cards while they are working with the unit. Functional failure may occur in case of wrong operations.

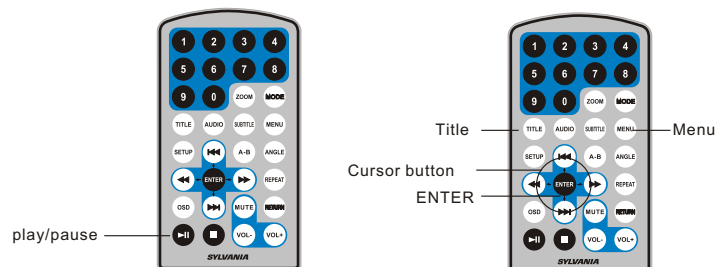


Fast forward and fast backward




When playing disc of DVD, MPEG4, SVCD, VCD, CD, the unit can search forward or backward.

 1. Press **FF**, the unit will search forward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

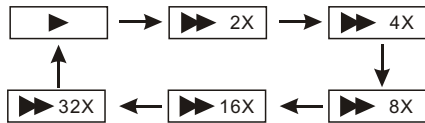

 2. Press **BB**, the unit will search backward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

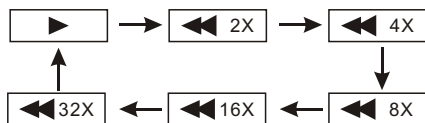


Repeat playing




When playing disc of DVD, MPEG4, SVCD, VCD, CD, user can repeat playing one chapter, title or all the whole disc.

 For DVD disc, press "repeat" button, user can repeat playing one Chapter; press it again to repeat playing Title; press it the third time to repeat playing the whole disc.



 For MP3 disc, press "repeat" to repeat playing present file; press it again to repeat playing the folder; press it the third time to cancel repeat playing.



Repeat playing of favorite scene

 


When playing disc of DVD, MPEG4, SVCD, VCD, CD, Mp3, user can repeatedly play a specific section.

During playback, press "A-B" button at a point A, then press this button again in point B, the unit will automatically repeat playing the part between A-B



Press it the third time, the unit will return to normal playback.

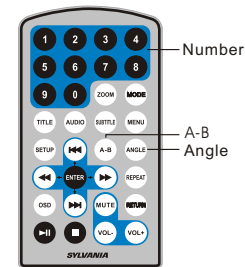

Angle

During playing DVD disc with multi-angle, press "Angle" button, the followings will be displayed on screen:



Press number buttons to select the angle you desire



To return to normal playing, please press "Angle". The unit will play the disc in the default angle.

 


Notice

The function is available only for discs with multi-angle.




Zoom in/ out



When playing disc of DVD, MPEG4, SVCD, VCD, user can zoom in or zoom out the image.

During playback, press "Zoom" button, the image will be enlarged; press it again the image will be enlarged again; press it fourth time, the image will zoom out, press it repeatedly and the image will return to normal status.

 When the image is enlarged, user can press ◀ ▶ to move the image

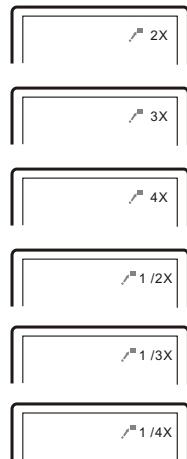


Playing JPG file


1. Place a JPG disc into the tray, the unit will start reading and play.
2. Press "MENU" to browse JPG files.
3. Press ▲▼ to select a JPG file and press "OK" button to confirm.
Note: you can press MENU to return to the folder list. Press ▶▶ or "OK" to preview the file selected
4. To rotate the picture counter-clockwise, press "◀"; Press "▶" to rotate the picture clockwise
5. Press OSD button when viewing pictures, you can select different refresh mode as follows:
 - ①. from top to bottom
 - ②. from bottom to top
 - ③. from left side to right side
 - ④. from right side to left side
 - ⑤. from left top to right bottom
 - ⑥. from right top to left bottom
 - ⑦. from left bottom to right top
 - ⑧. from right bottom to left top
 - ⑨. from horizontal center to both sides
 - ⑩. from vertical center to both sides
 - ⑪. from top and bottom to center.
 - ⑫. from right and left to center.
 - ⑬. from four window's top side to bottom side.
 - ⑭. from four window's left side to right side.
 - ⑮. from 4 edges to center.
6. During viewing files, "∅" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
7. When viewing JPG files, press "■", pictures will be displayed in thumbnail mode, press ▲▼◀▶ or "OK" button to select one picture to view

Playing MP3 files




 
1. Place MP3 disc into the disc door or insert USB disk, SD card to USB port or SD card slot. Press "▲/▼" or "OK" button to choose a MP3 file; Press "▶▶" or "OK" button to play the file selected.

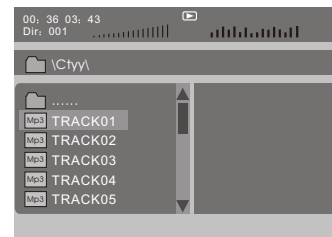


System Setup

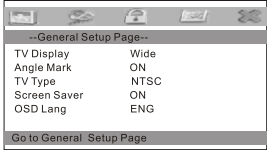 
 <p>--General Setup Page--</p> <p>TV Display Wide Angle Mark ON TV Type NTSC Screen Saver ON OSD Lang ENG</p> <p>Go to General Setup Page</p>	<p>Press "Setup" button, the main menu will be displayed on the screen</p> <p>In the General Setup Page, Press ◀▶ button to highlight this item.</p> <p>Press ENTER button to access.</p> <p>Press ▲▼ button to select the setting.</p> <p>Press ENTER button to confirm your selection.</p> <p>Press ◀ button to exit.</p>
--	---

    General Setup Page

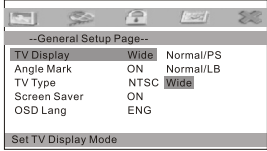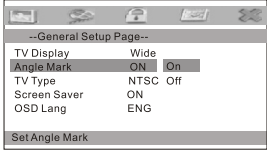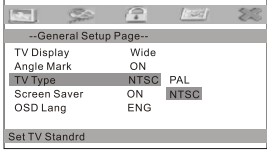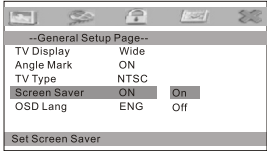
 <p>--General Setup Page--</p> <p>TV Display Wide Normal/PS Angle Mark ON Normal/LB TV Type NTSC Wide Screen Saver ON OSD Lang ENG</p> <p>Set TV Display Mode</p>	<p>TV display:</p> <p>Enter this option, user can set screen display format (Normal/PS, Normal/LB, Wide)</p> <p>The default is "Wide"</p> <p>Note:</p> <ul style="list-style-type: none"> ☆ The function depends on the display ratio with which the DVD disc is recorded. ☆ Please choose "Wide(16:9)" when using a 16:9 wide screen TV set
 <p>--General Setup Page--</p> <p>TV Display Wide Angle Mark ON On TV Type NTSC Off Screen Saver ON OSD Lang ENG</p> <p>Set Angle Mark</p>	<p>Angle Mark:</p> <p>Enter this option to set the angle during playback.</p> <p>Optional setting: ON, OFF</p> <p>The default is: ON</p>
 <p>--General Setup Page--</p> <p>TV Display Wide Angle Mark ON TV Type NTSC PAL Screen Saver ON NTSC OSD Lang ENG</p> <p>Set TV Standrd</p>	<p>TV Type:</p> <p>Enter this option to select TV type(PAL, NTSC)</p> <p>The default is NTSC.</p>
 <p>--General Setup Page--</p> <p>TV Display Wide Angle Mark ON TV Type NTSC Screen Saver ON On OSD Lang ENG Off</p> <p>Set Screen Saver</p>	<p>Screen Saver:</p> <p>Enter this option to set whether to activate the screen saver function.</p> <p>The default is ON.</p>

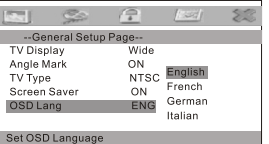  <p>--General Setup Page--</p> <p>TV Display Wide Angle Mark ON English TV Type NTSC French Screen Saver ON German OSD Lang ENG Italian</p> <p>Set OSD Language</p>	<p>OSD Language:</p> <p>In the option user can set OSD menu language(English, French, German, Italian).</p> <p>The default: English</p>
---	--


 
Video Setup Page



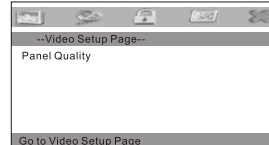
 <p>--Video Setup Page--</p> <p>Panel Quality</p> <p>Go to Video Setup Page</p>	<p>Enter this option, user can adjust picture quality of video output. There are four items available to be adjusted: Brightness, Contrast, Hue and Saturation.</p> <p>For all these items the default is 00</p>
--	--

 Password Setup Page

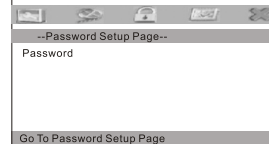 <p>--Password Setup Page--</p> <p>Password</p> <p>Go To Password Setup Page</p>	<p>Enter this option, you can set a password (four numbers).</p> <p>All parental Control features are password protected.</p> <p>The default is 8888.</p>
---	---

  
Preference Page

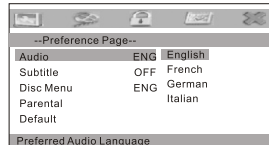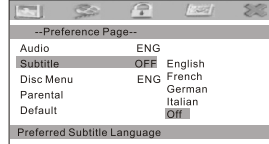 <p>--Preference Page--</p> <p>Audio ENG English Subtitle OFF French Disc Menu ENG German Parental Italian Default</p> <p>Preferred Audio Language</p>	<p>Audio:</p> <p>Enter this option, user can select your preferred audio language for DVDs.</p> <p>The default is English.</p> <p>Note:</p> <ul style="list-style-type: none"> ☆ The audio language depend on the material on each disc. ☆ User can also change the audio language during playback by pressing the Audio button.
 <p>--Preference Page--</p> <p>Audio ENG Subtitle OFF English Disc Menu ENG French Parental German Default Italian</p> <p>Preferred Subtitle Language</p>	<p>Subtitle:</p> <p>Select your preferred language to show the subtitles on the screen.</p> <p>The default is OFF</p> <p>The subtitle languages depend on the information available on each disc. You can also change the subtitle language during playback by press the SUBTITLE button.</p>

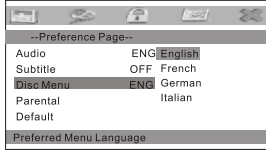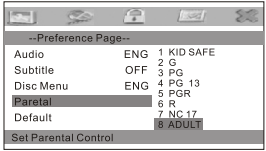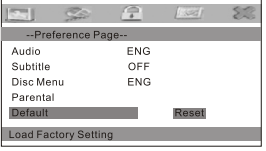   	<p>Disc Menu: This function allows you to choose the menu language stored on the disc. The default is English. Note: the disc menu languages depend on the information available on the disc.</p>
	<p>Parental: Enter this option to set the parental control level to some unsuitable disc scenes being watched by the children. Optional parental control levels: KID SAFE, G, PG, PG 13, PGR R, Nc17, ADULT. The default of this option is ADULT.</p>
	<p>Default: Select this item and press OK button to reset all settings to the original factory settings.</p>

Specification


Compatible disc: DVD/VCD/CD/Mp3/MPEG4
Signal system: PAL/NTSC
Panel size: 7 inch
Frequency response: 20Hz to 20kHz
Video output: 1 Vp-p/75 Ohm, unbalanced
Audio output: 1.4Vrms/10kOhm
Audio S/N: Better than 80dB
Dynamic range: Better than 85 dB
Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm
Power source: DC 9-12V
Power consumption: 10W
Operating temperature: 0~40°C
Weight (Monitor/DVD Player): 0.42/0.7kg
Dimensions (Monitor/DVD Player)(W x D x H): 255x146x26/255x 146x 36mm

PROBLEM	SOLUTION
No sound or distorted sound	Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range.
Picture is distorted	The disc might be damaged. Try another disc; It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	Some discs have sections that prohibit rapid scanning or chapter skip; If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.


Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

Straps Installation Guide

 
1. Unfold the straps

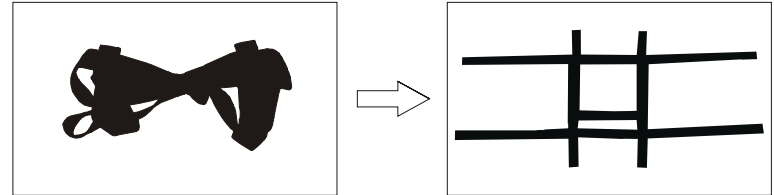

 2. Put the unit on the straps with the backside upward, then bind the straps.

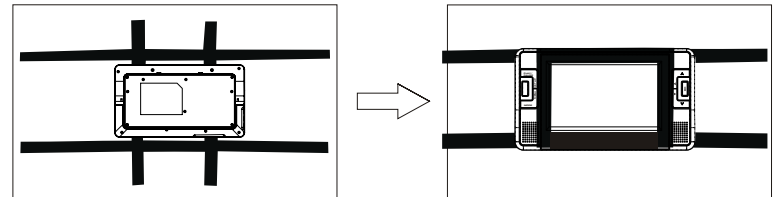

 3. Cross bind the straps on the headrest.

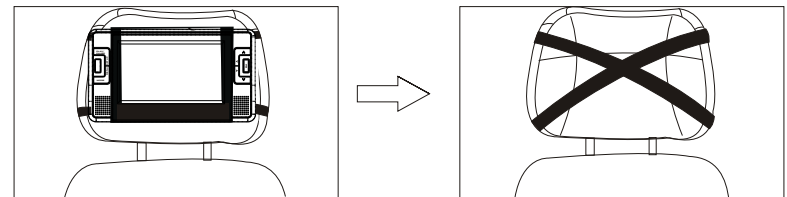

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>