 


SYLVANIA

SDVD9000

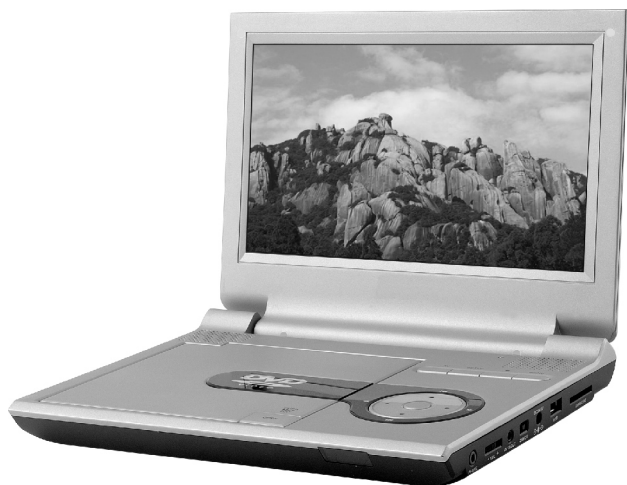

USER MANUAL


TABLE OF CONTENTS

Introduction	1
Important Safety Instructions	1
Main Features	2
The Remote Control	2
Unit View	3
Basic Operation	4
The Accessories	4
Powering and installation	4
Connecting to TV or another monitor	5
Playing Disc	5
Connecting with USB and SD/MMC/MS card	7
System Setup	8
Rechargeable battery use	8
Specification	9
Troubleshooting	10

Introduction

Thank you for choosing our portable DVD player. It includes a 9" wide screen and a DVD player. The unit applies the latest state of art electronics and is designed for use at home, in hotels and in offices etc for relaxation. The compact size makes carrying easier as well as installation. Please read the manual carefully prior to use and keep it well for future reference .

 Important safety instructions

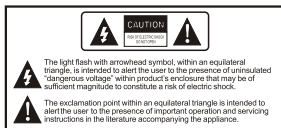

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use this unit near water. Do not place over the unit any container with liquid inside.
- 3) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 4) Unplug this unit during lightning, storms or when unused for long time.
- 5) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 6) Only use accessories specified by the manufacturer.
- 7) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
- 8) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.

The Main Features

Built-in rechargeable Lithium polymer battery with easier mobile feature

Support USB card

Play MP3 files

Built-in card reader to support SD/MMC/MS

 
Anti-shock function

Compatibility: DVD, VCD, MP3, MPEG4, CD, JPEG, etc.

Support Multi-language OSD, speed forward/backward, repeat function

Support AV input/output


The Remote Control

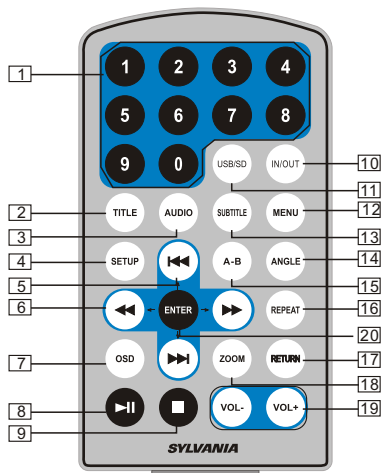

1. Number button
2. TITLE (To display title information)
3. AUDIO (To select audio language)
4. SETUP (To go to or exit setup menu)
5. Previous/Next button (To go to previous/next chapter or scene during playing)
6. Fast forward/backward button (To scan forward/backward at 2, 4, 8, 16, or 32 times)
7. OSD (To display disc information during playing)
8. Play/Pause

9. Stop (First time: Stop at the present playing point; Press "▶||" to continue to play
Twice: Stop playing)
10. IN/OUT (To input or output video)
11. USB/SD (To activate USB/SD function when USB/SD found)
12. Menu (To enter or exit menu page)
13. Subtitle (To select subtitle language when playing DVD disc)
14. Angle (To change viewing angle when playing disc with multi-angle)
15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat play)
16. Repeat (To repeat playing title, chapter or track)
17. Return (To return to the main menu)
18. Zoom (To zoom in or zoom out the scene during playback)
19. VOL +/- (To adjust the volume)
20. Enter (To confirm)

 Unit View

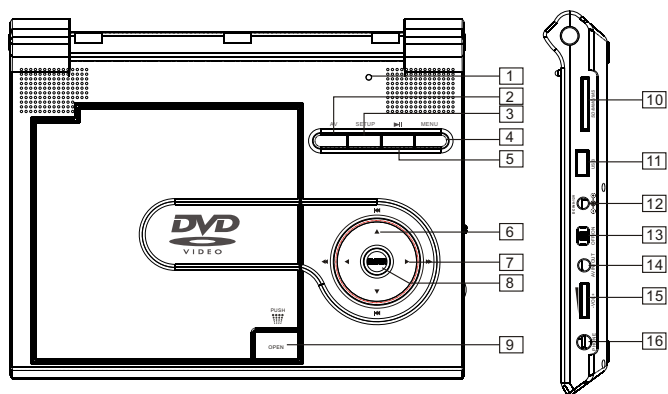

1. Power button of LCD
3. Setup
5. Play/pause
7. ◀▶▶▶▶▶
9. Open
11. USB
13. PowerON/OFF Switch
15. Volume

2. AV
4. Menu
6. ▼ ▲ ◀ ▶ ▶▶▶▶▶▶
8. Enter
10. SD/MMC/MS port
12. DC IN 9-12V
14. AV IN/OUT
16. Earphone

Basic Operation

Power On/off switch: To turn on or turn off the power

Setup: To display main menu

AV: To output to TV or input outer sources

Play/Pause: To play or pause

Open: To open the tray

▲ ◀◀: To go to previous chapter or scene during playing

▼ ▶▶: To skip to next chapter or scene during playing

▶▶▶: To speed forward at 2, 4, 8, 16, or 32 times

◀◀◀: To speed backward at 2, 4, 8, 16, or 32 times

SD/MMC/MS port: To insert SD/MMC/MS card

USB port: To connect with USB

DC IN 9-12V: To connect to AC/DC power adapter

Earphone port: to connect earphone

Volume: to adjust the volume

 
The Accessories

The unit includes the following accessories:


1. 1 x Remote Control with battery
2. 1 x Audio/Video Cable
3. 1 x AC/DC Power Adapter
4. 1 X Cigarette Lighter Adapter
5. 1 x Instruction Manual
6. 1 X Earphone

Powering and installation

Plug one end of the AC/DC power adaptor into the DC input jack on the right side of the machine, then plug the other end into the AC power receptacle. Please refer to the following illustration:

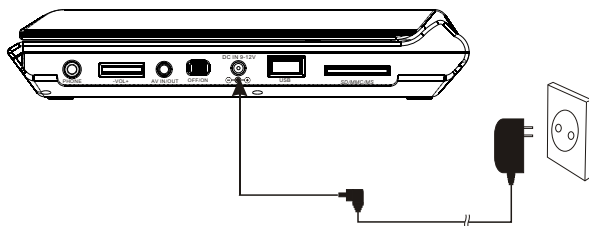


 If using car cigarette lighter adaptor to connect to the power:
Plug one end of the cigarette lighter adaptor into the DC input jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

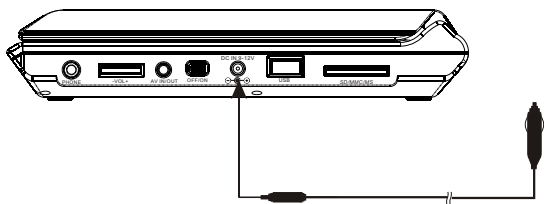

Connecting to TV or another monitor

 You can also connect the unit to a TV to enjoy high quality picture and stereo sound. Please refer to the following illustration:

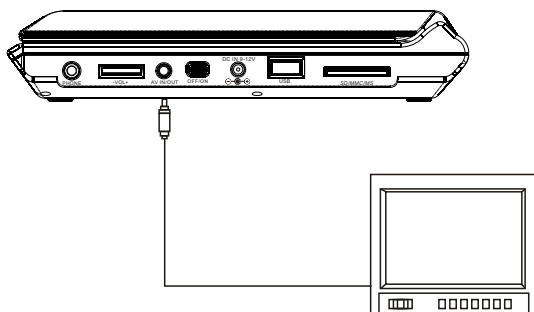


Playing disc

1. After connecting power to the unit, turn on the unit with the ON/OFF switch. The power indicator will light up.
2. Open the disc tray by "OPEN", and place a disc into the tray with the label side facing up.
3. Close the tray. The unit will load the disc and start playing.

Playing JPG file

1. Place a JPG disc into the tray.
2. Press "▲ / ▼" and "ENTER" button to select a JPG file. To return to main menu, press "◀" button.
3. Preview the file selected and press "▶" or "ENTER" to play.
4. To rotate the picture counter-clockwise, press "◀"; Press "▶" to rotate the picture Clockwise.

5. Press OSD button when viewing pictures, you can select different refresh mode as follows:
 - a. from top to bottom
 - b. from bottom to top
 - c. from left side to right side
 - d. from right side to left side
 - e. from left top to right bottom
 - f. from right top to left bottom
 - g. from left bottom to right top
 - h. from right bottom to left top
 - i. from horizontal center to both sides
 - j. from vertical center to both sides
 - k. from top and bottom to center.
 - l. from right and left to center.
 - m. from four window's top side to bottom side.
 - n. from four window's left side to right side.
 - o. From four edges to center.
6. During viewing files,  "may appear when pressing "Angle" or "Subtitle" or "Audio" or "Repeat" or "Title" etc; in this situation these options are unavailable to operate.
7. When viewing JPG files, press "■", pictures will be displayed in small size, press "▲/▼/◀/▶" or "ENTER" button to select one picture to view

Playing MP3 files

 
1. Place MP3 disc into the tray
2. Press "▲/▼" to choose a MP3 file; press "◀" button to return to main menu
3. Press "▶" or "ENTER" button to play the file selected



Connecting with USB and SD/MMC/MS card


USB

You can play video/audio/picture files stored in an USB by inserting it into the USB slot.(USB cable not included)



SD/MMC/MS card

 
You can play video/audio/picture files stored in SD/MMC/MS card by inserting it into the SD/MMC/MS card slot with label side upward.(SD/MMC/MS card not included)



Note: Please do not disconnect USB devices or plug out SD/MMC/MS cards while they are working with the unit. Functional failure may occur in case of wrong operations.

System Setup



 
Press " Setup" button, the main menu will be displayed on the screen. Press " Setup" again to exit.

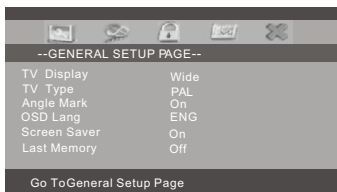

Enter the sub-menu, press "▲ / ▼" to select option and press " ENTER" to confirm

You can setup accordingly. But please pay attention to the followings:

   1. Some features such as Angle Mark, may not be available because it's disc-dependent.
2. Last Memory only functions for AV IN/OUT.
3. Factory default password is 8888.
4. Preference Page Menu is only activated when no disc is loaded or disc door is open.
5. Audio and Subtitle languages are selectable only for discs available with the preferred language recorded.

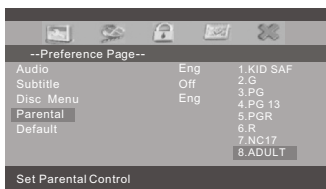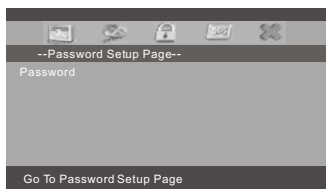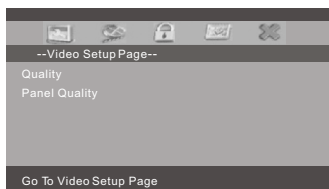

Rechargeable Battery Use

The unit utilizes long-life Li polymer battery, for portable power supply. The battery has no "Memory Effect" and thus can be recharged safely regardless of whether the battery is fully or partially discharged. It's enough to recharge no longer than 6H each time, fully recharged battery can last about 2 hours.

Precautions related to Battery Recharge

The battery can be only recharged when turning power to OFF state, and keep continuous power supply, the red light will be on, and the light will turn green when it's fully charged.

Using and Maintaining Rechargeable Battery

1. The normal working temperature is: 0°C~45°C
2. Always unplug AC/DC power supply for the unit whenever it doesn't work
3. Heat will create during playing, it's normal, while avoid long time playing and unattended
4. Avoid having the unit collided with any objects, and place away from all possible heat sources or damp areas

Specification

Compatible Disc: DVD/VCD/CD/MP3/MPEG4

Signal system: PAL/NTSC

Panel size: 9 inch

Picture resolution: 640(RGB)x234

Frequency response: 20 Hz to 20 kHz

Video output: 1 Vp-p/75 Ohm, unbalanced

Audio output: 1.4Vrms/10kOhm

Audio S/N: Better than 80 dB

Dynamic range: Better than 85 dB

USB: Support USB 2.0 full speed

Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm

Adaptor input : AC 100-240V~50/60Hz 0.4A
output: DC 9V 1.5A

 
Operating temperature: 5~40°C

Weight: 0.99 kg

Dimensions (W x D x H): 234 x 186 x 35mm

Battery Type: Li Polymer

Troubleshooting

PROBLEM	SOLUTION
No sound or distorted sound	Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon () appears on screen	The feature or action cannot be completed at this time because: <ol style="list-style-type: none">1. The disc's software restricts it.2. The disc's software doesn't support the feature (e.g., angles)3. The feature is not available at the moment.4. You've requested a title or chapter number that is out of range.
Picture is distorted	<ul style="list-style-type: none">• The disc might be damaged. Try another disc.• It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	<ul style="list-style-type: none">• Some discs have sections that prohibit rapid scanning or title and chapter skip.• If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.

Owing to continuous improvement, no advance notice will be given regarding change to above spec.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>