

SHARP

Quick Start Guide

MODEL

 
 
 
 
 

 
AN-GR500H

HOME CINEMA RACK SYSTEM

If you require any advice or assistance regarding your Sharp product, please visit our web-site www.sharp.co.uk/customersupport.aspx
Customers without internet access may telephone 0870 787 4837 during office hours (or (01) 843 4711 if telephoning from Ireland).

This quick Start Guide will help you to correctly install and operate your system.

1 Accessories
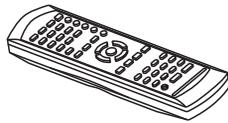
<p>Top glass x 1</p> 	<p>Bottom glass x 1</p> 	<p>AC power lead x 1</p> 	<p>Glass protector x 4</p> 
<p>"AA" size battery (UM/SUM-3, R6, HP-7 or similar) x 2</p> 	<p>Remote control x 1</p> 	<p>FM aerial x 1</p> 	<p>Adjustable nylon band x 3</p> 

 
2 Installing the glass and the glass protector

1. Fix the glass protector to the top glass at each corner. Make sure the "TEMPERED" sticker on top of the glass is facing up.

2. Place the top glass on top of the frame. Make sure all the glass protector guide is fitting to the frame hole.

TOP VIEW

Step 1




Step 2



"TEMPERED" sticker

BOTTOM VIEW

 Step 1



Step 2



"TEMPERED" sticker

Glass protector

Top glass

Frame hole for the glass protector to fit in.

Subwoofer box

Bottom glass

"TEMPERED" sticker

Notes:


- It is advisable for the top glass to be carried by 2 persons.
- Top glass with sticker on its surface, must face upwards.
- Metal frame must not be removed to ensure safety.
- The maximum load for the top glass on the unit is 100 kg.
- The glasses are made of reinforced glass, but dropping pointed objects on them or strongly hitting the surface may cause them to break.
- Top and bottom glass are not fastened to the unit. Always take care when transporting it, otherwise these parts may fall off and there is a risk of damage and injury.

3. Place the bottom glass on top of the subwoofer box. Make sure the "TEMPERED" sticker on top of the glass is facing up.


3 Remote control battery installation

Use 2 "AA" size batteries (UM/SUM-3, R6, HP-7 or similar).


1 Open the battery cover.

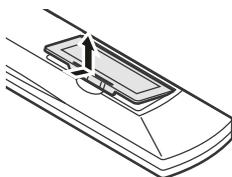

2 Insert the batteries as shown.

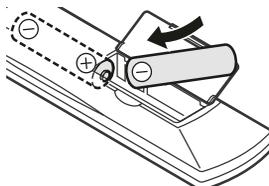


3 Close the cover.

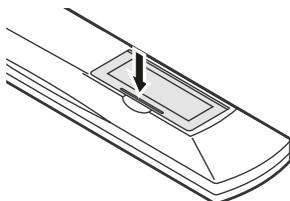

4 Connecting the AC power lead

After checking all the connections have been made correctly, connect the AC power lead to the AC power input socket, then to the wall socket.


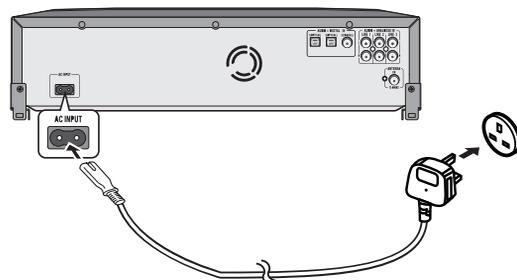


Wall socket
(AC 220 V- 240 V, 50 Hz)

Notes:

- Never use a power lead other than the one supplied. Otherwise, a malfunction or an accident may occur.
- Unplug the AC power lead from the wall socket if the unit will not be in use for a prolonged period of time.

5 To turn the power on

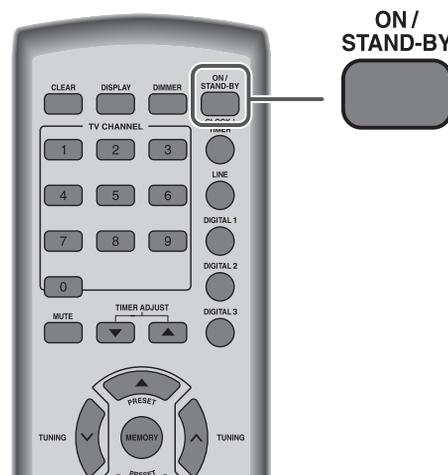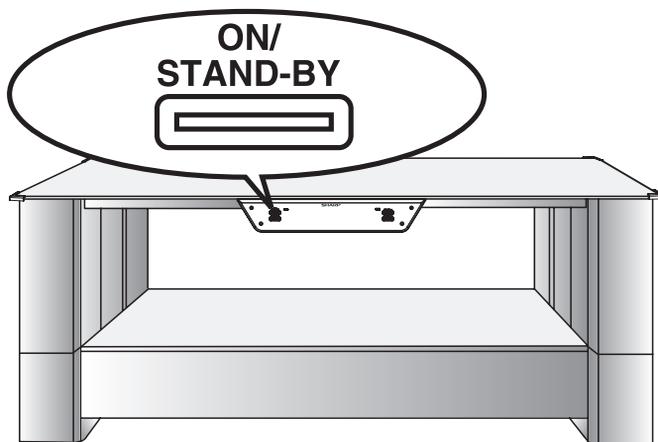

Press the ON/STAND-BY button.

If the power does not turn on, check whether the power lead is plugged in properly.

To set the unit to stand-by mode:

Press the ON/STAND-BY button again.

Note:

After the unit enters the power stand-by mode, wait a few seconds to turn on again

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>