

# Shiro



• User Manual •

## SB3125

Basic Phone



Please ensure the phone is placed in a dry and ventilated place without corrosive air.

## FEATURES:

- Pulse/Tone selectable
- Ringer Hi/Lo selectable
- In Use LED indicator
- Pause, Flash, Mute and Redial function

## TABLE OF CONTENT

|                                  |   |
|----------------------------------|---|
| PRODUCT OVERVIEW: .....          | 2 |
| 1. SWITCH OPERATION: .....       | 2 |
| RINGER switch .....              | 2 |
| PULSE/TONE switch .....          | 2 |
| 2. FUNCTION KEY OPERATION: ..... | 3 |
| FLASH key (600ms) .....          | 3 |
| MUTE key .....                   | 3 |
| REDIAL key .....                 | 3 |
| PAUSE key .....                  | 3 |
| P-T key .....                    | 3 |
| 3. ADDITIONAL NOTES: .....       | 3 |
| IN USE LED .....                 | 3 |
| TROUBLESHOOTING GUIDE: .....     | 3 |
| DECLARATION OF CONFORMITY: ..... | 3 |

## PRODUCT OVERVIEW:



### Description:

1. IN USE LED
2. MUTE key
3. P-T key
4. PAUSE key
5. FLASH key
6. REDIAL key
7. 0-9/#/\* key
8. Handset Cord jack
9. RINGER HI/LO switch
10. PULSE/TONE switch
11. TEL LINE jack

## 1. SWITCH OPERATION:

### **RINGER switch**

You can set the ringer HI/LO volume using the switch.

### **PULSE/TONE switch**

You can set the PULSE/TONE dial mode using the switch.

## 2. FUNCTION KEY OPERATION:

### FLASH key (600ms)

In the on-hook mode, press this key to auto-hang up for 600ms, after that you can press REDIAL key or dial out another number.

### MUTE key

While you are on the line, if you do not want the remote party to hear you, just press and hold the MUTE key.

### REDIAL key

In the handset off-hook mode, press this key to redial the last dialed number.

### PAUSE key

In the handset off-hook mode, press the PABX external line key, e.g. "9" follow by this key to include a 3 seconds pause before dialing subsequent numbers.

### P-T key

After switching to Pulse mode, you may press this key to change the dial mode to Tone.

## 3. ADDITIONAL NOTES:

### IN USE LED

While handset is off hook, the LED will turn on.

## TROUBLESHOOTING GUIDE:

**(Q) I do not hear any dial tone from the handset.**

**(A)** Ensure the handset cord is connected correctly to the handset cord jack at the base. Ensure you have plug in the telephone cable from the telephone to the wall socket correctly. If the problem persists, please check with your local dealer.

## DECLARATION OF CONFORMITY:

The telephone complies with the essential protective requirements and objectives of:

- EC R& TTE Directive 1999/5/EC
- EC Low Voltage Directive 73/23/EEC
- EC EMC Directive 89/336/EEC
- 

And conforms to the following relevant harmonized standards:

- EMC: EN55022, EN55024
- Safety: EN 60950



Created on 28<sup>th</sup> October 2005. SB3125 Basic Phone.

Please visit us at [www.shirocorp.com](http://www.shirocorp.com).

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>