

Shiro



• User Manual •

SC3123

Caller ID Phone



- Please ensure the phone is placed in a dry and ventilated place without corrosive air.
- Please install 3 x AA batteries for viewing the LCD display. If the LCD does not display clearly, please change the batteries to ensure the normal function of the unit.
- Before operation, please check if you had applied for caller ID service from Telecom for caller ID display.

FEATURES:

- FSK/DTMF dual system
- 40 incoming calls memories, call back function
- 10 outgoing last dialed number and conversation time review and redial back
- Long distance area code setting
- Local area code filter
- Auto IP function
- Pre-dial and edit dialing number
- LCD display of year, month, date and time
- 4 ringing tone selection
- Lock function
- P/T and time function
- Handsfree Speakerphone
- Alarm function

TABLE OF CONTENT

PRODUCT OVERVIEW	3
1. INSTALLING OR REPLACING THE BATTERY	4
2. SWITCH OPERATION.....	4
IDD LOCK switch.....	4
3. SOFTWARE SETTING	4
4. FUNCTION KEY OPERATION	6
UP and DOWN key	6
OUT key	6
DEL key	6
PAUSE key	6
IP key	6
FLASH (600ms) / RING key	6
AUTO-RD REDIAL/BACK key	6
HF (HANDSFREE) key.....	6
5. ADDITIONAL NOTES	7
INCOMING CALL LCD INDICATOR.....	7
LCD BACKLIGHT FUNCTION	7
TROUBLESHOOTING GUIDE.....	7
DECLARATION OF CONFORMITY	8

PRODUCT OVERVIEW



Description:

 
- | | |
|----------------------------|-------------------------|
| 1. LCD Display | 11. UP key |
| 2. SET key | 12. OUT key |
| 3. IP key | 13. Handset Cord jack |
| 4. FLASH/RING key | 14. LINE OUT (TEL) jack |
| 5. AUTO-RD REDIAL/BACK key | 15. LINE IN (TEL) jack |
| 6. HF (HANDSFREE) key | 16. LOCK switch |
| 7. 0-9/#/* key | |
| 8. PAUSE key | |
| 9. DOWN key | |
| 10. DEL key | |

1. INSTALLING OR REPLACING THE BATTERY

Install 3 Alkaline AA batteries into the battery compartment and re-fit the cover before use.

IMPORTANT—before removing the battery compartment cover, ensure the base unit is disconnected from the telephone line.

3 x AA Alkaline Battery

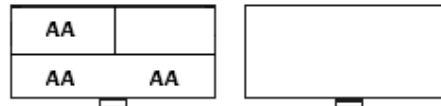

Connection and conditions for use

You can connect your SC3123, to public networks in the United Kingdom or to an approved PBX using DTMF signaling. Each item of telephone equipment (phones, fax machines, etc.) has a **ringer equivalence numbers (REN)**. The RENs of all equipment connected to an exchange line **must not add up to more than 4** otherwise, one or more phones may not ring and/or answer calls correctly. SC3123 has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

2. SWITCH OPERATION

IDD LOCK switch

Use the keys provided in the package. The telephone allows all outgoing number if the key is on red point. It cannot dial outgoing number starting with digit 0 when the key is on green point.

3. SOFTWARE SETTING

Press the **SET** key to enter menu setting. The LCD panel will display **SET 1 DATE**, press the **UP/DOWN** key to select the different options. Press the **SET** key again to confirm. Use the **UP/DOWN** key to select the mode you need. After completing the setting, press the **SET** key to go to next item. To exit menu, press the **DEL** key.

By pressing the **SET** key in the 'on-hook' mode, you can select the following:

SET ITEM	OPERATIONS
DATE/TIME	LCD displays SET 1 DATE , press the SET key to enter this mode. The

	<p>year value would flash, use the UP/DOWN key to select value. Press the SET key to enter into next item.</p>
AREA CODE	<p>LCD display SET 2 CODE, press the SET key to confirm. LCD will display CODE, press the SET key to enter this mode. Use the UP/DOWN key to select value. Press the SET key to enter into next item.</p> <p>Area Code can be used to filter the number for incoming calls. E.g. Area code = 75 when there's incoming call with 75 6554556, it will be displayed as 655 4556 only.</p>
LONG CODE	<p>LCD display SET 3 LCODE, press the SET key to enter this mode. LCD will displays LCODE, use the UP/DOWN key to select value. Press the SET key to enter into next item.</p> <p>To activate this feature, while checking incoming calls using UP key, press REDIAL key twice to add the LONG DIST ACCESS code in front of the number.</p>
FLASH TIME	<p>LCD display SET 4 FLASH, press the SET key to enter this mode. Use the UP/DOWN key to select value. Press the SET key to enter into next item.</p>
AUTO-IP	<p>LCD display SET 5 IP, press the SET key to enter this mode. LCD will display AUTO IP OFF and OFF will flashes, use the UP/DOWN key to select value. When LCD displays AUTO IP ON, press SET key. The LCD will display INPUT CODE for you to enter the IP numbers. Use the DEL key to correct any wrong input. After entering all IP number, press the SET key to enter into next item. The outgoing call will automatically use IP mode.</p> <p>Auto IP allows you to replace a sequence of number with single 0. E.g. Setting 1455 as Auto IP, therefore when you need to dial 1455, just put 0 in front (pre-dial mode), 0 2334565 will be dialed as 1455 2334565.</p>
P/T MODE	<p>LCD display SET 6 P-T, press the SET key to enter this mode. LCD will display TONE. Use the UP/DOWN key to change it into PULSE. Press SET key to enter into next item.</p>
ALARM	<p>LCD display SET 7 ALARM, press the SET key to enter this mode. LCD will display ALARM OFF, which will turn the alarm off. Use the UP/DOWN key to select ON or OFF.</p> <p>This feature is to ensure other telephone is unable to share the same line as your telephone. If another telephone is sharing the same line, there will be constant noise when it is off hook.</p>

4. FUNCTION KEY OPERATION

UP and DOWN key

In any mode, press the **UP/DOWN** key to check all the incoming numbers. If there is no incoming call, LCD will display **END**. The unit can receive up to 16-digit number.

OUT key

In any mode, check outgoing numbers by pressing the **OUT** key. Use the **UP/DOWN** key to select the outgoing number. Press the **REDIAL** key to dial the selected number.

DEL key

When checking incoming and outgoing call in any mode, press the **DEL** key to delete the number you are checking. Press the **DEL** key for 4 sec to delete all incoming or outgoing call numbers. When you pre-dial, press the **DEL** key to delete one digit at a time. When you enter the IP number or password, use the **DEL** key to delete error digit.

PAUSE key

To insert a 3.6 second of pause while dialing, press **PAUSE** key and it will display **P** on the LCD panel.

IP key

- When auto IP function is off:

In the 'on-hook' mode, pre-dial the phone number followed by the IP key. The unit will be on-hook automatically and dial the number with the IP number. (Note: The IP function cannot be used when the lock is set to lock "0".)

- When auto IP function is on:

In the 'on-hook' mode, pre-dial the phone number followed by the **REDIAL/BACK** key. The unit will off-hook automatically and dial the number with IP mode if the first digit number is "0".

FLASH (600ms) / RING key

In the 'on-hook' mode, press the **FLASH/RING** key. The LCD will display **TONE 1-4** for four selectable ringing tones. Select the preferred ringing tone by pressing the **FLASH/RING** key. When LCD panel displays **TONE OFF**, it means the ringing tone is turned off.

For FLASH function:

In the on-hook mode, press this key to auto-hang up for 600ms, after that you can press **REDIAL** key or dial out another number.

AUTO-RD REDIAL/BACK key

In the 'on-hook' mode, press this key to redial the last called number.

HF (HANDSFREE) key

While on-hook, press the **HF** key to go into handsfree mode. You can talk through the

microphone and listen from the speakerphone without lifting the handset. While off-hook, press the HF key and put down the handset to go into handsfree mode.

5. ADDITIONAL NOTES

INCOMING CALL LCD INDICATOR

When there is incoming call, the unit will be automatically display the caller number, date and time, and also display its serial number. If the incoming call is in private mode, it will display “_p_”; it will display “_0_” if exchange cannot determine the number; it will display “-E-“ if the call signal contains error.

LCD BACKLIGHT FUNCTION

When there is incoming call or handset is off-hook, the LCD backlight will lit up. It will be on for about 6 seconds before going off. Without batteries, LCD backlight will not lit up at all.

TROUBLESHOOTING GUIDE

(Q) I do not hear any dial tone from the handset.

(A) Ensure the handset cord is connected correctly from the handset to the handset cord jack at the base. Ensure you have plug in the telephone cable from the telephone to the wall socket correctly. If the problem persists, please check with your local dealer.

(Q) I could not see the caller's number on the LCD when there is incoming call.

(A) Ensure that you have subscribed Caller ID service from your local telecom provider.

(Q) There is no LCD Display / Backlight after I have connected the telephone line. I can call out normally.

(A) Ensure that you have inserted the batteries on the battery compartment. If there is still no display, change the batteries and ensure it is not empty. If the problem persists, please check with your local dealer.

DECLARATION OF CONFORMITY

The telephone complies with the essential protective requirements and objectives of:

- EC R& TTE Directive 1999/5/EC
- EC Low Voltage Directive 73/23/EEC
- EC EMC Directive 89/336/EEC

And conforms to the following relevant harmonized standards:

- EMC: EN55022, EN55024
- Safety: EN 60950



Created on 28th October 2005. SC3123 Caller ID Phone.

Please visit us at www.shirocorp.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>