

Shiro



• User Manual •

SC3128

Caller ID Phone



- Please ensure the phone is placed in a dry and ventilated place without corrosive air.
- Please install 3 x AA batteries for viewing the LCD display. If the LCD does not display clearly, please change the batteries to ensure the normal function of the unit.
- Before operation, please check if you had applied for caller ID service from Telecom for caller ID display. Please remove any branch box or abuse resistant device to avoid failure in receiving incoming call number.

FEATURES:

- FSK/DTMF dual system
- 99 phone book memories with name (16 characters max) and phone number (16 digits numbers max)
- 199 incoming (without name) and 16 outgoing caller ID calls
- 12 two-touch memories, each with 16 digits for number
- Flash and Mute feature
- Local code filtering, at the length of 6 digits
- LCD contrast adjustable at 5 levels
- Pre-dial and edit telephone number at 32 digits maximum
- 8 ringing tone selection
- Alarm clock feature
- LCD display of year, month, date and time
- Baby call feature
- Ringer and Handsfree Speakerphone volume adjustable

TABLE OF CONTENT

PRODUCT OVERVIEW	3
1. INSTALLING OR REPLACING THE BATTERY	4
2. SWITCH OPERATION.....	4
VOLUME switch	4
RINGER switch	4
3. SOFTWARE SETTING	4
4. FUNCTION KEY SETTING.....	6
UP key	6
OUT key	6
DELETE key.....	6
COPY/PICKUP key	6
SET/STORE key (TWO TOUCH MEMORY)	6
MODE/ALARM key	7
PHONEBOOK key.....	7
PAUSE key	7
FILTER/MUTE key.....	7
HF (HANDSFREE) key.....	7
REDIAL/BACK key.....	7
FLASH (600ms) / SNOOZE key	8
5. ADDITIONAL NOTES	8
INCOMING CALL LCD INDICATOR	8
LCD BACKLIGHT FUNCTION	8
IN USE LED INDICATOR	8
TROUBLESHOOTING GUIDE.....	8
DECLARATION OF CONFORMITY	9

PRODUCT OVERVIEW



Description:

 
- | | |
|-----------------------|-----------------------|
| 1. LCD Display | 11. FLASH/SNOOZE key |
| 2. OUT key | 12. Handset Cord jack |
| 3. COPY/PICKUP key | 13. DELETE key |
| 4. MODE/ALARM key | 14. SET/STORE key |
| 5. PHONE BOOK KEY | 15. IN USE Led |
| 6. 0-9/#/* key | 16. TEL LINE jack |
| 7. PAUSE key | 17. VOLUME switch |
| 8. FILTER/MUTE | 18. RINGER switch |
| 9. HF (HANDSFREE) key | |
| 10. REDIAL/BACK key | |

1. INSTALLING OR REPLACING THE BATTERY

Install 3 Alkaline AA batteries into the battery compartment and re-fit the cover before use.

IMPORTANT—before removing the battery compartment cover, ensure the base unit is disconnected from the telephone line.

3 X AA Alkaline Battery



Connection and conditions for use

You can connect your SC3128, to public networks in the United Kingdom or to an approved PBX using DTMF signaling. Each item of telephone equipment (phones, fax machines, etc.) has a **ringer equivalence numbers (REN)**. The RENs of all equipment connected to an exchange line **must not add up to more than 4** otherwise, one or more phones may not ring and/or answer calls correctly. SC3128 has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

2. SWITCH OPERATION

VOLUME switch

Select your preferred volume either HI or LOW. The selection is at the back of the telephone.

RINGER switch

Select your preferred ringing tone either HI or LOW. The selection is at the back of the telephone.

3. SOFTWARE SETTING

Under on-hook condition, press **SET** key into configuration mode. The LCD will display: **VIEW MENU** ↑ ↓. Use **UP** key to navigate through the list. To enter or confirm an item, press **SET** key.

SET ITEM	OPERATIONS
LANGUAGE SELECTION	LCD panel displays SELECT LANGUAGE , press SET key and you will see ENGLISH as default. Use UP key to select the language (English/

	French/ German/ Spanish/ Italian/ Danish/ Turkish).
AREA CODE	<p>LCD will display SET AREA CODE, press SET key to enter menu setting, The LCD will display -----, press UP key to set the value. Press SET key again to confirm. Change other value using UP key again.</p> <p>Area Code is used to filter the number for incoming calls. E.g. Area code = 75 when there's incoming call with 75 6554556, it will be displayed as 655 4556 only.</p>
LONG CODE	<p>LCD will display LONG DIST ACCESS, press SET key to enter menu setting, The LCD will display -----, press UP key to set the value. Press SET key again to confirm. Change other value using UP key again. To activate this feature, while checking incoming calls using UP key, press REDIAL key twice to add the LONG DIST ACCESS code in front of the number.</p>
DATE/TIME	<p>LCD will display DATE/TIME, press SET key to enter menu setting, The LCD will display year value and it flashes. Press UP key to set the value. Press SET key again to confirm. Change other value using UP key again.</p>
LCD CONTRAST	<p>LCD will display CONTRAST ADJUST, press SET key to enter menu setting, The LCD will display CONTRAST x (x is value from 1 to 5), press UP key to set the value. Press SET key again to confirm. Level 3 is the default contrast value.</p>
BABYCALL	<p>LCD will display BABYCALL, press SET key to enter menu setting, The LCD will display BABYCALL OFF, press UP key to set the value. Press SET key again to confirm. You will see BABYCALL NUMBER. Press SET key to enter the phone number. You can enter up to 16 digits phone number. Once you have set Baby Call, any number you press will dial the preset number immediately.</p>
RING MELODY	<p>LCD will display RING MELODY, press SET key to enter menu setting, The LCD will display RING MELODY 1, press UP key to set the value. Press SET key again to confirm. There are 8 selected ring melodies to choose.</p>
PHONEBOOK INPUT	<p>LCD will display PHONEBOOK INPUT, press SET key to enter menu setting, the LCD will display INPUT NUMBER, input the phone number (up to 16 digit). Press SET key again to confirm. Press the numeric key to enter the name. For example, to enter a name CATH:</p> <ol style="list-style-type: none"> 1. Press key "2" thrice to create C 2. Press key "2" once to create A 3. Press key "8" once to create T 4. Press key "4" twice to create H <p>Note: If the next character falls on the same numeric key, you will have to wait for the blinking cursor to move to the next character before pressing the numeric key.</p>

PHONEBOOK EDIT	LCD will display PHONEBOOK EDIT , press SET key to enter menu setting, The LCD will display INPUT PREFIX , press SET key again to locate all the names that start with the alphabet/character. Press DELETE key to edit the phone number. Press SET key follow by DELETE or numeric key to edit the name.
-----------------------	--

4. FUNCTION KEY SETTING

UP key

Press **UP** key to view the information of the incoming calls including phone number, date and time.

OUT key

Press **OUT** key to view the information of the outgoing calls including phone number, date and time.

DELETE key

In any mode, when checking the incoming and outgoing call, press **DELETE** key to delete the number you are checking. Press and hold **DELETE** key for 4 sec and it will delete all incoming call or outgoing call numbers. When you pre-dial, press **DELETE** key to delete digit one by one.

COPY/PICKUP key

For COPY function:

When you select a number using **UP** key, press **COPY** key and you will see on the LCD **NORM VIP REJ ESC**. Use **UP** key to select the option and press **COPY** key to confirm.

- All incoming calls will be stored in REV area automatically. The ring is effective when Filter is turned off and no sound when Filter is on. The incoming calls will be deleted automatically when the memory is full.
- The incoming calls stored in VIP area will not be deleted. When the Filter is turned on, you could hear 4 Beeps when there is incoming call.
- The incoming calls stored in NORM area will not be deleted. When Filter is turned on, you will hear 2 beeps when there is incoming call.
- For any phone number stored in REJ area, no sound could be heard when there is incoming call. The calls will be deleted automatically when the memory is full.

For PICKUP function:

Press **PICKUP** key follow by key 1/2/3/4/5/6/7/8/9/*/0/# to view the number stored in the two touch memory location.

SET/STORE key (TWO TOUCH MEMORY)

Enter the desired number to store. Press **SET/STORE** key and you will see **STORE**. Press any key from 1/2/3/4/5/6/7/8/9/*/0/# to store the number to this location. Use the **PICKUP** key to view the number stored

MODE/ALARM key

For MODE function:

When checking incoming calls, press **MODE** key and you will see on the LCD, **NORM VIP REJ REV**. Use **UP** key to select the option and press **MODE** key again to enter. Press **UP** key to check the information stored in this area and press **DEL** key to delete.

For ALARM function:

Press **ALARM** key and you will see on the LCD **ALARM OFF**. Use **UP** key to turn it on and press **SET** key to set the **ALARM TIME** show on LCD. Input the time by using the **UP** key and press **SET** key to confirm.

The alarm will stop ringing by pressing **FLASH/SNOOZE** key to pause for 8 minutes. You can also press **ALARM** key to stop it until next preset time. The duration of the alarm ring is one hour and fifty-seven minutes maximum. The function could be cancelled pressing **ALARM** key.

PHONEBOOK key

Press **PHONEBOOK** key and input the first alphabet/character of the name. You could view the list of telephone numbers by pressing **PHONEBOOK** key again. You can keep pressing **PHONEBOOK** key to view in sequence. To redial, press **REDIAL/BACK** key.

PAUSE key

To insert a 3.6 second of pause while dialing, press **PAUSE** key and it will display **P** on the LCD panel.

FILTER/MUTE key

For FILTER function:

Press **FILTER** key and you will see on **FILTER START**. Use **UP** key to set the hour start time and press **SET** key to confirm. Repeat the operation to set minute. Set the **FILTER STOP** time by pressing **UP** key and **SET** key. You will notice the **FILTER** icon will appear on the LCD. Once filter is set, the ringer will be off when there is an incoming call.

For MUTE function:

Press **MUTE** key to prevent the remote caller to hear any sound from your side.

HF (HANDSFREE) key

While on-hook, press the **HF** key to go into handsfree mode. You can talk through the microphone and listen from the speakerphone without lifting the handset. While off-hook, press the **HF** key and put down the handset to go into handsfree mode.

REDIAL/BACK key

In the on-hook mode, pre-dial the number then press **REDIAL/BACK** key to auto pick up and dial out the number. In the off-hook mode, press this key to redial the last dialed number. When checking the incoming number or outgoing number, press **REDIAL/BACK** key to auto pick up and dial out the number directly.

FLASH (600ms) / SNOOZE key

In the on-hook mode, press this key to auto-hang up for 600ms, after that you can press REDIAL/BACK key or dial out another number.

5. ADDITIONAL NOTES

INCOMING CALL LCD INDICATOR

During a phone call, the LCD will display the phone number with name, date, time and a serial number. This is provided you have subscribed Caller ID service from your local telecom. A new number will have a **NEW** icon, and a repeated call with the same number will have a **REP** icon. A private call (when the caller prefers to hide the number) will display **PRIVATE CALL**. A call that is out of service will display **OUT OF AREA**. An incorrect incoming signal will cause the LCD to display **ERROR**. If the caller ID uses FSK system, the current month, date and time display will be updated (while the year remains unchanged).

LCD BACKLIGHT FUNCTION

When there is incoming call or handset is off-hook, the LCD backlight will lit up. It will be on for about 6 seconds before going off. Without batteries, LCD backlight will not lit up at all.

IN USE LED INDICATOR

When the handset is off hook or in handsfree mode, the LED will turn on.

TROUBLESHOOTING GUIDE

(Q) I do not hear any dial tone from the handset.

(A) Ensure the handset cord is connected correctly from the handset to the handset cord jack at the base. Ensure you have plug in the telephone cable from the telephone to the wall socket correctly. If the problem persists, please check with your local dealer.

(Q) I could not see the caller's number on the LCD when there is incoming call.

(A) Ensure that you have subscribed Caller ID service from your local telecom provider.

(Q) There is no LCD Display / Backlight after I have connected the telephone line. I can call out normally.

(A) Ensure that you have inserted the batteries on the battery compartment. If there is still no display, change the batteries and ensure it is not empty. If the problem persists, please check with your local dealer.

DECLARATION OF CONFORMITY

The telephone complies with the essential protective requirements and objectives of:

- EC R& TTE Directive 1999/5/EC
- EC Low Voltage Directive 73/23/EEC
- EC EMC Directive 89/336/EEC

And conforms to the following relevant harmonized standards:

- EMC: EN55022, EN55024
- Safety: EN 60950



Created on 28th October 2005. SC3128 Caller ID Phone.

Please visit us at www.shirocorp.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>