

Shiro



• User Manual •

SC3130

Caller ID Phone



- Please ensure the phone is placed in a dry and ventilated place without corrosive air.
- Please install 3 x AA batteries for viewing the LCD display. If the LCD does not display clearly, please change the batteries.
- Please check if you had applied caller ID service from Telecom provider for caller ID display.

FEATURES:

- FSK/DTMF dual system
- 30 incoming call memories, call back function
- 5 outgoing call memories, conversation time review and redial back
- 35 VIP Memory for storing important telephone numbers
- 8 normal and 1 VIP ringing tone selection
- Area code filter setting
- PABX code setting
- Anti Share or prevent parallel telephone connection
- Pre-dial and edit dialing number
- LCD display of year, month, date and time
- Calculator function
- IDD '0' Lock function
- Pulse/Tone function
- Date/Time function
- Handsfree Speakerphone
- 3 Alarm function

TABLE OF CONTENT

PRODUCT OVERVIEW	3
1. INSTALLING OR REPLACING THE BATTERY	4
2. SWITCH OPERATION.....	4
IDD LOCK switch.....	4
3. SOFTWARE SETTING	4
4. FUNCTION KEY OPERATION	6
UP/- key and DOWN/+ key.....	6
OUT/x key.....	6
DEL key	6
CAL key	6
PAUSE/VIP key	6
BRIGHT/÷ key.....	6
RING/HOLD key.....	6
FLASH key (600ms).....	7
REDIAL/BACK key.....	7
HF (HANDSFREE) key.....	7
5. ADDITIONAL NOTES	7
INCOMING CALL LCD INDICATOR.....	7
LCD BACKLIGHT FUNCTION	7
TROUBLESHOOTING GUIDE.....	7
DECLARATION OF CONFORMITY	8

PRODUCT OVERVIEW



Description:

 
- | | |
|-----------------------|-------------------|
| 1. LCD Display | 16. OUT/x key |
| 2. DOWN/+ key | 17. UP/- key |
| 3. DEL key | 18. TEL LINE jack |
| 4. RING/HOLD key | 19. TEL LINE jack |
| 5. SET key | 20. LOCK switch |
| 6. BRIGHT/÷ key | |
| 7. FLASH key | |
| 8. REDIAL/BACK key | |
| 9. HF (HANDSFREE) key | |
| 10. #/= key | |
| 11. 0-9 key | |
| 12. */. key | |
| 13. Handset Cord jack | |
| 14. CAL key | |
| 15. PAUSE/VIP key | |

1. INSTALLING OR REPLACING THE BATTERY

Install 3 Alkaline AA batteries into the battery compartment and re-fit the cover before use.

IMPORTANT—before removing the battery compartment cover, ensure the base unit is disconnected from the telephone line.

3 X AA Alkaline Battery



Connection and conditions for use

You can connect your SC3130, to public networks in the United Kingdom or to an approved PBX using DTMF signaling. Each item of telephone equipment (phones, fax machines, etc.) has a **ringer equivalence numbers (REN)**. The RENs of all equipment connected to an exchange line **must not add up to more than 4** otherwise, one or more phones may not ring and/or answer calls correctly.

SC3130 has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

2. SWITCH OPERATION

IDD LOCK switch

Use the keys provided in the package. The telephone allows all outgoing number if the key is on red point. It cannot dial outgoing number starting with digit 0 when the key is on green point.

3. SOFTWARE SETTING

In on-hook mode, press **SET** key to enter menu setting, the phone LCD will display **SET 1 DATE**, press **UP/-** or **DOWN/+** key to select different options. Press **SET** key again to confirm. Use **UP/-** or **DOWN/+** key to select the mode you need. After completing the setting, press **SET** key to go to the next item. To exit menu, press **DEL** key.

By pressing **SET** key (under the on-hook mode), you can select the following:

SET ITEM	OPERATIONS
DATE/TIME	LCD panel displays SET 1 DATE , press SET key to enter this mode. The year value would flash, use UP/- or DOWN/+ key to select value, then press SET key to move to next item.

<p>AREA CODE</p>	<p>LCD panel display SET 2 CODE, press SET key to confirm, LCD display CODE, press SET key to enter this mode. Use UP/- or DOWN/+ key to select value, then press SET key to move to next item.</p> <p>Area Code can be used to filter the number for incoming calls. E.g. Area code = 75 when there is incoming call with 75 6554556, it will be displayed as 655 4556 only.</p>
<p>PABX CODE</p>	<p>LCD panel display SET 3 PCODE, press SET key to enter this mode. LCD displays PCODE, use UP/- or DOWN/+ key to select value, then press SET key to move to next item.</p> <p>Once the value is set, e.g. 9, the telephone will pause 2 seconds for any telephone number that begins with 9. Then it will continue the rest of the numbers.</p>
<p>AUTO-IP</p>	<p>LCD display SET 4 AUTO IP, press SET key to enter this mode. LCD display AUTO IP OFF and OFF will flashes, use UP/- or DOWN/+ key to select value. When LCD displays AUTO IP ON, press SET key. Then the LCD will display INPUT CODE for you to enter the IP numbers. Use DEL key to correct any wrong input. After entered all IP number, press SET key to enter into next item. The outgoing call will automatically use IP mode.</p> <p>After you have set a number on Auto IP, e.g. 1455. If you need to call any number that starts with 14550, just type 0 to represent 1455 then follow by the subsequent numbers. To illustrate:</p> <ol style="list-style-type: none"> 1. Press 0 288888 follow by REDIAL button 2. The telephone will call out 1455 0 288888.
<p>P/T MODE</p>	<p>LCD display SET 5 P-T, press SET key to enter this mode. LCD display TONE. Use UP/- or DOWN/+ key to change it into PULSE, press SET key to move to next item.</p>
<p>ANTI SHARE</p>	<p>LCD display SET 6 ALAr, press SET key to enter this mode. LCD display STEAL OFF. Use UP/- or DOWN/+ key to change it into ON, press SET key to move to next item.</p> <p>The Anti Share feature is to ensure other telephone is unable to share the same line as your telephone. If another telephone is sharing the same line, there will be constant noise when it is off hook.</p>
<p>ALARM</p>	<p>LCD display SET 7 ALERT, press SET key to enter this mode. LCD display 1 00-00 OFF. Press SET to navigate on the HOUR/MINUTE. Use the UP/- or DOWN/+ key to change the values. Change OFF to ON to enable the alarm function. You can set up to 3 alarms and the telephone will ring at the time set.</p>

4. FUNCTION KEY OPERATION

UP/- key and DOWN/+ key

In any mode, press either key to check all the incoming numbers. If there is no incoming number, the unit will display **END**. The unit can receive up to 16-digit phone numbers.

OUT/x key

In any mode, press **OUT** key to check the outgoing numbers with time. Use **UP/-** or **DOWN/+** key to select the outgoing number. Press **BACK** key to dial the selected number.

DEL key

In any mode, when checking the incoming and outgoing call, press **DEL** key to delete the number you are checking. Press and hold **DEL** key for 4 sec and it will delete all incoming call or outgoing call numbers. When you pre-dial, press **DEL** key to delete digit one by one.


CAL key

You can use the calculator function to perform addition, subtraction, multiplication and division. Press the **CAL** key to go into calculator mode. Press the first number follow by **UP/-** (minus)/ **DOWN/+** (plus)/ **OUT/x** (multiply)/ **BRIGHT/÷** (divide) key and the second number. Press **#/=** (result) key to see the calculated value. To reset the values, press **CAL** key again. If you need to insert decimal point, press the ***./** key. The LCD can only display result up to 10 digits. To exit this mode, press **DEL** key.

PAUSE/VIP key

In the on-hook mode, pre-dial the number then press **PAUSE** key to add a 3.6 seconds pause before dialing the rest of the numbers. To call out, press **REDIAL/BACK** key.

For the VIP function:

- A) Press **VIP** key to add and cancel **VIP** calls when you check incoming and outgoing call. **VIP** number is marked with a lock  on the LCD.
- B) **VIP** number cannot be deleted individually. To delete all the **VIP** numbers, press and hold the **DEL** key for 4 seconds.
- C) If you have a new incoming call and the **VIP** memory is full, it will replace the normal and **VIP** number.

The unit will use **VIP** ring tone if the incoming call is a **VIP** number.

BRIGHT/÷ key

To adjust the contrast of the LCD, press the **BRIGHT/÷** key to adjust from Level 1-5.

RING/HOLD key

In the on-hook mode, press **RING** key, the phone LCD will display **RING 1-8**, which means there are eight selectable ringing tones. Select your preferred ringing tone by pressing **RING** continuously.

In off-hook mode, press **RING/HOLD** key to activate music on hold. To disable, press the

RING/HOLD key again.

FLASH key (600ms)

In the on-hook mode, press this key to auto-hang up for 600ms, after that you can press REDIAL key or dial out another number.

REDIAL/BACK key

In the on-hook mode, pre-dial the number then press REDIAL/BACK key to auto pick up and dial out the number. In the off-hook mode, press this key to redial the last dialed number. When checking the incoming number or outgoing number, press REDIAL/BACK key to auto pick up and dial out the number directly.

HF (HANDSFREE) key

While on-hook, press the HF key to go into handsfree mode. You can talk through the microphone and listen from the speakerphone without lifting the handset. While off-hook, press the HF key and put down the handset to go into handsfree mode.

5. ADDITIONAL NOTES

INCOMING CALL LCD INDICATOR

When there is incoming call, the unit will be automatically display the caller number, date and time, and also display its serial number. If the incoming call is in private mode, it will display “__p__”; it will display “__0__” if exchange cannot determine the number; it will display “-E-“ if the call signal contains error.

LCD BACKLIGHT FUNCTION

When there is incoming call or handset is off-hook, the LCD backlight will lit up. It will be on for about 6 seconds before going off. Without batteries, LCD backlight will not lit up at all.

TROUBLESHOOTING GUIDE

(Q) I do not hear any dial tone from the handset.

(A) Ensure the handset cord is connected correctly from the handset to the handset cord jack at the base. Ensure you have plug in the telephone cable from the telephone to the wall socket correctly. If the problem persists, please check with your local dealer.

(Q) I could not see the caller's number on the LCD when there is incoming call.

(A) Ensure that you have subscribed Caller ID service from your local telecom provider.

(Q) There is no LCD Display / Backlight after I have connected the telephone line. I can call out normally.

(A) Ensure that you have inserted the batteries on the battery compartment. If there is still no display, change the batteries and ensure it is not empty. If the problem persists, please

check with your local dealer.

(Q) I cannot hear the VIP ringing tone when there is a VIP incoming call.

(A) Ensure that you have inserted the batteries on the battery compartment. If there is still no VIP ringing tone, change the batteries and ensure it is not empty. If the problem persists, please check with your local dealer.

DECLARATION OF CONFORMITY

The telephone complies with the essential protective requirements and objectives of:

- EC R& TTE Directive 1999/5/EC
- EC Low Voltage Directive 73/23/EEC
- EC EMC Directive 89/336/EEC

And conforms to the following relevant harmonized standards:

- EMC: EN55022, EN55024
- Safety: EN 60950



Created on 28th October 2005. SC3130 Caller ID Phone.

Please visit us at www.shirocorp.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>