

SILVER CREST®


Electric Multi-Purpose Slicer SAS 150 A1



GB IE







Electric Multi-Purpose Slicer

 Operation and Safety Notes



GB IE

      Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

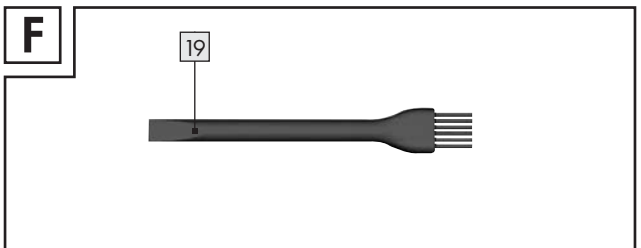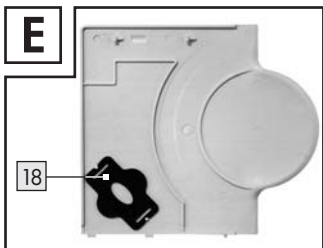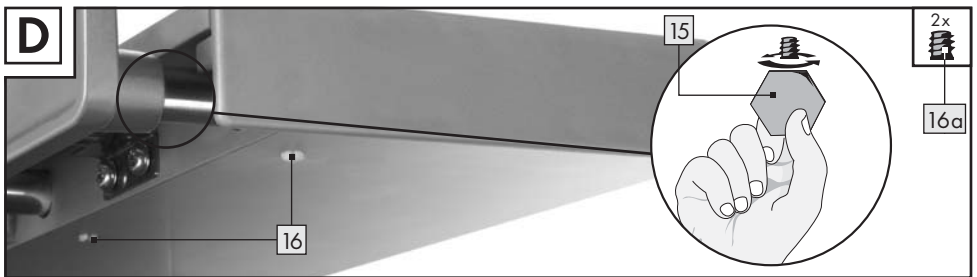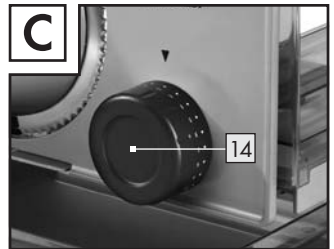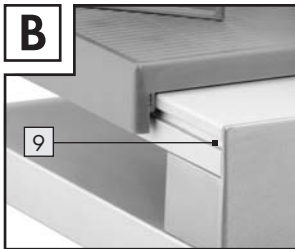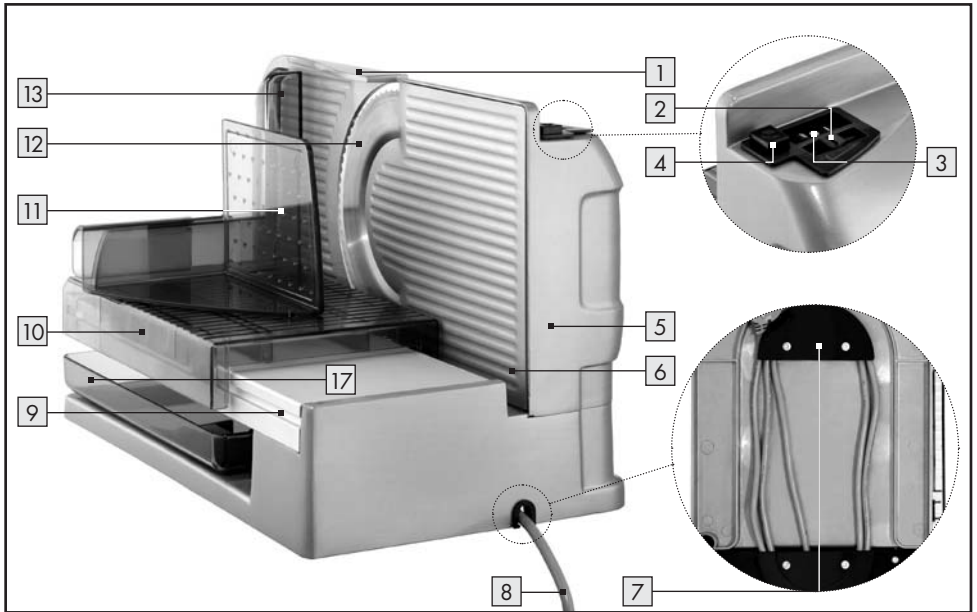

Introduction

Dear Customer,	Page 6
Intended usage	Page 6
Items supplied.....	Page 6
Features	Page 6
Technical data.....	Page 7

Safety

Important safety instructions	Page 7
-------------------------------------	--------

Before the First Usage

First steps	Page 8
Setting up the appliance.....	Page 8
Adjust the infinite slice-thickness setting (see Fig. D)	Page 8

Operation

Working advice.....	Page 8
Selecting mode of operation.....	Page 9
Setting the Vario-switch cutting blade speed.....	Page 9
Slice thickness - setting and cutting	Page 9

Cleaning and maintenance

Cleaning	Page 10
Maintenance/Removing/assembling the cutting blade.....	Page 10
Special accessories.....	Page 10

Warranty / Customer Service

Page 11








Disposal

Page 11

Declaration of Conformit / Manufacturer

Page 11

The following pictograms are used in these operating instructions / on the device:

	Read instruction manual!	W	Watts (Effective power)
	Observe caution and safety notes!		Keep children away from electrical devices!
	Caution – electric shock! Danger to life!		Damaged appliances, power cables and power plugs mean potentially fatal risks from electric shock. Regularly check the condition of the appliance, the power cables and the power plugs.
	Proper procedure and handling.		Dispose packaging and appliance in an environmentally-friendly way!
V~	Voltage		

Electric Multi-Purpose Slicer SAS 150 A1

● Introduction

Dear Customer,



before using the electric Multi-Purpose Slicer for the first time please read carefully and thoroughly through these operating instructions and the safety advice, completely familiarising yourself with the appliance. You may find it useful to open out the page illustrating the slicer and describing both it and its operation. Retain these instructions for future reference and pass them on to whoever might acquire the appliance at a future date.

● Intended usage

This appliance is intended exclusively for slicing normal household foodstuffs. The food to be sliced must be thawed, unpacked and free from bones before it can be sliced with the appliance. All other uses, and modifications to the appliance, are deemed to be improper usage and may result in serious physical injury. The manufacturer accepts no liability for damages that result from improper

use of the appliance or are caused by incorrect operation of it.
Not for commercial use.

● Items supplied

Directly after unpacking the appliance check it to ensure that all components are available and that there are no signs of visible damage.

- 1 Electric Multi-Purpose Slicer SAS 150 A1
- 1 Cleaning brush
- 1 Food holder plate
- 1 Slice tray
- 1 Screw helper and 2 spare adjustment screws
- 1 Operating instructions

● Features

- 1 Blade protector
- 2 Vario-switch for blade speed
- 3 Switch for intermittent / continuous operation
- 4 Knob for unlocking the blade covering
- 5 Appliance housing
- 6 Blade cover
- 7 Cable winder / Cable depot
- 8 Power cable

- 9 Supporting table with guide slot
- 10 Foodstuff carriage
- 11 Food holder plate with finger guard
- 12 Cutting blade
- 13 Food support plate
- 14 Regulator (Infinite control slice-thickness controller) (Fig. C)
- 15 Screw helper
- 16 Adjustment screws
- 16a Spare adjustment screws
- 17 Slice / catch tray
- 18 Screw-clip for blade disassembly (Fig. E)
- 19 Cleaning brush (Fig. F)

● Technical data

- Nominal voltage: 230V~ 50Hz
- Nominal power: 150W
- Continuous operation time: COT = 10 Minutes
- Cutting blade: reinforced, non-rusting serrated blade, 17 cm


● Safety



Important safety instructions



To avoid potentially fatal electric shocks:


- The electric Multi-Purpose Slicer may only be connected to a 230V AC electricity supply.
-  Always remove the plug from the power socket before you clean the slicer, if it malfunctions and when you have finished using it. To disconnect the appliance from the electricity supply never pull the plug out by using the power cable **8**, always pull directly on the plug itself.
- Never submerge the appliance in water and do not expose it to rain or moisture. Should the appliance fall into water, First remove the plug from the socket and then remove the appliance from the water.

Afterwards, have the slicer examined by an authorised service centre before you use it again.

- In the event of damage to the power cable **8**, the repair may only be carried out by the manufacturer, his service centre or a suitably qualified specialist.



To avoid physical injuries:

- Do not use the electric Multi-Purpose Slicer if your hands are wet or you are standing on a wet floor. Do not use the slicer if it is wet or moist. The appliance may not be used outdoors.
-  Set up and store the electric Multi-Purpose Slicer out of reach of children.
- This device is not intended to be used by persons (including children) with restricted physical, sensory or mental abilities or with insufficient experience and/or knowledge, unless they are supervised by a person who is responsible for their safety or they have received instruction on how to use the device from such a responsible person. Children should be supervised in order to ensure that they do not play with the device.
- Do not leave the electric Multi-Purpose Slicer unattended if it is ready for immediate use.



Tips for personal safety

- The electric Multi-Purpose Slicer is intended exclusively for domestic use and not for commercial purposes.
- Always ensure that the slicer is safely set up or installed before you take it into use.
- This appliance should always be used with the food carriage **10** and the food holder plate **11**. Exceptions are possible, if for example the size and shape of the food to be sliced does not permit the use of these devices. Do not use the appliance to cut bones or deep-frozen food.
- Do not use the appliance if it is damaged in any way. Promptly arrange to have the appliance repaired at an authorised service centre or by an other suitably qualified specialist.

- Use the appliance with the supplied accessories only. No claims under the warranty nor a liability for damages will be accepted if they result from improper or incorrect use of the slicer.
- Place the catch tray **17** below the support table **9** and on the housing such that the sliced foods can fall in there directly and without hindrance after being cut.

● Before the First Usage

● First steps

- Carefully remove the electric Multi-Purpose Slicer from its packaging, remove all packaging materials and keep them together with the main packaging.
- Clean the electric Multi-Purpose Slicer before it comes into contact with any foodstuffs (see also the chapter 'Cleaning').

● Setting up the appliance



Specific safety advice on the placing of the appliance

1. Never set the electric Multi-Purpose Slicer up on a hot surface or near an open flame.
 2. Ensure that the power cable **8** does not pass over hot or sharp-edged objects.
 3. Do not allow the power cable **8** to become kinked or trapped and do not wrap it around the electric Multi-Purpose Slicer.
- Set the electric Multi-Purpose Slicer up on a flat, non-slip surface close to a power socket.
 - Unwind the required length of power cable **8**. Insert the plug into the power socket.
 - Place the food carriage **10** on the supporting table with guide slot **9** (see Fig. B). Now press the on the blade cover **6** high standing side down, so that the holding clamps (on the underside of the food carriage **10**) engage. Ensure that these have correctly engaged, in that you check the mobility of the food carriage. Pull to the front for removal of the food carriage **10** from the guide slot **9** and lift it from the support table **9**.
 - Push the food holder plate **11** on to the food carriage **10**.

● Adjust the infinite slice-thickness setting (see Fig. D)

Through variable tightenings of the adjusting screws **16** you can determine the movement rate of the infinite slice-thickness setting **14**.

- Screw both of the adjusting screws **16** tight with the screwdriver **15**.
- Check, by turning the infinite slice-thickness control knob **14**, to see if the desired movement rate is suitable.
If it is not,
 - loosen both adjusting screws **16** for a lighter movement rate or
 - tighten both adjusting screws **16** further for a stiffer movement rate.

● Operation

● Working advice



Specific safety advice for slicing and for the handling of the appliance

1. Never touch the cuttingblade **12** when the slicer is in operation!
There is a risk of grave personal injury!
2. Always use the food carriage **10** and the food holder plate **11**.
(Exception: very large pieces of foodstuff).
Press the pieces of food to be sliced forward using the food holder **11**.
3. Use the slicer only for cutting normal household foods and not for other purposes. Do not use the slicer for cutting deep-frozen foods, bones, foods with large kernels or for the slicing of still packaged foods.
4. Never use the slicer continuously for more than 10 minutes .

5. The cutting blade [12] continues to rotate for a short while after the slicer has been switched off.
6. For reasons of safety, the slice thickness must be returned to the „0“ setting after use.

Soft foodstuffs:

- Direct the food carriage [10] slowly against the cutter [12]. Soft foodstuffs, for example hams or cheeses, are best cut when they are at a low temperature / lightly chilled.

Hard foodstuffs:

- With hard foodstuffs you can direct the food carriage [10] somewhat faster against the cutter [12]. You can thus quickly prepare your required amount of sliced foods, for example salami, bread or gherkins.

● Selecting mode of operation

Note:

The two operating modes can be switched on and off with the rocker switch for intermittent / continuous operation [3].

Continuous operation / max. 10 minutes (switch in position „I“):

- Set the switch for intermittent / continuous operation [3] to position „I“. The cutting blade [12] runs without it being necessary to hold the switch in this position.
Halting continuous operation: Move the switch for intermittent / continuous operation [3] into the „0“ position and wait until the cutting blade comes to a complete standstill.

Intermittent operation (switch for intermittent / continuous operation in position „II“):

- Set the switch for intermittent / continuous operation [3] to position „II“. The cutting blade will continue to run for as long as the switch for intermittent / continuous operation is held in this position. Halting intermittent operation: Release the switch for intermittent / continuous operation [3] and wait until the cutting blade comes to a complete standstill.

● Setting the Vario-switch cutting blade speed

Low revolutions / Revolution symbol narrow end:

- Set a low revolution speed when you want to cut soft foodstuffs. Push the Vario-switch [2] completely in the direction of the sharp end.

High revolutions / Revolution symbol wide end:

- Use a high revolution speed for slicing hard foodstuffs. Push the Vario-switch [2] completely in the direction of the broad end.

Note: Between the maximum and minimum adjustments you can naturally also carry out further individual settings. Practice appropriate trial slicings.

● Slice thickness - setting and cutting

Set the required slice thickness using the control knob [14] (see Figure C). The settings on the scale do not correspond with the slice thickness in mm. For safety reasons the cutting blade [12] is covered in setting „0“.

- Place the food to be sliced on the food carriage [10].
If necessary, press the food to be sliced with the food holder plate [11] lightly against the food support [13].
- Switch the appliance on and, whilst lightly pressing the food to be sliced forward, guide it along the cutting blade [12]. After using the slicer always set the food support plate [13] into the „0“ setting so that the sharp blade is covered. The cutting blade [12] is ideally suitable for cutting wafer-thin slices of cold cuts or boiled ham (see Fig. A).
- To safeguard your fingers always use the food carriage [10] and the food holder plate [11] (Exception: slicing very large pieces of foodstuffs).

● Cleaning and maintenance

● Cleaning



Important safety advice for cleaning the slicer

1. Before starting to clean the electric Multi-Purpose Slicer; switch it off, remove the power cable [8] from the mains socket and set the food support plate [13] into the „0“ setting.
2. Do not submerge the electric Multi-Purpose Slicer in water.
3. **⚠ ATTENTION! RISK OF SERIOUS INJURY:** The cutting blade [12] is very sharp!



Accessories suitable for dishwashers!

- Clean the food carriage [10], the food holder plate [11], the cutting blade [12] and the slice tray [17] in the dishwasher.
- It is necessary to clean the electric Multi-Purpose Slicer thoroughly at regular intervals as perishable food scraps could accumulate on the appliance or behind the cutting blade [12].
- Clean all appliance parts not suitable for the dishwasher with a lightly moistened cloth. Wipe off the appliance housing [5], the cutting blade covering [6], the support table with guide slots [9] and the food support plate [13] carefully. Do not use abrasive cleaning agents, sponges with rough surfaces or hard brushes.

Cleaning brush:

- ⚠ **ATTENTION! RISK OF PERSONAL INJURY!** Carry out all tasks using the cleaning brush [19] (see Fig. F) with great care. Should it slip close to the cutting blade [12], there is the risk of receiving a severe personal injury.
- Use the bristles of the cleaning brush [19] to remove remnants such as crumbs from all difficult to reach positions. The flattened end can be excellently used to remove stubborn soiling.

● Maintenance / Removing / assembling the cutting blade



Important safety notices for the removal and assembly of the cutting blade!

1. Switch the slicer off, remove the plug from the power socket and set the food support plate [13] into position „0“.
 2. **⚠ ATTENTION! RISK OF PERSONAL INJURY!** The cutting blade [12] is very sharp! For the removal and assembly wear appropriate safety gloves. Otherwise, you could receive cut injuries.
- Open the blade cover [6] by pressing the blade cover unlock button [4]. Remove the blade cover [6].
 - Remove the plastic screw clip [18] from the mounting (see Fig. E) and screw the blade lock of the cutting blade [12] out by unscrewing it to the left.
 - When taking out the blade [12] make sure that you grasp it at its centre.
 - The cutting blade [12] can be cleaned in the dishwasher.
 - Clean the housing behind the cutting blade [12] with a dry cloth or a soft brush.
 - Re-assemble the cutting blade [12] in a reverse sequence of the above instructions.
 - Due to the special sawtoothing and the high quality, the cutting blade [12] will retain its sharpness for a very long time. A resharpening of the cutting blade is not necessary. Consult the service centre for your country if you have questions about the cutting blade [12].

● Special accessories

Round cutter:

An untoothed cutting blade, specifically for the finest of slices, is also available. Orders for special accessories are directed to the service centre for your country.

● Warranty / Customer Service

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use.

The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

GB

DES UK LTD

Tel.: 0871 5000 700 (£ 0.10 / minute)

e-mail: support.uk@kompernass.com

IE

Kompernass Service Ireland

Tel: 1850 930 412 (0,082 EUR/Min.)

Standard call rates apply.

Mobile operators may vary.

e-mail: support.ie@kompernass.com

● Disposal



The packaging is wholly composed of environmentally-friendly materials that can be disposed of at a local recycling centre.



Do not dispose of electric equipment in the household waste!

According to the European Directive 2002/96/EC regarding used electrical and electronic appliances and its implementation in national law, used electrical equipment must be separately collected and disposed of at an approved recycling facility.

To dispose of electrical appliances that you no longer require, please consult your local authorities or city administration.

● Declaration of Conformity / Manufacturer CE

This product complies with the requirements of the valid European and national Directives (Low Voltage Directive 2006/95/EC, Electromagnetic Compatibility 2004/108/EC). Conformity has been verified. The corresponding declarations and documents are retained by the manufacturer.

Kompernaß GmbH

Burgstraße 21

D-44867 Bochum

Subject to technical alterations.

IAN 61458

KOMPERNASS GMBH

Burgstraße 21

D-44867 Bochum

© by ORFGEN Marketing

Last Information Update: 12/2010

Ident.-No.: SAS150A1122010-6



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>